

MAYTAG TOP LOADING WASHING MACHINE QUICK START GUIDE

OPERATING INSTRUCTIONS



Fire Hazard

Never place items in the washer that are dampened with gasoline or other flammable fluids.

No washer can completely remove oil.

Do not dry anything that has ever had any type of oil on it (including cooking oils).

Doing so can result in death, explosion, or fire.

WARNING: To reduce the risk of fire, electric shock, or injury to persons, read the IMPORTANT SAFETY INSTRUCTIONS, located in your appliance's Owner's Manual, before operating this appliance.


Step 1. ADD HE DETERGENT Step 2. LOAD CLOTHES

Designed to use only HE (High Efficiency) detergents.

For best results, load garments in loose heaps evenly around the basket wall.




NOTE: See ADDING LAUNDRY PRODUCTS (below) for more information on adding HE detergent, fabric softener, and/or bleach.

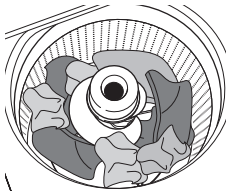


Step 3. PRESS POWER TO TURN ON THE WASHER



 Step 4. SELECT THE DESIRED CYCLE FOR YOUR LOAD*

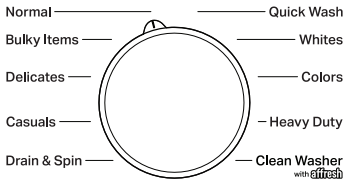

Step 5. ADJUST CYCLE SETTINGS AND SELECT ADDITIONAL OPTIONS*

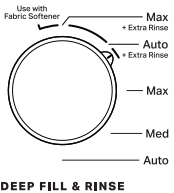

Step 6. PRESS AND HOLD START/PAUSE TO BEGIN CYCLE



Hold to Start

NOTE: Start button must be held for 1 second to start cycle. Once the status lights are illuminated, release the start button.


**Not all cycles, settings or options are available with all models.*

ADDING LAUNDRY PRODUCTS

IMPORTANT: Using non-HE detergent will likely result in longer cycle times and reduced rinsing performance. It may also result in component malfunction and, over time, buildup of mold or mildew. HE detergents should be low-sudsing and quick-dispersing to produce the right amount of suds for the best performance.

ADDING HE DETERGENT TO BASKET


Add a measured amount of HE detergent or single-dose laundry packets into the basket. If using oxi-type boosters, color-safe bleach, or fabric softener crystals, add to the bottom of the washer basket before adding clothes.

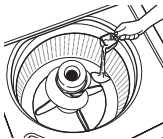

NOTE: Follow the manufacturer's instructions to determine the amount of laundry products to use.

ADDING LIQUID CHLORINE BLEACH

Do not overfill, dilute, or use more than 1 cup (236 mL). Do not use color-safe bleach or oxi products in the same cycle with liquid chlorine bleach.

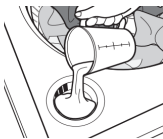


ADDING LIQUID FABRIC SOFTENER


Pour a measured amount of liquid fabric softener into dispenser; always follow manufacturer's directions for correct amount of fabric softener based on your load size. Dilute liquid fabric softener by filling the dispenser with warm water until liquid reaches the underside of the rim. See Max Fill line arrows.



IMPORTANT: When using fabric softener, always use the Deep Fill & Rinse knob to select a setting with '+Extra Rinse' to ensure proper distribution at the correct time in cycle.

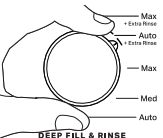

CONTROL PANEL AND FEATURES

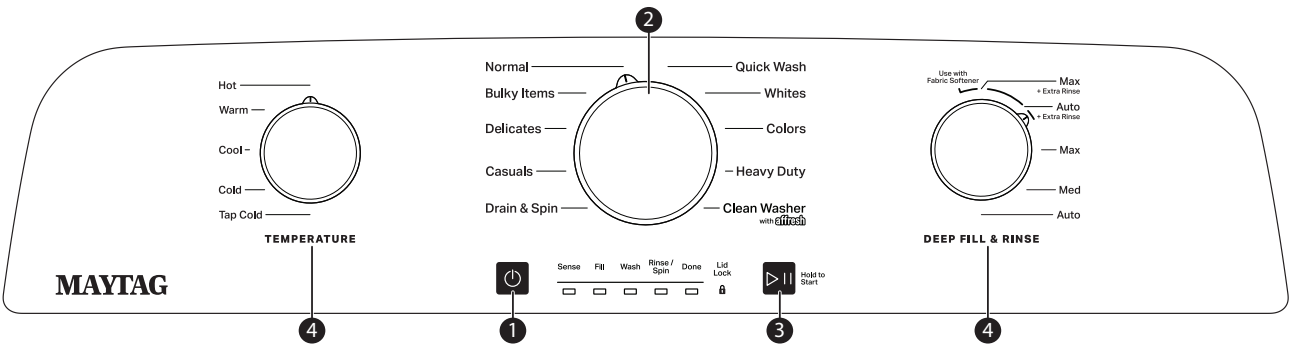

**Appearance may vary depending on model.*

1. POWER

Press to turn on/off or to stop/cancel a cycle.

2. CYCLE KNOB

Turn knob to select desired cycle.

3. START/PAUSE

Press and hold the Start/Pause button for 1 second until all status lights are illuminated, then release to start cycle. Press during a cycle to pause cycle and unlock lid.

NOTE: If machine is spinning it may take longer to unlock lid.

4. CYCLE MODIFIERS (Not all modifiers are available on all cycles)

TEMPERATURE

Turn knob to choose the appropriate temperature for the cycle (Tap Cold, Cold, Cool, Warm, or Hot).

DEEP FILL AND RINSE


Use one of the Deep Fill (Med, Max, Max + Extra Rinse) options to automatically add more water to your wash cycle. You can also use these options to reduce the likelihood of white residue on dark clothing. By default, every cycle uses one rinse phase. To add a second rinse phase, use one of the Extra Rinse options ('Max + Extra Rinse', 'Auto + Extra Rinse').

IMPORTANT: Either Auto (+Extra Rinse) or Max (+Extra Rinse) must be selected when using fabric softener.

NOTE: If the washer detects an out-of-balance condition it may pause and attempt and re-distribute the load. During this time the Sense and Wash status indicators will both briefly illuminate.


WARNING: Do not wash water-resistant or water repellant-type clothing. Failure to closely follow these instructions may result in an abnormal vibrating and out-of-balance condition that could result in physical injury, property damage, and/or appliance damage.

CHOOSING THE RIGHT CYCLE

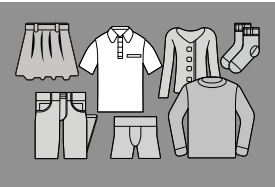

A cycle guide for your washer can be found online at www.maytag.com. The document will help identify which cycle to choose for various load types as well as the default cycle options. For example we recommend using the Normal cycle with Warm water for cottons, linens and mixed-garment loads.

MORE WATER WHEN YOU WANT IT

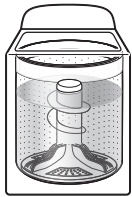

AUTO SENSING AND DEEP FILL

- When you select Deep Fill-Auto or Deep Fill-Auto + Extra Rinse, the washer will adjust the water level to the optimal amount for a High Efficiency wash of the detected load size.
- Select Deep Fill -Med, Max or Deep Fill-Max + Extra Rinse to automatically add more water to your wash cycle.

- It is recommended to use Bulky Items cycle with Deep Fill - Max option for loads where maximum water level is desired.
- Expect longer cycle times due to extended fill duration when using the Deep Fill options besides Auto.

CLEANING WITH LESS WATER



The washer has been designed and optimized to provide a thorough cleaning using less water to conserve energy and resources. As the washer dampens and moves the load, the level of the items will settle in the basket. This is normal, and does not indicate that more items should be added.

IMPORTANT: You will not see a full basket of water as with older, less efficient washing machines. It is normal for some of the load to be above the water line.

For detailed installation instruction and maintenance information, winter storage, and transportation tips, please see the Owner's Manual included with your machine.

ASSISTANCE OR SERVICE AND ADDITIONAL INFORMATION

For information on any of the following items, a full cycle guide, warranty, detailed product dimensions, or for complete instructions for use and installation, please visit https://www.maytag.com/owners or in Canada https://www.maytag.ca/owners . This may save you the cost of a service call.						
Register Product	Schedule Service	How To's & FAQ	Manuals & Downloads	Add Service Plan	Parts	Accessories
		To speak with a customer service representative or if you have additional questions, call us toll free at 1-800-344-1274 or in Canada call 1-800-688-2002 . You can write with any questions or concerns at: United States: Maytag Brand Appliances Customer eXperience Center 553 Benson Road Benton Harbor, MI 49022-2692 Canada: Maytag Brand Appliances Customer eXperience Centre 200-6750 Century Ave. Mississauga, Ontario L5N 0B7 Please include a daytime phone number in your correspondence.				

INSTRUCTIONS D'UTILISATION

Le non-respect de ces instructions peut causer un décès, une explosion ou un incendie.



A diagram of a washing machine drum with various wash cycle labels. The labels are arranged in two columns around the drum. The left column labels are: Normal, Bulky Items, Delicates, Casuals, Drain & Spin. The right column labels are: Quick Wash, Whites, Colors, Heavy Duty, Clean Washer. The drum is a circle with a small semi-circular protrusion at the top.

Normal ————— Quick Wash
 Bulky Items ————— Whites
 Delicates ————— Colors
 Casuals ————— Heavy Duty
 Drain & Spin ————— Clean Washer

Use with Fabric Softener

Max + Extra Rinse

Auto + Extra Rinse

Max

Med

Auto

DEEP FILL & RINSE

 Hold to Start



Max
• Extra Rise
Auto
• Extra Rise
Max
Med
Auto

FEED ROLL & DINGE

The diagram shows the control panel of a Maytag front-loading washer with the following components and callouts:

- Callout 1:** Points to the power button, which is a square button with a power symbol.
- Callout 2:** Points to the cycle selector dial, which has the following settings: Normal, Bulky Items, Delicates, Casuals, Drain & Spin, Quick Wash, Whites, Colors, Heavy Duty, and Clean Washer (with a "Wash" icon).
- Callout 3:** Points to the start/pause button, which is a square button with a play/pause symbol and the text "Hold to Start".
- Callout 4:** Points to the temperature and rinse controls on the left and right sides of the panel.
 - Left Side (Temperature):** Includes a circular dial with settings: Hot, Warm, Cool, Cold, and Tap Cold.
 - Right Side (Deep Fill & Rinse):** Includes a circular dial with settings: Max (Extra Rinse), Auto (Extra Rinse), Max, Med, and Auto.

The Maytag logo is located on the bottom left of the control panel.

A diagram of a water filter system. It consists of a cylindrical tank with a lid on top. Inside the tank, there is a filter element. The filter element is a vertical cylinder with a spiral or pleated design. Water is shown entering the tank from the bottom and passing through the filter element. The filtered water then exits the tank from the top. The diagram illustrates the flow of water through the filter system.

Pour obtenir des informations sur l'un des points suivants : guide de dimensions détaillées du produit ou pour obtenir des instructions complètes sur l'utilisation et l'installation, visiter le <https://www.maytag.com/owners> ou au Canada <https://www.maytag.ca/owners>. Cette vérification peut aider à économiser le coût d'une intervention de dépannage.

Enregistrement du produit	Prendre rendez-vous	Comment faire et FAQ	Manuels et téléchargements	Ajouter un plan de service	Pièces	Accessoires

Emplacement du numéro de modèle et du numéro de série

Pour communiquer avec un représentant du service à la clientèle ou si vous avez des questions, appelez-nous sans frais au **1 800 344-1274** ou au **1 800 688-2002** si vous résidez au Canada.

Vous pouvez adresser tous commentaires ou toutes questions à :

États-Unis :
Maytag Brand Appliances
Customer eXperience Center
553 Benson Road
Benton Harbor, MI 49022-2692

Canada :
Maytag Brand Appliances
Centre d'eXpérience pour la clientèle
200-6750 Century Ave.
Mississauga (Ontario) L5N 0B7

Veuillez indiquer dans votre correspondance un numéro de téléphone où l'on peut vous joindre dans la journée.