



Original	Replacement
	Power
	Mute
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Source
	0
	Info
	DMP
	Up
	EPG

Original	Replacement
	Power
	Mute / Dimmer
	1
	2
	3
	4
	5
	6
	7
	8
	9
	AV / Input / RDS
	0
	Info / Angle
	D.Menu / Top
	Up
	Guide / EPG / -/-

Original	Replacement
	Left
	Enter
	Right
	Menu
	Down
	Exit
	Vol +
	List
	CH +
	Vol -
	CH -
	Fav
	Sleep
	Index
	Recall
	Red / <<
	Red / <<

Original	Replacement
	Left
	OK
	Right
	Menu / Home
	Down
	Exit / Cancel / Clear
	Vol+
	Smart / List
	CH+ / Page+
	Vol-
	CH- / Page-
	Fav / Marker / PC
	Sleep / Timer
	Display / Media
	Back / Return
	Red / Netflix / Search
	Red / Netflix / Search







Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	[≡?]/Source		AV / Input / RDS
	0		0
	[≡i]/Info		Info / Angle
	DMP		D.Menu / Top
	Up		Up
	EPG		Guide / EPG / -/--
	Left		Left
	Enter		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Exit		Exit / Cancel / Clear
	Vol+		Vol+
	List		Smart / List
	CH+		CH+ / Page+
	Vol-		Vol-
	CH-		CH- / Page-
	♥		Fav / Marker / PC
	Sleep		Sleep / Timer
	Index		Display / Media
	Back		Back / Return
	Red		Red / Netflix / Search
	<<		<< / Tune-





Original	Replacement	Original	Replacement
	Green		Green / APP / Repeat
	>>		>> / Tune+
	Yellow		Yellow / YouTube / Repeat
	I<<		I<< / Preset-
	Blue		Blue / Prime Video / Random
	>>I		>>I / Preset+
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	[≡]		Text / Goto
	Stop/Still		Stop / Hold
	[≡+]		Picture / Format
	[≡o]/Subtitle		Subtitle / EQ
	[≡♦]/[+]		Zoom / Size
	[≡x]		Setup / OPT /
	Radio		TV/Radio /
	Audio		Audio / Lang I/II
	Rec		Rec / Rec Mode

