

# Digital Clock with Wireless Charging Function (AC151)

# VALORE

Thank you for purchasing the Valore Digital Clock with Wireless Charging Function (AC151).

- Nightlight with timer
- 3 alarm settings
- Temperature display
- USB-A output port
- 15W wireless charging pad

**Important:** Please read the user manual thoroughly before using your digital multimeter.


## Specifications:

- Power supply: USB powered
- USB-C input: 5V/1-2A, 9V/2A
- Wireless output: 15W max
- USB port output: 5V/1A
- Dimensions (L x W x D): 140 x 82 x 24mm

## Package Contents:

- Digital clock with wireless charging function x 1
- USB-C charging cable x 1

## UNDERSTANDING THE PRODUCT

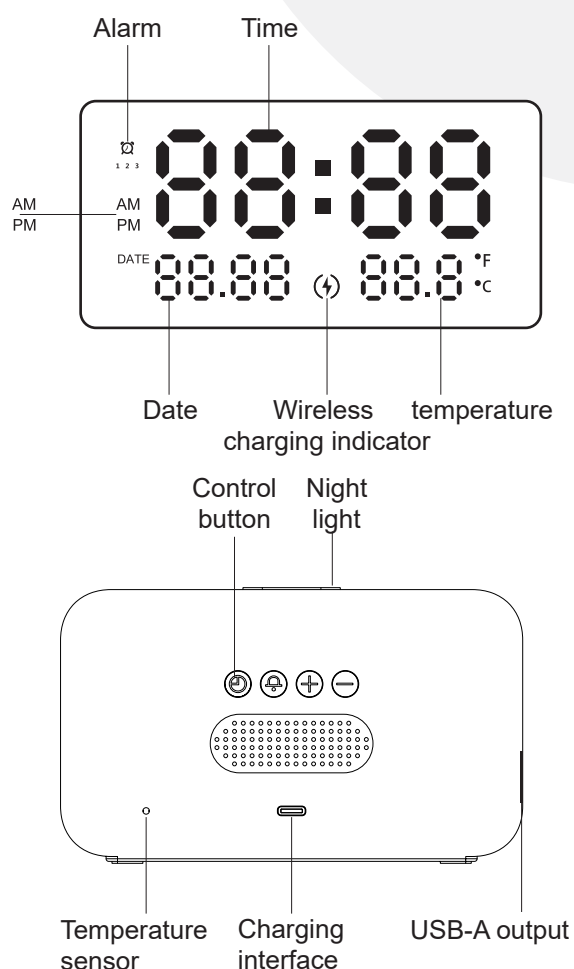

## **START USING THE DIGITAL CLOCK**

### **Wireless charging**

When the mobile is placed on the charging coil, the wireless charging light on the clock panel flashes continuously, indicating that the mobile phone is charging.

### **Time setting**

The default value is 0-2 seconds when it is powered on and then it enters the normal clock mode and displays 0:00;

a) Normal clock status:

Long press the time setting key for 2 seconds to enter the clock setting state, hour bit flashing, press the + or - key to adjust the value (long press the + key or - key to quickly adjust the value), short press the time key to set the hour, minute, month and day in turn; after setting, press the short time key to exit the setting and return to the normal time state.

Non setting state, short press + key to switch 12 / 24 hours.

### **Alarm setting**

Non setting state, long press the alarm key for 2 seconds to enter the alarm setting state. The hour and minute digits display the hour and minute of the alarm clock and the date digits display the alarm clock group 1, 2 and 3 respectively.

Display the alarm time of the first group, the alarm hour and minute value flash, press the + or - key to switch alarm 1 on (display the time of alarm 1) and off (display -: --).

Short press the alarm key to enter the first group of alarm hour setting. The hour position flashes. Press the + or - key to adjust the value (long press the + key or - key to quickly adjust the value). After setting, short press the alarm key. Set the second alarm and the third alarm in turn.

The number 1, 2 and 3 below the alarm will be displayed accordingly.

When the alarm time is up, ring for 5 minutes, press any key to turn off the alarm sound; in non setting state, press the alarm key briefly to query alarm 1, alarm 2 and alarm 3 in turn;

Double click top to cancel all alarm settings.

## **Night light setting**

In non setting state, short press the top key once to switch the night light on and off; in non setting state, long press the top key for 2 seconds to enter the night light delay time setting state;

The minute bit displays the delay time (5-60 minutes) and the minute value flashes. Press the + or - key to adjust the value (long press the + key or - key to quickly adjust the value);

After setting, press the top key to exit setting and return to normal time state;

Press any key for 30 seconds to return to the normal clock state automatically; When the delay time is up, the night light will turn off automatically.

## **Temperature setting**

Non setting state, short press - key to switch the temperature unit.

## TECHNICAL SUPPORT & WARRANTY

- For Technical Support, email us at [v.info@valore.sg](mailto:v.info@valore.sg).
- For Warranty Registration, visit [www.valore.sg](http://www.valore.sg).

### Cautions:

Read all the instructions and warnings carefully prior to using this product.

- Do not store the product in a high temperature environment.
- Do not place the product near a fire or other excessively hot environments.
- Do not expose the product to moisture or submerge it in liquid. Keep product dry at all times.
- Do not attempt to charge the product using any other method or connection other than the product's provided charging cable.
- Do not disassemble this product or attempt to repair or modify it in any manner.
- Battery usage by children should be supervised
- Be cautious of excessive drops, bumps, abrasions or other impacts to this product. If there is any damage to the product such as dents, punctures, tears, deformities or corrosion, stop using the product and contact us immediately via email at [v.info@valore.sg](mailto:v.info@valore.sg), or return this product to the store where you have purchased it from.
- If the product produces an abnormal smell, high temperature (low temperature during normal use), discolours or changes shape abnormally, stop using the product and contact us immediately via email at [v.info@valore.sg](mailto:v.info@valore.sg).

### DISCLAIMER & TRADEMARKS

All information, trademarks, logos, graphics, and images ("Materials") provided on this user manual are copyrighted or trademarked and are the property of Valore Lifestyle Pte Ltd. Any unauthorized use of any material contained on the instruction manual may violate copyright laws, trademark laws, laws of privacy and communications statutes. The trademarks, service marks and logos used and displayed in the Materials are registered and unregistered trademarks and service marks of Valore and others. All other registered and unregistered company names, product names and marks mentioned herein the ("Materials") are the property of their respective owners and may be trademarks or registered trademarks.

Complies with  
IMDA Standards  
DA102803



Inspired by Valore Singapore

For full range of Valore products visit [www.valore.sg](http://www.valore.sg)