


### **TL-100 Traffic Light Remote Programing Instructions**

1. Remove the panel from the bottom LED to locate the Receiver PCB.
2. Press The Small Black Button on the Receiver. (LED will turn on)

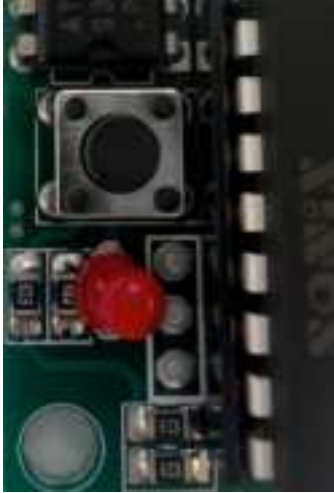

3. Press Button to be prograded on the Remote. (LED will start blinking)
4. Wait until LED stops Flashing.
5. Press Remote Button Again.
6. Repeat for other Remote Buttons to be prograded.

For Help call Stack Light.com at (678) 288-9678