 


# VICTROLA






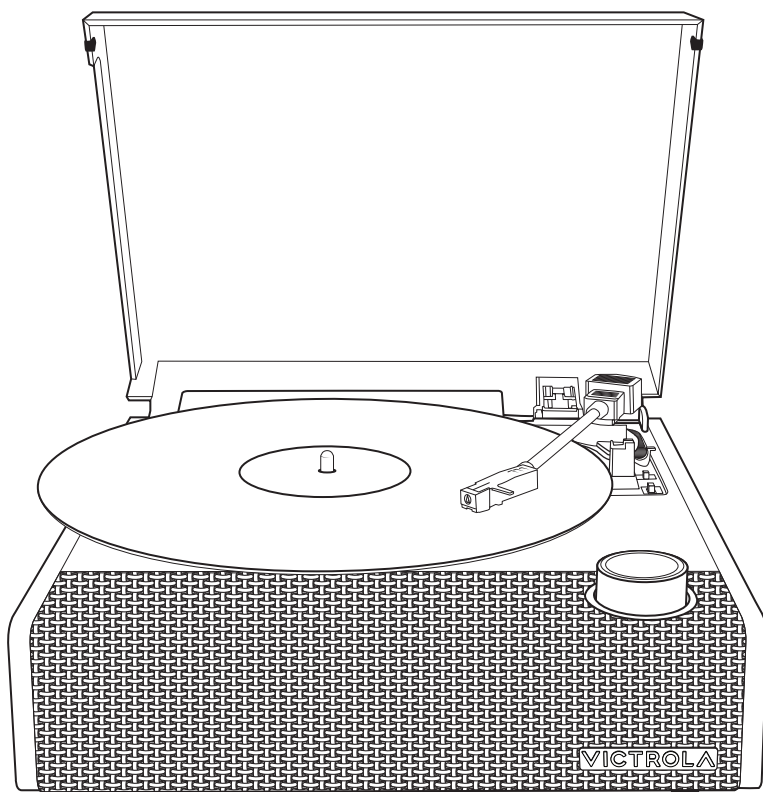


## EASTWOOD II

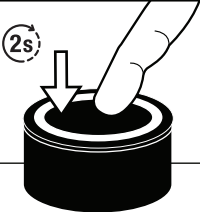


INSTRUCTION MANUAL  
VTA-74

# QUICK START GUIDE

## BASIC OPERATION

 
	 <b>POWER ON / OFF</b> Press and hold function knob for 1-2 seconds.
	 <b>SWITCH PLAYBACK MODE</b> Single press function knob to switch between <i>VINYL</i> , <i>VINYL STREAM</i> , & <i>BLUETOOTH</i> modes.
	 <b>ADJUST VOLUME</b> Rotate function knob to adjust volume.

## PLAYBACK MODES


 <b>VINYL:</b> Play vinyl through built-in speakers, RCA output, or headphone output.	<b>Ring Color:</b> <i>Solid WHITE</i>
 <b>VINYL STREAM:</b> Play vinyl through external Bluetooth speakers or headphones.	<b>Ready to Pair:</b> <i>Flashing WHITE</i> <b>Connected:</b> <i>Solid WHITE</i>
 <b>BLUETOOTH:</b> Play music from a Bluetooth device (smartphone).	<b>Ready to Pair:</b> <i>Flashing BLUE</i> <b>Connected:</b> <i>Solid BLUE (2 sec) then Solid WHITE</i>

# OVERVIEW

## TOP VIEW

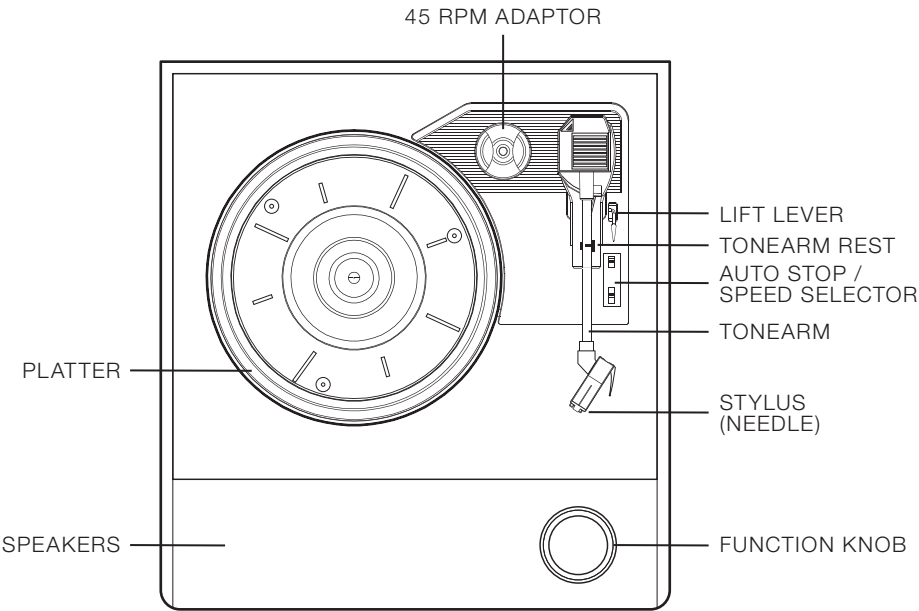


## REAR VIEW

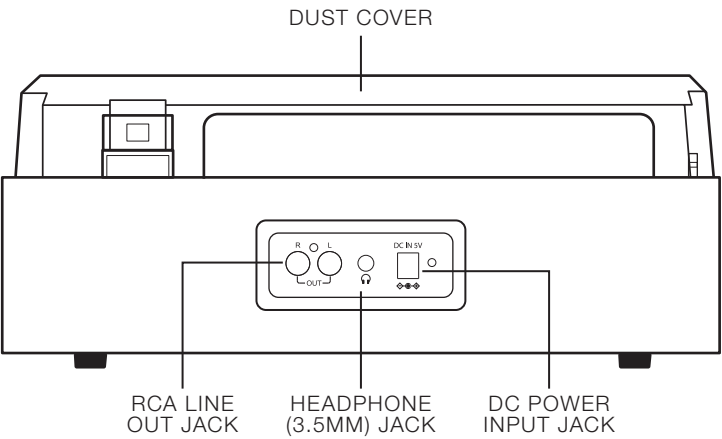 

# INITIAL SETUP

 Place the unit on a flat and level surface and open the dust cover.  
Remove the twist tie from the tonearm.  
Remove the stylus cover by gently pulling it towards the front of the unit.  
Using the included power adaptor, plug in the unit.

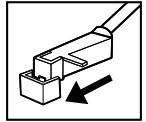


## VINYL MODE

Using the function knob, press and hold for 1-2 seconds to turn the unit ON.  
Press the function knob to make sure it is in Vinyl mode.

**PLAYING A RECORD:** Place a vinyl record on the platter. Release the tonearm from the tonearm rest and raise the tonearm using the lift lever. Move the tonearm over the edge of the record and lower the lift lever to begin playing.

Rotate the function knob to adjust the volume if needed.

 **SPEED SELECTOR SWITCH:** Use this switch to adjust the record speed.  
*If using a 45 RPM record, use the included 45 adaptor.*



**AUTO STOP SELECTION SWITCH:** If this switch is turned ON, The record will start spinning when the tonearm moves over the record and the record will stop automatically when playback is finished. If this switch is OFF, the record will automatically begin to spin when the unit is in “VINYL” function mode and the record will continue to spin after playback is finished.

**RCA LINE OUT:** Use the red & white connectors on the back of the unit to connect to an amplifier/stereo device. Be sure to first reduce the volume to a minimum level on the record player and increase volume as needed.

**HEADPHONE:** Use the headphone output on the back of the unit to connect your headphones/earbuds. Be sure to first reduce the volume to a minimum level on the record player and increase volume as needed.

### NOTE:

- Make sure to only touch the center or edges of the record to avoid damage to the vinyl grooves.
- If no sound is playing, the unit may be in Vinyl Stream mode, cycle through the function knob to make sure it is in Vinyl mode.
- When powering back ON, the unit will return to the last used mode.

## VINYL STREAM™ MODE

**VINYL STREAM:** Playing a vinyl record on an external Bluetooth speaker or headphones.

Using the function knob, press and hold for 1-2 seconds to turn the unit ON. Press the function knob to make sure it is in Vinyl Stream mode. The unit will automatically begin searching for Bluetooth devices (function knob will flash white).

Turn ON your external Bluetooth speaker or headphone, and set to pairing mode.

Once paired, the unit will say “Connected” and the function knob will turn solid white.

Use your external device to control the volume.

### NOTE:

- In Vinyl Stream mode, internal speakers will be disengaged.
- Place the Bluetooth device within 1m (3.3') of the product when initially pairing.
- Make sure the unit is within 10m (33ft) from your external device for the strongest connection.

# BLUETOOTH MODE

Using the function knob, press and hold for 1-2 seconds to turn the unit ON. Press the function knob to make sure it is in Bluetooth mode. The unit will automatically begin searching for Bluetooth devices (function knob will flash blue).

On your device, turn on Bluetooth and select “**EASTWOOD II**” in the available Bluetooth device list. The unit will chime and say “*Connected*”, while the function knob will remain blue.

Once paired, the unit will say “*Connected*” and the function knob will turn solid blue for 2 seconds then turn solid white. Rotate the Function Knob to adjust the volume.

## **NOTE:**

-Make sure the unit is within 10m (33ft) from your external device for the strongest connection.

-If no sound is playing, the unit may be in Vinyl Stream mode, cycle through the function knob to make sure it is in Bluetooth mode.

# STYLUS REPLACEMENT

## **REMOVING THE STYLUS FROM THE TONEARM:**

1. Place your fingers at the tip of the stylus and push down to the direction “**A**”.

*WARNING: When applying force to stylus, too much may damage or break the cartridge.*

2. Pull the stylus out toward the direction “**B**”.

## **INSTALLING THE STYLUS:**

**(Replacement Stylus # ATN3600L)**

1. Hold the tip of the stylus and insert the other edge by pressing toward direction “**C**”.

2. Push the stylus up toward direction “**D**” until it locks at the tip.

## **CAUTION:**

-Do not bend or force the stylus into the cartridge.

 
 
 
-Do not touch the stylus needle to avoid injury to your hand.

-Turn off the unit’s power before you replace the stylus.

-Keep out of reach of children.

**NOTE:** The stylus should last about 300 hours under normal use.

It is recommended that the stylus be replaced as soon as you notice a change in sound quality. 78 RPM records may accelerate stylus wear and may have to be changed sooner.

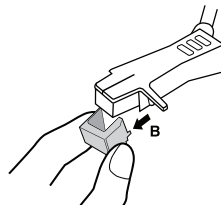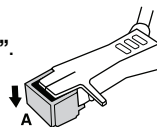

# SPECIFICATIONS

## GENERAL

DIMENSIONS	12.7" W x 5.3" H x 13.1" D 322mm W x 134mm H x 332mm D
WEIGHT	5.5 lbs / 2.5 kg
OPERATING TEMPERATURE RANGE	41°F – 104°F / 5°C – 40°C

## POWER

POWER ADAPTOR	DC 5V / 1A
POWER CONSUMPTION	5W
POWER INPUT	100-200V ~ 50/60Hz 0.4A Max

## RECORD PLAYER

SPEEDS	33-1/3, 45 & 78 RPM
--------	---------------------

## BLUETOOTH

BLUETOOTH VERSION	Bluetooth V5.4
SUPPORTED PROFILES	A2DP, AVRCP
OPERATING DISTANCE	10 meters (33 ft.)

## INCLUDED:

Eastwood II, Power Adaptor, 45 RPM Adaptor, Instruction Manual

Please note: As a result of continual improvements, the design and specifications of this product are subject to change without notice.

Bluetooth is a registered trademark of Bluetooth SIG, Inc. Other trademarks and trade names are those of their respective owners.

Made In China.

# SAFETY WARNINGS

Please read safety instructions and respect the following warnings before the appliance is operated:

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE THIS PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE. TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

 <p>The lightning flash with arrowhead within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be sufficient magnitude to constitute a risk of electric shock.</p>	<p><b>CAUTION</b> <b>RISK OF ELECTRIC SHOCK.</b> <b>DO NOT OPEN.</b></p> <p><b>CAUTION: TO PREVENT RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PROFESSIONAL.</b></p>	 <p>The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying this appliance.</p>
---	--	--

- Always follow basic safety precautions when using this appliance, especially when children are present.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not damage the power cord, neither do not place any heavy objects on it, do not stretch it or bend it. Also do not attach extension cables. Damage to the power cord may occur fire or electric shock.
- If the supply cord is damaged, it must be replaced by the manufacturer, a service agent or similarly qualified persons in order to avoid a hazard.
- Ensure that the unit plugged into an AC 100-240v 50/60Hz power outlet. Using higher voltage may cause the unit to malfunction or even catch fire.
- If the power plug does not fit into your outlet, do not force the plug into an electrical socket if it does not fit.
- Turn off the unit before unplugging it from the power source to completely switch it off.
- Do not disconnect or connect the power cord with wet hands. It may cause an electrical shock.
- Ensure that the main plug is always easily accessible.
- This product does not contain any parts that are serviceable by the user. In case of a fault, contact the manufacturer or authorized service department. Exposing the internal parts inside the device may endanger your life. The manufacturers guarantee does not extend to faults caused by repairs carried out by the unauthorized third parties.
- Ensure this product is used in moderate climates only (not in tropical/subtropical climates).
- Place product on a flat, stable surface that is not subject to vibrations.
- Ensure the product and its parts are not overhanging the edge of the supporting furniture.
- To reduce the risk of fire, electric shock or damage to this product, do not expose it to direct sunlight, dust, rain and moisture. Never expose it to dripping or splashing and do not place objects filled with liquids on or near the product.
- Do not place objects filled with liquids, such as vases, on the apparatus.
- Do not install near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
- Do not place the product where the humidity is high and ventilation is poor
- Do not mount this product on a wall or ceiling.
- Do not place the unit near TV's, speakers and other objects that generate strong magnetic fields.
- Do not leave the unit unattended when in use.
- Allow at least 30cm clearance from the rear and the top of the unit and 5cm from each side. Always ensure that the ventilation openings are not covered with items such as newspapers, tablecloths, curtains, etc.
- NEVER let anyone, especially children, push anything into holes, slots or any other openings in the unit's casing as this could result in a fatal electric shock.



# SAFETY WARNINGS

- Storms are dangerous for all electric appliances. If the main or aerial wiring is struck by lightning, the appliance might get damaged, even if it turned off. You should disconnect all the cables and connectors of the appliance before a storm.
- Excessive sound pressure from headphones can cause hearing loss.
- Do not cover ventilation openings, this is not intended to be used on soft support.

## MAINTENANCE:

- Unplug the power cable from the power source before cleaning the appliance.
- Use a soft clean rag to clean the outside of the unit. Never clean it with chemicals or detergent.

## POWER ADAPTER:

- To disconnect the unit from the main supply, unplug the lead from the main socket.
- Only use the supplied main adapter, as failure to do this may result in a safety risk and/or damage to the unit. The main plug of power adapter is used as the disconnect device. The socket-outlet shall be installed near the equipment and shall be easily accessible.

- ~ AC Voltage
- ≡ DC Voltage
- Class II equipment
- 🏠 For indoor use only
- VI Energy Efficiency marking with level VI
- ⚡ Polarity of D.C. power connector

- The shown above appears on electrical and electronic equipment (or the packaging) to remind users of this.
- Users are requested to use existing return facilities for used equipment and batteries.



## Intended Use

This audio device is only intended for playing circuit boards. Any further use is considered improper. It is only suitable for use in dry interiors. The device is not intended for commercial use, but exclusively for use in private households. Any other use or modification of the device is not intended and is strictly prohibited. No liability can be assumed for damage caused by improper use or incorrect operation.

This device can be used by children from the age of 8 and by persons with reduced physical, sensory or mental capabilities or a lack of experience and knowledge if they are supervised or have been instructed in the safe use of the device and understand the resulting dangers. Children are not allowed to play with the device. Cleaning and user maintenance must not be carried out by children unless they are older than 8 years and supervised. Also keep the packaging film away from children. There is a risk of suffocation.

Children younger than 8 years are to be kept away from the device and the connection cable.



# WEEE AND CE STATEMENTS

## Declaration of Conformity



This device complies with the essential requirements and other relevant provisions of below

1. RED directive: 2014/53/EU
2. Low voltage directive: 2014/35/EU
3. ROHS directive: 2011/65/EU

You can download the complete EU conformity declaration from [www.victrola.com/eudoc](http://www.victrola.com/eudoc)



The New Recast WEEE Directive (DIRECTIVE 2012/19/EU OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL of 4 July 2012 on waste electrical and electronic equipment (WEEE).

1. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
2. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
3. For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service.

**UK  
CA**

This product has been manufactured and sold under the responsibility of Innovative Technology Electronics, LLC. Victrola is a trademark used under license by Innovative Technology Electronics, LLC. – further information at [victrola-brand.com](http://victrola-brand.com). All other products, services, companies, trademarks, trade or product names and logos referenced herein are the property of their respective owners.

Innovative Technology Electronics, LLC  
3350 Walnut Street  
Denver, CO 80205

**Imported by:**

EU authorized representative  
Possible-Music S.A.S.  
40 Rue Du Louvre  
75001 Paris, France

CMS Distribution Ltd,  
EC2A 2DT  
Registered in England No. 2214562

Italia  
NITAL S.p.A  
Via vittime di piazza fontana 54  
10024 Moncalieri (Torino) Italy

[www.victrola.com/importer](http://www.victrola.com/importer)