



Technical support and E-warranty certificate
[Www.vevor.com/support](http://www.vevor.com/support)

PIANO USER MANUAL

MODEL:BD-662

we continue to be committed to provide you tools with competitive price.
"save Half" , "Half price" or any other similar expressions used by us only represents an estimate of savings you might benefit from buying certain tools with us compared to the major top brands and does not necessarily mean to cover all categories of tools offered by us. You are kindly reminded to verify carefully when you are placing an order with us if you are actually saving half in comparison with the top major brands.

MODEL: BD-662



(The picture is for reference only, please refer to the actual object)

NEED HELP? CONTACT US!

Have product questions? Need technical support? Please feel free to contact us:

Technical support and E-warranty certificate
www.vevor.com/support

This is the original instruction , please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual . The appearance of the product shall be subject to the product you received. please forgive us that we won't inform you again if there are any technology or software updates on our product.

Accessory

power cord * 1

Microphone * 1

Music sheet stand * 1

Earphones * 1

sustain pedal * 1


Music sheet clip * 1

MIDI Cord * 1


piano sticker * 1

keyboard stand*1


Installation diagram of Keyboard stand

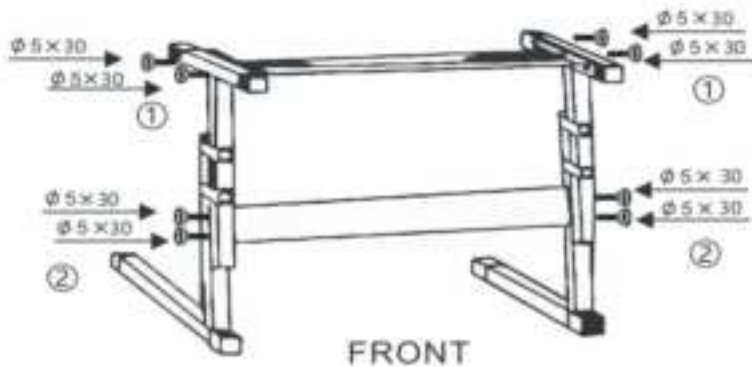 

 
- ④ Connecting the screw hole position at the bottom of the piano body

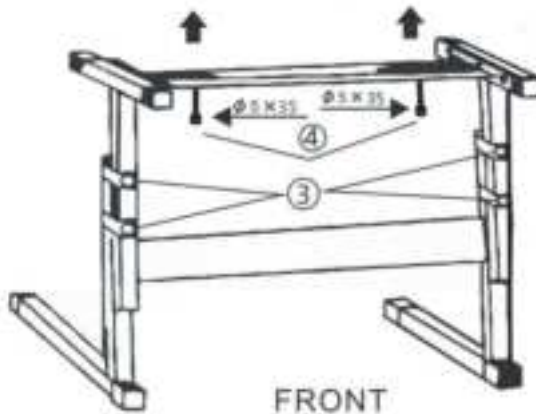

 - ③ Adjust the limit screw at the same time on the left and right sides to adjust the appropriate height

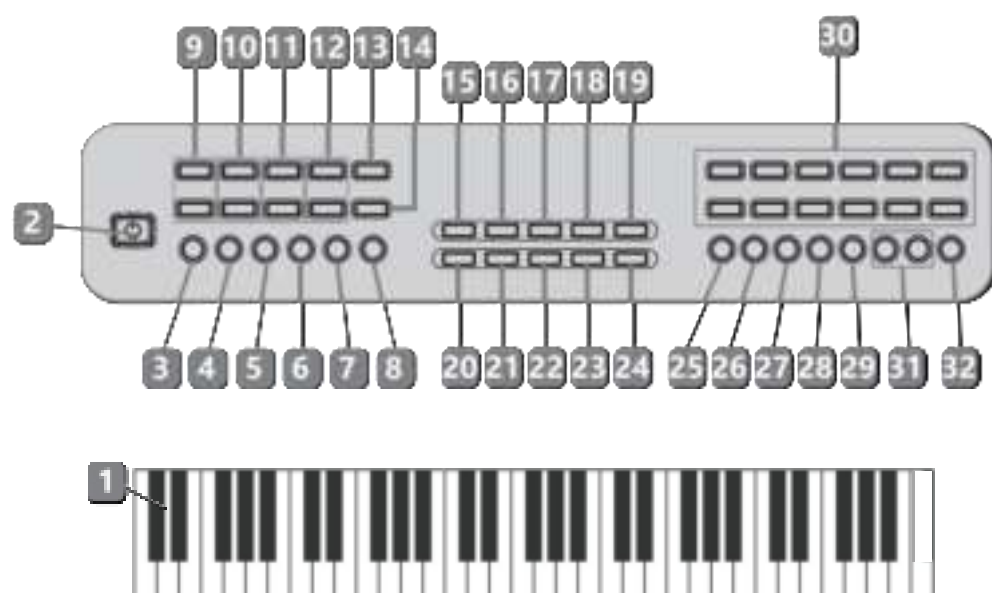

1 KEYBOARD	9 VOLUME+/-	17 FILL-IN/LED	25 TONE
2 POWER	10 RHYTHM VOL+/-	18 FILL-IN2	26 RHYTHM
3 RECORD	11 TEMPO+/-	19 BASSCHORDS	27 PIANO
4 PROG	12 TRANSPOSE+/-	20 ONE KEY	28 DEMO ONE
5 PLAY	13 SUSTAIN	21 FOLLOW	29 DEMO ALL
6 METRONOME	14 VIBRATO	22 ENSEMBLE	30 NUMBER SELECTION AREA
7 KEY DRUM	15 SYNC	23 CHORD. OFF	31 <</VOL- >>/VOL+
8 DUAL KEY	16 CHORD	24 START/STOP	32 >>/CHANGE

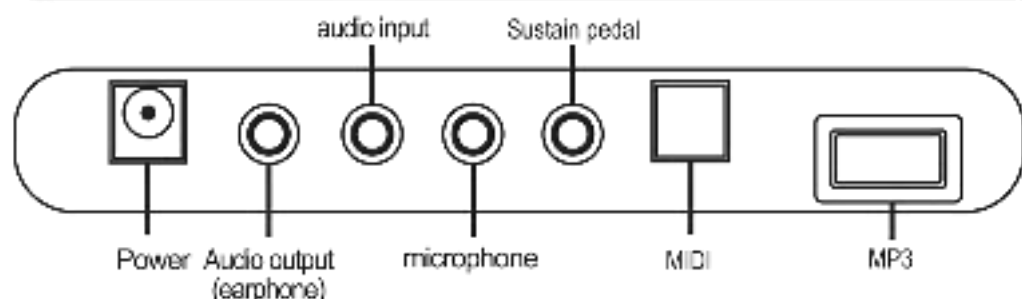 

1.KEYBOARD\2.POWER

Turn on the power, you can play the "keyboard" and enter the performance state. In standby mode, after 3 minutes of no operation, it will automatically enter the sleep mode, and can be restored by pressing any key.

3.RECORD

Press the **【RECORD】** key to enter the recording mode, and then press any piano key or drum key to start the recording.

start recording. The maximum number of recordings is 80. When the recording is full, it cannot continue to record another note.

When recording, you can press the play button at any time to play.

Each time this button is pressed, the last memory will be cleared and the recording mode will be re-entered.

After exiting the recording mode, the last memory will be cleared.

4.PROG

Press **【PROG】** key to enter programming mode, the preset speed is 120.

The pressed drum sound can be recorded. In edit mode, only the drum sound is valid.

The maximum number of records is 32. When the record is full, it cannot continue to record another drum sound. You can press the button at any time, press the Play key to play the edited drum sound.

Each time this key is pressed, the last memory will be cleared and the programming mode will be re-entered.

After exiting the programming mode, the last memory will be cleared.

In this mode, the keys are automatically converted to keyboard drums.

5.PLAY

In the recording mode, press the **【PLAY】** for the first time to play the recorded notes.

Press the **【PLAY】** for the second time to stop playing.

In programming mode, press the **【PLAY】** for the first time to play the recorded drum sound, and press the **【PLAY】** for the second time to stop playing

If there is no recorded value before, press the **【PLAY】** and no action will take place.

6.METRONOME

Pressing the **【METRONOME】** key, the action function is the click sound, there are 7 kinds of changes, 1/4 beat → 2/4 beat → 3/4 beat → 4/4 beat... → stop, the default value of the beat is 120.

7.KEY DRUM

Press the **【KEY DRUM】** key to get percussion sound on the corresponding key.

8.DUAL KEY

Press **【DUAL KEY】** for the first time to activate the dual keyboard function, and press **【DUAL KEY】** for the second time to select eliminate the double keyboard function.

When the dual keyboard function is activated, the scales of the left keys C2-B3 will be played correspondingly to the scales of C3-B4. The scales of C4-C7 on the right keys will be played as C3-C6 scales. You can use the digital area and the [+] [-] keys or digital switches to select the sub-tone instead of the left piano key tone.

9.VOLUME+/-

Use **【VOLUME+/-】** to control the volume, press **【VOLUME+】** to represent To increase the volume up, press **【VOLUME-】** to decrease the volume down. The volume control has a total of 17 segments (0~16), and the default value is the 13th segment after power-on.

Press and hold **【VOLUME+/-】** for more than 1 second to continuously increase /decrease the volume.

10.RHYTHM+/-

Press **【RHYTHM+/-】** to select the accompaniment volume.

The accompaniment volume control has a total of 17 segments (0~16), and the preset value is the 13th segment after power-on.

Press and hold the **【RHYTHM+/-】** for more than 1 second to continuously increase/decrease the accompaniment volume.

11.TEMPO+/-

Press **【TEMPO+/-】** to select the speed.

The speed control has a total of 270 stages (30~300), and the preset value is the 90th stage after power-on (speed = 120)

Press and hold the **【TEMPO+/-】** for more than 1 second to continuously increase/decrease the speed.

When playing the selected song, the tempo of the song will be used, regardless of the set tempo.

When playing the selected rhythm, the set tempo will prevail.

12.TRANSPOSE+/-

Press **【TRANSPOSE+/-】** to select Transpose .

There are 25 segments (-12~12) in total for transposition control, and the preset value is at segment 13 after power-on.

Press and hold the **【TRANSPOSE+/-】** for more than 1 second to continuously increase/decrease the transpose.

The chord pitch also changes with the transpose value.

13.SUSTAIN

Press the **【SUSTAIN】** key to enable or disable the sustain function.

When the sustain function is turned on, when you play the keyboard, the sound will have a prolongation effect.

14.VIBRATO

Press the **【VIBRATO】** key to enable or disable the vibrato function.

When the vibrato function is turned on, the sound will vibrate when you play the keyboard.

15.SYNC

Press the [Sync] key for the first time to enter the sync mode, and press the [Sync key] for the second time to exit the sync mode.

When entering sync mode, pressing the first 19 keys on the left will automatically play the selected rhythm (chord).

16.CHORD

Press the **【CHORD】** for the first time to enter the comprehensive chord mode, and press the **【CHORD】** for the second time to exit the composite chord mode.

【CHORD】 Only in rhythm and general mode, the function can occur. When playing the rhythm, press **【CHORD】** and press multiple keys within the range of C2-F3#.

After fingering, you can hear the corresponding chord accompaniment. The single-fingered chords are played.

When the rhythm is not playing, press the **【CHORD】** and press the multi-finger key within the range of keys C2-F3#, and you can hear the corresponding chord accompaniment. Otherwise, the single-fingered chords are played. Comprehensive fingering can be used with rhythm/chord/synchronization.

17.FILL-IN/LED 18.FILL-IN2

【FILL-IN/LED】 When the rhythm is not playing, pressing it is the key light switch function.

【FILL-IN】 and **【FILL-IN2】** function only when the rhythm is played. Interlude: During the rhythm playing, press the **【FILL-IN】** to add the fill-in function to the rhythm.

When the measure is finished, insert an interlude.

During rhythm playback, press and hold the **【FILL-IN】** to continue inserting.

19.BASSCHORDS

Change the bass voice in the chord to the piano voice.

20.ONE KEY

Press the **【ONE KEY】** for the first time to enter the random play mode, and then press any key to issue the correct note.

Press the **【ONE KEY】** for the second time to exit the strumming mode.

21.FOLLOW

Press the **【FOLLOW】** for the first time to enter the follow mode, and press the **【FOLLOW】** for the second time to exit the follow mode.

After entering the follow play mode, use the current song to teach, after the song is played, the main melody will not be played.

The user must press the corresponding key according to the note displayed on the LCD or the keyboard indicator light.

To continue playing the next note, the background sound repeats the measure until the end of the song.

After the song is over, play the next song.

In follow mode, you can use the number selection area to select other songs.

22.ENSEMBLE

Press the **【ENSEMBLE】** for the first time to enter the ensemble mode, and press the **【ENSEMBLE】** for the second time to exit the ensemble mode.

After entering the ensemble mode, use the current song to teach, after the song is played, the user can play the piano at will key and interrupt the main chord. If the key is not pressed after 5 seconds, the main chord will resume playing automatically. background

The sound plays completely until the end of the song.

When the song is over, play the next song together.

In Ensemble mode, other songs can be selected using the number selection area.

23.CHORD.OFF

Turn off composite chords.

24.START/STOP

Short press [Start/Stop Key] for the first time to start playing the rhythm, and

short press [Start/Stop Key] for the second time, to stop playing the rhythm.

Exit this mode in teaching, recording, playback, metronome, demo songs, etc.

25.TONE

After pressing the **【TONE】**, you can use the number selection area and the **[+][-]** keys to select the tone.

26.RHYTHM

After pressing the **【RHYTHM】**, you can use the number selection area and the **[+] [-]** keys to select the rhythm.

27.PIANO

In other voice states, press the [Piano] key to set the piano voice, and press the **【PIANO】** key for the second time to restore the previous sound.

(The default is piano sound when power on, this button is invalid)

28.DEMO ONE

Press the **【DEMO ONE】** button for the first time to enter the click mode, and press the **【DEMO ONE】** for the second time to exit the click mode.

After entering the sing-along mode, playback starts from the next song.

When the song finishes playing, the current song is played repeatedly.

In sing-along mode, other songs can be selected using the number selection area.

29.DEMO ALL

Press the **【DEMO ALL】** for the first time to enter the continuous singing mode, and press the **【DEMO ALL】** for the second time to exit the continuous singing mode.

After entering continuous singing mode, playback starts from the first song.

When the song is finished, continue to play the next song and play all the songs in a loop.

In sing-along mode, other songs can be selected using the number selection area.

30 .NUMBER SULECTION AREA

Use the number keys 0-9 to input the corresponding timbre, rhythm, song code for quick selection, use the +/- keyscan be selected sequentially.

Press and hold the "+" or "-" key for more than 2 seconds to continuously increase/decrease the selection.

If neither tone mode or rhythm mode is selected, the default value is tone mode after power-on.

If neither tone mode or rhythm mode is selected, the default value is tone mode after power-on.

31 . VOL- VOL+

32 . CHANGE

Press (within 1 second) [CHANGE] to play or pause the song. In pause mode, press [CHANGE] to continue playing the song.

Press (within 1 second) [VOL-] to select the previous song.

Press (within 1 second) [VOL+] to select the next song.

Press and hold the [VOL-] for more than 1 second to decrease the volume. Long press [VOL+] to exceedIncrease the volume after 1 second.

Appendix 1 (Voice Comparison Table)

T001	Acoustic Grand Piano	T026	Acoustic Guitar (steel)	T051	Synth Strings 1
T002	Bright Acoustic Piano	T027	Electric Guitar (jazz)	T052	Synth Strings 2
T003	Electric Grand Piano	T028	Electric Guitar (clean)	T053	Choir Aahs
T004	Honky-tonk Piano	T029	Electric Guitar (muted)	T054	Voice Oohs
T005	Rhodes Piano	T030	Overdriven Guitar	T055	Synth Voice
T006	Chorused Piano	T031	Distortion Guitar	T056	Orchestra Hit
T007	Harpsichord	T032	Guitar Harmonics	T057	Trumpet
T008	Clavichord	T033	Acoustic Bass	T058	Trombone
T009	Celesta	T034	Electric Bass(finger)	T059	Tuba
T010	Glockenspiel	T035	Electric Bass (pick)	T060	Muted Trumpe
T011	Music box	T036	Fretless Bass	T061	French Horn
T012	Vibraphone	T037	Slap Bass 1	T062	Brass Section
T013	Marimba	T038	Slap Bass 2	T063	Synth Brass 1
T014	Xylophone	T039	Synth Bass 1	T064	Synth Brass 2
T015	Tubular Bell	T040	Synth Bass 2	T065	Soprano Sax
T016	Dulcimer	T041	Violin	T066	Alto Sax
T017	Drawbar Organ	T042	Viola	T067	Tenor Sax
T018	Percussive Organ	T043	Cello	T068	Baritone Sax
T019	Rock Organ	T044	Contrabass	T069	Oboe
T020	Church Organ	T045	Tremolo Strings	T070	English Horn
T021	Reed Organ	T046	Pizzicato Strings	T071	Bassoon
T022	Accordion	T047	Orchestral Harp	T072	Clarinet
T023	Harmonica	T048	Timpani	T073	Piccolo
T024	Tango Accordion	T049	String Ensemble 1	T074	Flute
T025	Acoustic Guitar (nylon)	T050	String Ensemble 2	T075	Recorder

Appendix 1 (Voice Comparison Table)

T076	Pan Flute	T129	Yong Gin	T181	Soft Santur
T077	Bottle Blow	T130	Zheng	T182	Dual Horns 1
T078	Shakuhachi	T131	Zhong Ruan	T183	Bodhran
T079	Whistle	T132	Pi Pa	T184	Tubular Bells 2
T080	Ocarina	T133	Big Souna	T185	Suona 2
T081	Lead 1 (square)	T134	Souna	T186	Castanets
T082	Lead 2 (sawtooth)	T135	Er Hu	T187	Attack Harp 1
T083	Lead 3 (calliope lead)	T136	Yue Hu	T188	Electric Viaphone
T084	Lead 4 (chiff lead)	T137	Di Zi	T189	Soft Sax 1
T085	Lead 5 (charang)	T138	Bong Di	T190	Soft Clav.
T086	Lead 6 (voice)	T139	Koto 2	T191	Soft Accord
T087	Lead 7 (fills)	T140	Qu Di	T192	Wind Organ
T088	Lead 8 (bass+lead)	T141	Xylophone 2	T193	Viola Attack
T089	Pad 1 (new age)	T142	Dulcimer 2	T194	Bari & Tenor
T090	Pad 2 (warm)	T143	Guitar Pinch 2	T195	Soft Guitar 1
T091	Pad 3 (polysynth)	T144	Slow Violin	T196	Grow Guitar
T092	Pad 4 (choir)	T145	Bright String	T197	Didgeridoo 1
T093	Pad 5 (bowed)	T146	Jungle Bass 2	T198	Attack Barafon
T094	Pad 6 (metallic)	T147	Indian Flute	T199	Mule Barafon 1
T095	Pad 7 (halo)	T148	Clavi 2	T200	Nay
T096	Pad 8 (sweep)	T149	Celesta 2	T201	Didgeridoo 2
T097	FX 1 (rain)	T150	Church Bells	T202	Dual Horns 2
T098	FX 2 (soundtrack)	T151	Kalimba 2	T203	Hard Barsoon 2
T099	FX 3 (crystal)	T152	Steel Bell 1	T204	Kawala 2
T100	FX 4 (atmosphere)	T153	Tenor Sax 2	T205	Soft Guitar 2
T101	FX 5 (brightness)	T154	Woodblock 2	T206	Mute Barafon 2
T102	FX 6 (goblins)	T155	Electric Guitar (Clean) 2	T207	Hard Barsoon 1
T103	FX 7 (echoes)	T156	Shanai 2	T208	Tron Flute
T104	FX 8 (sci-fi)	T157	Marimba 3	T209	Kawala 1
T105	Sitar	T158	Dulcimer 3	T210	Jazz Organ
T106	Banjo	T159	Reed Organ 3	T211	Synth Harpsi. 3
T107	Shamisen	T160	Koto 3	T212	Tenor Sax 3
T108	Koto	T161	Crystal 1	T213	Steel Bell 3
T109	Kalimba	T162	Bag Pipe 2	T214	Kalimba 4
T110	Bagpipe	T163	Barafon	T215	Shamisen 3
T111	Fiddle	T164	Organ Flute	T216	English Horn 3
T112	Shanai	T165	Kalimba 3	T217	Shanai 3
T113	Tinkle Bell	T166	Reed Horn	T218	Soft Sax 2
T114	Agogo	T167	English Horn 2	T219	Attack Harp 2
T115	Steel Drums	T168	Electric Guitar (Clean) 3	T220	Castanets 2
T116	Woodblock	T169	Shamisen 2	T221	Suona 3
T117	Taiko Drum	T170	Koto 4	T222	Xylophone 3
T118	Melodic Tom	T171	Hard Vibe 2	T223	Koto 5
T119	Synth Drum	T172	Twin Bones	T224	Attack Clav. 4
T120	Reverse Cymbal	T173	Synth Harpsi. 1	T225	Synth Harpsi. 4
T121	Guitar Fret Noise	T174	Attack Clav. 1	T226	Twin Bones 2
T122	Breath Noise	T175	Chorus Guitar.	T227	Hard Vibe 3
T123	Seashore	T176	Steel Bell 2	T228	Reed Horn 2
T124	Bird Tweet	T177	Tsugaru	T229	Organ Flute 2
T125	Telephone Ring	T178	Oct Harp	T230	Steel Bell 4
T126	Helicopter	T179	Synth Harpsi. 2	T231	Chorus Guitar. 2
T127	Applause	T180	Attack Clav. 2	T232	Dual Horns 3
T128	Gunshot				

T233	Soft Santur 2	T288	Tenor Sax 4	T343	English Horn 5
T234	Barafon 3	T289	Twin Bones 3	T344	Shamisen 5
T235	Bag Pipe 3	T290	Hard Vibe 4	T345	Kalimba 7
T236	Crystal 3	T291	Koto 7	T346	Steel Bell 7
T237	Attack Clav. 3	T292	Shamisen 4	T347	Tenor Sax 5
T238	Electric Viophone 2	T293	Electric Guitar (Clean) 5	T348	Chorus Guitar. 4
T239	Attack Harp 3	T294	English Horn 4	T349	Steel Bell 8
T240	Attack Barafon 2	T295	Reed Horn 3	T350	Organ Flute 4
T241	Didgeridoo 3	T296	Kalimba 6	T351	Reed Horn 4
T242	Grow Guitar 2	T297	Organ Flute 3	T352	Hard Vibe 5
T243	Soft Guitar 3	T298	Barafon 2	T353	Twin Bones 4
T244	Soft Clav. 2	T299	Dual Horns 5	T354	Synth Harpsi. 8
T245	Soft Sax 3	T300	Soft Santur 3	T355	Attack Clav. 8
T246	Tubular Bells 3	T301	Attack Clav. 5	T356	Koto 8
T247	Bodhran 2	T302	Synth Harpsi. 5	T357	Xylophone 5
T248	Oct Harp 2	T303	Oct Harp 3	T358	Didgeridoo 7
T249	Tsugaru 2	T304	Tsugaru 3	T359	Attack Barafon 4
T250	Bari & Tenor 2	T305	Steel Bell 6	T360	Attack Harp 7
T251	Wind Organ 2	T306	Chorus Guitar. 3	T361	Electric Viophone 4
T252	Soft Accord 2	T307	Attack Clav. 6	T362	Attack Clav. 7
T253	Attack Harp 4	T308	Synth Harpsi. 6	T363	Crystal 4
T254	Viola Attack 2	T309	Wind Organ 3	T364	Bag Pipe 5
T255	Kawala 3	T310	Soft Accord 3	T365	Barafon 4
T256	Soft Sax 4	T311	Soft Clav. 3	T366	Soft Santur 4
T257	Jazz Organ 2	T312	Soft Sax 5	T367	Dual Horns 7
T258	Nay 2	T313	Electric Viophone 3	T368	Wind Organ 4
T259	Mute Barafon 3	T314	Attack Harp 5	T369	Bari & Tenor 4
T260	Dulcimer 5	T315	Castanets 3	T370	Tsugaru 4
T261	Xylophone 4	T316	Suona 4	T371	Oct Harp 4
T262	Tron Flute 2	T317	Tubular Bells 4	T372	Bodhran 4
T263	Hard Barsoon 3	T318	Bodhran 3	T373	Tubular Bells 6
T264	Mute Barafon 4	T319	Dual Horns 6	T374	Soft Sax 7
T265	Soft Guitar 4	T320	Didgeridoo 6	T375	Soft Clav. 4
T266	Kawala 4	T321	Nay 3	T376	Soft Guitar 7
T267	Hard Barsoon 4	T322	Mute Barafon 5	T377	Grow Guitar 4
T268	Dual Horns 4	T323	Attack Barafon 3	T378	Hard Barsoon 7
T269	Didgeridoo 4	T324	Didgeridoo 5	T379	Tron Flute 4
T270	Steel Bell 5	T325	Grow Guitar 3	T380	Mute Barafon 7
T271	Kalimba 5	T326	Soft Guitar 5	T381	Nay 4
T272	Church Bells 2	T327	Bari & Tenor 3	T382	Jazz Organ 4
T273	Celesta 3	T328	Viola Attack 3	T383	Soft Sax 8
T274	Clavi 3	T329	Synth Harpsi. 7	T384	Kawala 7
T275	Indian Flute 2	T330	Jazz Organ 3	T385	Viola Attack 4
T276	Jungle Bass 3	T331	Kawala 5	T386	Attack Harp 8
T277	Bright String 2	T332	Tron Flute 3	T387	Soft Accord 4
T278	Slow Violin 2	T333	Hard Barsoon 5	T388	Guitar Pinch 4
T279	Guitar Pinch 3	T334	Mute Barafon 6	T389	Indian Flute 3
T280	Bag Pipe 4	T335	Soft Guitar 6	T390	Bright String 3
T281	Crystal 2	T336	Kawala 6	T391	Church Bells 3
T282	Koto 6	T337	Hard Barsoon 6	T392	Didgeridoo 8
T283	Reed Organ 4	T338	Suona 5	T393	Dual Horns 8
T284	Dulcimer 4	T339	Castanets 4	T394	Hard Barsoon 8
T285	Marimba 4	T340	Attack Harp 6	T395	Kawala 8
T286	Shanai 4	T341	Soft Sax 6	T396	Soft Guitar 8
T287	Electric Guitar (Clean) 4	T342	Shanai 5	T397	Mute Barafon 8

T398	Electric Guitar (Clean) 6	T453	Tron Flute 6	T508	Bright String 4
T399	Shanai 6	T454	Bari & Tenor 6	T509	Slow Violin 3
T400	Marimba 5	T455	Wind Organ 6	T510	Guitar Pinch 5
T401	Koto 9	T456	Grow Guitar 5	T511	Bag Pipe 9
T402	Xylophone 6	T457	Attack Barafon 5	T512	Crystal 7
T403	Tenor Sax 6	T458	Dual Horns 9	T513	Reed Organ 5
T404	Organ Flute 5	T459	Hard Barsoon 10	T514	Dulcimer 6
T405	Kalimba 9	T460	Hard Barsoon 9	T515	Marimba 6
T406	English Horn 6	T461	Tron Flute 7	T516	Shanai 9
T407	Electric Guitar (Clean) 7	T462	Jazz Organ 5	T517	Electric Guitar (Clean) 8
T408	Shamisen 6	T463	Tenor Sax 8	T518	Tenor Sax 9
T409	Koto 10	T464	Steel Bell 9	T519	Twin Bones 6
T410	Kalimba 8	T465	Shamisen 8	T520	Hard Vibe 7
T411	Barafon 5	T466	English Horn 8	T521	Shamisen 9
T412	Chorus Guitar, 6	T467	Shanai 8	T522	Electric Guitar (Clean) 9
T413	Tsugaru 5	T468	Attack Harp 9	T523	English Horn 9
T414	Synth Harpsi, 9	T469	Castanets 5	T524	Reed Horn 6
T415	Crystal 5	T470	Suona 6	T525	Organ Flute 8
T416	Bag Pipe 6	T471	Xylophone 8	T526	Barafon 6
T417	Synth Harpsi, 10	T472	Attack Clav, 10	T527	Soft Santur 8
T418	Soft Sax 9	T473	Twin Bones 5	T528	Oct Harp 6
T419	Soft Clav, 5	T474	Hard Vibe 6	T529	Tsugaru 8
T420	Bodhran 5	T475	Reed Horn 5	T530	Chorus Guitar, 9
T421	Bari & Tenor 5	T476	Organ Flute 7	T531	Wind Organ 8
T422	Soft Guitar 9	T477	Steel Bell 10	T532	Soft Accord 8
T423	Didgeridoo 9	T478	Chorus Guitar, 8	T533	Soft Clav, 8
T424	Mute Barafon 9	T479	Dual Horns 10	T534	Electric Vibraphone 6
T425	Nay 5	T480	Soft Santur 7	T535	Castanets 6
T426	Soft Santur 5	T481	Barafon 7	T536	Suona 7
T427	Kawala 10	T482	Bag Pipe 8	T537	Tubular Bells 7
T428	Soft Guitar 10	T483	Crystal 8	T538	Bodhran 8
T429	Mute Barafon 10	T484	Attack Clav, 9	T539	Nay 8
T430	Tron Flute 5	T485	Electric Vibraphone 5	T540	Attack Barafon 7
T431	Kawala 9	T486	Attack Harp 10	T541	Grow Guitar 7
T432	Soft Accord 5	T487	Attack Barafon 6	T542	Bari & Tenor 8
T433	Wind Organ 5	T488	Grow Guitar 6	T543	Viola Attack 6
T434	Kalimba 10	T489	Soft Clav, 7	T544	Jazz Organ 7
T435	Shamisen 7	T490	Tubular Bells 6	T545	Tron Flute 9
T436	English Horn 7	T491	Bodhran 7	T546	Suona 8
T437	Shanai 7	T492	Oct Harp 5	T547	Castanets 7
T438	Soft Sax 10	T493	Tsugaru 7	T548	Shanai 10
T439	Didgeridoo 10	T494	Bari & Tenor 7	T549	English Horn 10
T440	Tenor Sax 7	T495	Wind Organ 7	T550	Shamisen 10
T441	Koto 11	T496	Soft Accord 7	T551	Tenor Sax 10
T442	Organ Flute 6	T497	Viola Attack 5	T552	Chorus Guitar, 10
T443	Xylophone 7	T498	Jazz Organ 6	T553	Organ Flute 9
T444	Soft Santur 6	T499	Nay 7	T554	Reed Horn 7
T445	Bag Pipe 7	T500	Dulcimer 7	T555	Hard Vibe 8
T446	Crystal 6	T501	Xylophone 9	T556	Twin Bones 7
T447	Soft Clav, 6	T502	Tron Flute 8	T557	Xylophone 10
T448	Bodhran 6	T503	Church Bells 4	T558	Attack Barafon 8
T449	Tsugaru 6	T504	Celesta 4	T559	Electric Vibraphone 7
T450	Chorus Guitar, 7	T505	Clavi 4	T560	Crystal 9
T451	Nay 6	T506	Indian Flute 4	T561	Bag Pipe 10
T452	Soft Accord 6	T507	Jungle Bass 4	T562	Barafon 8

T563	Soft Santur 9	T576	Guitar Pinch 6	T589	Soft Clav, 10
T564	Wind Organ 9	T577	Indian Flute 5	T590	Bari & Tenor 10
T565	Bari & Tenor 9	T578	Bright String 5	T591	Nay 10
T566	Tsugaru 9	T579	Church Bells 5	T592	Soft Santur 10
T567	Oct Harp 7	T580	Electronic Guitar (Clean)	T593	Tron Flute 11
T568	Tubular Bells 8	T581	Shanai 11	T594	Soft Accord 10
T569	Soft Clav. 9	T582	Marimba 7	T595	Wind Organ 10
T570	Grow Guitar 8	T583	Organ Flute 10	T596	English Horn 12
T571	Tron Flute 10	T584	English Horn 11	T597	Shanai 12
T572	Nay 9	T585	Barafon 9	T598	Organ Flute 11
T573	Jazz Organ 8	T586	Tsugaru 10	T599	Bag Pipe 12
T574	Viola Attack 7	T587	Crystal 10	T600	Tsugaru 11
T575	Soft Accord 9	T588	Bag Pipe 11		

Appendix 2 (Rhythm Comparison Table)

R001	China1	R040	FastGospel	R079	GuadDance
R002	China2	R041	FolkRock	R080	Reggae12Beat
R003	China3	R042	RockBilly	R081	Reggae16Beat
R004	China4	R043	RockBoogie	R082	Bossanova
R005	China5	R044	RockChaCha	R083	Mambo 1
R006	China6	R045	RockClassical	R084	Mambo 2
R007	China7	R046	RockShuffle	R085	Bolero
R008	China8	R047	RockPop	R086	Cumbia
R009	China9	R048	Skiffle	R087	Latin Rock
R010	China10	R049	Funk Pop Rock	R088	Disco Latin
R011	Club Pop	R050	Contemp Rock	R089	Tijuana
R012	16 Beat Pop	R051	Acoustic Rock	R090	Reggae
R013	8 Beat Pop	R052	80's RockN	R091	Pop Mambo
R014	8 Beat Soul	R053	Standard Rock	R092	Latin Party Pop
R015	8 Beat Rock	R054	Brit Rock Pop	R093	Hhard Mambo
R016	Rap Pop	R055	80's Vintage Rock	R094	Parranda
R017	Pop Rock	R056	Chart Rock Shfl	R095	Rock Lation
R018	60's Soul	R057	80's Pop Rock	R096	Slow Rock 1
R019	70's Soul	R058	Waltz	R097	Slow Rock 2
R020	Funk	R059	Cha Cha	R098	Slow Rock 3
R021	16 Beat Shuffle	R060	Rumba	R099	Slow Soul
R022	Twist	R061	Jive	R100	8 Beat Adria
R023	British Pop	R062	Pasodoble	R101	Classic Piano
R024	Hard Rock	R063	Samba 1	R102	Unplugged
R025	Fusion	R064	Samba 2	R103	Pop Ballad
R026	FunkShuffl	R065	Schlager Rock 1	R104	Pop New Age
R027	FusionShuffl	R066	Schlager Rock 2	R105	8 Beat Modern
R028	Classic 8Beat	R067	FoxTrot	R106	Country Ballad
R029	Vintage Gtr Pop	R068	Viennese Waltz	R107	Love Song
R030	Schlager Italia	R069	Tango1	R108	Modern Country Pop
R031	50's Pop	R070	Tango2	R109	Electro Pop
R032	Cool Pop	R071	German Waltz	R110	Acoustic Ballad
R033	Groovy Pop	R072	Carnival	R111	Piano Ballad
R034	80's Vintage Pop	R073	Organ Samba	R112	R&B Ballad
R035	80's Pop	R074	Reel	R113	Rock Ballad
R036	Rock'n Roll 1	R075	Gay Gordons	R114	Slow & Easy
R037	Rock'n Roll 2	R076	Scand Waltz	R115	Analog Ballad
R038	Straight Rock	R077	Salsa	R116	E. Ballad
R039	Jazz Rock	R078	Calypso	R117	80's EP Ballad

R118	80's Boy Band	R173	Ragtime	R228	Tango4
R119	70's Chart Ballad	R174	Frankly Soul	R229	Jig
R120	Romantic Ballad	R175	Jazz Funk	R230	Hawaiian
R121	90's Cool Ballad	R176	Classic Big Band	R231	Electronica
R122	Alp Ballad1	R177	French Jazz	R232	Funky House
R123	Alp Ballad2	R178	Jump Jive	R233	Club Beat
R124	Techno 1	R179	Swing Fox	R234	Retro Club
R125	Techno 2	R180	Slow Fox	R235	Mod Chart Pop
R126	Funky Disco	R181	Organ Cha Cha	R236	MOR Swing
R127	Saturday Night	R182	Organ Quick Step	R237	Retro Pop
R128	Club Latin	R183	Ober Polka	R238	Rumba Flamenco
R129	Disco Chocolate	R184	Polka Pop	R239	Cumbia1
R130	Disco Fox	R185	Blue Grass 1	R240	Parranda1
R131	Disco Funk	R186	Blue Grass 2	R241	Carnival2
R132	Disco Hands	R187	Blue Grass 3	R242	50's Pop1
R133	Disco Party	R188	Pop Waltz	R243	Groovy Pop1
R134	Disco Samba	R189	USA March	R244	Cool Pop1
R135	British Pop2	R190	Hully Gully	R245	Club Pop2
R136	Club Dance	R191	Tarantella	R246	16 Beat Pop2
R137	Modern R&B	R192	Limbo Rock	R247	8 Beat Pop2
R138	Hip Shuffle	R193	Swing Waltz	R248	8 Beat Soul2
R139	Charleston	R194	Pub Piano	R249	8 Beat Rock2
R140	DiscoPop	R195	Jazz Waltz 1	R250	60's Vintage Pop1
R141	DiscoSoul	R196	Jazz Waltz 2	R251	16 Beat Ballad2
R142	DiscoTrot	R197	Show Tune	R252	70's Pop Ballad
R143	EuroBeat	R198	Polka	R253	EP Ballad
R144	Rap	R199	Party Polka	R254	Power Ballad
R145	Rave	R200	Schlager Polka	R255	Guitar Ballad
R146	70's Disco Funk	R201	Hard Rock2	R256	New R&B Ballad
R147	Disco Philly	R202	60's RockN1	R257	Guitar Serenade
R148	Disco House	R203	Standard Rock1	R258	Organ Ballad
R149	80's Disco	R204	Brit Rock Pop1	R259	Pop Mambo1
R150	70's Disco1	R205	60's Vintage Rock*	R260	Latin Party Pop1
R151	70's Disco2	R206	Chart Rock Shif1	R261	80's Pop1
R152	Country 1	R207	Saeidy	R262	British Pop3
R153	Country 2	R208	German Rock	R263	70's Chart Ballad*
R154	Finger Pickin	R209	Schlager Beat	R264	Romantic Ballad1
R155	Country Brothers	R210	Rock &Roll	R265	90's Cool Ballad1
R156	New Country	R211	Rock & Roll Shif	R266	Alp Ballad3
R157	Easy Country	R212	Oldies R & R	R267	Alp Ballad4
R158	70's Chart Cntry	R213	80's Rock & Roll	R268	Schlager Polka1
R159	Hoedown	R214	BritRockGuitar	R269	J-Pop Hit
R160	Country Shuffle	R215	Chart Rock Shif2	R270	Detroit Pop1
R161	Country Love Song	R216	New R&B	R271	Detroit Pop2
R162	Country Two Step	R217	Pop R&B	R272	Worship Med
R163	Big Band Shuffle 1	R218	Chart R&B	R273	Worship Fast
R164	Big Band Shuffle 2	R219	Rock Cha Cha1	R274	12-8 Ballad
R165	Big Band Shuffle 3	R220	Funk Shuffl 3	R275	Norteno
R166	Fast Band 1	R221	8 Beat Rock3	R276	60's 8 Beat
R167	Fast Band 2	R222	Rock Cha Cha2	R277	Laff
R168	Cat Groove	R223	Joropo	R278	Ober Walzer
R169	Dixie Jazz	R224	Raggaelon	R279	Bhangra
R170	Medium Jazz	R225	French Wallz	R280	Zouk
R171	Jazz Big Band	R226	Merengue	R281	German March
R172	.Jazz Club	R227	Tango3	R282	Fnka

R283	Bolero Lento	R338	Schlager Shuffle	R393	Mariachi Waltz
R284	Sherif Reggae	R339	Schlager Pop	R394	US March
R285	Beguine	R340	Schlager Rumba	R395	Guitar Rumba
R286	Pop Classics	R341	Euro Pop Organ	R396	Slow Blues
R287	Live 8 Beat	R342	70's French Hit	R397	Jazz Waltz Fast
R288	Power Rock	R343	Italian Mazurka	R398	70's Country Pop
R289	Acoustic Rock1	R344	Jig2	R399	Dixieland
R290	Cool 8 Beat	R345	Hawaiian2	R400	40's Big Band
R291	Uptempo 8Beat	R346	Latin Rock2	R401	Schlager Alp
R292	90's Rock Ballad	R347	Schlager Samba1	R402	Charl Pop1
R293	60's Guitar Pop	R348	Schlager Samba2	R403	Organ Groove
R294	70's 8 Beat	R349	Scand Slow Rock	R404	Charl Pop2
R295	90's Guitar Pop	R350	Schlager 6-8	R405	Modern Shuffle
R296	Soft Rock	R351	Schlager Fox	R406	8 Beat Ballad1
R297	Charl GuitarPop	R352	Country Ballad1	R407	Bubblegum Pop
R298	Gujiira	R353	Country Two Step1	R408	Rock Funk
R299	Modern Pop Bld	R354	Kool Shuffle	R409	West Coast Pop
R300	Soul	R355	Pleasant Country	R410	Classic 16 Beat
R301	Skiffle1	R356	Country Hits	R411	8 Beat Ballad2
R302	6-8Soul	R357	Country 8 Beat	R412	Chillout
R303	Soul Brothers	R358	Mod Cntry Bld1	R413	16 Beat Ballad1
R304	6-8Slow Rock	R359	Country Ballad2	R414	Epic Ballad
R305	Trance Pop	R360	Scand Country1	R415	Easy Ballad
R306	Mellow Hip Hop	R361	Scand Country2	R416	Cuban Son
R307	Classic Hip Hop	R362	Country Love Song1	R417	16 Beat Ballad3
R308	New Hip Hop	R363	Orch Big Band2	R418	Contemp Rock2
R309	Duranguense	R364	Big Band Fast2	R419	EP Ballad2
R310	70's Disco3	R365	Midnight Swing	R420	Cat Groove2
R311	70's Disco4	R366	Fusion2	R421	Guitar Serenade2
R312	Latin Disco	R367	Funk Shuffl 2	R422	Organ Ballad2
R313	Brazilian Samba	R368	Fusion Shuffl 2	R423	Pop Ballad2
R314	Brit Pop Swing	R369	Swing Fox1	R424	Norleno2
R315	Grupera	R370	Slow Fox1	R425	Retro Pop2
R316	Danzon	R371	Organ Cha Cha1	R426	Trance Pop2
R317	Dream Dance	R372	Organ Quick Step1	R427	Pop Gtr Ballad
R318	US Charl Hit	R373	Piano Boogie	R428	Ibiza 2002
R319	Soul R&B	R374	Lovely Shuffle	R429	Chillout Cafe
R320	R&B Soul Ballad	R375	Jazz Gtr Club	R430	70's Glam Piano
R321	Euro Hip Hop	R376	Modern Jazz	R431	French House
R322	Trip Hop	R377	Acoustic Jazz	R432	Bhajan2
R323	60's RockN2	R378	Cool Jazz Ballad	R433	16 Beat Pop3
R324	Bhajan	R379	Modern Jazz Bld	R434	16 Beat Pop4
R325	Hip Hop Groove	R380	Easy Listening	R435	Enka2
R326	Euro Trance	R381	Bebop	R436	Blues Rock
R327	6-8 Trance	R382	Orch Big Band1	R437	Ibiza 2004
R328	Latin DJ's	R383	Kool Funk	R438	80's Rock & Roll1
R329	Bomba	R384	Blueberry Blues	R439	Acoustic Rock2
R330	Club House	R385	Shuffle Blues	R440	Club Pop3
R331	House	R386	Mambo 3	R441	Power Rock2
R332	Disco Teens	R387	Mambo 4	R442	Rock'n Roll 3
R333	Happy Reggae	R388	Big Band Fast1	R443	Cool8 Beat2
R334	Pop Latin	R389	Orchestra Swing1	R444	British Pop4
R335	Fast Bossa	R390	Orchestra Swing2	R445	British Pop5
R336	6-8 Modern	R391	70's Chart Cntry1	R446	8 Beat Soul3
R337	6-8 Orchestral	R392	Jazz Waltz Med	R447	BritRockGuitar1

R448	Brit Rock Pop2	R466	60's soul2	R484	schlager polka2
R449	Blueberry Blues2	R467	Fusion shuffle3	R485	Grupera2
R450	Guijira2	R468	Fusion shuffle4	R486	Danzon2
R451	Rock Ballad2	R469	6-8 Modern2	R487	schlagerAlp2
R452	soul2	R470	6-8 orchestral2	R488	saedy2
R453	classic 8Beat2	R471	slow soul2	R489	6-8 March
R454	Bolero2	R472	piano Ballad2	R490	Bluegrass
R455	soul Brothers2	R473	Hip HoP Groove2	R491	Pop Latin2
R456	Happy Reggae2	R474	Hip shuffle2	R492	show Tune2
R457	6-8slow Rock2	R475	organ Groove2	R493	scand shuffle
R458	Bolero Lento2	R476	chart Pop3	R494	worship slow
R459	Midnight swing2	R477	Mambo5	R495	Bachata
R460	French Jazz2	R478	Mambo6	R496	Romantic Ballad2
R461	Latin party Pop2	R479	Disco Latin2	R497	Analog Ballad2
R462	Tango5	R480	Fast Bossa2	R498	Electro Pop2
R463	Tang06	R481	Fox Trot2	R499	Blues Rock2
R464	parranda2	R482	pasodoble2	R500	90's soul
R465	80's Pop2	R483	Highland waltz2		

Appendix 3 (Demonstration Song Comparison Table)

S001	Beethoven Minuet In G	S040	Joplin The Entertainer
S002	Polonaise in A-flat major, Op. 53 Heroic	S041	L-c. Daquin LeC Cou
S003	chanson De L'adieu	S042	karl Bohm The Fountaintain
S004	Bach The well-Tempered clavier	S043	korsakov Bumblebee
S005	chopin Nocturne	S044	Haydn-sunrise
S006	Mendelssohn Frühlingslied	S045	Johann sebastian Bach sonata
S007	Reverie	S046	overture"william Tell"
S008	Beethoven piano sonata op.49-2 1st mov	S047	schubert serenade
S009	Beethoven Ecossaise	S048	Minuet From L'arlesienne
S010	DebussyAeabesque	S049	polonaise
S011	Bach Invention	S050	clementi sonata
S012	Liszt Liebestraume	S051	chopin Revolution Etude
S013	Debussy La Fille aux cheveux de Lin	S052	Beethoven Fate symphony
S014	Mozart Menuett	S053	Musical Moments
S015	Bach waltz In A Minor	S054	chopin Black keys
S016	Beethoven piano sonata op. 13 "pathetique" 2nd mov	S055	chopin prelude "Raindrop", Op28- 15
S017	schumann Frohlicher Landmann	S056	chopin petit chien
S018	schubert Marche Militaire	S057	chopin Fantasie Impromptu
S019	Bach Bourree	S058	polonaise in A Major, op40, No 1
S020	Burgmiller pastorale	S059	Dubessy clair De lune
S021	schumann sicilienne	S060	schubert Moments Musicaux
S022	Haydn Little serenade	S061	Mozart Turkish March
S023	oesten Dolly's DreamingAwakening	S062	chopin - valse op. 64 no.2
S024	chopin Grande valse Brillante op. 18	S063	Beethoven Mondschein sonate
S025	polk smile	S064	schumann Traumerei
S026	Impromptu No. 3, Op. 90	S065	Beethoven For Elise
S027	Brahms waltz No. 15	S066	Beethoven MarciaAlla Turca
S028	chenyin Li plays Debussy's	S067	Mozart sonata
S029	Golliwogs cakewalk	S068	Mendelssohn Jagerlied op. 19b-3
S030	Harpsichord Music	S069	chopin - Nocturne op. 9 No.2
S031	Mozart Twinkle Twinkle Little star	S070	TornaAsurriento
S032	Bach Menuett	S071	MOZART K448(II Andante)
S033	Richard Ballade pourAdeline	S072	The Merry widow waltz
S034	Richard ping pong sous LesArbres	S073	cinquantaine
S035	Richard Acomme Amour	S074	sweet ByeAnd Bye
S036	Richard Mariage D'amour	S075	Barcarole
S037	pachelbel canon In D	S076	clarinet polka
S038	Badarzewska Maiden's prayer	S077	voice ofspring
S039	Tchaikovsky- Danse des mirlitons	S078	waltz ofThe Flowers
	Dvorak Humoresque	S079	katyusha
		S080	on wings ofsong

1 Battery



- o please take care off following attentions
- o Do not attempt to disassemble or short-circuit the battery
- o Do not expose or burn it in the fire
- o Do not mix the new and old battery
- o Do not mix different types of batteries
- o Do not charge the battery
- o The positive and negative poles of the battery must be properly installed
- o please remove the battery from the electronic keyboard If you do not use for a long time ,

2 Exception



please do the following steps when exception for the electronic keyboard like fuming , over hot and So on .

- 1). power off
- 2). pull the adaptor down from the power socket on the wall when are using.
- 3). contact your local dealer in time.

It's normal for adaptor getting hot when long time using AC adaptor, not indicate Malfunction

please power off and restart the electronic keyboard when sometime function problem ,

3 Install the battery

- 1). Exit the screw and remove the battery cover
- 2). put the battery with correct positive+ and negative- direction into the battery slot with4 x"AA" 1 .5v
- 3). put the battery cover and Lock the screws

This product contains electronic components and should not allow liquids to enter or be used in damp environments.

Daily dust-proof cleaning should be done well , and surface stains can be wiped with a soft and clean cloth.

VEVOR®

TOUGH TOOLS, HALF PRICE

Technical support and E-warranty certificate

[Www.vevor.com/support](http://www.vevor.com/support)



Technique soutenir et Certificat de garantie électronique

Www.vevor.com / support

PIANO

UTILISATEUR MANUEL

MODÈLE : BD -662

nous continuons à être engagé à vous fournir outils avec prix compétitif .

"sauvegarder Moitié", "Moitié prix" ou toute autre expression similaire utilisé par nous représente seulement un

estimation des économies que vous pourrait bénéficier de l'achat certains outils avec nous par rapport aux majors grandes marques et fait pas nécessairement signifiant à couvrir tout catégories d'outils offert par nous. Toi

sont gentiment rappelé à vérifier soigneusement lorsque vous sont placer un commander avec nous si tu sont en fait, je sauve moitié dans comparaison avec les plus grandes marques.

MODEL: BD-662



(The picture is for reference only, please refer to the actual object)

BESOIN AIDE? CONTACT NOUS!

Avoir produit Des questions ? Besoin technique soutien? S'il te plaît sentir gratuit pour contacter nous :

Support technique et Certificat de garantie
électronique www.vevor.com/support

Ce est le original instruction , s'il te plaît lire tous manuel instructions soigneusement avant d'utiliser. VEVOR se réserve le droit de refuser un clair interprétation de notre Manuel d'utilisation . Le apparition de le produitshall être soumis à le produit vous reçu. s'il te plaît pardonne nous que nous ne le ferons pas vous informer encore si il existe des technologies ou des logiciels mises

à jour sur notre produit.

Accessoire

pouvoir corde * 1

Microphone * 1

Pupitre pour partitions * 1

Écouteurs * 1

soutenir pédale * 1

Musique feuille


pince * 1

MIDI Cordon * 1


piano autocollant * 1

clavier support * 1


Installation diagram of Keyboard stand

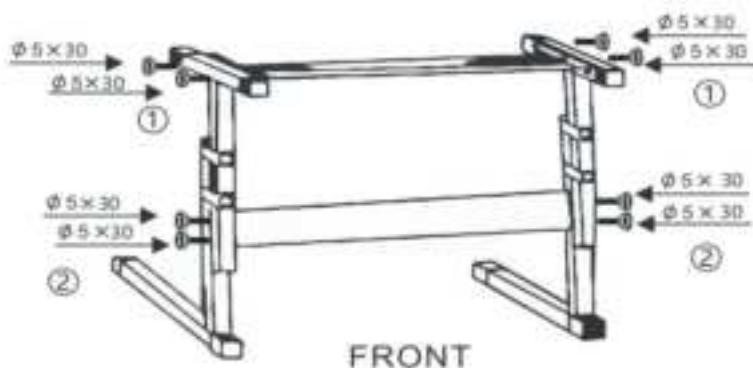 

 
④ Connecting the screw hole position at the bottom of the piano body

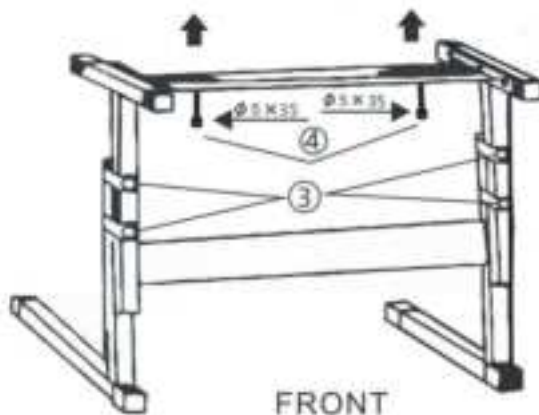

 ③ Adjust the limit screw at the same time on the left and right sides to adjust the appropriate height

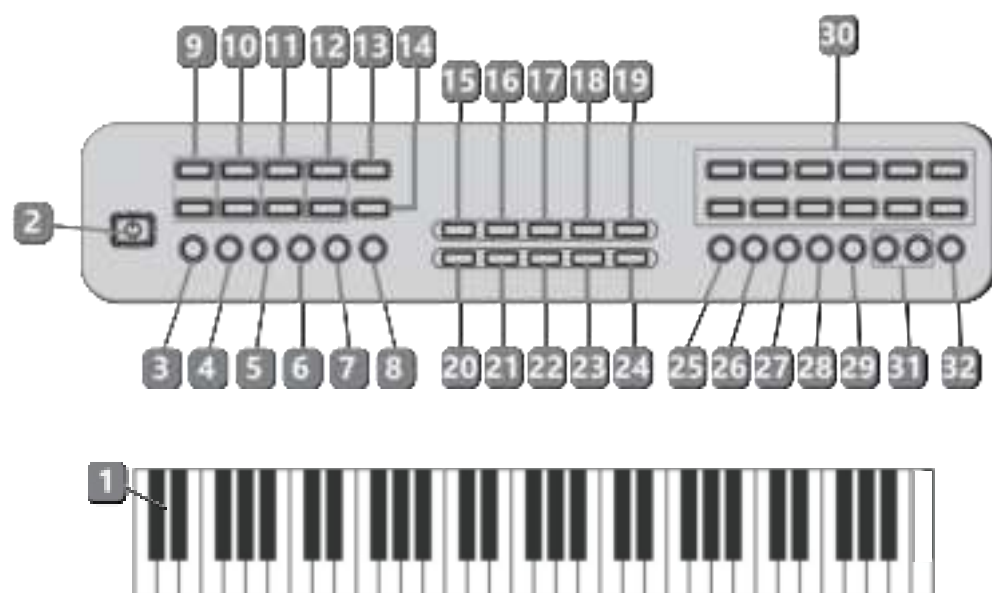

1 KEYBOARD	9 VOLUME+/-	17 FILL-IN/LED	25 TONE
2 POWER	10 RHYTHM VOL+/-	18 FILL-IN2	26 RHYTHM
3 RECORD	11 TEMPO+/-	19 BASSCHORDS	27 PIANO
4 PROG	12 TRANSPOSE+/-	20 ONE KEY	28 DEMO ONE
5 PLAY	13 SUSTAIN	21 FOLLOW	29 DEMO ALL
6 METRONOME	14 VIBRATO	22 ENSEMBLE	30 NUMBER SELECTION AREA
7 KEY DRUM	15 SYNC	23 CHORD. OFF	31 <</VOL- >>/VOL+
8 DUAL KEY	16 CHORD	24 START/STOP	32 >>/CHANGE

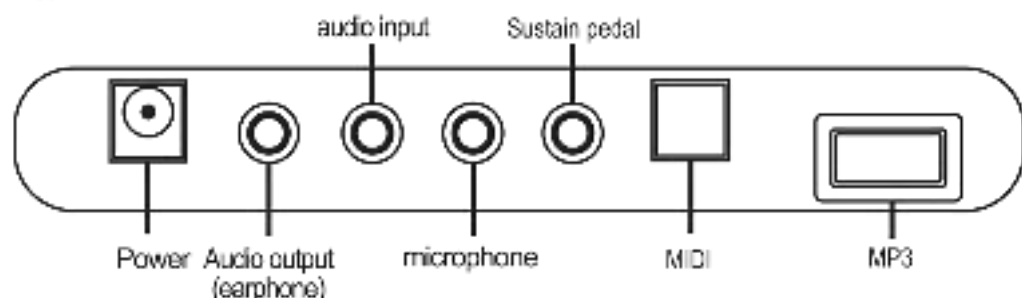 

1.KEYBOARD\2.POWER

Turn on the power, you can play the "keyboard" and enter the performance state. In standby mode, after 3 minutes of no operation, it will automatically enter the sleep mode, and can be restored by pressing any key.

3.RECORD

Press the **【RECORD】** key to enter the recording mode, and then press any piano key or drum key to start the recording.

start recording. The maximum number of recordings is 80. When the recording is full, it cannot continue to record another note.

When recording, you can press the play button at any time to play.

Each time this button is pressed, the last memory will be cleared and the recording mode will be re-entered.

After exiting the recording mode, the last memory will be cleared.

4.PROG

Press **【PROG】** key to enter programming mode, the preset speed is 120.

The pressed drum sound can be recorded. In edit mode, only the drum sound is valid.

The maximum number of records is 32. When the record is full, it cannot continue to record another drum sound. You can press the button at any time, press the Play key to play the edited drum sound.

Each time this key is pressed, the last memory will be cleared and the programming mode will be re-entered.

After exiting the programming mode, the last memory will be cleared.

In this mode, the keys are automatically converted to keyboard drums.

5.PLAY

In the recording mode, press the **【PLAY】** for the first time to play the recorded notes.

Press the **【PLAY】** for the second time to stop playing.

In programming mode, press the **【PLAY】** for the first time to play the recorded drum sound, and press the **【PLAY】** for the second time to stop playing

If there is no recorded value before, press the **【PLAY】** and no action will take place.

6.METRONOME

Pressing the **【METRONOME】** key, the action function is the click sound, there are 7 kinds of changes, 1/4 beat → 2/4 beat → 3/4 beat → 4/4 beat... → stop, the default value of the beat is 120.

7.KEY DRUM

Press the **【KEY DRUM】** key to get percussion sound on the corresponding key.

8.DUAL KEY

Press **【DUAL KEY】** for the first time to activate the dual keyboard function, and press **【DUAL KEY】** for the second time to select eliminate the double keyboard function.

When the dual keyboard function is activated, the scales of the left keys C2-B3 will be played correspondingly to the scales of C3-B4. The scales of C4-C7 on the right keys will be played as C3-C6 scales. You can use the digital area and the [+] [-] keys or digital switches to select the sub-tone instead of the left piano.key tone.

9.VOLUME+/-

Use **【VOLUME+/-】** to control the volume, press **【VOLUME+】** to represent To increase the volume up, press **【VOLUME-】** to decrease the volume down. The volume control has a total of 17 segments (0~16), and the default value is the 13th segment after power-on.

Press and hold **【VOLUME+/-】** for more than 1 second to continuously increase /decrease the volume.

10.RHYTHM+/-

Press **【RHYTHM+/-】** to select the accompaniment volume.

The accompaniment volume control has a total of 17 segments (0~16), and the preset value is the 13th segment after power-on.

Press and hold the **【RHYTHM+/-】** for more than 1 second to continuously increase/decrease the accompaniment volume.

11.TEMPO+/-

Press **【TEMPO+/-】** to select the speed.

The speed control has a total of 270 stages (30~300), and the preset value is the 90th stage after power-on (speed = 120)

Press and hold the **【TEMPO+/-】** for more than 1 second to continuously increase/decrease the speed.

When playing the selected song, the tempo of the song will be used, regardless of the set tempo.

When playing the selected rhythm, the set tempo will prevail.

12.TRANSPOSE+/-

Press **【TRANSPOSE+/-】** to select Transpose .

There are 25 segments (-12~12) in total for transposition control, and the preset value is at segment 13 after power-on.

Press and hold the **【TRANSPOSE+/-】** for more than 1 second to continuously increase/decrease the transpose.

The chord pitch also changes with the transpose value.

13.SUSTAIN

Press the **【SUSTAIN】** key to enable or disable the sustain function.

When the sustain function is turned on, when you play the keyboard, the sound will have a prolongation effect.

14.VIBRATO

Press the **【VIBRATO】** key to enable or disable the vibrato function.

When the vibrato function is turned on, the sound will vibrate when you play the keyboard.

15.SYNC

Press the [Sync] key for the first time to enter the sync mode, and press the [Sync key] for the second time to exit the sync mode.

When entering sync mode, pressing the first 19 keys on the left will automatically play the selected rhythm (chord).

16.CHORD

Press the **【CHORD】** for the first time to enter the comprehensive chord mode, and press the **【CHORD】** for the second time to exit the composite chord mode.

【CHORD】 Only in rhythm and general mode, the function can occur. When playing the rhythm, press **【CHORD】** and press multiple keys within the range of C2~F3#.

After fingering, you can hear the corresponding chord accompaniment. The single-fingered chords are played.

When the rhythm is not playing, press the **【CHORD】** and press the multi-finger key within the range of keys C2~F3#, and you can hear the corresponding chord accompaniment. Otherwise, the single-fingered chords are played. Comprehensive fingering can be used with rhythm/chord/synchronization.

17.FILL-IN/LED 18.FILL-IN2

【FILL-IN/LED】 When the rhythm is not playing, pressing it is the key light switch function.

【FILL-IN】 and **【FILL-IN2】** function only when the rhythm is played. Interlude: During the rhythm playing, press the **【FILL-IN】** to add the fill-in function to the rhythm.

When the measure is finished, insert an interlude.

During rhythm playback, press and hold the **【FILL-IN】** to continue inserting.

19.BASSCHORDS

Change the bass voice in the chord to the piano voice.

20.ONE KEY

Press the **【ONE KEY】** for the first time to enter the random play mode, and then press any key to issue the correct note.

Press the **【ONE KEY】** for the second time to exit the strumming mode.

21.FOLLOW

Press the **【FOLLOW】** for the first time to enter the follow mode, and press the **【FOLLOW】** for the second time to exit the follow mode.

After entering the follow play mode, use the current song to teach, after the song is played, the main melody will not be played.

The user must press the corresponding key according to the note displayed on the LCD or the keyboard indicator light.

To continue playing the next note, the background sound repeats the measure until the end of the song.

After the song is over, play the next song.

In follow mode, you can use the number selection area to select other songs.

22.ENSEMBLE

Press the **【ENSEMBLE】** for the first time to enter the ensemble mode, and press the **【ENSEMBLE】** for the second time to exit the ensemble mode.

After entering the ensemble mode, use the current song to teach, after the song is played, the user can play the piano at will key and interrupt the main chord. If the key is not pressed after 5 seconds, the main chord will resume playing automatically. background

The sound plays completely until the end of the song.

When the song is over, play the next song together.

In Ensemble mode, other songs can be selected using the number selection area.

23.CHORD.OFF

Turn off composite chords.

24.START/STOP

Short press [Start/Stop Key] for the first time to start playing the rhythm, and

short press [Start/Stop Key] for the second time, to stop playing the rhythm.

Exit this mode in teaching, recording, playback, metronome, demo songs, etc.

25.TONE

After pressing the **【TONE】**, you can use the number selection area and the **[+][-]** keys to select the tone.

26.RHYTHM

After pressing the **【RHYTHM】**, you can use the number selection area and the **[+] [-]** keys to select the rhythm.

27.PIANO

In other voice states, press the [Piano] key to set the piano voice, and press the **【PIANO】** key for the second time to restore the previous sound.

(The default is piano sound when power on, this button is invalid)

28.DEMO ONE

Press the **【DEMO ONE】** button for the first time to enter the click mode, and press the **【DEMO ONE】** for the second time to exit the click mode.

After entering the sing-along mode, playback starts from the next song.

When the song finishes playing, the current song is played repeatedly.

In sing-along mode, other songs can be selected using the number selection area.

29.DEMO ALL

Press the **【DEMO ALL】** for the first time to enter the continuous singing mode, and press the **【DEMO ALL】** for the second time to exit the continuous singing mode.

After entering continuous singing mode, playback starts from the first song.

When the song is finished, continue to play the next song and play all the songs in a loop.

In sing-along mode, other songs can be selected using the number selection area.

30 .NUMBER SULECTION AREA

Use the number keys 0-9 to input the corresponding timbre, rhythm, song code for quick selection, use the +/- keys can be selected sequentially.
Press and hold the "+" or "-" key for more than 2 seconds to continuously increase/decrease the selection.

If neither tone mode or rhythm mode is selected, the default value is tone mode after power-on.

If neither tone mode or rhythm mode is selected, the default value is tone mode after power-on.

31 . ◀/VOL- ▶/VOL+ 32 . ▶/CHANGE

Press (within 1 second) [▶/CHANGE] to play or pause the song. In pause mode, press [▶/CHANGE] to continue playing the song.

Press (within 1 second) [◀/VOL-] to select the previous song.

Press (within 1 second) [▶/VOL+] to select the next song.

Press and hold the [◀/VOL-] for more than 1 second to decrease the volume. Long press [▶/VOL+] to exceed increase the volume after 1 second.

Appendix 1 (Voice Comparison Table)

T001	Acoustic Grand Piano	T026	Acoustic Guitar (steel)	T051	Synth Strings 1
T002	Bright Acoustic Piano	T027	Electric Guitar (jazz)	T052	Synth Strings 2
T003	Electric Grand Piano	T028	Electric Guitar (clean)	T053	Choir Aahs
T004	Honky-tonk Piano	T029	Electric Guitar (muted)	T054	Voice Oohs
T005	Rhodes Piano	T030	Overdriven Guitar	T055	Synth Voice
T006	Chorused Piano	T031	Distortion Guitar	T056	Orchestra Hit
T007	Harpsichord	T032	Guitar Harmonics	T057	Trumpet
T008	Clavichord	T033	Acoustic Bass	T058	Trombone
T009	Celesta	T034	Electric Bass(finger)	T059	Tuba
T010	Glockenspiel	T035	Electric Bass (pick)	T060	Muted Trumpet
T011	Music box	T036	Fretless Bass	T061	French Horn
T012	Vibraphone	T037	Slap Bass 1	T062	Brass Section
T013	Marimba	T038	Slap Bass 2	T063	Synth Brass 1
T014	Xylophone	T039	Synth Bass 1	T064	Synth Brass 2
T015	Tubular Bell	T040	Synth Bass 2	T065	Soprano Sax
T016	Dulcimer	T041	Violin	T066	Alto Sax
T017	Drawbar Organ	T042	Viola	T067	Tenor Sax
T018	Percussive Organ	T043	Cello	T068	Baritone Sax
T019	Rock Organ	T044	Contrabass	T069	Oboe
T020	Church Organ	T045	Tremolo Strings	T070	English Horn
T021	Reed Organ	T046	Pizzicato Strings	T071	Bassoon
T022	Accordion	T047	Orchestral Harp	T072	Clarinet
T023	Harmonica	T048	Timpani	T073	Piccolo
T024	Tango Accordion	T049	String Ensemble 1	T074	Flute
T025	Acoustic Guitar (nylon)	T050	String Ensemble 2	T075	Recorder

Appendix 1 (Voice Comparison Table)

T076	Pan Flute	T129	Yong Gin	T181	Soft Santur
T077	Bottle Blow	T130	Zheng	T182	Dual Horns 1
T078	Shakuhachi	T131	Zhong Ruan	T183	Bodhran
T079	Whistle	T132	Pi Pa	T184	Tubular Bells 2
T080	Ocarina	T133	Big Souna	T185	Suona 2
T081	Lead 1 (square)	T134	Souna	T186	Castanets
T082	Lead 2 (sawtooth)	T135	Er Hu	T187	Attack Harp 1
T083	Lead 3 (caliope lead)	T136	Yue Hu	T188	Electric Viaphone
T084	Lead 4 (chiff lead)	T137	Di Zi	T189	Soft Sax 1
T085	Lead 5 (charang)	T138	Bong Di	T190	Soft Clav.
T086	Lead 6 (voice)	T139	Koto 2	T191	Soft Accord
T087	Lead 7 (fifths)	T140	Qui Di	T192	Wind Organ
T088	Lead 8 (bass+lead)	T141	Xylophone 2	T193	Viola Attack
T089	Pad 1 (new age)	T142	Dulcimer 2	T194	Bari & Tenor
T090	Pad 2 (warm)	T143	Guitar Pinch 2	T195	Soft Guitar 1
T091	Pad 3 (polysynth)	T144	Slow Violin	T196	Grow Guitar
T092	Pad 4 (choir)	T145	Bright String	T197	Didgeridoo 1
T093	Pad 5 (bowed)	T146	Jungle Bass 2	T198	Attack Barafon
T094	Pad 6 (metallic)	T147	Indian Flute	T199	Mute Barafon 1
T095	Pad 7 (halo)	T148	Clavi 2	T200	Nay
T096	Pad 8 (sweep)	T149	Celesta 2	T201	Didgeridoo 2
T097	FX 1 (rain)	T150	Church Bells	T202	Dual Horns 2
T098	FX 2 (soundtrack)	T151	Kalimba 2	T203	Hard Barsoon 2
T099	FX 3 (crystal)	T152	Steel Bell 1	T204	Kawala 2
T100	FX 4 (atmosphere)	T153	Tenor Sax 2	T205	Soft Guitar 2
T101	FX 5 (brightness)	T154	Woodblock 2	T206	Mute Barafon 2
T102	FX 6 (goblins)	T155	Electric Guitar (Clean) 2	T207	Hard Barsoon 1
T103	FX 7 (echoes)	T156	Shanai 2	T208	Tron Flute
T104	FX 8 (sci-fi)	T157	Marimba 3	T209	Kawala 1
T105	Sitar	T158	Dulcimer 3	T210	Jazz Organ
T106	Banjo	T159	Reed Organ 3	T211	Synth Harpsi. 3
T107	Shamisen	T160	Koto 3	T212	Tenor Sax 3
T108	Koto	T161	Crystal 1	T213	Steel Bell 3
T109	Kalimba	T162	Bag Pipe 2	T214	Kalimba 4
T110	Bagpipe	T163	Barafon	T215	Shamisen 3
T111	Fiddle	T164	Organ Flute	T216	English Horn 3
T112	Shanai	T165	Kalimba 3	T217	Shanai 3
T113	Tinkle Bell	T166	Reed Horn	T218	Soft Sax 2
T114	Agogo	T167	English Horn 2	T219	Attack Harp 2
T115	Steel Drums	T168	Electric Guitar (Clean) 3	T220	Castanets 2
T116	Woodblock	T169	Shamisen 2	T221	Suona 3
T117	Taiko Drum	T170	Koto 4	T222	Xylophone 3
T118	Melodic Tom	T171	Hard Vibe 2	T223	Koto 5
T119	Synth Drum	T172	Twin Bones	T224	Attack Clav. 4
T120	Reverse Cymbal	T173	Synth Harpsi. 1	T225	Synth Harpsi. 4
T121	Guitar Fret Noise	T174	Attack Clav. 1	T226	Twin Bones 2
T122	Breath Noise	T175	Chorus Guitar.	T227	Hard Vibe 3
T123	Seashore	T176	Steel Bell 2	T228	Reed Horn 2
T124	Bird Tweet	T177	Tsugaru	T229	Organ Flute 2
T125	Telephone Ring	T178	Oct Harp	T230	Steel Bell 4
T126	Helicopter	T179	Synth Harpsi. 2	T231	Chorus Guitar. 2
T127	Applause	T180	Attack Clav. 2	T232	Dual Horns 3
T128	Gunshot				

T233	Soft Santur 2	T288	Tenor Sax 4	T343	English Horn 5
T234	Barafon 3	T289	Twin Bones 3	T344	Shamisen 5
T235	Bag Pipe 3	T290	Hard Vibe 4	T345	Kalimba 7
T236	Crystal 3	T291	Koto 7	T346	Steel Bell 7
T237	Attack Clav. 3	T292	Shamisen 4	T347	Tenor Sax 5
T238	Electric Vibraphone 2	T293	Electric Guitar (Clean) 5	T348	Chorus Guitar. 4
T239	Attack Harp 3	T294	English Horn 4	T349	Steel Bell 8
T240	Attack Barafon 2	T295	Reed Horn 3	T350	Organ Flute 4
T241	Didgeridoo 3	T296	Kalimba 6	T351	Reed Horn 4
T242	Grow Guitar 2	T297	Organ Flute 3	T352	Hard Vibe 5
T243	Soft Guitar 3	T298	Barafon 2	T353	Twin Bones 4
T244	Soft Clav. 2	T299	Dual Horns 5	T354	Synth Harpsi. 8
T245	Soft Sax 3	T300	Soft Santur 3	T355	Attack Clav. 8
T246	Tubular Bells 3	T301	Attack Clav. 5	T356	Koto 8
T247	Bodhran 2	T302	Synth Harpsi. 5	T357	Xylophone 5
T248	Oct Harp 2	T303	Oct Harp 3	T358	Didgeridoo 7
T249	Tsugaru 2	T304	Tsugaru 3	T359	Attack Barafon 4
T250	Bari & Tenor 2	T305	Steel Bell 6	T360	Attack Harp 7
T251	Wind Organ 2	T306	Chorus Guitar. 3	T361	Electric Vibraphone 4
T252	Soft Accord 2	T307	Attack Clav. 6	T362	Attack Clav. 7
T253	Attack Harp 4	T308	Synth Harpsi. 6	T363	Crystal 4
T254	Viola Attack 2	T309	Wind Organ 3	T364	Bag Pipe 5
T255	Kawala 3	T310	Soft Accord 3	T365	Barafon 4
T256	Soft Sax 4	T311	Soft Clav. 3	T366	Soft Santur 4
T257	Jazz Organ 2	T312	Soft Sax 5	T367	Dual Horns 7
T258	Nay 2	T313	Electric Vibraphone 3	T368	Wind Organ 4
T259	Mute Barafon 3	T314	Attack Harp 5	T369	Bari & Tenor 4
T260	Dulcimer 5	T315	Castanets 3	T370	Tsugaru 4
T261	Xylophone 4	T316	Suona 4	T371	Oct Harp 4
T262	Tron Flute 2	T317	Tubular Bells 4	T372	Bodhran 4
T263	Hard Barsoon 3	T318	Bodhran 3	T373	Tubular Bells 6
T264	Mute Barafon 4	T319	Dual Horns 6	T374	Soft Sax 7
T265	Soft Guitar 4	T320	Didgeridoo 6	T375	Soft Clav. 4
T266	Kawala 4	T321	Nay 3	T376	Soft Guitar 7
T267	Hard Barsoon 4	T322	Mute Barafon 5	T377	Grow Guitar 4
T268	Dual Horns 4	T323	Attack Barafon 3	T378	Hard Barsoon 7
T269	Didgeridoo 4	T324	Didgeridoo 5	T379	Tron Flute 4
T270	Steel Bell 5	T325	Grow Guitar 3	T380	Mute Barafon 7
T271	Kalimba 5	T326	Soft Guitar 5	T381	Nay 4
T272	Church Bells 2	T327	Bari & Tenor 3	T382	Jazz Organ 4
T273	Celesta 3	T328	Viola Attack 3	T383	Soft Sax 8
T274	Clavi 3	T329	Synth Harpsi. 7	T384	Kawala 7
T275	Indian Flute 2	T330	Jazz Organ 3	T385	Viola Attack 4
T276	Jungle Bass 3	T331	Kawala 5	T386	Attack Harp 8
T277	Bright String 2	T332	Tron Flute 3	T387	Soft Accord 4
T278	Slow Violin 2	T333	Hard Barsoon 5	T388	Guitar Pinch 4
T279	Guitar Pinch 3	T334	Mute Barafon 6	T389	Indian Flute 3
T280	Bag Pipe 4	T335	Soft Guitar 6	T390	Bright String 3
T281	Crystal 2	T336	Kawala 6	T391	Church Bells 3
T282	Koto 6	T337	Hard Barsoon 6	T392	Didgeridoo 8
T283	Reed Organ 4	T338	Suona 5	T393	Dual Horns 8
T284	Dulcimer 4	T339	Castanets 4	T394	Hard Barsoon 8
T285	Marimba 4	T340	Attack Harp 6	T395	Kawala 8
T286	Shanai 4	T341	Soft Sax 6	T396	Soft Guitar 8
T287	Electric Guitar (Clean) 4	T342	Shanai 5	T397	Mute Barafon 8

T398	Electronic Guitar (Clean) 6	T453	Tron Flute 6	T508	Bright String 4
T399	Shanai 6	T454	Bari & Tenor 6	T509	Slow Violin 3
T400	Marimba 5	T455	Wind Organ 6	T510	Guitar Pinch 5
T401	Koto 9	T456	Grow Guitar 5	T511	Bag Pipe 9
T402	Xylophone 6	T457	Attack Barafon 5	T512	Crystal 7
T403	Tenor Sax 6	T458	Dual Horns 9	T513	Reed Organ 5
T404	Organ Flute 5	T459	Hard Barsoon 10	T514	Dulcimer 6
T405	Kalimba 9	T460	Hard Barsoon 9	T515	Marimba 6
T406	English Horn 6	T461	Tron Flute 7	T516	Shanai 9
T407	Electronic Guitar (Clean) 7	T462	Jazz Organ 5	T517	Electronic Guitar (Clean) 8
T408	Shamisen 6	T463	Tenor Sax 8	T518	Tenor Sax 9
T409	Koto 10	T464	Steel Bell 9	T519	Twin Bones 6
T410	Kalimba 8	T465	Shamisen 8	T520	Hard Vibe 7
T411	Barafon 5	T466	English Horn 8	T521	Shamisen 9
T412	Chorus Guitar, 8	T467	Shanai 8	T522	Electronic Guitar (Clean) 9
T413	Tsugaru 5	T468	Attack Harp 9	T523	English Horn 9
T414	Synth Harpsi, 9	T469	Castanets 5	T524	Reed Horn 6
T415	Crystal 5	T470	Suona 6	T525	Organ Flute 8
T416	Bag Pipe 6	T471	Xylophone 8	T526	Barafon 6
T417	Synth Harpsi, 10	T472	Attack Clav. 10	T527	Soft Santur 8
T418	Soft Sax 9	T473	Twin Bones 5	T528	Oct Harp 6
T419	Soft Clav. 5	T474	Hard Vibe 6	T529	Tsugaru 8
T420	Bodhran 5	T475	Reed Horn 5	T530	Chorus Guitar, 9
T421	Bari & Tenor 5	T476	Organ Flute 7	T531	Wind Organ 8
T422	Soft Guitar 9	T477	Steel Bell 10	T532	Soft Accord 8
T423	Didgeridoo 9	T478	Chorus Guitar, 8	T533	Soft Clav. 8
T424	Mute Barafon 9	T479	Dual Horns 10	T534	Electric Vlapraphone 6
T425	Nay 5	T480	Soft Santur 7	T535	Castanets 6
T426	Soft Santur 5	T481	Barafon 7	T536	Suona 7
T427	Kawala 10	T482	Bag Pipe 8	T537	Tubular Bells 7
T428	Soft Guitar 10	T483	Crystal 8	T538	Bodhran 8
T429	Mute Barafon 10	T484	Attack Clav. 9	T539	Nay 8
T430	Tron Flute 5	T485	Electric Vlapraphone 5	T540	Attack Barafon 7
T431	Kawala 9	T486	Attack Harp 10	T541	Grow Guitar 7
T432	Soft Accord 5	T487	Attack Barafon 6	T542	Bari & Tenor 8
T433	Wind Organ 5	T488	Grow Guitar 6	T543	Viola Attack 6
T434	Kalimba 10	T489	Soft Clav. 7	T544	Jazz Organ 7
T435	Shamisen 7	T490	Tubular Bells 6	T545	Tron Flute 9
T436	English Horn 7	T491	Bodhran 7	T546	Suona 8
T437	Shanai 7	T492	Oct Harp 5	T547	Castanets 7
T438	Soft Sax 10	T493	Tsugaru 7	T548	Shanai 10
T439	Didgeridoo 10	T494	Bari & Tenor 7	T549	English Horn 10
T440	Tenor Sax 7	T495	Wind Organ 7	T550	Shamisen 10
T441	Koto 11	T496	Soft Accord 7	T551	Tenor Sax 10
T442	Organ Flute 6	T497	Viola Attack 5	T552	Chorus Guitar, 10
T443	Xylophone 7	T498	Jazz Organ 6	T553	Organ Flute 9
T444	Soft Santur 6	T499	Nay 7	T554	Reed Horn 7
T445	Bag Pipe 7	T500	Dulcimer 7	T555	Hard Vibe 8
T446	Crystal 8	T501	Xylophone 9	T556	Twin Bones 7
T447	Soft Clav. 6	T502	Tron Flute 8	T557	Xylophone 10
T448	Bodhran 6	T503	Church Bells 4	T558	Attack Barafon 8
T449	Tsugaru 6	T504	Celesta 4	T559	Electric Vlapraphone 7
T450	Chorus Guitar, 7	T505	Clavi 4	T560	Crystal 9
T451	Nay 6	T506	Indian Flute 4	T561	Bag Pipe 10
T452	Soft Accord 6	T507	Jungle Bass 4	T562	Barafon 8

T563	Soft Santur 9	T576	Guitar Pinch 6	T589	Soft Clav, 10
T564	Wind Organ 9	T577	Indian Flute 5	T590	Bari & Tenor 10
T565	Bari & Tenor 9	T578	Bright String 5	T591	Nay 10
T566	Tsugaru 9	T579	Church Bells 5	T592	Soft Santur 10
T567	Oct Harp 7	T580	Electronic Guitar (Clean)	T593	Tron Flute 11
T568	Tubular Bells 8	T581	Shanai 11	T594	Soft Accord 10
T569	Soft Clav. 9	T582	Marimba 7	T595	Wind Organ 10
T570	Grow Guitar 8	T583	Organ Flute 10	T596	English Horn 12
T571	Tron Flute 10	T584	English Horn 11	T597	Shanai 12
T572	Nay 9	T585	Barafon 9	T598	Organ Flute 11
T573	Jazz Organ 8	T586	Tsugaru 10	T599	Bag Pipe 12
T574	Viola Attack 7	T587	Crystal 10	T600	Tsugaru 11
T575	Soft Accord 9	T588	Bag Pipe 11		

Appendix 2 (Rhythm Comparison Table)

R001	China1	R040	FastGospel	R079	GuadDance
R002	China2	R041	FolkRock	R080	Reggae12Beat
R003	China3	R042	RockBilly	R081	Reggae16Beat
R004	China4	R043	RockBoogie	R082	Bossanova
R005	China5	R044	RockChaCha	R083	Mambo 1
R006	China6	R045	RockClassical	R084	Mambo 2
R007	China7	R046	RockShuffle	R085	Bolero
R008	China8	R047	RockPop	R086	Cumbia
R009	China9	R048	Skiffle	R087	Latin Rock
R010	China10	R049	Funk Pop Rock	R088	Disco Latin
R011	Club Pop	R050	Contemp Rock	R089	Tijuana
R012	16 Beat Pop	R051	Acoustic Rock	R090	Reggae
R013	8 Beat Pop	R052	60's RockN	R091	Pop Mambo
R014	8 Beat Soul	R053	Standard Rock	R092	Latin Party Pop
R015	8 Beat Rock	R054	Brit Rock Pop	R093	Hard Mambo
R016	Rap Pop	R055	60's Vintage Rock	R094	Parranda
R017	Pop Rock	R056	Chart Rock Shfl	R095	Rock Lation
R018	60's Soul	R057	60's Pop Rock	R096	Slow Rock 1
R019	70's Soul	R058	Waltz	R097	Slow Rock 2
R020	Funk	R059	Cha Cha	R098	Slow Rock 3
R021	16 Beat Shuffle	R060	Rumba	R099	Slow Soul
R022	Twist	R061	Jive	R100	8 Beat Adria
R023	British Pop	R062	Pasodoble	R101	Classic Piano
R024	Hard Rock	R063	Samba 1	R102	Unplugged
R025	Fusion	R064	Samba 2	R103	Pop Ballad
R026	FunkShuffl	R065	Schlager Rock 1	R104	Pop New Age
R027	FusionShuffl	R066	Schlager Rock 2	R105	8 Beat Modern
R028	Classic 8Beat	R067	FoxTrot	R106	Country Ballad
R029	Vintage Gtr Pop	R068	Viennese Waltz	R107	Love Song
R030	Schlager Italia	R069	Tango1	R108	Modern Country Pop
R031	50's Pop	R070	Tango2	R109	Electro Pop
R032	Cool Pop	R071	German Waltz	R110	Acoustic Ballad
R033	Groovy Pop	R072	Carnival	R111	Piano Ballad
R034	60's Vintage Pop	R073	Organ Samba	R112	R&B Ballad
R035	80's Pop	R074	Reel	R113	Rock Ballad
R036	Rock'n Roll 1	R075	Gay Gordons	R114	Slow & Easy
R037	Rock'n Roll 2	R076	Scand Waltz	R115	Analog Ballad
R038	Straight Rock	R077	Salsa	R116	E_Ballad
R039	Jazz Rock	R078	Calypso	R117	80's EP Ballad

R118	80's Boy Band	R173	Ragtime	R228	Tango4
R119	70's Chart Ballad	R174	Frankly Soul	R229	Jig
R120	Romantic Ballad	R175	Jazz Funk	R230	Hawaiian
R121	90's Cool Ballad	R176	Classic Big Band	R231	Electronica
R122	Alp Ballad1	R177	French Jazz	R232	Funky House
R123	Alp Ballad2	R178	Jump Jive	R233	Club Beat
R124	Techno 1	R179	Swing Fox	R234	Retro Club
R125	Techno 2	R180	Slow Fox	R235	Mod Chart Pop
R126	Funky Disco	R181	Organ Cha Cha	R236	MOR Swing
R127	Saturday Night	R182	Organ Quick Step	R237	Retro Pop
R128	Club Latin	R183	Ober Polka	R238	Rumba Flamenco
R129	Disco Chocolate	R184	Polka Pop	R239	Cumbia1
R130	Disco Fox	R185	Blue Grass 1	R240	Parranda1
R131	Disco Funk	R186	Blue Grass 2	R241	Carnival2
R132	Disco Hands	R187	Blue Grass 3	R242	50's Pop1
R133	Disco Party	R188	Pop Waltz	R243	Groovy Pop1
R134	Disco Samba	R189	USA March	R244	Cool Pop1
R135	British Pop2	R190	Hully Gully	R245	Club Pop2
R136	Club Dance	R191	Tarantella	R246	16 Beat Pop2
R137	Modern R&B	R192	Limbo Rock	R247	8 Beat Pop2
R138	Hip Shuffle	R193	Swing Waltz	R248	8 Beat Soul2
R139	Charleston	R194	Pub Piano	R249	8 Beat Rock2
R140	DiscoPop	R195	Jazz Waltz 1	R250	60's Vintage Pop1
R141	DiscoSoul	R196	Jazz Waltz 2	R251	16 Beat Ballad2
R142	DiscoTrot	R197	Show Tune	R252	70's Pop Ballad
R143	EuroBeat	R198	Polka	R253	EP Ballad
R144	Rap	R199	Party Polka	R254	Power Ballad
R145	Rave	R200	Schlager Polka	R255	Guitar Ballad
R146	70's Disco Funk	R201	Hard Rock2	R256	New R&B Ballad
R147	Disco Philly	R202	60's RockN1	R257	Guitar Serenade
R148	Disco House	R203	Standard Rock1	R258	Organ Ballad
R149	80's Disco	R204	Brit Rock Pop1	R259	Pop Mambo1
R150	70's Disco1	R205	60's Vintage Rock*	R260	Latin Party Pop1
R151	70's Disco2	R206	Chart Rock Shf1	R261	80's Pop1
R152	Country 1	R207	Saeidy	R262	British Pop3
R153	Country 2	R208	German Rock	R263	70's Chart Ballad*
R154	Finger Pickin	R209	Schlager Beat	R264	Romantic Ballad1
R155	Country Brothers	R210	Rock & Roll	R265	90's Cool Ballad1
R156	New Country	R211	Rock & Roll Shf1	R266	Alp Ballad3
R157	Easy Country	R212	Oldies R & R	R267	Alp Ballad4
R158	70's Chart Cntry	R213	80's Rock & Roll	R268	Schlager Polka1
R159	Hoedown	R214	BritRockGuitar	R269	J-Pop Hit
R160	Country Shuffle	R215	Chart Rock Shf2	R270	Detroit Pop1
R161	Country Love Song	R216	New R&B	R271	Detroit Pop2
R162	Country Two Step	R217	Pop R&B	R272	Worship Med
R163	Big Band Shuffle 1	R218	Chart R&B	R273	Worship Fast
R164	Big Band Shuffle 2	R219	Rock Cha Cha1	R274	12-8 Ballad
R165	Big Band Shuffle 3	R220	Funk Shuffl 3	R275	Norteno
R166	Fast Band 1	R221	8 Beat Rock3	R276	60's 8 Beat
R167	Fast Band 2	R222	Rock Cha Cha2	R277	Laff
R168	Cat Groove	R223	Joropo	R278	Ober Walzer
R169	Dixie Jazz	R224	Reggaeton	R279	Bhangra
R170	Medium Jazz	R225	French Waltz	R280	Zouk
R171	Jazz Big Band	R226	Merengue	R281	German March
R172	Jazz Club	R227	Tango3	R282	Fnka

R283	Bolero Lento	R338	Schlager Shuffle	R393	Mariachi Waltz
R284	Sherif Reggae	R339	Schlager Pop	R394	US March
R285	Beguine	R340	Schlager Rumba	R395	Guitar Rumba
R286	Pop Classics	R341	Euro Pop Organ	R396	Slow Blues
R287	Live 8 Beat	R342	70's French Hit	R397	Jazz Waltz Fast
R288	Power Rock	R343	Italian Mazurka	R398	70's Country Pop
R289	Acoustic Rock1	R344	Jig2	R399	Dixieland
R290	Cool 8 Beat	R345	Hawaiian2	R400	40's Big Band
R291	Uptempo 8Beat	R346	Latin Rock2	R401	Schlager Alp
R292	90's Rock Ballad	R347	Schlager Samba1	R402	Chart Pop1
R293	80's Guitar Pop	R348	Schlager Samba2	R403	Organ Groove
R294	70's 8 Beat	R349	Scand Slow Rock	R404	Chart Pop2
R295	90's Guitar Pop	R350	Schlager 6-8	R405	Modern Shuffle
R296	Soft Rock	R351	Schlager Fox	R406	8 Beat Ballad1
R297	Chart GuitarPop	R352	Country Ballad1	R407	Bubblegum Pop
R298	Gujira	R353	Country Two Step1	R408	Rock Funk
R299	Modern Pop Bld	R354	Kool Shuffle	R409	West Coast Pop
R300	Soul	R355	Pleasant Country	R410	Classic 16 Beat
R301	Skiffle1	R356	Country Hits	R411	8 Beat Ballad2
R302	6-8Soul	R357	Country 8 Beat	R412	Chillout
R303	Soul Brothers	R358	Mod Cntry Bld1	R413	16 Beat Ballad1
R304	6-8Slow Rock	R359	Country Ballad2	R414	Epic Ballad
R305	Trance Pop	R360	Scand Country1	R415	Easy Ballad
R306	Mellow Hip Hop	R361	Scand Country2	R416	Cuban Son
R307	Classic Hip Hop	R362	Country Love Song1	R417	16 Beat Ballad3
R308	New Hip Hop	R363	Orch Big Band2	R418	Contemp Rock2
R309	Duranguense	R364	Big Band Fast2	R419	EP Ballad2
R310	70's Disco3	R365	Midnight Swing	R420	Cat Groove2
R311	70's Disco4	R366	Fusion2	R421	Guitar Serenade2
R312	Latin Disco	R367	Funk Shuffl 2	R422	Organ Ballad2
R313	Brazilian Samba	R368	Fusion Shuffl 2	R423	Pop Ballad2
R314	Brit Pop Swing	R369	Swing Fox1	R424	Norteno2
R315	Grupera	R370	Slow Fox1	R425	Retro Pop2
R316	Danzon	R371	Organ Cha Cha1	R426	Trance Pop2
R317	Dream Dance	R372	Organ Quick Step1	R427	Pop Gtr Ballad
R318	US Chart Hit	R373	Piano Boogie	R428	Ibiza 2002
R319	Soul R&B	R374	Lovely Shuffle	R429	Chillout Cafe
R320	R&B Soul Ballad	R375	Jazz Gtr Club	R430	70's Glam Piano
R321	Euro Hip Hop	R376	Modern Jazz	R431	French House
R322	Trip Hop	R377	Acoustic Jazz	R432	Bhajan2
R323	60's RockN2	R378	Cool Jazz Ballad	R433	16 Beat Pop3
R324	Bhajan	R379	Modern Jazz Bld	R434	16 Beat Pop4
R325	Hip Hop Groove	R380	Easy Listening	R435	Enka2
R326	Euro Trance	R381	Bebop	R436	Blues Rock
R327	6-8 Trance	R382	Orch Big Band1	R437	Ibiza 2004
R328	Latin DJ's	R383	Kool Funk	R438	80's Rock & Roll1
R329	Bomba	R384	Blueberry Blues	R439	Acoustic Rock2
R330	Club House	R385	Shuffle Blues	R440	Club Pop3
R331	House	R386	Mambo 3	R441	Power Rock2
R332	Disco Teens	R387	Mambo 4	R442	Rock'n Roll 3
R333	Happy Reggae	R388	Big Band Fast1	R443	Cool8 Beat2
R334	Pop Latin	R389	Orchestra Swing1	R444	British Pop4
R335	Fast Bossa	R390	Orchestra Swing2	R445	British Pop5
R336	6-8 Modern	R391	70's Chart Cntry1	R446	8 Beat Soul3
R337	6-8 Orchestral	R392	Jazz Waltz Mad	R447	BritRockGuitar1

R448	Britannique Rocher Pop2	R466 années 60 âme 2	R484	schlager polka2
R449	Blueberry Blues2	R467 Fusion mélange 3	R485	Groupe 2
R450	Guijira2	R468 Fusion mélange 4	R486	Danzon 2
R451	Rocher Ballade2	R469 6-8 Moderne2	R487	schlagerAlp2
R452	âme 2	R470 6-8 orchestral 2	R488	saeidy2
R453	classique 8 temps 2	R471 lent âme 2	R489	6-8 Mars
R454	Boléro 2	R472 piano Ballade2	R490	Bluegrass
R455	âme Frères2	R473 Hanche Houblon Groove 2	R491	Populaire Latin2
R456	Joyeux Reggae2	R474 Hanche mélanger 2	R492	Afficher Tune2
R457	6-8 lent Rocher 2	Orgue R475 Groove 2	R493	Scandale
R458	Boléro Carême 2	Carte R476 Pop 3	R494	mélanger adorer
R459	Balançoire de minuit2	R477 Mambo 5	R495	lentement Bachata
R460	Français Jazz 2	R478 Mambo 6	R496	Romantique Ballade2
R461	latin fête Pop2	R479 Disco Latin 2	R497	Analogique Ballade2
R462	Tango5	R480 Rapide Bossa 2	R498	Electro Pop 2
R463	Tang 06	R481 Renard Trot 2	R499	Bleus Rock2
R464	parranda2	R482 pasodoble2	R500	Années 90 âme
R465	Années 80 Pop 2	R483 Hautes Terres valse 2		

Appendix 3 (Demonstration Song Comparison Table)

S001	S034 S035 S036 S037 S038 S039	Beethoven Menuet	clavier chopin Nocturne
S002		Dans G	Mendelssohn Père Hingslied
S003		Pollo	Réverie
S004		53. Heroic	Beethoven piano sonate à .49-2 1
S005		naïse en la	pièce violet
S006		bémol majeur, Op	Beethoven Écosse
S007		chanson	DebussyAea
S008		Le Au	besque
S009		revoir	Bach
S010		B	Invention
S011		a	Liszt rêves d'amour
S012		c	Debussy La remplir cheveux
S013		h	de Doubler Menuet de Mozart
S014			Bach valse Dans Amino
S015		L	être thoven- pia non sonate sur
S016		e	13 pathétique 2 ème violet
S017		p	Schumann Joyeux
S018		a	compatriote Shubert
S019		r	Marché militaire
S020		c	Bach Bourrée
S021		e	Burgmiller
S022			pastorale
S023		q	schumann
S024		u	sicilienne
S025		e	Haydn Petite
S026			sérénade
S027		-	huîtres Dolly S RêverAwa
S028		T	Kening Chopin Grande
S029		r	fausse Lunettes . 18 sourire
S030		e	polonais
S031		m	Impromptu Non.
S032		p	3, Sur. 90
S033		é	Brahms Valse
			Non. 15

Chenyin Li
pièces de
théâtre
Debussy
Le gâteau
des
Golliwogs
Clavecin
Musique
Mo
zar
t
sci
ntil
le
sci
ntil
le
Pe
tite
éto
ile
Ba
ch
Me
nu
et
Richard
Ballade
pour Adeline
Richard ping
pong sous
Les Arbres
R
i
c
h
a
r
d
A
c
o
m
m
e
A
m
o
u
r
R
i
c
h
a
r
d
M
a
r

iage D ' amour pachelbel
canon In D
Badarzewska Maiden's prayer
Tchaikovsky- Danse des mirlitons
Dvorak Humoresque

-15-

S040 Joplin Le Artiste Lc.
S041 Daquin LeC CouuKarl
S042 Bohm Le F ntain
S043 Korsakov Bourdon
S044 Haydn - Lever de soleil
S045 Johann Sébastien Bach sonate
S046 ouverture " william
S047 Dire " sérénade de
S048 Schubert
S049 Menuet de L'Arlésienne
S050 polonaise
S051 sonate de Clémenti
S052 Chopin Révolution Étude
S053 Beethoven Symphonie du
S054 destin
S055 Musical Moments
S056 Chopin Noir ken ys
S057 Chopin prélude " Goutte de pluie " ,
S058 Op 28- 15 Chopin petit chien
S059 Chopin Fantasia Impromptu
S060 polonaise en la majeur, op40 ,
S061 Non 1 Dubessy clair De lune
S062 Schubert Monents
S063 Musicaux Mozart turc Mars
S064 Chopin - valse op . 64 n°2
S065 Beethoven Alcool de
S066 contrebande sonate Schumann
S067 rêve
S068 Beethoven Pour Élise
S069 Beethoven Marcia Alla
S070 Turça Mozart sonate
S071 Mendelssohn Chanson de Jäger
S072 sur . 19b-3 Chopin - Nocturne sur
S073 . 9 Non . 2
S074 TornaAsurriento
S075 MOZART K448 (Il Andante)
S076 Le Valse de la veuve
S077 joyeuse
S078 cinquantenaire
S079 doux au revoir Au
S080 revoir Barcarolle
polka clarinette
voix du printemps
valse deLa Fleurs
de Katyusha
sur ailes de la chanson

1 Battery



WARNING

ou S'il te plaît, prends soin de toi suivant attentions
ou Faire ne pas tenter de démonter ou court-circuiter le
batterie ou Faire ne pas exposer ou brûler il dans le feu
ou Faire ne pas mélanger les nouveau et vieux batterie
ou Faire pas mélanger différent types
de piles ou Faire pas charge le batterie
ou Le positif et pôles négatifs de le la batterie doit être
correctement installé

ou s'il te plaît retirer la batterie de le clavier électronique Si tu le
fais ne pas utiliser pour un long temps ,

2 Exception



WARNING

s'il vous plaît faites ce qui suit étapes quand exception pour
l'électronique

clavier comme fumant , trop chaud et

Donc sur . 1) . pouvoir désactivé

2) . tirer le adaptateur vers le bas depuis le pouvoir douille sur le mur
quand

sont en utilisant.

3) .contact ton locale revendeur dans temps .

C'est normale pour adaptateur obtenir chaud quand long temps
en utilisant CA adaptateur , ne pas indiquer Mauvais fonctionnement

s'il te plaît éteindre et redémarrer le clavier électronique lorsque
parfois fonction problème ,

3 Install the battery

1) . Sortie le vis et retirer le batterie couverture

2) . mettre le batterie avec correct positif + et négatif - direction
dans le batterie fente avec 4 x" AA " 1 .5v

3) . mettre le batterie couverture et Verrouillage le vis

Ce le produit contient des composants électroniques et
devrait ne pas permettre liquides à entrer ou être utilisé
dans humide environnements .

Tous les jours étanche à la poussière nettoyage devrait
être fait Bien , et taches superficielles peut être essuyé

avec un doux et faire le ménage tissu .

VEVOR®

TOUGH TOOLS, HALF PRICE

Support technique et Certificat de garantie
électronique www.vevor.com/support



Technisch Unterstützung und E-Garantie-Zertifikat

Www.vevor . com / Unterstützung

KLAVIER BENUTZER HANDBUCH

MODELL : BD -662

wir fahren fort sich engagieren Zu bieten Ihnen Werkzeuge mit
wettbewerbsfähiger Preis.

"speichern Hälfte", "Halber Preis" oder andere ähnliche Ausdrücke gebraucht von uns
stellt nur eine

Schätzung der Einsparungen, die Sie könnte vom Kauf profitieren bestimmte Werkzeuge mit
uns im Vergleich zu den großen Top-Marken und tut nicht unbedingt bedeuten Zu alles
abdecken Kategorien von Werkzeugen angeboten von uns. Du

Sind freundlich daran erinnert sorgfältig zu prüfen, wenn Sie Sind Platzieren eines
Bestellen mit uns wenn du Sind tatsächlich sparen halb in Vergleich mit
die Top-Großmarken.

MODEL: BD-662



(The picture is for reference only, please refer to the actual object)

BRAUCHEN HELFEN? KONTAKT UNS!

Haben Produkt Fragen? Brauchen technisch Unterstützung? Bitte fühlen frei Kontaktieren Sie uns :

Technischer Support und E-Garantie-
Zertifikat www.vevor.com/support

Das Ist Die Original Anweisung , Bitte lesen alle Handbuch Anweisungen sorgfältig durch. VEVOR behält sich das Recht vor, A klar Interpretation unserer Benutzerhandbuch . Der Aussehen von Die Produkthalle unterliegen Die

Produkt Sie erhalten. bitte verzeihen uns, dass wir nicht informieren Sie wieder Wenn Es gibt Technologien oder Software Updates auf unser Produkt.

Zubehör

Leistung Kabel * 1

Mikrofon * 1

Notenständer * 1

Kopfhörer * 1

aufrechterhalten

Pedal * 1 Musik


Blatt Klammer * 1

MIDI Kabel * 1


Klavier Aufkleber * 1

Tastatur Ständer * 1


Installation diagram of Keyboard stand

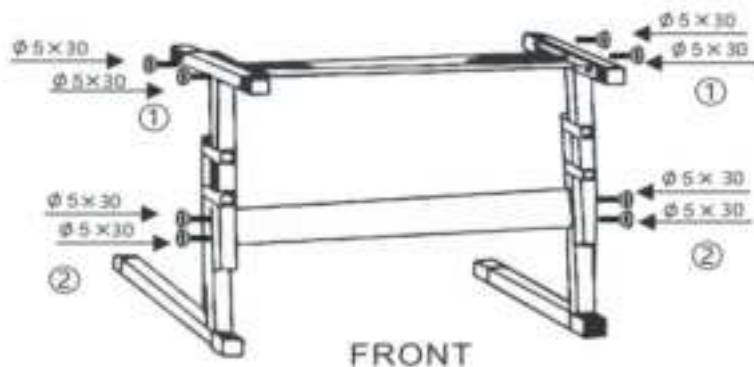 

 
- ④ Connecting the screw hole position at the bottom of the piano body

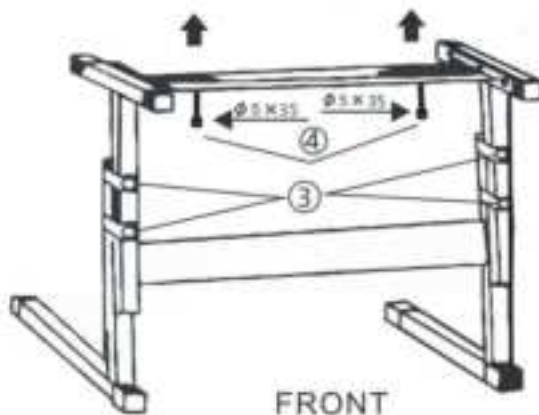

 - ③ Adjust the limit screw at the same time on the left and right sides to adjust the appropriate height

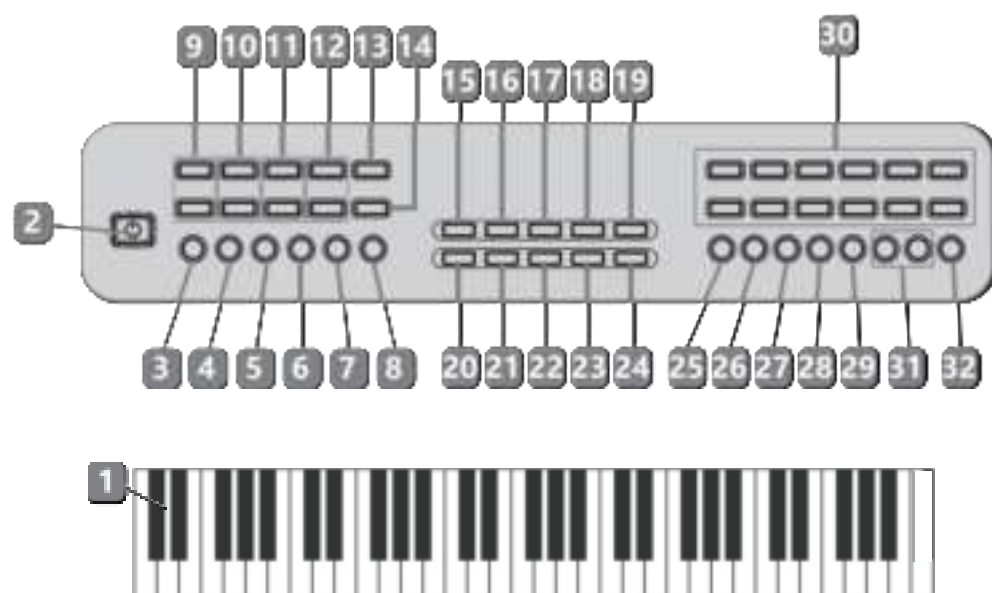

1 KEYBOARD	9 VOLUME+/-	17 FILL-IN/LED	25 TONE
2 POWER	10 RHYTHM VOL+/-	18 FILL-IN2	26 RHYTHM
3 RECORD	11 TEMPO+/-	19 BASSCHORDS	27 PIANO
4 PROG	12 TRANSPOSE+/-	20 ONE KEY	28 DEMO ONE
5 PLAY	13 SUSTAIN	21 FOLLOW	29 DEMO ALL
6 METRONOME	14 VIBRATO	22 ENSEMBLE	30 NUMBER SELECTION AREA
7 KEY DRUM	15 SYNC	23 CHORD. OFF	31 <</VOL- >>/VOL+
8 DUAL KEY	16 CHORD	24 START/STOP	32 >>/CHANGE

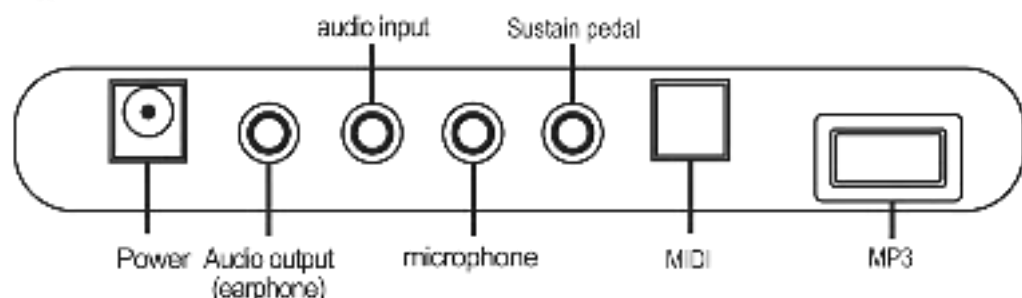 

1.KEYBOARD\2.POWER

Turn on the power, you can play the "keyboard" and enter the performance state. In standby mode, after 3 minutes of no operation, it will automatically enter the sleep mode, and can be restored by pressing any key.

3.RECORD

Press the **【RECORD】** key to enter the recording mode, and then press any piano key or drum key to start the recording.

start recording. The maximum number of recordings is 80. When the recording is full, it cannot continue to record another note.

When recording, you can press the play button at any time to play.

Each time this button is pressed, the last memory will be cleared and the recording mode will be re-entered.

After exiting the recording mode, the last memory will be cleared.

4.PROG

Press **【PROG】** key to enter programming mode, the preset speed is 120.

The pressed drum sound can be recorded. In edit mode, only the drum sound is valid.

The maximum number of records is 32. When the record is full, it cannot continue to record another drum sound. You can press the button at any time, press the Play key to play the edited drum sound.

Each time this key is pressed, the last memory will be cleared and the programming mode will be re-entered.

After exiting the programming mode, the last memory will be cleared.

In this mode, the keys are automatically converted to keyboard drums.

5.PLAY

In the recording mode, press the **【PLAY】** for the first time to play the recorded notes.

Press the **【PLAY】** for the second time to stop playing.

In programming mode, press the **【PLAY】** for the first time to play the recorded drum sound, and press the **【PLAY】** for the second time to stop playing

If there is no recorded value before, press the **【PLAY】** and no action will take place.

6.METRONOME

Pressing the **【METRONOME】** key, the action function is the click sound, there are 7 kinds of changes, 1/4 beat → 2/4 beat → 3/4 beat → 4/4 beat... → stop, the default value of the beat is 120.

7.KEY DRUM

Press the **【KEY DRUM】** key to get percussion sound on the corresponding key.

8.DUAL KEY

Press **【DUAL KEY】** for the first time to activate the dual keyboard function, and press **【DUAL KEY】** for the second time to select eliminate the double keyboard function.

When the dual keyboard function is activated, the scales of the left keys C2-B3 will be played correspondingly to the scales of C3-B4. The scales of C4-C7 on the right keys will be played as C3-C6 scales. You can use the digital area and the [+] [-] keys or digital switches to select the sub-tone instead of the left piano.key tone.

9.VOLUME+/-

Use **【VOLUME+/-】** to control the volume, press **【VOLUME+】** to represent To increase the volume up, press **【VOLUME-】** to decrease the volume down. The volume control has a total of 17 segments (0~16), and the default value is the 13th segment after power-on.

Press and hold **【VOLUME+/-】** for more than 1 second to continuously increase /decrease the volume.

10.RHYTHM+/-

Press **【RHYTHM+/-】** to select the accompaniment volume.

The accompaniment volume control has a total of 17 segments (0~16), and the preset value is the 13th segment after power-on.

Press and hold the **【RHYTHM+/-】** for more than 1 second to continuously increase/decrease the accompaniment volume.

11.TEMPO+/-

Press **【TEMPO+/-】** to select the speed.

The speed control has a total of 270 stages (30~300), and the preset value is the 90th stage after power-on (speed = 120)

Press and hold the **【TEMPO+/-】** for more than 1 second to continuously increase/decrease the speed.

When playing the selected song, the tempo of the song will be used, regardless of the set tempo.

When playing the selected rhythm, the set tempo will prevail.

12.TRANSPOSE+/-

Press **【TRANSPOSE+/-】** to select Transpose .

There are 25 segments (-12~12) in total for transposition control, and the preset value is at segment 13 after power-on.

Press and hold the **【TRANSPOSE+/-】** for more than 1 second to continuously increase/decrease the transpose.

The chord pitch also changes with the transpose value.

13.SUSTAIN

Press the **【SUSTAIN】** key to enable or disable the sustain function.

When the sustain function is turned on, when you play the keyboard, the sound will have a prolongation effect.

14.VIBRATO

Press the **【VIBRATO】** key to enable or disable the vibrato function.

When the vibrato function is turned on, the sound will vibrate when you play the keyboard.

15.SYNC

Press the [Sync] key for the first time to enter the sync mode, and press the [Sync key] for the second time to exit the sync mode.

When entering sync mode, pressing the first 19 keys on the left will automatically play the selected rhythm (chord).

16.CHORD

Press the **【CHORD】** for the first time to enter the comprehensive chord mode, and press the **【CHORD】** for the second time to exit the composite chord mode.

【CHORD】 Only in rhythm and general mode, the function can occur. When playing the rhythm, press **【CHORD】** and press multiple keys within the range of C2~F3#.

After fingering, you can hear the corresponding chord accompaniment. The single-fingered chords are played.

When the rhythm is not playing, press the **【CHORD】** and press the multi-finger key within the range of keys C2~F3#, and you can hear the corresponding chord accompaniment. Otherwise, the single-fingered chords are played. Comprehensive fingering can be used with rhythm/chord/synchronization.

17.FILL-IN/LED 18.FILL-IN2

【FILL-IN/LED】 When the rhythm is not playing, pressing it is the key light switch function.

【FILL-IN】 and **【FILL-IN2】** function only when the rhythm is played. Interlude: During the rhythm playing, press the **【FILL-IN】** to add the fill-in function to the rhythm.

When the measure is finished, insert an interlude.

During rhythm playback, press and hold the **【FILL-IN】** to continue inserting.

19.BASSCHORDS

Change the bass voice in the chord to the piano voice.

20.ONE KEY

Press the **【ONE KEY】** for the first time to enter the random play mode, and then press any key to issue the correct note.

Press the **【ONE KEY】** for the second time to exit the strumming mode.

21.FOLLOW

Press the **【FOLLOW】** for the first time to enter the follow mode, and press the **【FOLLOW】** for the second time to exit the follow mode.

After entering the follow play mode, use the current song to teach, after the song is played, the main melody will not be played.

The user must press the corresponding key according to the note displayed on the LCD or the keyboard indicator light.

To continue playing the next note, the background sound repeats the measure until the end of the song.

After the song is over, play the next song.

In follow mode, you can use the number selection area to select other songs.

22.ENSEMBLE

Press the **【ENSEMBLE】** for the first time to enter the ensemble mode, and press the **【ENSEMBLE】** for the second time to exit the ensemble mode.

After entering the ensemble mode, use the current song to teach, after the song is played, the user can play the piano at will key and interrupt the main chord. If the key is not pressed after 5 seconds, the main chord will resume playing automatically. background

The sound plays completely until the end of the song.

When the song is over, play the next song together.

In Ensemble mode, other songs can be selected using the number selection area.

23.CHORD.OFF

Turn off composite chords.

24.START/STOP

Short press [Start/Stop Key] for the first time to start playing the rhythm, and

short press [Start/Stop Key] for the second time, to stop playing the rhythm.

Exit this mode in teaching, recording, playback, metronome, demo songs, etc.

25.TONE

After pressing the **【TONE】**, you can use the number selection area and the **[+][-]** keys to select the tone.

26.RHYTHM

After pressing the **【RHYTHM】**, you can use the number selection area and the **[+] [-]** keys to select the rhythm.

27.PIANO

In other voice states, press the [Piano] key to set the piano voice, and press the **【PIANO】** key for the second time to restore the previous sound.

(The default is piano sound when power on, this button is invalid)

28.DEMO ONE

Press the **【DEMO ONE】** button for the first time to enter the click mode, and press the **【DEMO ONE】** for the second time to exit the click mode.

After entering the sing-along mode, playback starts from the next song.

When the song finishes playing, the current song is played repeatedly.

In sing-along mode, other songs can be selected using the number selection area.

29.DEMO ALL

Press the **【DEMO ALL】** for the first time to enter the continuous singing mode, and press the **【DEMO ALL】** for the second time to exit the continuous singing mode.

After entering continuous singing mode, playback starts from the first song.

When the song is finished, continue to play the next song and play all the songs in a loop.

In sing-along mode, other songs can be selected using the number selection area.

30 .NUMBER SULECTION AREA

Use the number keys 0-9 to input the corresponding timbre, rhythm, song code for quick selection, use the +/- keys can be selected sequentially.

Press and hold the "+" or "-" key for more than 2 seconds to continuously increase/decrease the selection.

If neither tone mode or rhythm mode is selected, the default value is tone mode after power-on.

If neither tone mode or rhythm mode is selected, the default value is tone mode after power-on.

31 . /VOL- /VOL+ 32 . /CHANGE

Press (within 1 second) [/CHANGE] to play or pause the song. In pause mode, press [/CHANGE] to continue playing the song.

Press (within 1 second) [/VOL-] to select the previous song.

Press (within 1 second) [/VOL+] to select the next song.

Press and hold the [/VOL-] for more than 1 second to decrease the volume. Long press [/VOL+] to exceed increase the volume after 1 second.

Appendix 1 (Voice Comparison Table)

T001	Acoustic Grand Piano	T026	Acoustic Guitar (steel)	T051	Synth Strings 1
T002	Bright Acoustic Piano	T027	Electric Guitar (jazz)	T052	Synth Strings 2
T003	Electric Grand Piano	T028	Electric Guitar (clean)	T053	Choir Aahs
T004	Honky-tonk Piano	T029	Electric Guitar (muted)	T054	Voice Oohs
T005	Rhodes Piano	T030	Overdriven Guitar	T055	Synth Voice
T006	Chorused Piano	T031	Distortion Guitar	T056	Orchestra Hit
T007	Harpsichord	T032	Guitar Harmonics	T057	Trumpet
T008	Clavichord	T033	Acoustic Bass	T058	Trombone
T009	Celesta	T034	Electric Bass(finger)	T059	Tuba
T010	Glockenspiel	T035	Electric Bass (pick)	T060	Muted Trumpet
T011	Music box	T036	Fretless Bass	T061	French Horn
T012	Vibraphone	T037	Slap Bass 1	T062	Brass Section
T013	Marimba	T038	Slap Bass 2	T063	Synth Brass 1
T014	Xylophone	T039	Synth Bass 1	T064	Synth Brass 2
T015	Tubular Bell	T040	Synth Bass 2	T065	Soprano Sax
T016	Dulcimer	T041	Violin	T066	Alto Sax
T017	Drawbar Organ	T042	Viola	T067	Tenor Sax
T018	Percussive Organ	T043	Cello	T068	Baritone Sax
T019	Rock Organ	T044	Contrabass	T069	Oboe
T020	Church Organ	T045	Tremolo Strings	T070	English Horn
T021	Reed Organ	T046	Pizzicato Strings	T071	Bassoon
T022	Accordion	T047	Orchestral Harp	T072	Clarinet
T023	Harmonica	T048	Timpani	T073	Piccolo
T024	Tango Accordion	T049	String Ensemble 1	T074	Flute
T025	Acoustic Guitar (nylon)	T050	String Ensemble 2	T075	Recorder

Appendix 1 (Voice Comparison Table)

T076	Pan Flute	T129	Yong Gin	T181	Soft Santur
T077	Bottle Blow	T130	Zheng	T182	Dual Horns 1
T078	Shakuhachi	T131	Zhong Ruan	T183	Bodhran
T079	Whistle	T132	Pi Pa	T184	Tubular Bells 2
T080	Ocarina	T133	Big Souna	T185	Suona 2
T081	Lead 1 (square)	T134	Souna	T186	Castanets
T082	Lead 2 (sawtooth)	T135	Er Hu	T187	Attack Harp 1
T083	Lead 3 (caliope lead)	T136	Yue Hu	T188	Electric Viaphone
T084	Lead 4 (chiff lead)	T137	Di Zi	T189	Soft Sax 1
T085	Lead 5 (charang)	T138	Bong Di	T190	Soft Clav.
T086	Lead 6 (voice)	T139	Koto 2	T191	Soft Accord
T087	Lead 7 (fifths)	T140	Qui Di	T192	Wind Organ
T088	Lead 8 (bass+lead)	T141	Xylophone 2	T193	Viola Attack
T089	Pad 1 (new age)	T142	Dulcimer 2	T194	Bari & Tenor
T090	Pad 2 (warm)	T143	Guitar Pinch 2	T195	Soft Guitar 1
T091	Pad 3 (polysynth)	T144	Slow Violin	T196	Grow Guitar
T092	Pad 4 (choir)	T145	Bright String	T197	Didgeridoo 1
T093	Pad 5 (bowed)	T146	Jungle Bass 2	T198	Attack Barafon
T094	Pad 6 (metallic)	T147	Indian Flute	T199	Mute Barafon 1
T095	Pad 7 (halo)	T148	Clavi 2	T200	Nay
T096	Pad 8 (sweep)	T149	Celesta 2	T201	Didgeridoo 2
T097	FX 1 (rain)	T150	Church Bells	T202	Dual Horns 2
T098	FX 2 (soundtrack)	T151	Kalimba 2	T203	Hard Barsoon 2
T099	FX 3 (crystal)	T152	Steel Bell 1	T204	Kawala 2
T100	FX 4 (atmosphere)	T153	Tenor Sax 2	T205	Soft Guitar 2
T101	FX 5 (brightness)	T154	Woodblock 2	T206	Mute Barafon 2
T102	FX 6 (goblins)	T155	Electric Guitar (Clean) 2	T207	Hard Barsoon 1
T103	FX 7 (echoes)	T156	Shanai 2	T208	Tron Flute
T104	FX 8 (sci-fi)	T157	Marimba 3	T209	Kawala 1
T105	Sitar	T158	Dulcimer 3	T210	Jazz Organ
T106	Banjo	T159	Reed Organ 3	T211	Synth Harpsi. 3
T107	Shamisen	T160	Koto 3	T212	Tenor Sax 3
T108	Koto	T161	Crystal 1	T213	Steel Bell 3
T109	Kalimba	T162	Bag Pipe 2	T214	Kalimba 4
T110	Bagpipe	T163	Barafon	T215	Shamisen 3
T111	Fiddle	T164	Organ Flute	T216	English Horn 3
T112	Shanai	T165	Kalimba 3	T217	Shanai 3
T113	Tinkle Bell	T166	Reed Horn	T218	Soft Sax 2
T114	Agogo	T167	English Horn 2	T219	Attack Harp 2
T115	Steel Drums	T168	Electric Guitar (Clean) 3	T220	Castanets 2
T116	Woodblock	T169	Shamisen 2	T221	Suona 3
T117	Taiko Drum	T170	Koto 4	T222	Xylophone 3
T118	Melodic Tom	T171	Hard Vibe 2	T223	Koto 5
T119	Synth Drum	T172	Twin Bones	T224	Attack Clav. 4
T120	Reverse Cymbal	T173	Synth Harpsi. 1	T225	Synth Harpsi. 4
T121	Guitar Fret Noise	T174	Attack Clav. 1	T226	Twin Bones 2
T122	Breath Noise	T175	Chorus Guitar.	T227	Hard Vibe 3
T123	Seashore	T176	Steel Bell 2	T228	Reed Horn 2
T124	Bird Tweet	T177	Tsugaru	T229	Organ Flute 2
T125	Telephone Ring	T178	Oct Harp	T230	Steel Bell 4
T126	Helicopter	T179	Synth Harpsi. 2	T231	Chorus Guitar. 2
T127	Applause	T180	Attack Clav. 2	T232	Dual Horns 3
T128	Gunshot				

T233	Soft Santur 2	T288	Tenor Sax 4	T343	English Horn 5
T234	Barafon 3	T289	Twin Bones 3	T344	Shamisen 5
T235	Bag Pipe 3	T290	Hard Vibe 4	T345	Kalimba 7
T236	Crystal 3	T291	Koto 7	T346	Steel Bell 7
T237	Attack Clav. 3	T292	Shamisen 4	T347	Tenor Sax 5
T238	Electric Vibraphone 2	T293	Electric Guitar (Clean) 5	T348	Chorus Guitar. 4
T239	Attack Harp 3	T294	English Horn 4	T349	Steel Bell 8
T240	Attack Barafon 2	T295	Reed Horn 3	T350	Organ Flute 4
T241	Didgeridoo 3	T296	Kalimba 6	T351	Reed Horn 4
T242	Grow Guitar 2	T297	Organ Flute 3	T352	Hard Vibe 5
T243	Soft Guitar 3	T298	Barafon 2	T353	Twin Bones 4
T244	Soft Clav. 2	T299	Dual Horns 5	T354	Synth Harpsi. 8
T245	Soft Sax 3	T300	Soft Santur 3	T355	Attack Clav. 8
T246	Tubular Bells 3	T301	Attack Clav. 5	T356	Koto 8
T247	Bodhran 2	T302	Synth Harpsi. 5	T357	Xylophone 5
T248	Oct Harp 2	T303	Oct Harp 3	T358	Didgeridoo 7
T249	Tsugaru 2	T304	Tsugaru 3	T359	Attack Barafon 4
T250	Bari & Tenor 2	T305	Steel Bell 6	T360	Attack Harp 7
T251	Wind Organ 2	T306	Chorus Guitar. 3	T361	Electric Vibraphone 4
T252	Soft Accord 2	T307	Attack Clav. 6	T362	Attack Clav. 7
T253	Attack Harp 4	T308	Synth Harpsi. 6	T363	Crystal 4
T254	Viola Attack 2	T309	Wind Organ 3	T364	Bag Pipe 5
T255	Kawala 3	T310	Soft Accord 3	T365	Barafon 4
T256	Soft Sax 4	T311	Soft Clav. 3	T366	Soft Santur 4
T257	Jazz Organ 2	T312	Soft Sax 5	T367	Dual Horns 7
T258	Nay 2	T313	Electric Vibraphone 3	T368	Wind Organ 4
T259	Mute Barafon 3	T314	Attack Harp 5	T369	Bari & Tenor 4
T260	Dulcimer 5	T315	Castanets 3	T370	Tsugaru 4
T261	Xylophone 4	T316	Suona 4	T371	Oct Harp 4
T262	Tron Flute 2	T317	Tubular Bells 4	T372	Bodhran 4
T263	Hard Barsoon 3	T318	Bodhran 3	T373	Tubular Bells 6
T264	Mute Barafon 4	T319	Dual Horns 6	T374	Soft Sax 7
T265	Soft Guitar 4	T320	Didgeridoo 6	T375	Soft Clav. 4
T266	Kawala 4	T321	Nay 3	T376	Soft Guitar 7
T267	Hard Barsoon 4	T322	Mute Barafon 5	T377	Grow Guitar 4
T268	Dual Horns 4	T323	Attack Barafon 3	T378	Hard Barsoon 7
T269	Didgeridoo 4	T324	Didgeridoo 5	T379	Tron Flute 4
T270	Steel Bell 5	T325	Grow Guitar 3	T380	Mute Barafon 7
T271	Kalimba 5	T326	Soft Guitar 5	T381	Nay 4
T272	Church Bells 2	T327	Bari & Tenor 3	T382	Jazz Organ 4
T273	Celesta 3	T328	Viola Attack 3	T383	Soft Sax 8
T274	Clavi 3	T329	Synth Harpsi. 7	T384	Kawala 7
T275	Indian Flute 2	T330	Jazz Organ 3	T385	Viola Attack 4
T276	Jungle Bass 3	T331	Kawala 5	T386	Attack Harp 8
T277	Bright String 2	T332	Tron Flute 3	T387	Soft Accord 4
T278	Slow Violin 2	T333	Hard Barsoon 5	T388	Guitar Pinch 4
T279	Guitar Pinch 3	T334	Mute Barafon 6	T389	Indian Flute 3
T280	Bag Pipe 4	T335	Soft Guitar 6	T390	Bright String 3
T281	Crystal 2	T336	Kawala 6	T391	Church Bells 3
T282	Koto 6	T337	Hard Barsoon 6	T392	Didgeridoo 8
T283	Reed Organ 4	T338	Suona 5	T393	Dual Horns 8
T284	Dulcimer 4	T339	Castanets 4	T394	Hard Barsoon 8
T285	Marimba 4	T340	Attack Harp 6	T395	Kawala 8
T286	Shanai 4	T341	Soft Sax 6	T396	Soft Guitar 8
T287	Electric Guitar (Clean) 4	T342	Shanai 5	T397	Mute Barafon 8

T398	Electronic Guitar (Clean) 6	T453	Tron Flute 6	T508	Bright String 4
T399	Shanai 6	T454	Bari & Tenor 6	T509	Slow Violin 3
T400	Marimba 5	T455	Wind Organ 6	T510	Guitar Pinch 5
T401	Koto 9	T456	Grow Guitar 5	T511	Bag Pipe 9
T402	Xylophone 6	T457	Attack Barafon 5	T512	Crystal 7
T403	Tenor Sax 6	T458	Dual Horns 9	T513	Reed Organ 5
T404	Organ Flute 5	T459	Hard Barsoon 10	T514	Dulcimer 6
T405	Kalimba 9	T460	Hard Barsoon 9	T515	Marimba 6
T406	English Horn 6	T461	Tron Flute 7	T516	Shanai 9
T407	Electronic Guitar (Clean) 7	T462	Jazz Organ 5	T517	Electronic Guitar (Clean) 8
T408	Shamisen 6	T463	Tenor Sax 8	T518	Tenor Sax 9
T409	Koto 10	T464	Steel Bell 9	T519	Twin Bones 6
T410	Kalimba 8	T465	Shamisen 8	T520	Hard Vibe 7
T411	Barafon 5	T466	English Horn 8	T521	Shamisen 9
T412	Chorus Guitar, 6	T467	Shanai 8	T522	Electronic Guitar (Clean) 9
T413	Tsugaru 5	T468	Attack Harp 9	T523	English Horn 9
T414	Synth Harpsi, 9	T469	Castanets 5	T524	Reed Horn 6
T415	Crystal 5	T470	Suona 6	T525	Organ Flute 8
T416	Bag Pipe 6	T471	Xylophone 8	T526	Barafon 6
T417	Synth Harpsi, 10	T472	Attack Clav. 10	T527	Soft Santur 8
T418	Soft Sax 9	T473	Twin Bones 5	T528	Oct Harp 6
T419	Soft Clav. 5	T474	Hard Vibe 6	T529	Tsugaru 8
T420	Bodhran 5	T475	Reed Horn 5	T530	Chorus Guitar, 9
T421	Bari & Tenor 5	T476	Organ Flute 7	T531	Wind Organ 8
T422	Soft Guitar 9	T477	Steel Bell 10	T532	Soft Accord 8
T423	Didgeridoo 9	T478	Chorus Guitar, 8	T533	Soft Clav. 8
T424	Mute Barafon 9	T479	Dual Horns 10	T534	Electric Vlapraphone 6
T425	Nay 5	T480	Soft Santur 7	T535	Castanets 6
T426	Soft Santur 5	T481	Barafon 7	T536	Suona 7
T427	Kawala 10	T482	Bag Pipe 8	T537	Tubular Bells 7
T428	Soft Guitar 10	T483	Crystal 8	T538	Bodhran 8
T429	Mute Barafon 10	T484	Attack Clav. 9	T539	Nay 8
T430	Tron Flute 5	T485	Electric Vlapraphone 5	T540	Attack Barafon 7
T431	Kawala 9	T486	Attack Harp 10	T541	Grow Guitar 7
T432	Soft Accord 5	T487	Attack Barafon 6	T542	Bari & Tenor 8
T433	Wind Organ 5	T488	Grow Guitar 6	T543	Viola Attack 6
T434	Kalimba 10	T489	Soft Clav. 7	T544	Jazz Organ 7
T435	Shamisen 7	T490	Tubular Bells 6	T545	Tron Flute 9
T436	English Horn 7	T491	Bodhran 7	T546	Suona 8
T437	Shanai 7	T492	Oct Harp 5	T547	Castanets 7
T438	Soft Sax 10	T493	Tsugaru 7	T548	Shanai 10
T439	Didgeridoo 10	T494	Bari & Tenor 7	T549	English Horn 10
T440	Tenor Sax 7	T495	Wind Organ 7	T550	Shamisen 10
T441	Koto 11	T496	Soft Accord 7	T551	Tenor Sax 10
T442	Organ Flute 6	T497	Viola Attack 5	T552	Chorus Guitar, 10
T443	Xylophone 7	T498	Jazz Organ 6	T553	Organ Flute 9
T444	Soft Santur 6	T499	Nay 7	T554	Reed Horn 7
T445	Bag Pipe 7	T500	Dulcimer 7	T555	Hard Vibe 8
T446	Crystal 8	T501	Xylophone 9	T556	Twin Bones 7
T447	Soft Clav. 6	T502	Tron Flute 8	T557	Xylophone 10
T448	Bodhran 6	T503	Church Bells 4	T558	Attack Barafon 8
T449	Tsugaru 6	T504	Celesta 4	T559	Electric Vlapraphone 7
T450	Chorus Guitar, 7	T505	Clavi 4	T560	Crystal 9
T451	Nay 6	T506	Indian Flute 4	T561	Bag Pipe 10
T452	Soft Accord 6	T507	Jungle Bass 4	T562	Barafon 8

T563	Soft Santur 9	T576	Guitar Pinch 6	T589	Soft Clav, 10
T564	Wind Organ 9	T577	Indian Flute 5	T590	Bari & Tenor 10
T565	Bari & Tenor 9	T578	Bright String 5	T591	Nay 10
T566	Tsugaru 9	T579	Church Bells 5	T592	Soft Santur 10
T567	Oct Harp 7	T580	Electronic Guitar (Clean)	T593	Tron Flute 11
T568	Tubular Bells 8	T581	Shanai 11	T594	Soft Accord 10
T569	Soft Clav. 9	T582	Marimba 7	T595	Wind Organ 10
T570	Grow Guitar 8	T583	Organ Flute 10	T596	English Horn 12
T571	Tron Flute 10	T584	English Horn 11	T597	Shanai 12
T572	Nay 9	T585	Barafon 9	T598	Organ Flute 11
T573	Jazz Organ 8	T586	Tsugaru 10	T599	Bag Pipe 12
T574	Viola Attack 7	T587	Crystal 10	T600	Tsugaru 11
T575	Soft Accord 9	T588	Bag Pipe 11		

Appendix 2 (Rhythm Comparison Table)

R001	China1	R040	FastGospel	R079	GuadDance
R002	China2	R041	FolkRock	R080	Reggae12Beat
R003	China3	R042	RockBilly	R081	Reggae16Beat
R004	China4	R043	RockBoogie	R082	Bossanova
R005	China5	R044	RockChaCha	R083	Mambo 1
R006	China6	R045	RockClassical	R084	Mambo 2
R007	China7	R046	RockShuffle	R085	Bolero
R008	China8	R047	RockPop	R086	Cumbia
R009	China9	R048	Skiffle	R087	Latin Rock
R010	China10	R049	Funk Pop Rock	R088	Disco Latin
R011	Club Pop	R050	Contemp Rock	R089	Tijuana
R012	16 Beat Pop	R051	Acoustic Rock	R090	Reggae
R013	8 Beat Pop	R052	60's RockN	R091	Pop Mambo
R014	8 Beat Soul	R053	Standard Rock	R092	Latin Party Pop
R015	8 Beat Rock	R054	Brit Rock Pop	R093	Hard Mambo
R016	Rap Pop	R055	60's Vintage Rock	R094	Parranda
R017	Pop Rock	R056	Chart Rock Shfl	R095	Rock Lation
R018	60's Soul	R057	60's Pop Rock	R096	Slow Rock 1
R019	70's Soul	R058	Waltz	R097	Slow Rock 2
R020	Funk	R059	Cha Cha	R098	Slow Rock 3
R021	16 Beat Shuffle	R060	Rumba	R099	Slow Soul
R022	Twist	R061	Jive	R100	8 Beat Adria
R023	British Pop	R062	Pasodoble	R101	Classic Piano
R024	Hard Rock	R063	Samba 1	R102	Unplugged
R025	Fusion	R064	Samba 2	R103	Pop Ballad
R026	FunkShuffl	R065	Schlager Rock 1	R104	Pop New Age
R027	FusionShuffl	R066	Schlager Rock 2	R105	8 Beat Modern
R028	Classic 8Beat	R067	FoxTrot	R106	Country Ballad
R029	Vintage Gtr Pop	R068	Viennese Waltz	R107	Love Song
R030	Schlager Italia	R069	Tango1	R108	Modern Country Pop
R031	50's Pop	R070	Tango2	R109	Electro Pop
R032	Cool Pop	R071	German Waltz	R110	Acoustic Ballad
R033	Groovy Pop	R072	Carnival	R111	Piano Ballad
R034	60's Vintage Pop	R073	Organ Samba	R112	R&B Ballad
R035	80's Pop	R074	Reel	R113	Rock Ballad
R036	Rock'n Roll 1	R075	Gay Gordons	R114	Slow & Easy
R037	Rock'n Roll 2	R076	Scand Waltz	R115	Analog Ballad
R038	Straight Rock	R077	Salsa	R116	E_Ballad
R039	Jazz Rock	R078	Calypso	R117	80's EP Ballad

R118	80's Boy Band	R173	Ragtime	R228	Tango4
R119	70's Chart Ballad	R174	Frankly Soul	R229	Jig
R120	Romantic Ballad	R175	Jazz Funk	R230	Hawaiian
R121	90's Cool Ballad	R176	Classic Big Band	R231	Electronica
R122	Alp Ballad1	R177	French Jazz	R232	Funky House
R123	Alp Ballad2	R178	Jump Jive	R233	Club Beat
R124	Techno 1	R179	Swing Fox	R234	Retro Club
R125	Techno 2	R180	Slow Fox	R235	Mod Chart Pop
R126	Funky Disco	R181	Organ Cha Cha	R236	MOR Swing
R127	Saturday Night	R182	Organ Quick Step	R237	Retro Pop
R128	Club Latin	R183	Ober Polka	R238	Rumba Flamenco
R129	Disco Chocolate	R184	Polka Pop	R239	Cumbia1
R130	Disco Fox	R185	Blue Grass 1	R240	Parranda1
R131	Disco Funk	R186	Blue Grass 2	R241	Carnival2
R132	Disco Hands	R187	Blue Grass 3	R242	50's Pop1
R133	Disco Party	R188	Pop Waltz	R243	Groovy Pop1
R134	Disco Samba	R189	USA March	R244	Cool Pop1
R135	British Pop2	R190	Hully Gully	R245	Club Pop2
R136	Club Dance	R191	Tarantella	R246	16 Beat Pop2
R137	Modern R&B	R192	Limbo Rock	R247	8 Beat Pop2
R138	Hip Shuffle	R193	Swing Waltz	R248	8 Beat Soul2
R139	Charleston	R194	Pub Piano	R249	8 Beat Rock2
R140	DiscoPop	R195	Jazz Waltz 1	R250	60's Vintage Pop1
R141	DiscoSoul	R196	Jazz Waltz 2	R251	16 Beat Ballad2
R142	DiscoTrot	R197	Show Tune	R252	70's Pop Ballad
R143	EuroBeat	R198	Polka	R253	EP Ballad
R144	Rap	R199	Party Polka	R254	Power Ballad
R145	Rave	R200	Schlager Polka	R255	Guitar Ballad
R146	70's Disco Funk	R201	Hard Rock2	R256	New R&B Ballad
R147	Disco Philly	R202	60's RockN1	R257	Guitar Serenade
R148	Disco House	R203	Standard Rock1	R258	Organ Ballad
R149	80's Disco	R204	Brit Rock Pop1	R259	Pop Mambo1
R150	70's Disco1	R205	60's Vintage Rock*	R260	Latin Party Pop1
R151	70's Disco2	R206	Chart Rock Shf1	R261	80's Pop1
R152	Country 1	R207	Saeidy	R262	British Pop3
R153	Country 2	R208	German Rock	R263	70's Chart Ballad*
R154	Finger Pickin	R209	Schlager Beat	R264	Romantic Ballad1
R155	Country Brothers	R210	Rock & Roll	R265	90's Cool Ballad1
R156	New Country	R211	Rock & Roll Shf1	R266	Alp Ballad3
R157	Easy Country	R212	Oldies R & R	R267	Alp Ballad4
R158	70's Chart Cntry	R213	80's Rock & Roll	R268	Schlager Polka1
R159	Hoedown	R214	BritRockGuitar	R269	J-Pop Hit
R160	Country Shuffle	R215	Chart Rock Shf2	R270	Detroit Pop1
R161	Country Love Song	R216	New R&B	R271	Detroit Pop2
R162	Country Two Step	R217	Pop R&B	R272	Worship Med
R163	Big Band Shuffle 1	R218	Chart R&B	R273	Worship Fast
R164	Big Band Shuffle 2	R219	Rock Cha Cha1	R274	12-8 Ballad
R165	Big Band Shuffle 3	R220	Funk Shuffl 3	R275	Norteno
R166	Fast Band 1	R221	8 Beat Rock3	R276	60's 8 Beat
R167	Fast Band 2	R222	Rock Cha Cha2	R277	Laff
R168	Cat Groove	R223	Joropo	R278	Ober Walzer
R169	Dixie Jazz	R224	Reggaeton	R279	Bhangra
R170	Medium Jazz	R225	French Waltz	R280	Zouk
R171	Jazz Big Band	R226	Merengue	R281	German March
R172	.Jazz Club	R227	Tango3	R282	Fnka

R283	Bolero Lento	R338	Schlager Shuffle	R393	Mariachi Waltz
R284	Sherif Reggae	R339	Schlager Pop	R394	US March
R285	Beguine	R340	Schlager Rumba	R395	Guitar Rumba
R286	Pop Classics	R341	Euro Pop Organ	R396	Slow Blues
R287	Live 8 Beat	R342	70's French Hit	R397	Jazz Waltz Fast
R288	Power Rock	R343	Italian Mazurka	R398	70's Country Pop
R289	Acoustic Rock1	R344	Jig2	R399	Dixieland
R290	Cool 8 Beat	R345	Hawaiian2	R400	40's Big Band
R291	Uptempo 8Beat	R346	Latin Rock2	R401	Schlager Alp
R292	90's Rock Ballad	R347	Schlager Samba1	R402	Chart Pop1
R293	80's Guitar Pop	R348	Schlager Samba2	R403	Organ Groove
R294	70's 8 Beat	R349	Scand Slow Rock	R404	Chart Pop2
R295	90's Guitar Pop	R350	Schlager 6-8	R405	Modern Shuffle
R296	Soft Rock	R351	Schlager Fox	R406	8 Beat Ballad1
R297	Chart GuitarPop	R352	Country Ballad1	R407	Bubblegum Pop
R298	Gujira	R353	Country Two Step1	R408	Rock Funk
R299	Modern Pop Bld	R354	Kool Shuffle	R409	West Coast Pop
R300	Soul	R355	Pleasant Country	R410	Classic 16 Beat
R301	Skiffle1	R356	Country Hits	R411	8 Beat Ballad2
R302	6-8Soul	R357	Country 8 Beat	R412	Chillout
R303	Soul Brothers	R358	Mod Cntry Bld1	R413	16 Beat Ballad1
R304	6-8Slow Rock	R359	Country Ballad2	R414	Epic Ballad
R305	Trance Pop	R360	Scand Country1	R415	Easy Ballad
R306	Mellow Hip Hop	R361	Scand Country2	R416	Cuban Son
R307	Classic Hip Hop	R362	Country Love Song1	R417	16 Beat Ballad3
R308	New Hip Hop	R363	Orch Big Band2	R418	Contemp Rock2
R309	Duranguense	R364	Big Band Fast2	R419	EP Ballad2
R310	70's Disco3	R365	Midnight Swing	R420	Cat Groove2
R311	70's Disco4	R366	Fusion2	R421	Guitar Serenade2
R312	Latin Disco	R367	Funk Shuffl 2	R422	Organ Ballad2
R313	Brazilian Samba	R368	Fusion Shuffl 2	R423	Pop Ballad2
R314	Brit Pop Swing	R369	Swing Fox1	R424	Norteno2
R315	Grupera	R370	Slow Fox1	R425	Retro Pop2
R316	Danzon	R371	Organ Cha Cha1	R426	Trance Pop2
R317	Dream Dance	R372	Organ Quick Step1	R427	Pop Gtr Ballad
R318	US Chart Hit	R373	Piano Boogie	R428	Ibiza 2002
R319	Soul R&B	R374	Lovely Shuffle	R429	Chillout Cafe
R320	R&B Soul Ballad	R375	Jazz Gtr Club	R430	70's Glam Piano
R321	Euro Hip Hop	R376	Modern Jazz	R431	French House
R322	Trip Hop	R377	Acoustic Jazz	R432	Bhajan2
R323	60's RockN2	R378	Cool Jazz Ballad	R433	16 Beat Pop3
R324	Bhajan	R379	Modern Jazz Bld	R434	16 Beat Pop4
R325	Hip Hop Groove	R380	Easy Listening	R435	Enka2
R326	Euro Trance	R381	Bebop	R436	Blues Rock
R327	6-8 Trance	R382	Orch Big Band1	R437	Ibiza 2004
R328	Latin DJ's	R383	Kool Funk	R438	80's Rock & Roll1
R329	Bomba	R384	Blueberry Blues	R439	Acoustic Rock2
R330	Club House	R385	Shuffle Blues	R440	Club Pop3
R331	House	R386	Mambo 3	R441	Power Rock2
R332	Disco Teens	R387	Mambo 4	R442	Rock'n Roll 3
R333	Happy Reggae	R388	Big Band Fast1	R443	Cool8 Beat2
R334	Pop Latin	R389	Orchestra Swing1	R444	British Pop4
R335	Fast Bossa	R390	Orchestra Swing2	R445	British Pop5
R336	6-8 Modern	R391	70's Chart Cntry1	R446	8 Beat Soul3
R337	6-8 Orchestral	R392	Jazz Waltz Mad	R447	BritRockGuitar1

R448	Brit Felsen Pop2	R466	60er Jahre Seele 2	R484	Schlager-Polka2
R449	Blaubeer-Blues2	R467	Fusion shuffl 3	R485	Gruppe 2
R450	Guijira2	R468	Fusion Mischen 4	R486	Danzon 2
R451	Felsen Ballade2	R469	6-8 Modern2	R487	schlagerAlp2
R452	Seele 2	R470	6-8 Orchester 2	R488	saeidy2
R453	Klassiker 8 Beat 2	R471	langsam Seele 2	R489	6-8 Marsch
R454	Bolero 2	R472	Klavier Ballade2	R490	Bluegrass
R455	Seele Brüder2	R473	Hüfte HoP Rille 2	R491	Pop Latein2
R456	Glücklicher Reggae2	R474	Hüfte Zufallswiedergabe 2	R492	Tune2 anzeigen
R457	6-8 langsam Rock 2	R475	Orgel Rille 2	R493	scannen Shuffle
R458	Bolero Lento 2	R476-	Diagramm Pop 3	R494	Anbetung langsam Bachata
R459	Mitternachtsschau kel2	R477	Mambo 5	R495	
R460	Französisch Jazz 2	R478	Mambo 6	R496	Romantisch Ballade2
R461	lateinisch Party-Pop2	R479	Disko Latein 2	R497	Analog Ballade2
R462	Tango5	R480	Schnell Bossa 2	R498	Elektro Pop 2
R463	Tang 06	R481	Fuchs Trab 2	R499	Blues Rock2
R464	parranda2	R482	pasodoble2	R500	90er Jahre Seele
R465	80er Jahre Pop 2	R483	Hochland Walzer 2		

Appendix 3 (Demonstration Song Comparison Table)

S001	Staffel 16	Beethove	astatur-Chopin Nocturne
Staffel 1:		n Menuett	Mendelssohn Fr.
S002	Staffel 17 Staffel 18 Staffel 19	In G	Hingslied Reverie
	Staffel 20 Staffel 21 Staffel 22	Pollo	Beethoven Klavier Sonate bei .49-2
	Staffel 23 Staffel 24 Staffel 25	53. Herois	Stk lila
Staffel 26	Staffel 27 Staffel 28	n	Beethoven
Staffel 29	S030 S031 Staffel 1:	As wesentlich, Op.	Schottland
S032	Staffel 13 Staffel 13 S035	Lied Der	Debussy
Staffel 136	Staffel 37 Staffel 138 Nr. 64	Auf Wiederse	Aeabesque
		hen	Bach
Staffel 105		B	Erfindung
Staffel 110		a	Liszt Liebesträume
Staffel 107		c	Debussy La ausfüllen Haar
Staffel 108		h	de Linie Mozart-Menuett
Staffel 109			Bach Walzer In Amino
Staffel 110			sei thoven- pia n nein Sonate An
Staffel 111			13 erbärmlich 2 lila
Staffel 112		D	Schumann Fröhlicher
Staffel 113		e	Landsmann Schubert
Staffel 114		r	Marche Militär
Staffel 115			Bach Bourree
		w	Burgmiller
		e	Pastorale
		i	Schumann
		l	Sicilienne
		-	Haydn Kleine Serenade
		G	Austern Dolly S
		e	DreamingAwa kening
		h	Chopin Große Falschheit
		ä	Brille auf. 18 Polk-Lächeln
		r	Impromptu NEIN.
		t	3, An. 90 Brahms
		e	Walzer Nein. 15
		t	chenyin Li Theaterstücke Debussys
			Golliwogs Kinderspiel
			Cembalo Musik
		T	

Mo	' Liebe pachelbel Kanone	S040	Joplin Das Entertainer
zar	In D	S041	Lc. Daquin LeC 100
t	Badarzewska Gebet der Jungfrau	S042	karl Böhm Der F riii
Fu	Tschaikowsky- Tanz von s Mirlitons	S043	enthalten Korsakow
nk	Humoreske von Dvořák	Staff	Hummel
el	15-	el 1:	Haydn - Sonnenaufgang
Fu		S044	Johann sebastian Bach Sonate
nk		S045	Ouvertüre " William
el		S046	Erzählen " Schubert-
Kle		S047	Serenade
ine		S048	Menuett aus
r		S049	L'Arlesienne Polonäse
St		S050	Clementi-Sonate
ern		S051	Chopin Revolution Etüde
Ba		S052	Beethoven
ch		S053	Schicksalssymphonie
Me		Staff	Musical Momente
nu		el 6	Chopin Schwarze
ett		S055	Ke n ys
Richard		S056	Chopin Auftakt Regentropfen ", Op
Ballade		S057	28- 15 Chopin kleiner Hund
fürAdeline		S058	Chopin Fantasie Impromptu
Richard		S059	Polonäse in A-Dur, op40 , NEIN
Klingeln		S060	1 Dubessy clair De Mond
Pong Sous		S061	schubert Monents Musicaux
Les Arbres		S062	Mozart Turkish March
R		S063	chopin - valse op. 64 no.2
i		S064	Beethoven Mondschein sonate
c		S065	schumann Traumerei
h		S066	Beethoven For Elise
a		S067	Beethoven MarciaAlla Turca
r		S068	Mozart sonata
d		S069	Mendelssohn Jägerlied op . 19b-
A		S070	3 Chopin - Nocturne op . 9 NEIN .
c		S071	2
o		S072	TornaAsurriento
m		Nr.	MOZART K448 (II Andante)
m		673	Der Lustiger
e		S074	Witwenwalzer
A		S075	Cinquantaine
m		S076	süßes TschüßAnd
o		S077	Tschüss Barcarole
u		S078	Klarinettenpolka
r		S079	Stimme des Frühlings
R		S080	Walzer vonDer
i			Blumen Katjuscha
c			An Flügel von Lied
h			
a			
r			
d			
H			
o			
c			
h			
z			
e			
i			
t			
D			

1 Battery



- O bitte pass auf folgende Aufmerksamkeiten
- O Tun Versuchen Sie nicht, das Gerät zu zerlegen. oder kurzschließen Batterie O Tun nicht aussetzen oder brennen Es In Die Feuer
- O Tun nicht vermischen neu und alt Batterie
- O Tun nicht mischen anders Typen von Batterien oder Tun nicht Aufladung Die Batterie
- O Der positiv und Minuspole von Die Batterie muss ordnungsgemäß installiert
- O Bitte Entfernen Sie die Batterie aus das elektronische Keyboard Wenn Sie dies tun nicht verwenden für eine lang Zeit,

2 Exception



- Bitte gehen Sie wie folgt vor Schritte, wenn Ausnahme für die elektronische
- Tastatur wie rauchend , über heißem und Also An . 1) . Leistung aus
- 2) . ziehen Die Adapter runter aus Die Leistung Buchse An Die Wand Wann Sind verwenden.
- 3) . Kontakt dein lokal Händler In Zeit .
- Es ist Normal für Adapter bekommen heiß Wann lang Zeit mit Klimaanlage Adapter , nicht angeben Fehlfunktion
- Bitte ausschalten und Starten Sie das elektronische Keyboard neu, wenn irgendwann Funktion Problem ,

3 Install the battery

- 1) . Ausfahrt Die schrauben Und entfernen Die Batterie Abdeckung
- 2) . setzen Die Batterie mit richtig positiv + Und Negativ - Richtung in die Batterie Slot mit 4 x" AA " 1 . 5 V
- 3) . setzen Die Batterie Abdeckung Und Sperren Die Schrauben

Das Produkt enthält elektronische Komponenten und sollen nicht erlauben Flüssigkeiten Zu eingeben oder Sei gebraucht In Feuchte Umgebungen .

Täglich staubdicht Reinigung sollen Sei Erledigt Also ,
Und Oberflächenflecken dürfen Sei abgewischt mit A weich
Und sauber Tuch .

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Technischer Support und E- Garantie-
Zertifikat www.vevor.com/support



Tecnico supporto e Certificato di garanzia elettronica

[Www . benvenuto .com](http://Www.benvenuto.com) / supporto

PIANOFORTE UTENTE MANUALE

MODELLO : BD -662

continuiamo a essere impegnato A fornirti strumenti con prezzo competitivo .
"salva Metà", "Metà prezzo" o altre espressioni simili usato da noi rappresenta solo un
stima dei risparmi che puoi potrebbe trarre beneficio dall'acquisto certi strumenti con noi
rispetto al maggiore migliori marche e fa non necessariamente significa A coprire tutto
categorie di strumenti offerto da noi. Voi

Sono gentilmente ricordato verificare attentamente quando si Sono posizionare un
ordina con noi se tu Sono effettivamente risparmiando mezzo dentro
confronto con i marchi più importanti.

MODEL: BD-662



(The picture is for reference only, please refer to the actual object)

BISOGNO AIUTO? CONTATTO NOI!

Avere prodotto domande? Bisogno tecnico supporto? Per favore
Tatto gratuito contattare noi :

Supporto tecnico e Certificato di garanzia
elettronica [Www.vevor.
com/support](http://www.vevor.com/support)

Questo È IL originale istruzione , Per favore Leggere Tutto manuale
istruzioni

attentamente prima di operare. VEVOR si riserva UN chiaro
interpretazione del nostro manuale utente . IL aspetto di IL prodotti in
magazzino essere soggetto a IL
prodotto tu ricevuto. per favore perdonami noi che non lo faremo

informarti Ancora Se ci sono tecnologie o software aggiornamenti su il nostro prodotto.

Accessorio

energia corda * 1

Microfono * 1

Leggio per spartiti
musicali * 1

Auricolari * 1

sostenere pedale *

1 Musica foglio



fermaglio * 1

Midi-Film Cavo * 1


pianoforte adesivo *
1

tastiera stare in
piedi * 1


Installation diagram of Keyboard stand

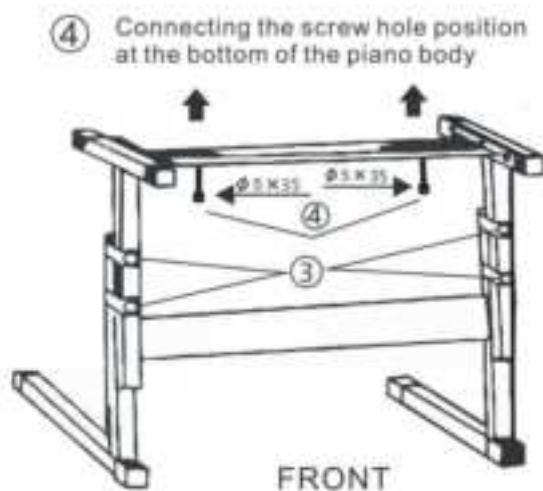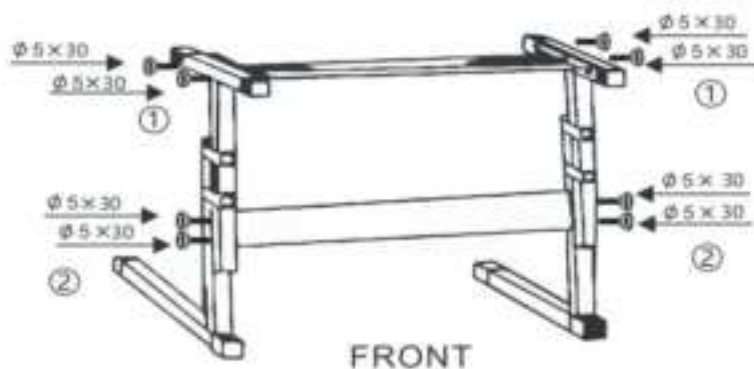  

 - ③ Adjust the limit screw at the same time on the left and right sides to adjust the appropriate height

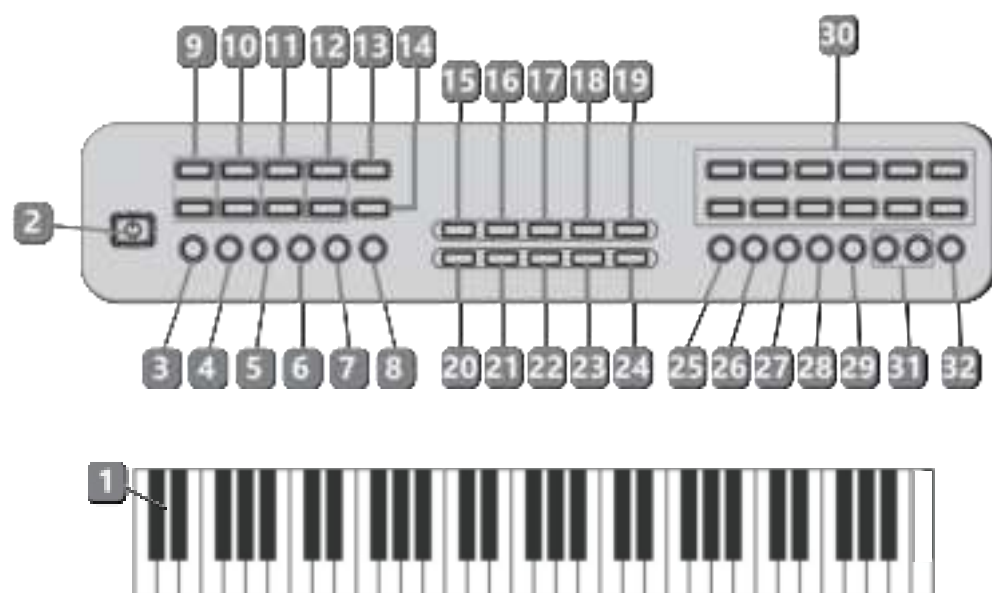

- | | | | |
|-------------|------------------|----------------|--------------------------|
| 1 KEYBOARD | 9 VOLUME+/- | 17 FILL-IN/LED | 25 TONE |
| 2 POWER | 10 RHYTHM VOL+/- | 18 FILL-IN2 | 26 RHYTHM |
| 3 RECORD | 11 TEMPO+/- | 19 BASSCHORDS | 27 PIANO |
| 4 PROG | 12 TRANSPOSE+/- | 20 ONE KEY | 28 DEMO ONE |
| 5 PLAY | 13 SUSTAIN | 21 FOLLOW | 29 DEMO ALL |
| 6 METRONOME | 14 VIBRATO | 22 ENSEMBLE | 30 NUMBER SELECTION AREA |
| 7 KEY DRUM | 15 SYNC | 23 CHORD. OFF | 31 ◀/VOL- ▶/VOL+ |
| 8 DUAL KEY | 16 CHORD | 24 START/STOP | 32 ▶/CHANGE |

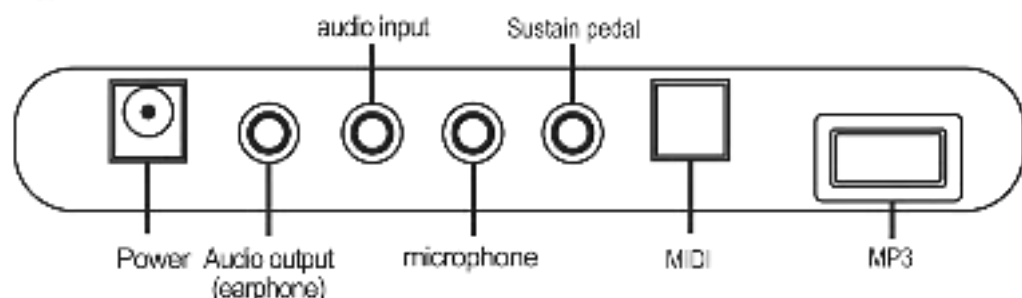 

1.KEYBOARD\2.POWER

Turn on the power, you can play the "keyboard" and enter the performance state. In standby mode, after 3 minutes of no operation, it will automatically enter the sleep mode, and can be restored by pressing any key.

3.RECORD

Press the **【RECORD】** key to enter the recording mode, and then press any piano key or drum key to start the recording.

start recording. The maximum number of recordings is 80. When the recording is full, it cannot continue to record another note.

When recording, you can press the play button at any time to play.

Each time this button is pressed, the last memory will be cleared and the recording mode will be re-entered.

After exiting the recording mode, the last memory will be cleared.

4.PROG

Press **【PROG】** key to enter programming mode, the preset speed is 120.

The pressed drum sound can be recorded. In edit mode, only the drum sound is valid.

The maximum number of records is 32. When the record is full, it cannot continue to record another drum sound. You can press the button at any time, press the Play key to play the edited drum sound.

Each time this key is pressed, the last memory will be cleared and the programming mode will be re-entered.

After exiting the programming mode, the last memory will be cleared.

In this mode, the keys are automatically converted to keyboard drums.

5.PLAY

In the recording mode, press the **【PLAY】** for the first time to play the recorded notes.

Press the **【PLAY】** for the second time to stop playing.

In programming mode, press the **【PLAY】** for the first time to play the recorded drum sound, and press the **【PLAY】** for the second time to stop playing

If there is no recorded value before, press the **【PLAY】** and no action will take place.

6.METRONOME

Pressing the **【METRONOME】** key, the action function is the click sound, there are 7 kinds of changes, 1/4 beat → 2/4 beat → 3/4 beat → 4/4 beat... → stop, the default value of the beat is 120.

7.KEY DRUM

Press the **【KEY DRUM】** key to get percussion sound on the corresponding key.

8.DUAL KEY

Press **【DUAL KEY】** for the first time to activate the dual keyboard function, and press **【DUAL KEY】** for the second time to select eliminate the double keyboard function.

When the dual keyboard function is activated, the scales of the left keys C2-B3 will be played correspondingly to the scales of C3-B4. The scales of C4-C7 on the right keys will be played as C3-C6 scales. You can use the digital area and the [+] [-] keys or digital switches to select the sub-tone instead of the left piano.key tone.

9.VOLUME+/-

Use **【VOLUME+/-】** to control the volume, press **【VOLUME+】** to represent To increase the volume up, press **【VOLUME-】** to decrease the volume down. The volume control has a total of 17 segments (0~16), and the default value is the 13th segment after power-on.

Press and hold **【VOLUME+/-】** for more than 1 second to continuously increase /decrease the volume.

10.RHYTHM+/-

Press **【RHYTHM+/-】** to select the accompaniment volume.

The accompaniment volume control has a total of 17 segments (0~16), and the preset value is the 13th segment after power-on.

Press and hold the **【RHYTHM+/-】** for more than 1 second to continuously increase/decrease the accompaniment volume.

11.TEMPO+/-

Press **【TEMPO+/-】** to select the speed.

The speed control has a total of 270 stages (30~300), and the preset value is the 90th stage after power-on (speed = 120)

Press and hold the **【TEMPO+/-】** for more than 1 second to continuously increase/decrease the speed.

When playing the selected song, the tempo of the song will be used, regardless of the set tempo.

When playing the selected rhythm, the set tempo will prevail.

12.TRANSPOSE+/-

Press **【TRANSPOSE+/-】** to select Transpose .

There are 25 segments (-12~12) in total for transposition control, and the preset value is at segment 13 after power-on.

Press and hold the **【TRANSPOSE+/-】** for more than 1 second to continuously increase/decrease the transpose.

The chord pitch also changes with the transpose value.

13.SUSTAIN

Press the **【SUSTAIN】** key to enable or disable the sustain function.

When the sustain function is turned on, when you play the keyboard, the sound will have a prolongation effect.

14.VIBRATO

Press the **【VIBRATO】** key to enable or disable the vibrato function.

When the vibrato function is turned on, the sound will vibrate when you play the keyboard.

15.SYNC

Press the [Sync] key for the first time to enter the sync mode, and press the [Sync key] for the second time to exit the sync mode.

When entering sync mode, pressing the first 19 keys on the left will automatically play the selected rhythm (chord).

16.CHORD

Press the **【CHORD】** for the first time to enter the comprehensive chord mode, and press the **【CHORD】** for the second time to exit the composite chord mode.

【CHORD】 Only in rhythm and general mode, the function can occur. When playing the rhythm, press **【CHORD】** and press multiple keys within the range of C2~F3#.

After fingering, you can hear the corresponding chord accompaniment. The single-fingered chords are played.

When the rhythm is not playing, press the **【CHORD】** and press the multi-finger key within the range of keys C2~F3#, and you can hear the corresponding chord accompaniment. Otherwise, the single-fingered chords are played. Comprehensive fingering can be used with rhythm/chord/synchronization.

17.FILL-IN/LED 18.FILL-IN2

【FILL-IN/LED】 When the rhythm is not playing, pressing it is the key light switch function.

【FILL-IN】 and **【FILL-IN2】** function only when the rhythm is played. Interlude: During the rhythm playing, press the **【FILL-IN】** to add the fill-in function to the rhythm.

When the measure is finished, insert an interlude.

During rhythm playback, press and hold the **【FILL-IN】** to continue inserting.

19.BASSCHORDS

Change the bass voice in the chord to the piano voice.

20.ONE KEY

Press the **【ONE KEY】** for the first time to enter the random play mode, and then press any key to issue the correct note.

Press the **【ONE KEY】** for the second time to exit the strumming mode.

21.FOLLOW

Press the **【FOLLOW】** for the first time to enter the follow mode, and press the **【FOLLOW】** for the second time to exit the follow mode.

After entering the follow play mode, use the current song to teach, after the song is played, the main melody will not be played.

The user must press the corresponding key according to the note displayed on the LCD or the keyboard indicator light.

To continue playing the next note, the background sound repeats the measure until the end of the song.

After the song is over, play the next song.

In follow mode, you can use the number selection area to select other songs.

22.ENSEMBLE

Press the **【ENSEMBLE】** for the first time to enter the ensemble mode, and press the **【ENSEMBLE】** for the second time to exit the ensemble mode.

After entering the ensemble mode, use the current song to teach, after the song is played, the user can play the piano at will key and interrupt the main chord. If the key is not pressed after 5 seconds, the main chord will resume playing automatically. background

The sound plays completely until the end of the song.

When the song is over, play the next song together.

In Ensemble mode, other songs can be selected using the number selection area.

23.CHORD.OFF

Turn off composite chords.

24.START/STOP

Short press [Start/Stop Key] for the first time to start playing the rhythm, and

short press [Start/Stop Key] for the second time, to stop playing the rhythm.

Exit this mode in teaching, recording, playback, metronome, demo songs, etc.

25.TONE

After pressing the **【TONE】**, you can use the number selection area and the **[+][-]** keys to select the tone.

26.RHYTHM

After pressing the **【RHYTHM】**, you can use the number selection area and the **[+] [-]** keys to select the rhythm.

27.PIANO

In other voice states, press the [Piano] key to set the piano voice, and press the **【PIANO】** key for the second time to restore the previous sound.

(The default is piano sound when power on, this button is invalid)

28.DEMO ONE

Press the **【DEMO ONE】** button for the first time to enter the click mode, and press the **【DEMO ONE】** for the second time to exit the click mode.

After entering the sing-along mode, playback starts from the next song.

When the song finishes playing, the current song is played repeatedly.

In sing-along mode, other songs can be selected using the number selection area.

29.DEMO ALL

Press the **【DEMO ALL】** for the first time to enter the continuous singing mode, and press the **【DEMO ALL】** for the second time to exit the continuous singing mode.

After entering continuous singing mode, playback starts from the first song.

When the song is finished, continue to play the next song and play all the songs in a loop.

In sing-along mode, other songs can be selected using the number selection area.

30 .NUMBER SULECTION AREA

Use the number keys 0-9 to input the corresponding timbre, rhythm, song code for quick selection, use the +/- keys can be selected sequentially.

Press and hold the "+" or "-" key for more than 2 seconds to continuously increase/decrease the selection.

If neither tone mode or rhythm mode is selected, the default value is tone mode after power-on.

If neither tone mode or rhythm mode is selected, the default value is tone mode after power-on.

31 . VOL- VOL+ 32 . CHANGE

Press (within 1 second) [CHANGE] to play or pause the song. In pause mode, press [CHANGE] to continue playing the song.

Press (within 1 second) [VOL-] to select the previous song.

Press (within 1 second) [VOL+] to select the next song.

Press and hold the [VOL-] for more than 1 second to decrease the volume. Long press [VOL+] to exceed increase the volume after 1 second.

Appendix 1 (Voice Comparison Table)

T001	Acoustic Grand Piano	T026	Acoustic Guitar (steel)	T051	Synth Strings 1
T002	Bright Acoustic Piano	T027	Electric Guitar (jazz)	T052	Synth Strings 2
T003	Electric Grand Piano	T028	Electric Guitar (clean)	T053	Choir Aahs
T004	Honky-tonk Piano	T029	Electric Guitar (muted)	T054	Voice Oohs
T005	Rhodes Piano	T030	Overdriven Guitar	T055	Synth Voice
T006	Chorused Piano	T031	Distortion Guitar	T056	Orchestra Hit
T007	Harpsichord	T032	Guitar Harmonics	T057	Trumpet
T008	Clavichord	T033	Acoustic Bass	T058	Trombone
T009	Celesta	T034	Electric Bass(finger)	T059	Tuba
T010	Glockenspiel	T035	Electric Bass (pick)	T060	Muted Trumpet
T011	Music box	T036	Fretless Bass	T061	French Horn
T012	Vibraphone	T037	Slap Bass 1	T062	Brass Section
T013	Marimba	T038	Slap Bass 2	T063	Synth Brass 1
T014	Xylophone	T039	Synth Bass 1	T064	Synth Brass 2
T015	Tubular Bell	T040	Synth Bass 2	T065	Soprano Sax
T016	Dulcimer	T041	Violin	T066	Alto Sax
T017	Drawbar Organ	T042	Viola	T067	Tenor Sax
T018	Percussive Organ	T043	Cello	T068	Baritone Sax
T019	Rock Organ	T044	Contrabass	T069	Oboe
T020	Church Organ	T045	Tremolo Strings	T070	English Horn
T021	Reed Organ	T046	Pizzicato Strings	T071	Bassoon
T022	Accordion	T047	Orchestral Harp	T072	Clarinet
T023	Harmonica	T048	Timpani	T073	Piccolo
T024	Tango Accordion	T049	String Ensemble 1	T074	Flute
T025	Acoustic Guitar (nylon)	T050	String Ensemble 2	T075	Recorder

Appendix 1 (Voice Comparison Table)

T076	Pan Flute	T129	Yong Gin	T181	Soft Santur
T077	Bottle Blow	T130	Zheng	T182	Dual Horns 1
T078	Shakuhachi	T131	Zhong Ruan	T183	Bodhran
T079	Whistle	T132	Pi Pa	T184	Tubular Bells 2
T080	Ocarina	T133	Big Souna	T185	Suona 2
T081	Lead 1 (square)	T134	Souna	T186	Castanets
T082	Lead 2 (sawtooth)	T135	Er Hu	T187	Attack Harp 1
T083	Lead 3 (caliope lead)	T136	Yue Hu	T188	Electric Viaphone
T084	Lead 4 (chiff lead)	T137	Di Zi	T189	Soft Sax 1
T085	Lead 5 (charang)	T138	Bong Di	T190	Soft Clav.
T086	Lead 6 (voice)	T139	Koto 2	T191	Soft Accord
T087	Lead 7 (fifths)	T140	Qui Di	T192	Wind Organ
T088	Lead 8 (bass+lead)	T141	Xylophone 2	T193	Viola Attack
T089	Pad 1 (new age)	T142	Dulcimer 2	T194	Bari & Tenor
T090	Pad 2 (warm)	T143	Guitar Pinch 2	T195	Soft Guitar 1
T091	Pad 3 (polysynth)	T144	Slow Violin	T196	Grow Guitar
T092	Pad 4 (choir)	T145	Bright String	T197	Didgeridoo 1
T093	Pad 5 (bowed)	T146	Jungle Bass 2	T198	Attack Barafon
T094	Pad 6 (metallic)	T147	Indian Flute	T199	Mute Barafon 1
T095	Pad 7 (halo)	T148	Clavi 2	T200	Nay
T096	Pad 8 (sweep)	T149	Celesta 2	T201	Didgeridoo 2
T097	FX 1 (rain)	T150	Church Bells	T202	Dual Horns 2
T098	FX 2 (soundtrack)	T151	Kalimba 2	T203	Hard Barsoon 2
T099	FX 3 (crystal)	T152	Steel Bell 1	T204	Kawala 2
T100	FX 4 (atmosphere)	T153	Tenor Sax 2	T205	Soft Guitar 2
T101	FX 5 (brightness)	T154	Woodblock 2	T206	Mute Barafon 2
T102	FX 6 (goblins)	T155	Electric Guitar (Clean) 2	T207	Hard Barsoon 1
T103	FX 7 (echoes)	T156	Shanai 2	T208	Tron Flute
T104	FX 8 (sci-fi)	T157	Marimba 3	T209	Kawala 1
T105	Sitar	T158	Dulcimer 3	T210	Jazz Organ
T106	Banjo	T159	Reed Organ 3	T211	Synth Harpsi. 3
T107	Shamisen	T160	Koto 3	T212	Tenor Sax 3
T108	Koto	T161	Crystal 1	T213	Steel Bell 3
T109	Kalimba	T162	Bag Pipe 2	T214	Kalimba 4
T110	Bagpipe	T163	Barafon	T215	Shamisen 3
T111	Fiddle	T164	Organ Flute	T216	English Horn 3
T112	Shanai	T165	Kalimba 3	T217	Shanai 3
T113	Tinkle Bell	T166	Reed Horn	T218	Soft Sax 2
T114	Agogo	T167	English Horn 2	T219	Attack Harp 2
T115	Steel Drums	T168	Electric Guitar (Clean) 3	T220	Castanets 2
T116	Woodblock	T169	Shamisen 2	T221	Suona 3
T117	Taiko Drum	T170	Koto 4	T222	Xylophone 3
T118	Melodic Tom	T171	Hard Vibe 2	T223	Koto 5
T119	Synth Drum	T172	Twin Bones	T224	Attack Clav. 4
T120	Reverse Cymbal	T173	Synth Harpsi. 1	T225	Synth Harpsi. 4
T121	Guitar Fret Noise	T174	Attack Clav. 1	T226	Twin Bones 2
T122	Breath Noise	T175	Chorus Guitar.	T227	Hard Vibe 3
T123	Seashore	T176	Steel Bell 2	T228	Reed Horn 2
T124	Bird Tweet	T177	Tsugaru	T229	Organ Flute 2
T125	Telephone Ring	T178	Oct Harp	T230	Steel Bell 4
T126	Helicopter	T179	Synth Harpsi. 2	T231	Chorus Guitar. 2
T127	Applause	T180	Attack Clav. 2	T232	Dual Horns 3
T128	Gunshot				

T233	Soft Santur 2	T288	Tenor Sax 4	T343	English Horn 5
T234	Barafon 3	T289	Twin Bones 3	T344	Shamisen 5
T235	Bag Pipe 3	T290	Hard Vibe 4	T345	Kalimba 7
T236	Crystal 3	T291	Koto 7	T346	Steel Bell 7
T237	Attack Clav. 3	T292	Shamisen 4	T347	Tenor Sax 5
T238	Electric Vibraphone 2	T293	Electric Guitar (Clean) 5	T348	Chorus Guitar. 4
T239	Attack Harp 3	T294	English Horn 4	T349	Steel Bell 8
T240	Attack Barafon 2	T295	Reed Horn 3	T350	Organ Flute 4
T241	Didgeridoo 3	T296	Kalimba 6	T351	Reed Horn 4
T242	Grow Guitar 2	T297	Organ Flute 3	T352	Hard Vibe 5
T243	Soft Guitar 3	T298	Barafon 2	T353	Twin Bones 4
T244	Soft Clav. 2	T299	Dual Horns 5	T354	Synth Harpsi. 8
T245	Soft Sax 3	T300	Soft Santur 3	T355	Attack Clav. 8
T246	Tubular Bells 3	T301	Attack Clav. 5	T356	Koto 8
T247	Bodhran 2	T302	Synth Harpsi. 5	T357	Xylophone 5
T248	Oct Harp 2	T303	Oct Harp 3	T358	Didgeridoo 7
T249	Tsugaru 2	T304	Tsugaru 3	T359	Attack Barafon 4
T250	Bari & Tenor 2	T305	Steel Bell 6	T360	Attack Harp 7
T251	Wind Organ 2	T306	Chorus Guitar. 3	T361	Electric Vibraphone 4
T252	Soft Accord 2	T307	Attack Clav. 6	T362	Attack Clav. 7
T253	Attack Harp 4	T308	Synth Harpsi. 6	T363	Crystal 4
T254	Viola Attack 2	T309	Wind Organ 3	T364	Bag Pipe 5
T255	Kawala 3	T310	Soft Accord 3	T365	Barafon 4
T256	Soft Sax 4	T311	Soft Clav. 3	T366	Soft Santur 4
T257	Jazz Organ 2	T312	Soft Sax 5	T367	Dual Horns 7
T258	Nay 2	T313	Electric Vibraphone 3	T368	Wind Organ 4
T259	Mute Barafon 3	T314	Attack Harp 5	T369	Bari & Tenor 4
T260	Dulcimer 5	T315	Castanets 3	T370	Tsugaru 4
T261	Xylophone 4	T316	Suona 4	T371	Oct Harp 4
T262	Tron Flute 2	T317	Tubular Bells 4	T372	Bodhran 4
T263	Hard Barsoon 3	T318	Bodhran 3	T373	Tubular Bells 6
T264	Mute Barafon 4	T319	Dual Horns 6	T374	Soft Sax 7
T265	Soft Guitar 4	T320	Didgeridoo 6	T375	Soft Clav. 4
T266	Kawala 4	T321	Nay 3	T376	Soft Guitar 7
T267	Hard Barsoon 4	T322	Mute Barafon 5	T377	Grow Guitar 4
T268	Dual Horns 4	T323	Attack Barafon 3	T378	Hard Barsoon 7
T269	Didgeridoo 4	T324	Didgeridoo 5	T379	Tron Flute 4
T270	Steel Bell 5	T325	Grow Guitar 3	T380	Mute Barafon 7
T271	Kalimba 5	T326	Soft Guitar 5	T381	Nay 4
T272	Church Bells 2	T327	Bari & Tenor 3	T382	Jazz Organ 4
T273	Celesta 3	T328	Viola Attack 3	T383	Soft Sax 8
T274	Clavi 3	T329	Synth Harpsi. 7	T384	Kawala 7
T275	Indian Flute 2	T330	Jazz Organ 3	T385	Viola Attack 4
T276	Jungle Bass 3	T331	Kawala 5	T386	Attack Harp 8
T277	Bright String 2	T332	Tron Flute 3	T387	Soft Accord 4
T278	Slow Violin 2	T333	Hard Barsoon 5	T388	Guitar Pinch 4
T279	Guitar Pinch 3	T334	Mute Barafon 6	T389	Indian Flute 3
T280	Bag Pipe 4	T335	Soft Guitar 6	T390	Bright String 3
T281	Crystal 2	T336	Kawala 6	T391	Church Bells 3
T282	Koto 6	T337	Hard Barsoon 6	T392	Didgeridoo 8
T283	Reed Organ 4	T338	Suona 5	T393	Dual Horns 8
T284	Dulcimer 4	T339	Castanets 4	T394	Hard Barsoon 8
T285	Marimba 4	T340	Attack Harp 6	T395	Kawala 8
T286	Shanai 4	T341	Soft Sax 6	T396	Soft Guitar 8
T287	Electric Guitar (Clean) 4	T342	Shanai 5	T397	Mute Barafon 8

T398	Electronic Guitar (Clean) 6	T453	Tron Flute 6	T508	Bright String 4
T399	Shanai 6	T454	Bari & Tenor 6	T509	Slow Violin 3
T400	Marimba 5	T455	Wind Organ 6	T510	Guitar Pinch 5
T401	Koto 9	T456	Grow Guitar 5	T511	Bag Pipe 9
T402	Xylophone 6	T457	Attack Barafon 5	T512	Crystal 7
T403	Tenor Sax 6	T458	Dual Horns 9	T513	Reed Organ 5
T404	Organ Flute 5	T459	Hard Barsoon 10	T514	Dulcimer 6
T405	Kalimba 9	T460	Hard Barsoon 9	T515	Marimba 6
T406	English Horn 6	T461	Tron Flute 7	T516	Shanai 9
T407	Electronic Guitar (Clean) 7	T462	Jazz Organ 5	T517	Electronic Guitar (Clean) 8
T408	Shamisen 6	T463	Tenor Sax 8	T518	Tenor Sax 9
T409	Koto 10	T464	Steel Bell 9	T519	Twin Bones 6
T410	Kalimba 8	T465	Shamisen 8	T520	Hard Vibe 7
T411	Barafon 5	T466	English Horn 8	T521	Shamisen 9
T412	Chorus Guitar, 8	T467	Shanai 8	T522	Electronic Guitar (Clean) 9
T413	Tsugaru 5	T468	Attack Harp 9	T523	English Horn 9
T414	Synth Harpsi, 9	T469	Castanets 5	T524	Reed Horn 6
T415	Crystal 5	T470	Suona 6	T525	Organ Flute 8
T416	Bag Pipe 6	T471	Xylophone 8	T526	Barafon 6
T417	Synth Harpsi, 10	T472	Attack Clav. 10	T527	Soft Santur 8
T418	Soft Sax 9	T473	Twin Bones 5	T528	Oct Harp 6
T419	Soft Clav. 5	T474	Hard Vibe 6	T529	Tsugaru 8
T420	Bodhran 5	T475	Reed Horn 5	T530	Chorus Guitar, 9
T421	Bari & Tenor 5	T476	Organ Flute 7	T531	Wind Organ 8
T422	Soft Guitar 9	T477	Steel Bell 10	T532	Soft Accord 8
T423	Didgeridoo 9	T478	Chorus Guitar, 8	T533	Soft Clav. 8
T424	Mute Barafon 9	T479	Dual Horns 10	T534	Electric Vlapraphone 6
T425	Nay 5	T480	Soft Santur 7	T535	Castanets 6
T426	Soft Santur 5	T481	Barafon 7	T536	Suona 7
T427	Kawala 10	T482	Bag Pipe 8	T537	Tubular Bells 7
T428	Soft Guitar 10	T483	Crystal 8	T538	Bodhran 8
T429	Mute Barafon 10	T484	Attack Clav. 9	T539	Nay 8
T430	Tron Flute 5	T485	Electric Vlapraphone 5	T540	Attack Barafon 7
T431	Kawala 9	T486	Attack Harp 10	T541	Grow Guitar 7
T432	Soft Accord 5	T487	Attack Barafon 6	T542	Bari & Tenor 8
T433	Wind Organ 5	T488	Grow Guitar 6	T543	Viola Attack 6
T434	Kalimba 10	T489	Soft Clav. 7	T544	Jazz Organ 7
T435	Shamisen 7	T490	Tubular Bells 6	T545	Tron Flute 9
T436	English Horn 7	T491	Bodhran 7	T546	Suona 8
T437	Shanai 7	T492	Oct Harp 5	T547	Castanets 7
T438	Soft Sax 10	T493	Tsugaru 7	T548	Shanai 10
T439	Didgeridoo 10	T494	Bari & Tenor 7	T549	English Horn 10
T440	Tenor Sax 7	T495	Wind Organ 7	T550	Shamisen 10
T441	Koto 11	T496	Soft Accord 7	T551	Tenor Sax 10
T442	Organ Flute 6	T497	Viola Attack 5	T552	Chorus Guitar, 10
T443	Xylophone 7	T498	Jazz Organ 6	T553	Organ Flute 9
T444	Soft Santur 6	T499	Nay 7	T554	Reed Horn 7
T445	Bag Pipe 7	T500	Dulcimer 7	T555	Hard Vibe 8
T446	Crystal 8	T501	Xylophone 9	T556	Twin Bones 7
T447	Soft Clav. 6	T502	Tron Flute 8	T557	Xylophone 10
T448	Bodhran 6	T503	Church Bells 4	T558	Attack Barafon 8
T449	Tsugaru 6	T504	Celesta 4	T559	Electric Vlapraphone 7
T450	Chorus Guitar, 7	T505	Clavi 4	T560	Crystal 9
T451	Nay 6	T506	Indian Flute 4	T561	Bag Pipe 10
T452	Soft Accord 6	T507	Jungle Bass 4	T562	Barafon 8

T563	Soft Santur 9	T576	Guitar Pinch 6	T589	Soft Clav, 10
T564	Wind Organ 9	T577	Indian Flute 5	T590	Bari & Tenor 10
T565	Bari & Tenor 9	T578	Bright String 5	T591	Nay 10
T566	Tsugaru 9	T579	Church Bells 5	T592	Soft Santur 10
T567	Oct Harp 7	T580	Electronic Guitar (Clean)	T593	Tron Flute 11
T568	Tubular Bells 8	T581	Shanai 11	T594	Soft Accord 10
T569	Soft Clav. 9	T582	Marimba 7	T595	Wind Organ 10
T570	Grow Guitar 8	T583	Organ Flute 10	T596	English Horn 12
T571	Tron Flute 10	T584	English Horn 11	T597	Shanai 12
T572	Nay 9	T585	Barafon 9	T598	Organ Flute 11
T573	Jazz Organ 8	T586	Tsugaru 10	T599	Bag Pipe 12
T574	Viola Attack 7	T587	Crystal 10	T600	Tsugaru 11
T575	Soft Accord 9	T588	Bag Pipe 11		

Appendix 2 (Rhythm Comparison Table)

R001	China1	R040	FastGospel	R079	GuadDance
R002	China2	R041	FolkRock	R080	Reggae12Beat
R003	China3	R042	RockBilly	R081	Reggae16Beat
R004	China4	R043	RockBoogie	R082	Bossanova
R005	China5	R044	RockChaCha	R083	Mambo 1
R006	China6	R045	RockClassical	R084	Mambo 2
R007	China7	R046	RockShuffle	R085	Bolero
R008	China8	R047	RockPop	R086	Cumbia
R009	China9	R048	Skiffle	R087	Latin Rock
R010	China10	R049	Funk Pop Rock	R088	Disco Latin
R011	Club Pop	R050	Contemp Rock	R089	Tijuana
R012	16 Beat Pop	R051	Acoustic Rock	R090	Reggae
R013	8 Beat Pop	R052	60's RockN	R091	Pop Mambo
R014	8 Beat Soul	R053	Standard Rock	R092	Latin Party Pop
R015	8 Beat Rock	R054	Brit Rock Pop	R093	Hard Mambo
R016	Rap Pop	R055	60's Vintage Rock	R094	Parranda
R017	Pop Rock	R056	Chart Rock Shfl	R095	Rock Lation
R018	60's Soul	R057	60's Pop Rock	R096	Slow Rock 1
R019	70's Soul	R058	Waltz	R097	Slow Rock 2
R020	Funk	R059	Cha Cha	R098	Slow Rock 3
R021	16 Beat Shuffle	R060	Rumba	R099	Slow Soul
R022	Twist	R061	Jive	R100	8 Beat Adria
R023	British Pop	R062	Pasodoble	R101	Classic Piano
R024	Hard Rock	R063	Samba 1	R102	Unplugged
R025	Fusion	R064	Samba 2	R103	Pop Ballad
R026	FunkShuffl	R065	Schlager Rock 1	R104	Pop New Age
R027	FusionShuffl	R066	Schlager Rock 2	R105	8 Beat Modern
R028	Classic 8Beat	R067	FoxTrot	R106	Country Ballad
R029	Vintage Gtr Pop	R068	Viennese Waltz	R107	Love Song
R030	Schlager Italia	R069	Tango1	R108	Modern Country Pop
R031	50's Pop	R070	Tango2	R109	Electro Pop
R032	Cool Pop	R071	German Waltz	R110	Acoustic Ballad
R033	Groovy Pop	R072	Carnival	R111	Piano Ballad
R034	60's Vintage Pop	R073	Organ Samba	R112	R&B Ballad
R035	80's Pop	R074	Reel	R113	Rock Ballad
R036	Rock'n Roll 1	R075	Gay Gordons	R114	Slow & Easy
R037	Rock'n Roll 2	R076	Scand Waltz	R115	Analog Ballad
R038	Straight Rock	R077	Salsa	R116	E_Ballad
R039	Jazz Rock	R078	Calypso	R117	80's EP Ballad

R118	80's Boy Band	R173	Ragtime	R228	Tango4
R119	70's Chart Ballad	R174	Frankly Soul	R229	Jig
R120	Romantic Ballad	R175	Jazz Funk	R230	Hawaiian
R121	90's Cool Ballad	R176	Classic Big Band	R231	Electronica
R122	Alp Ballad1	R177	French Jazz	R232	Funky House
R123	Alp Ballad2	R178	Jump Jive	R233	Club Beat
R124	Techno 1	R179	Swing Fox	R234	Retro Club
R125	Techno 2	R180	Slow Fox	R235	Mod Chart Pop
R126	Funky Disco	R181	Organ Cha Cha	R236	MOR Swing
R127	Saturday Night	R182	Organ Quick Step	R237	Retro Pop
R128	Club Latin	R183	Ober Polka	R238	Rumba Flamenco
R129	Disco Chocolate	R184	Polka Pop	R239	Cumbia1
R130	Disco Fox	R185	Blue Grass 1	R240	Parranda1
R131	Disco Funk	R186	Blue Grass 2	R241	Carnival2
R132	Disco Hands	R187	Blue Grass 3	R242	50's Pop1
R133	Disco Party	R188	Pop Waltz	R243	Groovy Pop1
R134	Disco Samba	R189	USA March	R244	Cool Pop1
R135	British Pop2	R190	Hully Gully	R245	Club Pop2
R136	Club Dance	R191	Tarantella	R246	16 Beat Pop2
R137	Modern R&B	R192	Limbo Rock	R247	8 Beat Pop2
R138	Hip Shuffle	R193	Swing Waltz	R248	8 Beat Soul2
R139	Charleston	R194	Pub Piano	R249	8 Beat Rock2
R140	DiscoPop	R195	Jazz Waltz 1	R250	60's Vintage Pop1
R141	DiscoSoul	R196	Jazz Waltz 2	R251	16 Beat Ballad2
R142	DiscoTrot	R197	Show Tune	R252	70's Pop Ballad
R143	EuroBeat	R198	Polka	R253	EP Ballad
R144	Rap	R199	Party Polka	R254	Power Ballad
R145	Rave	R200	Schlager Polka	R255	Guitar Ballad
R146	70's Disco Funk	R201	Hard Rock2	R256	New R&B Ballad
R147	Disco Philly	R202	60's RockN1	R257	Guitar Serenade
R148	Disco House	R203	Standard Rock1	R258	Organ Ballad
R149	80's Disco	R204	Brit Rock Pop1	R259	Pop Mambo1
R150	70's Disco1	R205	60's Vintage Rock*	R260	Latin Party Pop1
R151	70's Disco2	R206	Chart Rock Shf1	R261	80's Pop1
R152	Country 1	R207	Saeidy	R262	British Pop3
R153	Country 2	R208	German Rock	R263	70's Chart Ballad*
R154	Finger Pickin	R209	Schlager Beat	R264	Romantic Ballad1
R155	Country Brothers	R210	Rock & Roll	R265	90's Cool Ballad1
R156	New Country	R211	Rock & Roll Shf1	R266	Alp Ballad3
R157	Easy Country	R212	Oldies R & R	R267	Alp Ballad4
R158	70's Chart Cntry	R213	80's Rock & Roll	R268	Schlager Polka1
R159	Hoedown	R214	BritRockGuitar	R269	J-Pop Hit
R160	Country Shuffle	R215	Chart Rock Shf2	R270	Detroit Pop1
R161	Country Love Song	R216	New R&B	R271	Detroit Pop2
R162	Country Two Step	R217	Pop R&B	R272	Worship Med
R163	Big Band Shuffle 1	R218	Chart R&B	R273	Worship Fast
R164	Big Band Shuffle 2	R219	Rock Cha Cha1	R274	12-8 Ballad
R165	Big Band Shuffle 3	R220	Funk Shuffl 3	R275	Norteno
R166	Fast Band 1	R221	8 Beat Rock3	R276	60's 8 Beat
R167	Fast Band 2	R222	Rock Cha Cha2	R277	Laff
R168	Cat Groove	R223	Joropo	R278	Ober Walzer
R169	Dixie Jazz	R224	Reggaeton	R279	Bhangra
R170	Medium Jazz	R225	French Waltz	R280	Zouk
R171	Jazz Big Band	R226	Merengue	R281	German March
R172	.Jazz Club	R227	Tango3	R282	Fnka

R283	Bolero Lento	R338	Schlager Shuffle	R393	Mariachi Waltz
R284	Sherif Reggae	R339	Schlager Pop	R394	US March
R285	Beguine	R340	Schlager Rumba	R395	Guitar Rumba
R286	Pop Classics	R341	Euro Pop Organ	R396	Slow Blues
R287	Live 8 Beat	R342	70's French Hit	R397	Jazz Waltz Fast
R288	Power Rock	R343	Italian Mazurka	R398	70's Country Pop
R289	Acoustic Rock1	R344	Jig2	R399	Dixieland
R290	Cool 8 Beat	R345	Hawaiian2	R400	40's Big Band
R291	Uptempo 8Beat	R346	Latin Rock2	R401	Schlager Alp
R292	90's Rock Ballad	R347	Schlager Samba1	R402	Chart Pop1
R293	80's Guitar Pop	R348	Schlager Samba2	R403	Organ Groove
R294	70's 8 Beat	R349	Scand Slow Rock	R404	Chart Pop2
R295	90's Guitar Pop	R350	Schlager 6-8	R405	Modern Shuffle
R296	Soft Rock	R351	Schlager Fox	R406	8 Beat Ballad1
R297	Chart GuitarPop	R352	Country Ballad1	R407	Bubblegum Pop
R298	Gujira	R353	Country Two Step1	R408	Rock Funk
R299	Modern Pop Bld	R354	Kool Shuffle	R409	West Coast Pop
R300	Soul	R355	Pleasant Country	R410	Classic 16 Beat
R301	Skiffle1	R356	Country Hits	R411	8 Beat Ballad2
R302	6-8Soul	R357	Country 8 Beat	R412	Chillout
R303	Soul Brothers	R358	Mod Cntry Bld1	R413	16 Beat Ballad1
R304	6-8Slow Rock	R359	Country Ballad2	R414	Epic Ballad
R305	Trance Pop	R360	Scand Country1	R415	Easy Ballad
R306	Mellow Hip Hop	R361	Scand Country2	R416	Cuban Son
R307	Classic Hip Hop	R362	Country Love Song1	R417	16 Beat Ballad3
R308	New Hip Hop	R363	Orch Big Band2	R418	Contemp Rock2
R309	Duranguense	R364	Big Band Fast2	R419	EP Ballad2
R310	70's Disco3	R365	Midnight Swing	R420	Cat Groove2
R311	70's Disco4	R366	Fusion2	R421	Guitar Serenade2
R312	Latin Disco	R367	Funk Shuffl 2	R422	Organ Ballad2
R313	Brazilian Samba	R368	Fusion Shuffl 2	R423	Pop Ballad2
R314	Brit Pop Swing	R369	Swing Fox1	R424	Norteno2
R315	Grupera	R370	Slow Fox1	R425	Retro Pop2
R316	Danzon	R371	Organ Cha Cha1	R426	Trance Pop2
R317	Dream Dance	R372	Organ Quick Step1	R427	Pop Gtr Ballad
R318	US Chart Hit	R373	Piano Boogie	R428	Ibiza 2002
R319	Soul R&B	R374	Lovely Shuffle	R429	Chillout Cafe
R320	R&B Soul Ballad	R375	Jazz Gtr Club	R430	70's Glam Piano
R321	Euro Hip Hop	R376	Modern Jazz	R431	French House
R322	Trip Hop	R377	Acoustic Jazz	R432	Bhajan2
R323	60's RockN2	R378	Cool Jazz Ballad	R433	16 Beat Pop3
R324	Bhajan	R379	Modern Jazz Bld	R434	16 Beat Pop4
R325	Hip Hop Groove	R380	Easy Listening	R435	Enka2
R326	Euro Trance	R381	Bebop	R436	Blues Rock
R327	6-8 Trance	R382	Orch Big Band1	R437	Ibiza 2004
R328	Latin DJ's	R383	Kool Funk	R438	80's Rock & Roll1
R329	Bomba	R384	Blueberry Blues	R439	Acoustic Rock2
R330	Club House	R385	Shuffle Blues	R440	Club Pop3
R331	House	R386	Mambo 3	R441	Power Rock2
R332	Disco Teens	R387	Mambo 4	R442	Rock'n Roll 3
R333	Happy Reggae	R388	Big Band Fast1	R443	Cool8 Beat2
R334	Pop Latin	R389	Orchestra Swing1	R444	British Pop4
R335	Fast Bossa	R390	Orchestra Swing2	R445	British Pop5
R336	6-8 Modern	R391	70's Chart Cntry1	R446	8 Beat Soul3
R337	6-8 Orchestral	R392	Jazz Waltz Mad	R447	BritRockGuitar1

R448	Brit Roccia Pop2	anni '60 anima 2	Riguar do a noi	polka slang2
Riguar do a noi	Mirtillo Blues2	Fusione R467 mescola 3	Riguar do a noi	Gruppo 2
450 €	Guijira2	Fusione R468 mescola 4	Riguar do a noi	Danza 2
R451	Rocchia Ballata2	Riguardo a noi 6-8 Moderno2	Riguar do a noi	sarcasticoAlp2
R452	anima 2	470 6 euro -8 orchestrale 2	Riguar do a noi	detto2
R453	classico 8 Battito 2	R471 lento anima 2	Riguar do a noi	6-8 Marzo
R454	Bolero 2	R472 pianoforte Ballata2	Prezzo : 490	Erba blu
Riguar do a noi	anima Fratelli2	Riguardo a noi Anca Salto Scanalatura 2	Riguar do a noi	Pop Latino2
R456	Buon Reggae2	R474 Anca mescola 2	Riguar do a noi	mostra Tune2
R457	6-8 lento Rocchia 2	Organo R475 Scanalatura 2	Riguar do a noi	Scandalo mescolare
R458	Bolero Lento 2	Tabella R476 Popolarità 3	Riguar do a noi	adorare lentamente
Riguar do a noi	Oscillazione di mezzanotte2	R477 Mambo5	Prezzo :	Bachata
Prezzo :	francese Jazz 2	R478 Mambo6	Riguar do a noi	Romantico Ballata2
R461	latino festa Pop2	Riguardo a noi Discoteca Latino 2	Riguar do a noi	Analogico Ballata2
R462	Tango5	Prezzo: Veloce Capo 2	Prezzo :	Elettronico Popo 2
R463	Codolo 06	R481 Volpe Trotto 2	Prezzo : 499	Blues roccia2
R464	parranda2	Riguardo a noi passodoble2	500R	Anni '90 anima
Riguar do a noi	Anni '80 Popo 2	R483 Altopiano valzer 2		

Appendix 3 (Demonstration Song Comparison Table)

S001	S021	S022	S023	S024	S025	S026	Il mondo di Beethove n	perché - Temperato Chopin della tastiera
S002	S027	S028					Minuetto In G Poon	Notturmo Mendelssohn
S003	S029	S030	S031	S032	S033	S034	Il paese Heroic in La bemolle maggiore, Op.	Padre Hingslied Reverie
S004	S035	S036	S037	S038	S039		canzone IL Arrivederci	Beethoven pianoforte sonata a .49-2
S005							B	1 pz viola
S006							a	Beethoven
S007							c	Scozia
S008							h	DebussyAea
S009							I	besque
S010							L	Bach
S011								Invenzione
S012								Listz sogni d'amore
S013								Debussy La riempire capelli
S014								de Linea Minuetto di Mozart
S015								Bach valzer In Amino
S016								essere così- pia n sonata SU
S017								13 patetico 2 ° viola
S018								
S019								
S020								

S
ch
u
m
an
n
C
on
na
zi
on
al
e
all
eg
ro
S
hu
be
rt
M
ar
ch
e
mi
lit
ar
e

Bach Bourree
B
u
r
g
m
i
l
e
r

p
a
s
t
o
r
a
l
e

s
c
h
u
m
a
n
n

s
i
c
i

liana Haydn Piccola
serenata
ostriche Dolly S SognandoAwa
Kening Chopin Grande falso
Occhiali . 18 sorriso polk
Improvviso NO. 3, SU.
90 Brahms Valzer No...
15
Chenyin-china lo gioca di Debussy
La passeggiata dei Golliwogs
Clavicembalo Musica
Mozart Scintilla Scintilla Piccola
stella Bacio Menùetto
Riccardo Ballata versareAdeline
Riccardo fare un ping pong sotto Gli
Alberi
Richard Acome Amour
Riccardo Matrimonio D
' Amore pachelbel
cannone In D
Badarzewska La preghiera della fanciulla
Čajkovskij- Danza di s mirlitoni
Dvorak Humoresque

-15-

S040 La Joplin Intrattenitore
S041 Lc. Daquino LeC
S042 cugino Karl Bohm
S043 Tenere Corsico Bombo
S044 Haydn - alba
S045 Giovanni Sebastiano Bacio sonata
S046 ouverture " william
S047 Raccontare "
S048 serenata di schubert
S049 Minuetto da Lariesienne
S050 polacca
S051 sonata clementi
S052 tritare Rivoluzione Studio
S053 Il mondo di Beethoven
S054 Sinfonia del destino
S055 Musicale Momenti
S056 tritare Ken y neri
S057 tritare preludio Goccia di pioggia ",
S058 Op. 28- 15 tritare piccolo cane
S059 tritare Fantasia Improvvisato
S060 polacca in La Maggiore, op40 ,
S061 NO 1 Dubessy chiaro De luna
S062 Schubert Monents
S063 Musicaux Mozart turco
S064 Marzo
S065 Chopin - valigetta op . 64 n.2
S066 Beethoven Chiaro di luna
S067 sonata Il sogno di Schumann
S068 Beethoven Per Elisa
S069 Beethoven Marzia Alla
S070 Turca Mozart sonata
S071 Mendelssohn Canzone di Jäger
S072 op . 19b-3 spartito - Notturmo op .
S073 9 NO .2
S074 TornaAsurriento
S075 MOZART K448 (Il Andante)
S076 IL Valzer della vedova
S077 allegra
S078 Cinquantina
S079 dolce CiaoAnd
S080 Ciao Barcarola
clarinetto polka
voce di primavera
valzer di Fiori
katyusha
SU ali dicanzone

1 Battery



WARNING

lo per favore prenditi cura di te seguente attenzioni

lo Fare non tentare di smontare o cortocircuitare il batteria

lo Fare non esporre o bruciare Esso In IL fuoco

lo Fare non mescolare il nuovo e vecchio batteria

lo Fare non mescolare diverso tipi Di

batterie o Fare non carica IL batteria

lo IL positivo e poli negativi Di IL la batteria deve essere installato correttamente

lo Per favore rimuovere la batteria da la tastiera elettronica Se lo fai non usare per un lungo tempo ,

2 Exception



WARNING

per favore fai quanto segue passi quando eccezione per l'elettronica tastiera come fumante , troppo caldo e

COSÌ SU . 1) . energia spento

2) . tiro IL adattatore giù da IL energia PRESA SU IL parete Quando Sono utilizzando.

3) . contatto tuo locale rivenditore In tempo .

Suo normale per adattatore ottenere caldo Quando lungo tempo usando Corrente alternata adattatore , non indicare Malfunzionamento

Per favore spegnere e riavviare la tastiera elettronica quando qualche volta funzione problema ,

3 Install the battery

 
1) . Uscita IL vite E rimuovere IL batteria copertina

2) . Mettere IL batteria con corretto positivo + E negativo - direzione dentro il batteria fessura con 4 x" AA " 1 .5v

3) . Mettere IL batteria copertina E Serratura IL viti

Questo il prodotto contiene componenti elettronici e Dovrebbe non permettere liquidi A entrare O Essere usato In umido ambienti .

Quotidiano antipolvere pulizia Dovrebbe Essere Fatto BENE , E macchie superficiali Potere Essere cancellato con UN morbido E pulito stoffa .



VEVOR®

TOUGH TOOLS, HALF PRICE

Supporto tecnico e Certificato di garanzia
elettronica Www.vevor.com/support



Técnico apoyo y Certificado de garantía electrónica

Www.vevor.com / soporte

PIANO

USUARIO MANUAL

MODELO : BD -662

Seguimos Estar comprometido a proporcionarle herramientas con Precio competitivo .

"ahorrar Medio", "mitad de precio" o cualquier otra expresión similar usado Por nosotros sólo representa una

Estimación de los ahorros que usted puede obtener Podría beneficiarse de la compra ciertas herramientas con nosotros comparados con los mayores Las mejores marcas y hace no necesariamente significa a cubrir todo Categorías de herramientas Ofrecido por nosotros. Tú

son Amablemente recordado verificar cuidadosamente cuando son colocando un Ordenar con a nosotros si usted son realmente ahorrando la mitad en Comparación con Las principales marcas más importantes.

MODEL: BD-662



(The picture is for reference only, please refer to the actual object)

**NECESIDAD ¿AYUDA? CONTACTO ¡A
NOSOTROS!**

Tener producto ¿preguntas? Necesidad técnico ¿apoyo? Por favor
sentir gratis Para contactar a nosotros :

Soporte técnico y Certificado de garantía
electrónica [Www.vevor.
com/soporte](http://Www.vevor.com/soporte)

Este es el original instrucción , por favor leer todo manual instrucciones con cuidado antes de operar. VEVOR se reserva a claro interpretación De nuestro manual de usuario . El Apariencia de el sala de productos estar sujeto a el producto tu recibió. Por favor perdona nosotros que no lo haremos informarle de nuevo si ¿Existe alguna tecnología o software? actualizaciones en Nuestro producto.

Accesorio

fuerza cable * 1

Microfófono * 1

Atril para partituras * 1

Auriculares * 1

sostener pedal * 1


Música hoja clip *1

MIDI Cordón * 1


piano pegatina * 1

teclado soporte *1


Installation diagram of Keyboard stand

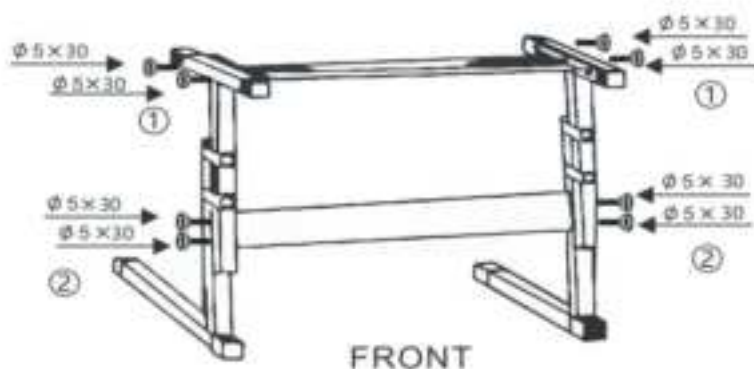 

 
- ④ Connecting the screw hole position at the bottom of the piano body

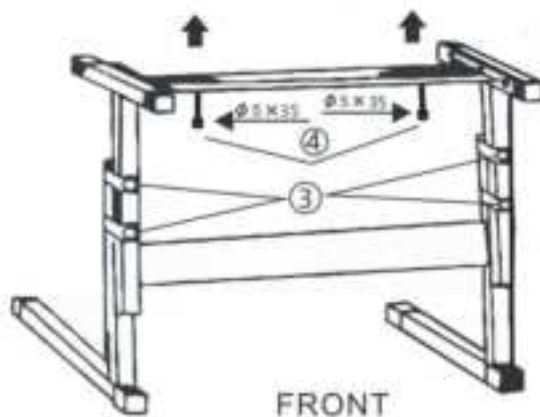

 - ③ Adjust the limit screw at the same time on the left and right sides to adjust the appropriate height

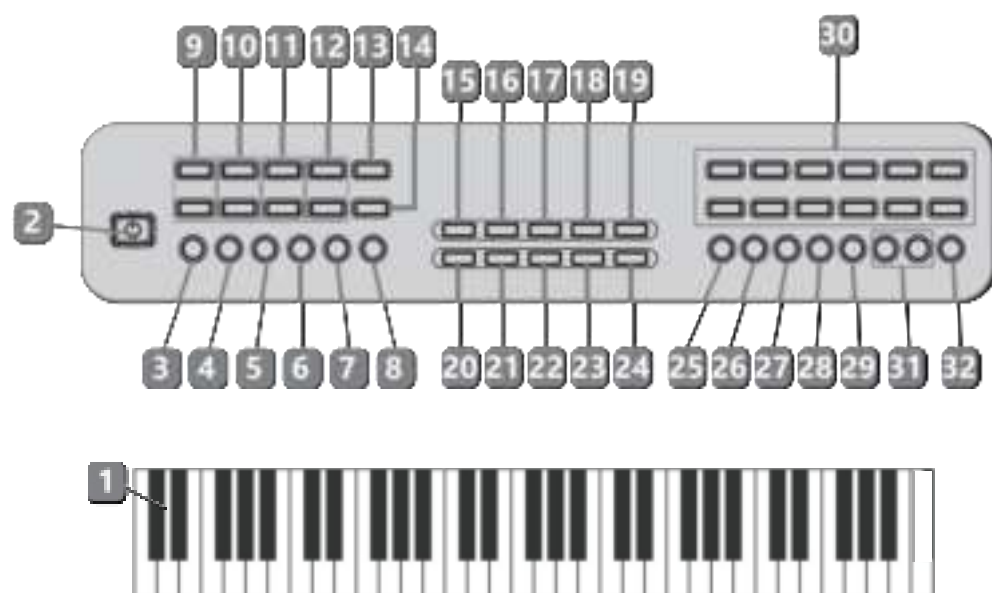

- | | | | |
|-------------|------------------|----------------|--------------------------|
| 1 KEYBOARD | 9 VOLUME+/- | 17 FILL-IN/LED | 25 TONE |
| 2 POWER | 10 RHYTHM VOL+/- | 18 FILL-IN2 | 26 RHYTHM |
| 3 RECORD | 11 TEMPO+/- | 19 BASSCHORDS | 27 PIANO |
| 4 PROG | 12 TRANSPOSE+/- | 20 ONE KEY | 28 DEMO ONE |
| 5 PLAY | 13 SUSTAIN | 21 FOLLOW | 29 DEMO ALL |
| 6 METRONOME | 14 VIBRATO | 22 ENSEMBLE | 30 NUMBER SELECTION AREA |
| 7 KEY DRUM | 15 SYNC | 23 CHORD. OFF | 31 ◀/VOL- ▶/VOL+ |
| 8 DUAL KEY | 16 CHORD | 24 START/STOP | 32 ▶/CHANGE |

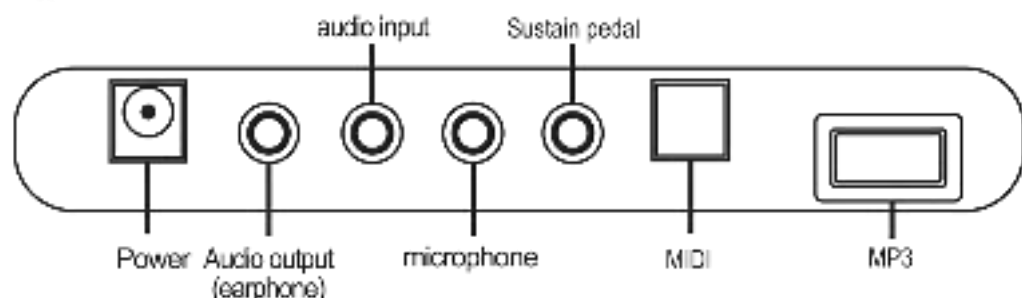 

1.KEYBOARD\2.POWER

Turn on the power, you can play the "keyboard" and enter the performance state. In standby mode, after 3 minutes of no operation, it will automatically enter the sleep mode, and can be restored by pressing any key.

3.RECORD

Press the **【RECORD】** key to enter the recording mode, and then press any piano key or drum key to start the recording.

start recording. The maximum number of recordings is 80. When the recording is full, it cannot continue to record another note.

When recording, you can press the play button at any time to play.

Each time this button is pressed, the last memory will be cleared and the recording mode will be re-entered.

After exiting the recording mode, the last memory will be cleared.

4.PROG

Press **【PROG】** key to enter programming mode, the preset speed is 120.

The pressed drum sound can be recorded. In edit mode, only the drum sound is valid.

The maximum number of records is 32. When the record is full, it cannot continue to record another drum sound. You can press the button at any time, press the Play key to play the edited drum sound.

Each time this key is pressed, the last memory will be cleared and the programming mode will be re-entered.

After exiting the programming mode, the last memory will be cleared.

In this mode, the keys are automatically converted to keyboard drums.

5.PLAY

In the recording mode, press the **【PLAY】** for the first time to play the recorded notes.

Press the **【PLAY】** for the second time to stop playing.

In programming mode, press the **【PLAY】** for the first time to play the recorded drum sound, and press the **【PLAY】** for the second time to stop playing

If there is no recorded value before, press the **【PLAY】** and no action will take place.

6.METRONOME

Pressing the **【METRONOME】** key, the action function is the click sound, there are 7 kinds of changes, 1/4 beat → 2/4 beat → 3/4 beat → 4/4 beat... → stop, the default value of the beat is 120.

7.KEY DRUM

Press the **【KEY DRUM】** key to get percussion sound on the corresponding key.

8.DUAL KEY

Press **【DUAL KEY】** for the first time to activate the dual keyboard function, and press **【DUAL KEY】** for the second time to select eliminate the double keyboard function.

When the dual keyboard function is activated, the scales of the left keys C2-B3 will be played correspondingly to the scales of C3-B4. The scales of C4-C7 on the right keys will be played as C3-C6 scales. You can use the digital area and the [+] [-] keys or digital switches to select the sub-tone instead of the left piano.key tone.

9.VOLUME+/-

Use **【VOLUME+/-】** to control the volume, press **【VOLUME+】** to represent To increase the volume up, press **【VOLUME-】** to decrease the volume down. The volume control has a total of 17 segments (0~16), and the default value is the 13th segment after power-on.

Press and hold **【VOLUME+/-】** for more than 1 second to continuously increase /decrease the volume.

10.RHYTHM+/-

Press **【RHYTHM+/-】** to select the accompaniment volume.

The accompaniment volume control has a total of 17 segments (0~16), and the preset value is the 13th segment after power-on.

Press and hold the **【RHYTHM+/-】** for more than 1 second to continuously increase/decrease the accompaniment volume.

11.TEMPO+/-

Press **【TEMPO+/-】** to select the speed.

The speed control has a total of 270 stages (30~300), and the preset value is the 90th stage after power-on (speed = 120)

Press and hold the **【TEMPO+/-】** for more than 1 second to continuously increase/decrease the speed.

When playing the selected song, the tempo of the song will be used, regardless of the set tempo.

When playing the selected rhythm, the set tempo will prevail.

12.TRANSPOSE+/-

Press **【TRANSPOSE+/-】** to select Transpose .

There are 25 segments (-12~12) in total for transposition control, and the preset value is at segment 13 after power-on.

Press and hold the **【TRANSPOSE+/-】** for more than 1 second to continuously increase/decrease the transpose.

The chord pitch also changes with the transpose value.

13.SUSTAIN

Press the **【SUSTAIN】** key to enable or disable the sustain function.

When the sustain function is turned on, when you play the keyboard, the sound will have a prolongation effect.

14.VIBRATO

Press the **【VIBRATO】** key to enable or disable the vibrato function.

When the vibrato function is turned on, the sound will vibrate when you play the keyboard.

15.SYNC

Press the [Sync] key for the first time to enter the sync mode, and press the [Sync key] for the second time to exit the sync mode.

When entering sync mode, pressing the first 19 keys on the left will automatically play the selected rhythm (chord).

16.CHORD

Press the **【CHORD】** for the first time to enter the comprehensive chord mode, and press the **【CHORD】** for the second time to exit the composite chord mode.

【CHORD】 Only in rhythm and general mode, the function can occur. When playing the rhythm, press **【CHORD】** and press multiple keys within the range of C2~F3#.

After fingering, you can hear the corresponding chord accompaniment. The single-fingered chords are played.

When the rhythm is not playing, press the **【CHORD】** and press the multi-finger key within the range of keys C2~F3#, and you can hear the corresponding chord accompaniment. Otherwise, the single-fingered chords are played. Comprehensive fingering can be used with rhythm/chord/synchronization.

17.FILL-IN/LED 18.FILL-IN2

【FILL-IN/LED】 When the rhythm is not playing, pressing it is the key light switch function.

【FILL-IN】 and **【FILL-IN2】** function only when the rhythm is played. Interlude: During the rhythm playing, press the **【FILL-IN】** to add the fill-in function to the rhythm.

When the measure is finished, insert an interlude.

During rhythm playback, press and hold the **【FILL-IN】** to continue inserting.

19.BASSCHORDS

Change the bass voice in the chord to the piano voice.

20.ONE KEY

Press the **【ONE KEY】** for the first time to enter the random play mode, and then press any key to issue the correct note.

Press the **【ONE KEY】** for the second time to exit the strumming mode.

21.FOLLOW

Press the **【FOLLOW】** for the first time to enter the follow mode, and press the **【FOLLOW】** for the second time to exit the follow mode.

After entering the follow play mode, use the current song to teach, after the song is played, the main melody will not be played.

The user must press the corresponding key according to the note displayed on the LCD or the keyboard indicator light.

To continue playing the next note, the background sound repeats the measure until the end of the song.

After the song is over, play the next song.

In follow mode, you can use the number selection area to select other songs.

22. ENSEMBLE

Press the **【ENSEMBLE】** for the first time to enter the ensemble mode, and press the **【ENSEMBLE】** for the second time to exit the ensemble mode.

After entering the ensemble mode, use the current song to teach, after the song is played, the user can play the piano at will key and interrupt the main chord. If the key is not pressed after 5 seconds, the main chord will resume playing automatically. background

The sound plays completely until the end of the song.

When the song is over, play the next song together.

In Ensemble mode, other songs can be selected using the number selection area.

23. CHORD OFF

Turn off composite chords.

24. START/STOP

Short press [Start/Stop Key] for the first time to start playing the rhythm, and

short press [Start/Stop Key] for the second time, to stop playing the rhythm.

Exit this mode in teaching, recording, playback, metronome, demo songs, etc.

25. TONE

After pressing the **【TONE】**, you can use the number selection area and the **[+]****[-]** keys to select the tone.

26. RHYTHM

After pressing the **【RHYTHM】**, you can use the number selection area and the **[+]****[-]** keys to select the rhythm.

27. PIANO

In other voice states, press the [Piano] key to set the piano voice, and press the **【PIANO】** key for the second time to restore the previous sound.

(The default is piano sound when power on, this button is invalid)

28. DEMO ONE

Press the **【DEMO ONE】** button for the first time to enter the click mode, and press the **【DEMO ONE】** for the second time to exit the click mode.

After entering the sing-along mode, playback starts from the next song.

When the song finishes playing, the current song is played repeatedly.

In sing-along mode, other songs can be selected using the number selection area.

29. DEMO ALL

Press the **【DEMO ALL】** for the first time to enter the continuous singing mode, and press the **【DEMO ALL】** for the second time to exit the continuous singing mode.

After entering continuous singing mode, playback starts from the first song.

When the song is finished, continue to play the next song and play all the songs in a loop.

In sing-along mode, other songs can be selected using the number selection area.

30 .NUMBER SULECTION AREA

Use the number keys 0-9 to input the corresponding timbre, rhythm, song code for quick selection, use the +/- keys can be selected sequentially.
Press and hold the "+" or "-" key for more than 2 seconds to continuously increase/decrease the selection.

If neither tone mode or rhythm mode is selected, the default value is tone mode after power-on.

If neither tone mode or rhythm mode is selected, the default value is tone mode after power-on.

31 . VOL- VOL+ 32 . /CHANGE

Press (within 1 second) [/CHANGE] to play or pause the song. In pause mode, press [/CHANGE] to continue playing the song.

Press (within 1 second) [VOL-] to select the previous song.

Press (within 1 second) [VOL+] to select the next song.

Press and hold the [VOL-] for more than 1 second to decrease the volume. Long press [VOL+] to exceed increase the volume after 1 second.

Appendix 1 (Voice Comparison Table)

T001	Acoustic Grand Piano	T026	Acoustic Guitar (steel)	T051	Synth Strings 1
T002	Bright Acoustic Piano	T027	Electric Guitar (jazz)	T052	Synth Strings 2
T003	Electric Grand Piano	T028	Electric Guitar (clean)	T053	Choir Aahs
T004	Honky-tonk Piano	T029	Electric Guitar (muted)	T054	Voice Oohs
T005	Rhodes Piano	T030	Overdriven Guitar	T055	Synth Voice
T006	Chorused Piano	T031	Distortion Guitar	T056	Orchestra Hit
T007	Harpsichord	T032	Guitar Harmonics	T057	Trumpet
T008	Clavichord	T033	Acoustic Bass	T058	Trombone
T009	Celesta	T034	Electric Bass(finger)	T059	Tuba
T010	Glockenspiel	T035	Electric Bass (pick)	T060	Muted Trumpet
T011	Music box	T036	Fretless Bass	T061	French Horn
T012	Vibraphone	T037	Slap Bass 1	T062	Brass Section
T013	Marimba	T038	Slap Bass 2	T063	Synth Brass 1
T014	Xylophone	T039	Synth Bass 1	T064	Synth Brass 2
T015	Tubular Bell	T040	Synth Bass 2	T065	Soprano Sax
T016	Dulcimer	T041	Violin	T066	Alto Sax
T017	Drawbar Organ	T042	Viola	T067	Tenor Sax
T018	Percussive Organ	T043	Cello	T068	Baritone Sax
T019	Rock Organ	T044	Contrabass	T069	Oboe
T020	Church Organ	T045	Tremolo Strings	T070	English Horn
T021	Reed Organ	T046	Pizzicato Strings	T071	Bassoon
T022	Accordion	T047	Orchestral Harp	T072	Clarinet
T023	Harmonica	T048	Timpani	T073	Piccolo
T024	Tango Accordion	T049	String Ensemble 1	T074	Flute
T025	Acoustic Guitar (nylon)	T050	String Ensemble 2	T075	Recorder

Appendix 1 (Voice Comparison Table)

T076	Pan Flute	T129	Yong Gin	T181	Soft Santur
T077	Bottle Blow	T130	Zheng	T182	Dual Horns 1
T078	Shakuhachi	T131	Zhong Ruan	T183	Bodhran
T079	Whistle	T132	Pi Pa	T184	Tubular Bells 2
T080	Ocarina	T133	Big Souna	T185	Suona 2
T081	Lead 1 (square)	T134	Souna	T186	Castanets
T082	Lead 2 (sawtooth)	T135	Er Hu	T187	Attack Harp 1
T083	Lead 3 (callopo lead)	T136	Yue Hu	T188	Electric Viaphone
T084	Lead 4 (chiff lead)	T137	Di Zi	T189	Soft Sax 1
T085	Lead 5 (charang)	T138	Bong Di	T190	Soft Clav.
T086	Lead 6 (voice)	T139	Koto 2	T191	Soft Accord
T087	Lead 7 (fifths)	T140	Qui Di	T192	Wind Organ
T088	Lead 8 (bass+lead)	T141	Xylophone 2	T193	Viola Attack
T089	Pad 1 (new age)	T142	Dulcimer 2	T194	Bari & Tenor
T090	Pad 2 (warm)	T143	Guitar Pinch 2	T195	Soft Guitar 1
T091	Pad 3 (polysynth)	T144	Slow Violin	T196	Grow Guitar
T092	Pad 4 (choir)	T145	Bright String	T197	Didgeridoo 1
T093	Pad 5 (bowed)	T146	Jungle Bass 2	T198	Attack Barafon
T094	Pad 6 (metallic)	T147	Indian Flute	T199	Mute Barafon 1
T095	Pad 7 (halo)	T148	Clavi 2	T200	Nay
T096	Pad 8 (sweep)	T149	Celesta 2	T201	Didgeridoo 2
T097	FX 1 (rain)	T150	Church Bells	T202	Dual Horns 2
T098	FX 2 (soundtrack)	T151	Kalimba 2	T203	Hard Barsoon 2
T099	FX 3 (crystal)	T152	Steel Bell 1	T204	Kawala 2
T100	FX 4 (atmosphere)	T153	Tenor Sax 2	T205	Soft Guitar 2
T101	FX 5 (brightness)	T154	Woodblock 2	T206	Mute Barafon 2
T102	FX 6 (goblins)	T155	Electric Guitar (Clean) 2	T207	Hard Barsoon 1
T103	FX 7 (echoes)	T156	Shanai 2	T208	Tron Flute
T104	FX 8 (sci-fi)	T157	Marimba 3	T209	Kawala 1
T105	Sitar	T158	Dulcimer 3	T210	Jazz Organ
T106	Banjo	T159	Reed Organ 3	T211	Synth Harpsi. 3
T107	Shamisen	T160	Koto 3	T212	Tenor Sax 3
T108	Koto	T161	Crystal 1	T213	Steel Bell 3
T109	Kalimba	T162	Bag Pipe 2	T214	Kalimba 4
T110	Bagpipe	T163	Barafon	T215	Shamisen 3
T111	Fiddle	T164	Organ Flute	T216	English Horn 3
T112	Shanai	T165	Kalimba 3	T217	Shanai 3
T113	Tinkle Bell	T166	Reed Horn	T218	Soft Sax 2
T114	Agogo	T167	English Horn 2	T219	Attack Harp 2
T115	Steel Drums	T168	Electric Guitar (Clean) 3	T220	Castanets 2
T116	Woodblock	T169	Shamisen 2	T221	Suona 3
T117	Taiko Drum	T170	Koto 4	T222	Xylophone 3
T118	Melodic Tom	T171	Hard Vibe 2	T223	Koto 5
T119	Synth Drum	T172	Twin Bones	T224	Attack Clav. 4
T120	Reverse Cymbal	T173	Synth Harpsi. 1	T225	Synth Harpsi. 4
T121	Guitar Fret Noise	T174	Attack Clav. 1	T226	Twin Bones 2
T122	Breath Noise	T175	Chorus Guitar.	T227	Hard Vibe 3
T123	Seashore	T176	Steel Bell 2	T228	Reed Horn 2
T124	Bird Tweet	T177	Tsugaru	T229	Organ Flute 2
T125	Telephone Ring	T178	Oct Harp	T230	Steel Bell 4
T126	Helicopter	T179	Synth Harpsi. 2	T231	Chorus Guitar. 2
T127	Applause	T180	Attack Clav. 2	T232	Dual Horns 3
T128	Gunshot				

T233	Soft Santur 2	T288	Tenor Sax 4	T343	English Horn 5
T234	Barafon 3	T289	Twin Bones 3	T344	Shamisen 5
T235	Bag Pipe 3	T290	Hard Vibe 4	T345	Kalimba 7
T236	Crystal 3	T291	Koto 7	T346	Steel Bell 7
T237	Attack Clav. 3	T292	Shamisen 4	T347	Tenor Sax 5
T238	Electric Vibraphone 2	T293	Electric Guitar (Clean) 5	T348	Chorus Guitar. 4
T239	Attack Harp 3	T294	English Horn 4	T349	Steel Bell 8
T240	Attack Barafon 2	T295	Reed Horn 3	T350	Organ Flute 4
T241	Didgeridoo 3	T296	Kalimba 6	T351	Reed Horn 4
T242	Grow Guitar 2	T297	Organ Flute 3	T352	Hard Vibe 5
T243	Soft Guitar 3	T298	Barafon 2	T353	Twin Bones 4
T244	Soft Clav. 2	T299	Dual Horns 5	T354	Synth Harpsi. 8
T245	Soft Sax 3	T300	Soft Santur 3	T355	Attack Clav. 8
T246	Tubular Bells 3	T301	Attack Clav. 5	T356	Koto 8
T247	Bodhran 2	T302	Synth Harpsi. 5	T357	Xylophone 5
T248	Oct Harp 2	T303	Oct Harp 3	T358	Didgeridoo 7
T249	Tsugaru 2	T304	Tsugaru 3	T359	Attack Barafon 4
T250	Bari & Tenor 2	T305	Steel Bell 6	T360	Attack Harp 7
T251	Wind Organ 2	T306	Chorus Guitar. 3	T361	Electric Vibraphone 4
T252	Soft Accord 2	T307	Attack Clav. 6	T362	Attack Clav. 7
T253	Attack Harp 4	T308	Synth Harpsi. 6	T363	Crystal 4
T254	Viola Attack 2	T309	Wind Organ 3	T364	Bag Pipe 5
T255	Kawala 3	T310	Soft Accord 3	T365	Barafon 4
T256	Soft Sax 4	T311	Soft Clav. 3	T366	Soft Santur 4
T257	Jazz Organ 2	T312	Soft Sax 5	T367	Dual Horns 7
T258	Nay 2	T313	Electric Vibraphone 3	T368	Wind Organ 4
T259	Mute Barafon 3	T314	Attack Harp 5	T369	Bari & Tenor 4
T260	Dulcimer 5	T315	Castanets 3	T370	Tsugaru 4
T261	Xylophone 4	T316	Suona 4	T371	Oct Harp 4
T262	Tron Flute 2	T317	Tubular Bells 4	T372	Bodhran 4
T263	Hard Barsoon 3	T318	Bodhran 3	T373	Tubular Bells 6
T264	Mute Barafon 4	T319	Dual Horns 6	T374	Soft Sax 7
T265	Soft Guitar 4	T320	Didgeridoo 6	T375	Soft Clav. 4
T266	Kawala 4	T321	Nay 3	T376	Soft Guitar 7
T267	Hard Barsoon 4	T322	Mute Barafon 5	T377	Grow Guitar 4
T268	Dual Horns 4	T323	Attack Barafon 3	T378	Hard Barsoon 7
T269	Didgeridoo 4	T324	Didgeridoo 5	T379	Tron Flute 4
T270	Steel Bell 5	T325	Grow Guitar 3	T380	Mute Barafon 7
T271	Kalimba 5	T326	Soft Guitar 5	T381	Nay 4
T272	Church Bells 2	T327	Bari & Tenor 3	T382	Jazz Organ 4
T273	Celesta 3	T328	Viola Attack 3	T383	Soft Sax 8
T274	Clavi 3	T329	Synth Harpsi. 7	T384	Kawala 7
T275	Indian Flute 2	T330	Jazz Organ 3	T385	Viola Attack 4
T276	Jungle Bass 3	T331	Kawala 5	T386	Attack Harp 8
T277	Bright String 2	T332	Tron Flute 3	T387	Soft Accord 4
T278	Slow Violin 2	T333	Hard Barsoon 5	T388	Guitar Pinch 4
T279	Guitar Pinch 3	T334	Mute Barafon 6	T389	Indian Flute 3
T280	Bag Pipe 4	T335	Soft Guitar 6	T390	Bright String 3
T281	Crystal 2	T336	Kawala 6	T391	Church Bells 3
T282	Koto 6	T337	Hard Barsoon 6	T392	Didgeridoo 8
T283	Reed Organ 4	T338	Suona 5	T393	Dual Horns 8
T284	Dulcimer 4	T339	Castanets 4	T394	Hard Barsoon 8
T285	Marimba 4	T340	Attack Harp 6	T395	Kawala 8
T286	Shanai 4	T341	Soft Sax 6	T396	Soft Guitar 8
T287	Electric Guitar (Clean) 4	T342	Shanai 5	T397	Mute Barafon 8

T398	Electronic Guitar (Clean) 6	T453	Tron Flute 6	T508	Bright String 4
T399	Shanai 6	T454	Bari & Tenor 6	T509	Slow Violin 3
T400	Marimba 5	T455	Wind Organ 6	T510	Guitar Pinch 5
T401	Koto 9	T456	Grow Guitar 5	T511	Bag Pipe 9
T402	Xylophone 6	T457	Attack Barafon 5	T512	Crystal 7
T403	Tenor Sax 6	T458	Dual Horns 9	T513	Reed Organ 5
T404	Organ Flute 5	T459	Hard Barsoon 10	T514	Dulcimer 6
T405	Kalimba 9	T460	Hard Barsoon 9	T515	Marimba 6
T406	English Horn 6	T461	Tron Flute 7	T516	Shanai 9
T407	Electronic Guitar (Clean) 7	T462	Jazz Organ 5	T517	Electronic Guitar (Clean) 8
T408	Shamisen 6	T463	Tenor Sax 8	T518	Tenor Sax 9
T409	Koto 10	T464	Steel Bell 9	T519	Twin Bones 6
T410	Kalimba 8	T465	Shamisen 8	T520	Hard Vibe 7
T411	Barafon 5	T466	English Horn 8	T521	Shamisen 9
T412	Chorus Guitar, 6	T467	Shanai 8	T522	Electronic Guitar (Clean) 9
T413	Tsugaru 5	T468	Attack Harp 9	T523	English Horn 9
T414	Synth Harpsi, 9	T469	Castanets 5	T524	Reed Horn 6
T415	Crystal 5	T470	Suona 6	T525	Organ Flute 8
T416	Bag Pipe 6	T471	Xylophone 8	T526	Barafon 6
T417	Synth Harpsi, 10	T472	Attack Clav. 10	T527	Soft Santur 8
T418	Soft Sax 9	T473	Twin Bones 5	T528	Oct Harp 6
T419	Soft Clav. 5	T474	Hard Vibe 6	T529	Tsugaru 8
T420	Bodhran 5	T475	Reed Horn 5	T530	Chorus Guitar, 9
T421	Bari & Tenor 5	T476	Organ Flute 7	T531	Wind Organ 8
T422	Soft Guitar 9	T477	Steel Bell 10	T532	Soft Accord 8
T423	Didgeridoo 9	T478	Chorus Guitar, 8	T533	Soft Clav. 8
T424	Mute Barafon 9	T479	Dual Horns 10	T534	Electric Vlapraphone 6
T425	Nay 5	T480	Soft Santur 7	T535	Castanets 6
T426	Soft Santur 5	T481	Barafon 7	T536	Suona 7
T427	Kawala 10	T482	Bag Pipe 8	T537	Tubular Bells 7
T428	Soft Guitar 10	T483	Crystal 8	T538	Bodhran 8
T429	Mute Barafon 10	T484	Attack Clav. 9	T539	Nay 8
T430	Tron Flute 5	T485	Electric Vlapraphone 5	T540	Attack Barafon 7
T431	Kawala 9	T486	Attack Harp 10	T541	Grow Guitar 7
T432	Soft Accord 5	T487	Attack Barafon 6	T542	Bari & Tenor 8
T433	Wind Organ 5	T488	Grow Guitar 6	T543	Viola Attack 6
T434	Kalimba 10	T489	Soft Clav. 7	T544	Jazz Organ 7
T435	Shamisen 7	T490	Tubular Bells 6	T545	Tron Flute 9
T436	English Horn 7	T491	Bodhran 7	T546	Suona 8
T437	Shanai 7	T492	Oct Harp 5	T547	Castanets 7
T438	Soft Sax 10	T493	Tsugaru 7	T548	Shanai 10
T439	Didgeridoo 10	T494	Bari & Tenor 7	T549	English Horn 10
T440	Tenor Sax 7	T495	Wind Organ 7	T550	Shamisen 10
T441	Koto 11	T496	Soft Accord 7	T551	Tenor Sax 10
T442	Organ Flute 6	T497	Viola Attack 5	T552	Chorus Guitar, 10
T443	Xylophone 7	T498	Jazz Organ 6	T553	Organ Flute 9
T444	Soft Santur 6	T499	Nay 7	T554	Reed Horn 7
T445	Bag Pipe 7	T500	Dulcimer 7	T555	Hard Vibe 8
T446	Crystal 8	T501	Xylophone 9	T556	Twin Bones 7
T447	Soft Clav. 6	T502	Tron Flute 8	T557	Xylophone 10
T448	Bodhran 6	T503	Church Bells 4	T558	Attack Barafon 8
T449	Tsugaru 6	T504	Celesta 4	T559	Electric Vlapraphone 7
T450	Chorus Guitar, 7	T505	Clavi 4	T560	Crystal 9
T451	Nay 6	T506	Indian Flute 4	T561	Bag Pipe 10
T452	Soft Accord 6	T507	Jungle Bass 4	T562	Barafon 8

T563	Soft Santur 9	T576	Guitar Pinch 6	T589	Soft Clav, 10
T564	Wind Organ 9	T577	Indian Flute 5	T590	Bari & Tenor 10
T565	Bari & Tenor 9	T578	Bright String 5	T591	Nay 10
T566	Tsugaru 9	T579	Church Bells 5	T592	Soft Santur 10
T567	Oct Harp 7	T580	Electronic Guitar (Clean)	T593	Tron Flute 11
T568	Tubular Bells 8	T581	Shanai 11	T594	Soft Accord 10
T569	Soft Clav. 9	T582	Marimba 7	T595	Wind Organ 10
T570	Grow Guitar 8	T583	Organ Flute 10	T596	English Horn 12
T571	Tron Flute 10	T584	English Horn 11	T597	Shanai 12
T572	Nay 9	T585	Barafon 9	T598	Organ Flute 11
T573	Jazz Organ 8	T586	Tsugaru 10	T599	Bag Pipe 12
T574	Viola Attack 7	T587	Crystal 10	T600	Tsugaru 11
T575	Soft Accord 9	T588	Bag Pipe 11		

Appendix 2 (Rhythm Comparison Table)

R001	China1	R040	FastGospel	R079	GuadDance
R002	China2	R041	FolkRock	R080	Reggae12Beat
R003	China3	R042	RockBilly	R081	Reggae16Beat
R004	China4	R043	RockBoogie	R082	Bossanova
R005	China5	R044	RockChaCha	R083	Mambo 1
R006	China6	R045	RockClassical	R084	Mambo 2
R007	China7	R046	RockShuffle	R085	Bolero
R008	China8	R047	RockPop	R086	Cumbia
R009	China9	R048	Skiffle	R087	Latin Rock
R010	China10	R049	Funk Pop Rock	R088	Disco Latin
R011	Club Pop	R050	Contemp Rock	R089	Tijuana
R012	16 Beat Pop	R051	Acoustic Rock	R090	Reggae
R013	8 Beat Pop	R052	60's RockN	R091	Pop Mambo
R014	8 Beat Soul	R053	Standard Rock	R092	Latin Party Pop
R015	8 Beat Rock	R054	Brit Rock Pop	R093	Hard Mambo
R016	Rap Pop	R055	60's Vintage Rock	R094	Parranda
R017	Pop Rock	R056	Chart Rock Shfl	R095	Rock Lation
R018	60's Soul	R057	60's Pop Rock	R096	Slow Rock 1
R019	70's Soul	R058	Waltz	R097	Slow Rock 2
R020	Funk	R059	Cha Cha	R098	Slow Rock 3
R021	16 Beat Shuffle	R060	Rumba	R099	Slow Soul
R022	Twist	R061	Jive	R100	8 Beat Adria
R023	British Pop	R062	Pasodoble	R101	Classic Piano
R024	Hard Rock	R063	Samba 1	R102	Unplugged
R025	Fusion	R064	Samba 2	R103	Pop Ballad
R026	FunkShuffl	R065	Schlager Rock 1	R104	Pop New Age
R027	FusionShuffl	R066	Schlager Rock 2	R105	8 Beat Modern
R028	Classic 8Beat	R067	FoxTrot	R106	Country Ballad
R029	Vintage Gtr Pop	R068	Viennese Waltz	R107	Love Song
R030	Schlager Italia	R069	Tango1	R108	Modern Country Pop
R031	50's Pop	R070	Tango2	R109	Electro Pop
R032	Cool Pop	R071	German Waltz	R110	Acoustic Ballad
R033	Groovy Pop	R072	Carnival	R111	Piano Ballad
R034	60's Vintage Pop	R073	Organ Samba	R112	R&B Ballad
R035	80's Pop	R074	Reel	R113	Rock Ballad
R036	Rock'n Roll 1	R075	Gay Gordons	R114	Slow & Easy
R037	Rock'n Roll 2	R076	Scand Waltz	R115	Analog Ballad
R038	Straight Rock	R077	Salsa	R116	E_Ballad
R039	Jazz Rock	R078	Calypso	R117	80's EP Ballad

R118	80's Boy Band	R173	Ragtime	R228	Tango4
R119	70's Chart Ballad	R174	Frankly Soul	R229	Jig
R120	Romantic Ballad	R175	Jazz Funk	R230	Hawaiian
R121	90's Cool Ballad	R176	Classic Big Band	R231	Electronica
R122	Alp Ballad1	R177	French Jazz	R232	Funky House
R123	Alp Ballad2	R178	Jump Jive	R233	Club Beat
R124	Techno 1	R179	Swing Fox	R234	Retro Club
R125	Techno 2	R180	Slow Fox	R235	Mod Chart Pop
R126	Funky Disco	R181	Organ Cha Cha	R236	MOR Swing
R127	Saturday Night	R182	Organ Quick Step	R237	Retro Pop
R128	Club Latin	R183	Ober Polka	R238	Rumba Flamenco
R129	Disco Chocolate	R184	Polka Pop	R239	Cumbia1
R130	Disco Fox	R185	Blue Grass 1	R240	Parranda1
R131	Disco Funk	R186	Blue Grass 2	R241	Carnival2
R132	Disco Hands	R187	Blue Grass 3	R242	50's Pop1
R133	Disco Party	R188	Pop Waltz	R243	Groovy Pop1
R134	Disco Samba	R189	USA March	R244	Cool Pop1
R135	British Pop2	R190	Hully Gully	R245	Club Pop2
R136	Club Dance	R191	Tarantella	R246	16 Beat Pop2
R137	Modern R&B	R192	Limbo Rock	R247	8 Beat Pop2
R138	Hip Shuffle	R193	Swing Waltz	R248	8 Beat Soul2
R139	Charleston	R194	Pub Piano	R249	8 Beat Rock2
R140	DiscoPop	R195	Jazz Waltz 1	R250	60's Vintage Pop1
R141	DiscoSoul	R196	Jazz Waltz 2	R251	16 Beat Ballad2
R142	DiscoTrot	R197	Show Tune	R252	70's Pop Ballad
R143	EuroBeat	R198	Polka	R253	EP Ballad
R144	Rap	R199	Party Polka	R254	Power Ballad
R145	Rave	R200	Schlager Polka	R255	Guitar Ballad
R146	70's Disco Funk	R201	Hard Rock2	R256	New R&B Ballad
R147	Disco Philly	R202	60's RockN1	R257	Guitar Serenade
R148	Disco House	R203	Standard Rock1	R258	Organ Ballad
R149	80's Disco	R204	Brit Rock Pop1	R259	Pop Mambo1
R150	70's Disco1	R205	60's Vintage Rock*	R260	Latin Party Pop1
R151	70's Disco2	R206	Chart Rock Shf1	R261	80's Pop1
R152	Country 1	R207	Saeidy	R262	British Pop3
R153	Country 2	R208	German Rock	R263	70's Chart Ballad*
R154	Finger Pickin	R209	Schlager Beat	R264	Romantic Ballad1
R155	Country Brothers	R210	Rock & Roll	R265	90's Cool Ballad1
R156	New Country	R211	Rock & Roll Shf1	R266	Alp Ballad3
R157	Easy Country	R212	Oldies R & R	R267	Alp Ballad4
R158	70's Chart Cntry	R213	80's Rock & Roll	R268	Schlager Polka1
R159	Hoedown	R214	BritRockGuitar	R269	J-Pop Hit
R160	Country Shuffle	R215	Chart Rock Shf2	R270	Detroit Pop1
R161	Country Love Song	R216	New R&B	R271	Detroit Pop2
R162	Country Two Step	R217	Pop R&B	R272	Worship Med
R163	Big Band Shuffle 1	R218	Chart R&B	R273	Worship Fast
R164	Big Band Shuffle 2	R219	Rock Cha Cha1	R274	12-8 Ballad
R165	Big Band Shuffle 3	R220	Funk Shuffl 3	R275	Norteno
R166	Fast Band 1	R221	8 Beat Rock3	R276	60's 8 Beat
R167	Fast Band 2	R222	Rock Cha Cha2	R277	Laff
R168	Cat Groove	R223	Joropo	R278	Ober Walzer
R169	Dixie Jazz	R224	Reggaeton	R279	Bhangra
R170	Medium Jazz	R225	French Waltz	R280	Zouk
R171	Jazz Big Band	R226	Merengue	R281	German March
R172	.Jazz Club	R227	Tango3	R282	Fnka

R283	Bolero Lento	R338	Schlager Shuffle	R393	Mariachi Waltz
R284	Sherif Reggae	R339	Schlager Pop	R394	US March
R285	Beguine	R340	Schlager Rumba	R395	Guitar Rumba
R286	Pop Classics	R341	Euro Pop Organ	R396	Slow Blues
R287	Live 8 Beat	R342	70's French Hit	R397	Jazz Waltz Fast
R288	Power Rock	R343	Italian Mazurka	R398	70's Country Pop
R289	Acoustic Rock1	R344	Jig2	R399	Dixieland
R290	Cool 8 Beat	R345	Hawaiian2	R400	40's Big Band
R291	Uptempo 8Beat	R346	Latin Rock2	R401	Schlager Alp
R292	90's Rock Ballad	R347	Schlager Samba1	R402	Chart Pop1
R293	80's Guitar Pop	R348	Schlager Samba2	R403	Organ Groove
R294	70's 8 Beat	R349	Scand Slow Rock	R404	Chart Pop2
R295	90's Guitar Pop	R350	Schlager 6-8	R405	Modern Shuffle
R296	Soft Rock	R351	Schlager Fox	R406	8 Beat Ballad1
R297	Chart GuitarPop	R352	Country Ballad1	R407	Bubblegum Pop
R298	Gujira	R353	Country Two Step1	R408	Rock Funk
R299	Modern Pop Bld	R354	Kool Shuffle	R409	West Coast Pop
R300	Soul	R355	Pleasant Country	R410	Classic 16 Beat
R301	Skiffle1	R356	Country Hits	R411	8 Beat Ballad2
R302	6-8Soul	R357	Country 8 Beat	R412	Chillout
R303	Soul Brothers	R358	Mod Cntry Bld1	R413	16 Beat Ballad1
R304	6-8Slow Rock	R359	Country Ballad2	R414	Epic Ballad
R305	Trance Pop	R360	Scand Country1	R415	Easy Ballad
R306	Mellow Hip Hop	R361	Scand Country2	R416	Cuban Son
R307	Classic Hip Hop	R362	Country Love Song1	R417	16 Beat Ballad3
R308	New Hip Hop	R363	Orch Big Band2	R418	Contemp Rock2
R309	Duranguense	R364	Big Band Fast2	R419	EP Ballad2
R310	70's Disco3	R365	Midnight Swing	R420	Cat Groove2
R311	70's Disco4	R366	Fusion2	R421	Guitar Serenade2
R312	Latin Disco	R367	Funk Shuffl 2	R422	Organ Ballad2
R313	Brazilian Samba	R368	Fusion Shuffl 2	R423	Pop Ballad2
R314	Brit Pop Swing	R369	Swing Fox1	R424	Norteno2
R315	Grupera	R370	Slow Fox1	R425	Retro Pop2
R316	Danzon	R371	Organ Cha Cha1	R426	Trance Pop2
R317	Dream Dance	R372	Organ Quick Step1	R427	Pop Gtr Ballad
R318	US Chart Hit	R373	Piano Boogie	R428	Ibiza 2002
R319	Soul R&B	R374	Lovely Shuffle	R429	Chillout Cafe
R320	R&B Soul Ballad	R375	Jazz Gtr Club	R430	70's Glam Piano
R321	Euro Hip Hop	R376	Modern Jazz	R431	French House
R322	Trip Hop	R377	Acoustic Jazz	R432	Bhajan2
R323	60's RockN2	R378	Cool Jazz Ballad	R433	16 Beat Pop3
R324	Bhajan	R379	Modern Jazz Bld	R434	16 Beat Pop4
R325	Hip Hop Groove	R380	Easy Listening	R435	Enka2
R326	Euro Trance	R381	Bebop	R436	Blues Rock
R327	6-8 Trance	R382	Orch Big Band1	R437	Ibiza 2004
R328	Latin DJ's	R383	Kool Funk	R438	80's Rock & Roll1
R329	Bomba	R384	Blueberry Blues	R439	Acoustic Rock2
R330	Club House	R385	Shuffle Blues	R440	Club Pop3
R331	House	R386	Mambo 3	R441	Power Rock2
R332	Disco Teens	R387	Mambo 4	R442	Rock'n Roll 3
R333	Happy Reggae	R388	Big Band Fast1	R443	Cool8 Beat2
R334	Pop Latin	R389	Orchestra Swing1	R444	British Pop4
R335	Fast Bossa	R390	Orchestra Swing2	R445	British Pop5
R336	6-8 Modern	R391	70's Chart Cntry1	R446	8 Beat Soul3
R337	6-8 Orchestral	R392	Jazz Waltz Mad	R447	BritRockGuitar1

R448	británico Roca Pop2	R466 60 años alma 2	R484	Polca Schlager2
R449	Arándanos azules2	Fusión R467 barajar 3	R485	Grupera 2
R450	guijira2	Fusión R468 Barajar 4	R486	Danzon 2
R451	Roca Balada 2	R469 6-8 Moderno2	R487	schlagerAlp2
R452	alma 2	470 6-8 orquesta 2	R488	Saeidy2
R453	Clásico 8 Beat 2	R471 lento alma 2	R489	6-8 Marzo
R454	Bolero 2	R472 piano Balada 2	R490	Música bluegrass
R455	alma Hermanos2	R473 Cadera Brincar Ranura 2	R491	Estallido latín2
R456	Feliz reggae2	R474 Cadera Barajar 2	R492	Mostrar Tune2
R457	6-8 lento Roca 2	Organo R475 Ranura 2	R493	Escaneo barajar
R458	Bolero Lento 2	Gráfico R476 Estallido 3	R494	Adoración lenta
R459	Columpio de medianoche 2	R477 Mambo 5	R495	Bachata
R460	Francés Jazz 2	R478 Mambo 6	R496	Romántico Balada 2
R461	latín fiesta pop2	R479 Disco latín 2	R497	Cosa análoga Balada 2
R462	Tango5	R480 Rápido Bossa 2	R498	Electro Estallido 2
R463	Tang 06	R481 Zorro Trote 2	R499	Blues Roca K2
R464	parranda2	R482 pasodoble2	500	Años 90 alma rands
R465	Años 80 Estallido 2	R483 Tierras altas vals 2		

Appendix 3 (Demonstration Song Comparison Table)

S001	S035	S036	S037	S038	S039	Beethove	ro El porque - templado
S002						n Minué	teclado chopin Nocturno
						En	Mendelssohn P.
S003						GRAMO	Hingslied
S004						Polon	Ensueño
S005						naise (	Beethoven piano sonata en .49-2 1
S006						n naise)	pieza púrpura
S007						en	beethoven
S008						la	Escocia
S009						bemol	DebussyAea
S010						importante,	besque
S011						Apertura.	Llevar una
S012						canción	vida de
S013						El Adiós	soltero
S014						L	Invencción
S015						I	Liszt sueños de amor
S016						e	Debussy La llenar cabello
						v	Delaware Línea Minueto de
						a	Mozart
S017						r	Llevar una vida de soltero vals En
S018							Aminado
S019						u	ser n thoven- pian no sonata en
S020						n	13 patético 2º púrpura
S021						a	Schumann compatriota
S022							alegre Shubert Marché
S023						v	militar
S024						i	Llevar una vida de soltero Bourrée
S025						d	Burgmiller
S026						a	pastoral
S027							schumann
S028						d	siciliana
						e	Haydn
S029							pequeña
S030						s	serenata
S031						o	ostras muñeca
S032						l	SoñandoAwa Kening chopin
S033						t	grande falso Gafas puestas.
S034						e	18 sonrisa polk

Llevar una vida de soltero	S040	Joplin El Artista Lc.
Menuett	S041	Daquin LeC Couk Karl
Ricardo Balada Para Adeline	S042	Bohm El F coner
Ricardo silbido pong bajo Los árboles	S043	korsakov Abejorro
Richard Acomme Amour	S044	Haydn - amanecer
ricardo Casamiento D	S045	Juan sebastián Llevar una vida de
'amar pachelbel cañón En	S046	soltero sonata
D	S047	Obertura " william
Badarzewska oración de la doncella	S048	Decir " serenata de
Tchaikovsky- Danza de s mirlitones	S049	schubert
Humoresco de Dvorak	S050	Minueto de L'Arlesienne
-	S051	polonesa
	S052	sonata de clementi
	S053	Chopin Revolución
	S054	Ejercicio musical
	S055	Beethoven Sinfonía del
	S056	destino
	S057	Musical
	S058	Momentos
	S059	Chopin Ke n ys
	S060	negro
	S061	Chopin preludio " Gota de lluvia " , Op.
	S062	28- 15 Chopin perro pequeño
	S063	Chopin Fantasía Improvisado
	S064	polonesa En La Mayor, op40 , No
	S065	1 Dubessy clara De Luna
	S066	Schubert Monents Música
	S067	Mozart turco Marzo
	S068	Chopin - valse op . 64 no.2
	S069	beethoven Luz de la luna
	S070	sonata Schumann soñando
	S071	beethoven Para Elise
	S072	beethoven Marcia Alla
	S073	Turca mozart sonata
	S074	Mendelssohn Canción de
	S075	cazadores En . 19b-3 chopin -
	S076	Nocturno En . 9 No .2
	S077	Torna Asurriendo
	S078	MOZART K448(II Andante)
	S079	El Vals de la viuda alegre
	S080	cincuentona
		Dulce adiós Adiós
		Barcarola
		polca de clarinete
		voz de primavera
		vals deEl Flores
		katyusha
		en alas de canción

1 Battery



- o Por favor, cuídate siguiente atenciones
- o Hacer No intente desmontarlo o cortocircuitar el batería
- o Hacer no exponer o quemar él en el fuego
- o Hacer No mezclar el nuevo y viejo batería
- o Hacer no mezcla diferente tipos de baterías o Hacer no cargar el batería
- o El positivo y polos negativos de el La batería debe estar correctamente instalado
- o por favor Retire la batería de El teclado electrónico Si lo haces no usar Para un largo tiempo ,

2 Exception



Por favor haga lo siguiente pasos cuando excepción para la electrónica teclado como si estuviera echando humo , demasiado caliente y Entonces en . 1) . fuerza apagado

2) . jalar el adaptador abajo de el fuerza enchufe en el muro cuando son usando .

3) . contacto su local distribuidor en tiempo .

Es normal para adaptador conseguir caliente cuando largo tiempo usando C.A. adaptador , no indicar Funcionamiento defectuoso

por favor Apagar y reiniciar el teclado electrónico cuando función en algún momento problema ,

3 Install the battery

- 1) . Salida el tornillo y eliminar el batería cubrir
- 2) . poner el batería con correcto positivo + y negativo - dirección dentro del batería ranura con 4 x" AA " 1 .5v
- 3) . poner el batería cubrir y Cerrar el tornillos

Este El producto contiene componentes electrónicos y debería No permitir líquidos a ingresar o ser usado en húmedo entornos .

A diario A prueba de polvo limpieza debería ser hecho Bueno , y manchas superficiales poder ser borrado con a

suave y limpio paño .

VEVOR®

TOUGH TOOLS, HALF PRICE

Soporte técnico y Certificado de garantía
electrónica Www.vevor.com/soporte



Techniczny wsparcie i Certyfikat e-gwarancji

Www.vevor.com/wsparcie

FORTEPIAN

UŻYTKOWNIK PODRĘCZNIK

MODEL : BD -662

kontynuujemy być zaangażowanym Do zapewnić ci narzędzia z konkurencyjna cena.

"ratować Połowa", "Połowa ceny" lub jakiegokolwiek inne podobne wyrażenia używany przez nas reprezentuje tylko

szacunkowe oszczędności możesz skorzystać z zakupu niektóre narzędzia z nas w porównaniu do głównego najlepsze marki i robi niekoniecznie oznaczać Do pokryć wszystko kategorie narzędzi oferowany przez nas. Ty

Czy uprzejmie przypomniano dokładnie sprawdzić, kiedy Czy umieszczanie zamów z nas jeśli ty Czy faktycznie oszczędzając połowa w porównanie z najlepsze, główne marki.

MODEL: BD-662



(The picture is for reference only, please refer to the actual object)

POTRZEBOWAĆ POMOC? KONTAKT NAS!

Mieć produkt pytania? Potrzebować techniczny wsparcie? Proszę
czuć bezpłatny skontaktować się nas :

Wsparcie techniczne i Certyfikat e-
gwarancji [Www.vevor.
com/wsparcie](http://www.vevor.com/wsparcie)

Ten Jest ten oryginalny instrukcja , Proszę Czytać Wszystko podręcznik
instrukcje

ostrożnie przed użyciem. VEVOR rezerwuje A jasne interpretacja
naszego instrukcja obsługi . Ten wygląd ten produkty podlegać ten
produkt ty otrzymane. proszę wybaczyć nam, że nie będziemy
poinformować cię Ponownie Jeśli czy istnieje jakaś technologia lub

oprogramowanie Aktualizacje na temat Nasz produkt.

Akcesorium

moc sznur * 1

Mikrofon * 1

Stojak na nuty * 1

Słuchawki * 1

podtrzymywać

pedał * 1 Muzyka



arkusz klip * 1


MIDI Przewód * 1

fortepian naklejka * 1


klawiatura stać * 1

Installation diagram of Keyboard stand

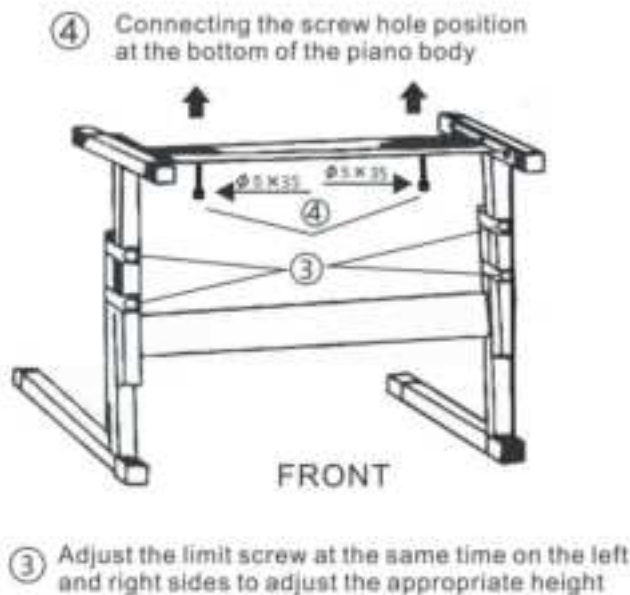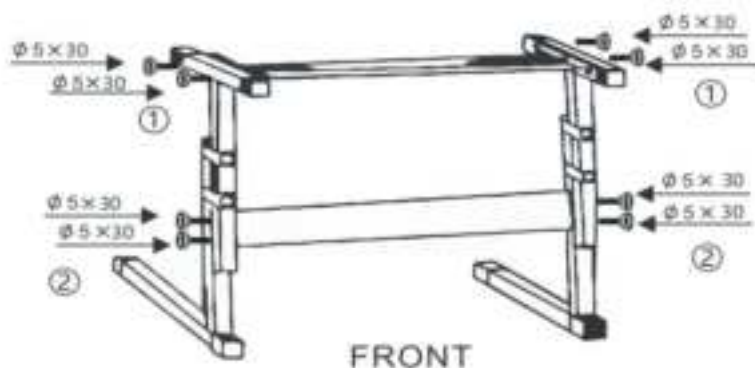  

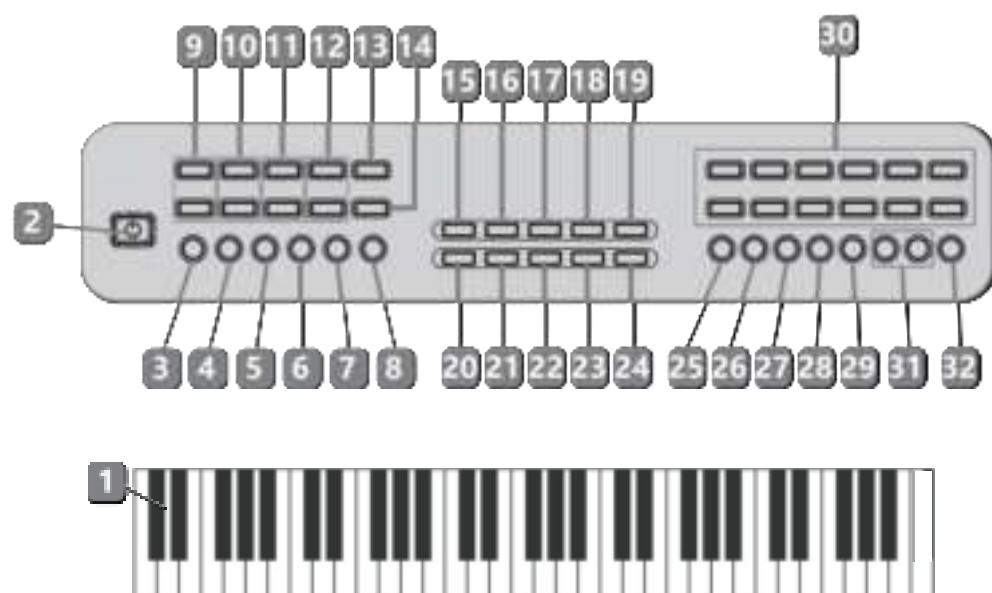 

- | | | | |
|-------------|------------------|----------------|--------------------------|
| 1 KEYBOARD | 9 VOLUME+/- | 17 FILL-IN/LED | 25 TONE |
| 2 POWER | 10 RHYTHM VOL+/- | 18 FILL-IN2 | 26 RHYTHM |
| 3 RECORD | 11 TEMPO+/- | 19 BASSCHORDS | 27 PIANO |
| 4 PROG | 12 TRANSPOSE+/- | 20 ONE KEY | 28 DEMO ONE |
| 5 PLAY | 13 SUSTAIN | 21 FOLLOW | 29 DEMO ALL |
| 6 METRONOME | 14 VIBRATO | 22 ENSEMBLE | 30 NUMBER SELECTION AREA |
| 7 KEY DRUM | 15 SYNC | 23 CHORD. OFF | 31 ◀/VOL- ▶/VOL+ |
| 8 DUAL KEY | 16 CHORD | 24 START/STOP | 32 ▶/CHANGE |

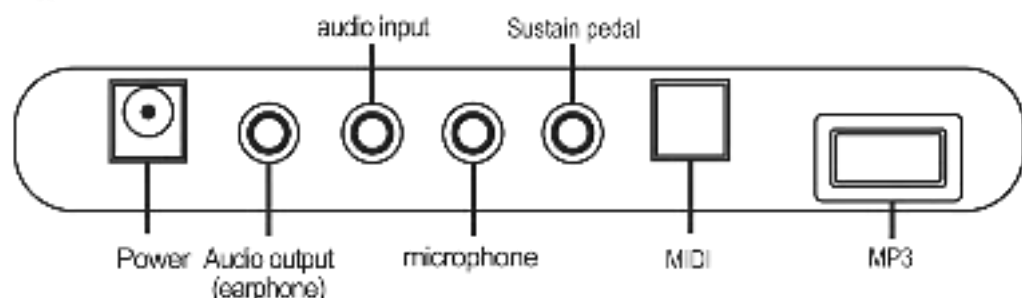 

1.KEYBOARD\2.POWER

Turn on the power, you can play the "keyboard" and enter the performance state. In standby mode, after 3 minutes of no operation, it will automatically enter the sleep mode, and can be restored by pressing any key.

3.RECORD

Press the **【RECORD】** key to enter the recording mode, and then press any piano key or drum key to start the recording.

start recording. The maximum number of recordings is 80. When the recording is full, it cannot continue to record another note.

When recording, you can press the play button at any time to play.

Each time this button is pressed, the last memory will be cleared and the recording mode will be re-entered.

After exiting the recording mode, the last memory will be cleared.

4.PROG

Press **【PROG】** key to enter programming mode, the preset speed is 120.

The pressed drum sound can be recorded. In edit mode, only the drum sound is valid.

The maximum number of records is 32. When the record is full, it cannot continue to record another drum sound. You can press the button at any time, press the Play key to play the edited drum sound.

Each time this key is pressed, the last memory will be cleared and the programming mode will be re-entered.

After exiting the programming mode, the last memory will be cleared.

In this mode, the keys are automatically converted to keyboard drums.

5.PLAY

In the recording mode, press the **【PLAY】** for the first time to play the recorded notes.

Press the **【PLAY】** for the second time to stop playing.

In programming mode, press the **【PLAY】** for the first time to play the recorded drum sound, and press the **【PLAY】** for the second time to stop playing

If there is no recorded value before, press the **【PLAY】** and no action will take place.

6.METRONOME

Pressing the **【METRONOME】** key, the action function is the click sound, there are 7 kinds of changes, 1/4 beat → 2/4 beat → 3/4 beat → 4/4 beat... → stop, the default value of the beat is 120.

7.KEY DRUM

Press the **【KEY DRUM】** key to get percussion sound on the corresponding key.

8.DUAL KEY

Press **【DUAL KEY】** for the first time to activate the dual keyboard function, and press **【DUAL KEY】** for the second time to select eliminate the double keyboard function.

When the dual keyboard function is activated, the scales of the left keys C2-B3 will be played correspondingly to the scales of C3-B4. The scales of C4-C7 on the right keys will be played as C3-C6 scales. You can use the digital area and the [+] [-] keys or digital switches to select the sub-tone instead of the left piano.key tone.

9.VOLUME+/-

Use **【VOLUME+/-】** to control the volume, press **【VOLUME+】** to represent To increase the volume up, press **【VOLUME-】** to decrease the volume down. The volume control has a total of 17 segments (0~16), and the default value is the 13th segment after power-on.

Press and hold **【VOLUME+/-】** for more than 1 second to continuously increase /decrease the volume.

10.RHYTHM+/-

Press **【RHYTHM+/-】** to select the accompaniment volume.

The accompaniment volume control has a total of 17 segments (0~16), and the preset value is the 13th segment after power-on.

Press and hold the **【RHYTHM+/-】** for more than 1 second to continuously increase/decrease the accompaniment volume.

11.TEMPO+/-

Press **【TEMPO+/-】** to select the speed.

The speed control has a total of 270 stages (30~300), and the preset value is the 90th stage after power-on (speed = 120)

Press and hold the **【TEMPO+/-】** for more than 1 second to continuously increase/decrease the speed.

When playing the selected song, the tempo of the song will be used, regardless of the set tempo.

When playing the selected rhythm, the set tempo will prevail.

12.TRANSPOSE+/-

Press **【TRANSPOSE+/-】** to select Transpose .

There are 25 segments (-12~12) in total for transposition control, and the preset value is at segment 13 after power-on.

Press and hold the **【TRANSPOSE+/-】** for more than 1 second to continuously increase/decrease the transpose.

The chord pitch also changes with the transpose value.

13.SUSTAIN

Press the **【SUSTAIN】** key to enable or disable the sustain function.

When the sustain function is turned on, when you play the keyboard, the sound will have a prolongation effect.

14.VIBRATO

Press the **【VIBRATO】** key to enable or disable the vibrato function.

When the vibrato function is turned on, the sound will vibrate when you play the keyboard.

15.SYNC

Press the [Sync] key for the first time to enter the sync mode, and press the [Sync key] for the second time to exit the sync mode.

When entering sync mode, pressing the first 19 keys on the left will automatically play the selected rhythm (chord).

16.CHORD

Press the **【CHORD】** for the first time to enter the comprehensive chord mode, and press the **【CHORD】** for the second time to exit the composite chord mode.

【CHORD】 Only in rhythm and general mode, the function can occur. When playing the rhythm, press **【CHORD】** and press multiple keys within the range of C2~F3#.

After fingering, you can hear the corresponding chord accompaniment. The single-fingered chords are played.

When the rhythm is not playing, press the **【CHORD】** and press the multi-finger key within the range of keys C2~F3#, and you can hear the corresponding chord accompaniment. Otherwise, the single-fingered chords are played. Comprehensive fingering can be used with rhythm/chord/synchronization.

17.FILL-IN/LED 18.FILL-IN2

【FILL-IN/LED】 When the rhythm is not playing, pressing it is the key light switch function.

【FILL-IN】 and **【FILL-IN2】** function only when the rhythm is played. Interlude: During the rhythm playing, press the **【FILL-IN】** to add the fill-in function to the rhythm.

When the measure is finished, insert an interlude.

During rhythm playback, press and hold the **【FILL-IN】** to continue inserting.

19.BASSCHORDS

Change the bass voice in the chord to the piano voice.

20.ONE KEY

Press the **【ONE KEY】** for the first time to enter the random play mode, and then press any key to issue the correct note.

Press the **【ONE KEY】** for the second time to exit the strumming mode.

21.FOLLOW

Press the **【FOLLOW】** for the first time to enter the follow mode, and press the **【FOLLOW】** for the second time to exit the follow mode.

After entering the follow play mode, use the current song to teach, after the song is played, the main melody will not be played.

The user must press the corresponding key according to the note displayed on the LCD or the keyboard indicator light.

To continue playing the next note, the background sound repeats the measure until the end of the song.

After the song is over, play the next song.

In follow mode, you can use the number selection area to select other songs.

22.ENSEMBLE

Press the **【ENSEMBLE】** for the first time to enter the ensemble mode, and press the **【ENSEMBLE】** for the second time to exit the ensemble mode.

After entering the ensemble mode, use the current song to teach, after the song is played, the user can play the piano at will key and interrupt the main chord. If the key is not pressed after 5 seconds, the main chord will resume playing automatically. background

The sound plays completely until the end of the song.

When the song is over, play the next song together.

In Ensemble mode, other songs can be selected using the number selection area.

23.CHORD.OFF

Turn off composite chords.

24.START/STOP

Short press [Start/Stop Key] for the first time to start playing the rhythm, and

short press [Start/Stop Key] for the second time, to stop playing the rhythm.

Exit this mode in teaching, recording, playback, metronome, demo songs, etc.

25.TONE

After pressing the **【TONE】**, you can use the number selection area and the **[+][-]** keys to select the tone.

26.RHYTHM

After pressing the **【RHYTHM】**, you can use the number selection area and the **[+] [-]** keys to select the rhythm.

27.PIANO

In other voice states, press the [Piano] key to set the piano voice, and press the **【PIANO】** key for the second time to restore the previous sound.

(The default is piano sound when power on, this button is invalid)

28.DEMO ONE

Press the **【DEMO ONE】** button for the first time to enter the click mode, and press the **【DEMO ONE】** for the second time to exit the click mode.

After entering the sing-along mode, playback starts from the next song.

When the song finishes playing, the current song is played repeatedly.

In sing-along mode, other songs can be selected using the number selection area.

29.DEMO ALL

Press the **【DEMO ALL】** for the first time to enter the continuous singing mode, and press the **【DEMO ALL】** for the second time to exit the continuous singing mode.

After entering continuous singing mode, playback starts from the first song.

When the song is finished, continue to play the next song and play all the songs in a loop.

In sing-along mode, other songs can be selected using the number selection area.

30 .NUMBER SULECTION AREA

Use the number keys 0-9 to input the corresponding timbre, rhythm, song code for quick selection, use the +/- keys can be selected sequentially.

Press and hold the "+" or "-" key for more than 2 seconds to continuously increase/decrease the selection.

If neither tone mode or rhythm mode is selected, the default value is tone mode after power-on.

If neither tone mode or rhythm mode is selected, the default value is tone mode after power-on.

31 . VOL- VOL+ 32 . CHANGE

Press (within 1 second) [ CHANGE] to play or pause the song. In pause mode, press [ CHANGE] to continue playing the song.

Press (within 1 second) [ VOL-] to select the previous song.

Press (within 1 second) [ VOL+] to select the next song.

Press and hold the [ VOL-] for more than 1 second to decrease the volume. Long press [ VOL+] to exceed increase the volume after 1 second.

Appendix 1 (Voice Comparison Table)

T001	Acoustic Grand Piano	T026	Acoustic Guitar (steel)	T051	Synth Strings 1
T002	Bright Acoustic Piano	T027	Electric Guitar (jazz)	T052	Synth Strings 2
T003	Electric Grand Piano	T028	Electric Guitar (clean)	T053	Choir Aahs
T004	Honky-tonk Piano	T029	Electric Guitar (muted)	T054	Voice Oohs
T005	Rhodes Piano	T030	Overdriven Guitar	T055	Synth Voice
T006	Chorused Piano	T031	Distortion Guitar	T056	Orchestra Hit
T007	Harpsichord	T032	Guitar Harmonics	T057	Trumpet
T008	Clavichord	T033	Acoustic Bass	T058	Trombone
T009	Celesta	T034	Electric Bass(finger)	T059	Tuba
T010	Glockenspiel	T035	Electric Bass (pick)	T060	Muted Trumpet
T011	Music box	T036	Fretless Bass	T061	French Horn
T012	Vibraphone	T037	Slap Bass 1	T062	Brass Section
T013	Marimba	T038	Slap Bass 2	T063	Synth Brass 1
T014	Xylophone	T039	Synth Bass 1	T064	Synth Brass 2
T015	Tubular Bell	T040	Synth Bass 2	T065	Soprano Sax
T016	Dulcimer	T041	Violin	T066	Alto Sax
T017	Drawbar Organ	T042	Viola	T067	Tenor Sax
T018	Percussive Organ	T043	Cello	T068	Baritone Sax
T019	Rock Organ	T044	Contrabass	T069	Oboe
T020	Church Organ	T045	Tremolo Strings	T070	English Horn
T021	Reed Organ	T046	Pizzicato Strings	T071	Bassoon
T022	Accordion	T047	Orchestral Harp	T072	Clarinet
T023	Harmonica	T048	Timpani	T073	Piccolo
T024	Tango Accordion	T049	String Ensemble 1	T074	Flute
T025	Acoustic Guitar (nylon)	T050	String Ensemble 2	T075	Recorder

Appendix 1 (Voice Comparison Table)

T076	Pan Flute	T129	Yong Gin	T181	Soft Santur
T077	Bottle Blow	T130	Zheng	T182	Dual Horns 1
T078	Shakuhachi	T131	Zhong Ruan	T183	Bodhran
T079	Whistle	T132	Pi Pa	T184	Tubular Bells 2
T080	Ocarina	T133	Big Souna	T185	Suona 2
T081	Lead 1 (square)	T134	Souna	T186	Castanets
T082	Lead 2 (sawtooth)	T135	Er Hu	T187	Attack Harp 1
T083	Lead 3 (caliope lead)	T136	Yue Hu	T188	Electric Viaphone
T084	Lead 4 (chiff lead)	T137	Di Zi	T189	Soft Sax 1
T085	Lead 5 (charang)	T138	Bong Di	T190	Soft Clav.
T086	Lead 6 (voice)	T139	Koto 2	T191	Soft Accord
T087	Lead 7 (fifths)	T140	Qui Di	T192	Wind Organ
T088	Lead 8 (bass+lead)	T141	Xylophone 2	T193	Viola Attack
T089	Pad 1 (new age)	T142	Dulcimer 2	T194	Bari & Tenor
T090	Pad 2 (warm)	T143	Guitar Pinch 2	T195	Soft Guitar 1
T091	Pad 3 (polysynth)	T144	Slow Violin	T196	Grow Guitar
T092	Pad 4 (choir)	T145	Bright String	T197	Didgeridoo 1
T093	Pad 5 (bowed)	T146	Jungle Bass 2	T198	Attack Barafon
T094	Pad 6 (metallic)	T147	Indian Flute	T199	Mute Barafon 1
T095	Pad 7 (halo)	T148	Clavi 2	T200	Nay
T096	Pad 8 (sweep)	T149	Celesta 2	T201	Didgeridoo 2
T097	FX 1 (rain)	T150	Church Bells	T202	Dual Horns 2
T098	FX 2 (soundtrack)	T151	Kalimba 2	T203	Hard Barsoon 2
T099	FX 3 (crystal)	T152	Steel Bell 1	T204	Kawala 2
T100	FX 4 (atmosphere)	T153	Tenor Sax 2	T205	Soft Guitar 2
T101	FX 5 (brightness)	T154	Woodblock 2	T206	Mute Barafon 2
T102	FX 6 (goblins)	T155	Electric Guitar (Clean) 2	T207	Hard Barsoon 1
T103	FX 7 (echoes)	T156	Shanai 2	T208	Tron Flute
T104	FX 8 (sci-fi)	T157	Marimba 3	T209	Kawala 1
T105	Sitar	T158	Dulcimer 3	T210	Jazz Organ
T106	Banjo	T159	Reed Organ 3	T211	Synth Harpsi. 3
T107	Shamisen	T160	Koto 3	T212	Tenor Sax 3
T108	Koto	T161	Crystal 1	T213	Steel Bell 3
T109	Kalimba	T162	Bag Pipe 2	T214	Kalimba 4
T110	Bagpipe	T163	Barafon	T215	Shamisen 3
T111	Fiddle	T164	Organ Flute	T216	English Horn 3
T112	Shanai	T165	Kalimba 3	T217	Shanai 3
T113	Tinkle Bell	T166	Reed Horn	T218	Soft Sax 2
T114	Agogo	T167	English Horn 2	T219	Attack Harp 2
T115	Steel Drums	T168	Electric Guitar (Clean) 3	T220	Castanets 2
T116	Woodblock	T169	Shamisen 2	T221	Suona 3
T117	Taiko Drum	T170	Koto 4	T222	Xylophone 3
T118	Melodic Tom	T171	Hard Vibe 2	T223	Koto 5
T119	Synth Drum	T172	Twin Bones	T224	Attack Clav. 4
T120	Reverse Cymbal	T173	Synth Harpsi. 1	T225	Synth Harpsi. 4
T121	Guitar Fret Noise	T174	Attack Clav. 1	T226	Twin Bones 2
T122	Breath Noise	T175	Chorus Guitar.	T227	Hard Vibe 3
T123	Seashore	T176	Steel Bell 2	T228	Reed Horn 2
T124	Bird Tweet	T177	Tsugaru	T229	Organ Flute 2
T125	Telephone Ring	T178	Oct Harp	T230	Steel Bell 4
T126	Helicopter	T179	Synth Harpsi. 2	T231	Chorus Guitar. 2
T127	Applause	T180	Attack Clav. 2	T232	Dual Horns 3
T128	Gunshot				

T233	Soft Santur 2	T288	Tenor Sax 4	T343	English Horn 5
T234	Barafon 3	T289	Twin Bones 3	T344	Shamisen 5
T235	Bag Pipe 3	T290	Hard Vibe 4	T345	Kalimba 7
T236	Crystal 3	T291	Koto 7	T346	Steel Bell 7
T237	Attack Clav. 3	T292	Shamisen 4	T347	Tenor Sax 5
T238	Electric Vibraphone 2	T293	Electric Guitar (Clean) 5	T348	Chorus Guitar. 4
T239	Attack Harp 3	T294	English Horn 4	T349	Steel Bell 8
T240	Attack Barafon 2	T295	Reed Horn 3	T350	Organ Flute 4
T241	Didgeridoo 3	T296	Kalimba 6	T351	Reed Horn 4
T242	Grow Guitar 2	T297	Organ Flute 3	T352	Hard Vibe 5
T243	Soft Guitar 3	T298	Barafon 2	T353	Twin Bones 4
T244	Soft Clav. 2	T299	Dual Horns 5	T354	Synth Harpsi. 8
T245	Soft Sax 3	T300	Soft Santur 3	T355	Attack Clav. 8
T246	Tubular Bells 3	T301	Attack Clav. 5	T356	Koto 8
T247	Bodhran 2	T302	Synth Harpsi. 5	T357	Xylophone 5
T248	Oct Harp 2	T303	Oct Harp 3	T358	Didgeridoo 7
T249	Tsugaru 2	T304	Tsugaru 3	T359	Attack Barafon 4
T250	Bari & Tenor 2	T305	Steel Bell 6	T360	Attack Harp 7
T251	Wind Organ 2	T306	Chorus Guitar. 3	T361	Electric Vibraphone 4
T252	Soft Accord 2	T307	Attack Clav. 6	T362	Attack Clav. 7
T253	Attack Harp 4	T308	Synth Harpsi. 6	T363	Crystal 4
T254	Viola Attack 2	T309	Wind Organ 3	T364	Bag Pipe 5
T255	Kawala 3	T310	Soft Accord 3	T365	Barafon 4
T256	Soft Sax 4	T311	Soft Clav. 3	T366	Soft Santur 4
T257	Jazz Organ 2	T312	Soft Sax 5	T367	Dual Horns 7
T258	Nay 2	T313	Electric Vibraphone 3	T368	Wind Organ 4
T259	Mute Barafon 3	T314	Attack Harp 5	T369	Bari & Tenor 4
T260	Dulcimer 5	T315	Castanets 3	T370	Tsugaru 4
T261	Xylophone 4	T316	Suona 4	T371	Oct Harp 4
T262	Tron Flute 2	T317	Tubular Bells 4	T372	Bodhran 4
T263	Hard Barsoon 3	T318	Bodhran 3	T373	Tubular Bells 6
T264	Mute Barafon 4	T319	Dual Horns 6	T374	Soft Sax 7
T265	Soft Guitar 4	T320	Didgeridoo 6	T375	Soft Clav. 4
T266	Kawala 4	T321	Nay 3	T376	Soft Guitar 7
T267	Hard Barsoon 4	T322	Mute Barafon 5	T377	Grow Guitar 4
T268	Dual Horns 4	T323	Attack Barafon 3	T378	Hard Barsoon 7
T269	Didgeridoo 4	T324	Didgeridoo 5	T379	Tron Flute 4
T270	Steel Bell 5	T325	Grow Guitar 3	T380	Mute Barafon 7
T271	Kalimba 5	T326	Soft Guitar 5	T381	Nay 4
T272	Church Bells 2	T327	Bari & Tenor 3	T382	Jazz Organ 4
T273	Celesta 3	T328	Viola Attack 3	T383	Soft Sax 8
T274	Clavi 3	T329	Synth Harpsi. 7	T384	Kawala 7
T275	Indian Flute 2	T330	Jazz Organ 3	T385	Viola Attack 4
T276	Jungle Bass 3	T331	Kawala 5	T386	Attack Harp 8
T277	Bright String 2	T332	Tron Flute 3	T387	Soft Accord 4
T278	Slow Violin 2	T333	Hard Barsoon 5	T388	Guitar Pinch 4
T279	Guitar Pinch 3	T334	Mute Barafon 6	T389	Indian Flute 3
T280	Bag Pipe 4	T335	Soft Guitar 6	T390	Bright String 3
T281	Crystal 2	T336	Kawala 6	T391	Church Bells 3
T282	Koto 6	T337	Hard Barsoon 6	T392	Didgeridoo 8
T283	Reed Organ 4	T338	Suona 5	T393	Dual Horns 8
T284	Dulcimer 4	T339	Castanets 4	T394	Hard Barsoon 8
T285	Marimba 4	T340	Attack Harp 6	T395	Kawala 8
T286	Shanai 4	T341	Soft Sax 6	T396	Soft Guitar 8
T287	Electric Guitar (Clean) 4	T342	Shanai 5	T397	Mute Barafon 8

T398	Electronic Guitar (Clean) 6	T453	Tron Flute 6	T508	Bright String 4
T399	Shanai 6	T454	Bari & Tenor 6	T509	Slow Violin 3
T400	Marimba 5	T455	Wind Organ 6	T510	Guitar Pinch 5
T401	Koto 9	T456	Grow Guitar 5	T511	Bag Pipe 9
T402	Xylophone 6	T457	Attack Barafon 5	T512	Crystal 7
T403	Tenor Sax 6	T458	Dual Horns 9	T513	Reed Organ 5
T404	Organ Flute 5	T459	Hard Barsoon 10	T514	Dulcimer 6
T405	Kalimba 9	T460	Hard Barsoon 9	T515	Marimba 6
T406	English Horn 6	T461	Tron Flute 7	T516	Shanai 9
T407	Electronic Guitar (Clean) 7	T462	Jazz Organ 5	T517	Electronic Guitar (Clean) 8
T408	Shamisen 6	T463	Tenor Sax 8	T518	Tenor Sax 9
T409	Koto 10	T464	Steel Bell 9	T519	Twin Bones 6
T410	Kalimba 8	T465	Shamisen 8	T520	Hard Vibe 7
T411	Barafon 5	T466	English Horn 8	T521	Shamisen 9
T412	Chorus Guitar, 8	T467	Shanai 8	T522	Electronic Guitar (Clean) 9
T413	Tsugaru 5	T468	Attack Harp 9	T523	English Horn 9
T414	Synth Harpsi, 9	T469	Castanets 5	T524	Reed Horn 6
T415	Crystal 5	T470	Suona 6	T525	Organ Flute 8
T416	Bag Pipe 6	T471	Xylophone 8	T526	Barafon 6
T417	Synth Harpsi, 10	T472	Attack Clav. 10	T527	Soft Santur 8
T418	Soft Sax 9	T473	Twin Bones 5	T528	Oct Harp 6
T419	Soft Clav. 5	T474	Hard Vibe 6	T529	Tsugaru 8
T420	Bodhran 5	T475	Reed Horn 5	T530	Chorus Guitar, 9
T421	Bari & Tenor 5	T476	Organ Flute 7	T531	Wind Organ 8
T422	Soft Guitar 9	T477	Steel Bell 10	T532	Soft Accord 8
T423	Didgeridoo 9	T478	Chorus Guitar, 8	T533	Soft Clav. 8
T424	Mute Barafon 9	T479	Dual Horns 10	T534	Electric Vlapraphone 6
T425	Nay 5	T480	Soft Santur 7	T535	Castanets 6
T426	Soft Santur 5	T481	Barafon 7	T536	Suona 7
T427	Kawala 10	T482	Bag Pipe 8	T537	Tubular Bells 7
T428	Soft Guitar 10	T483	Crystal 8	T538	Bodhran 8
T429	Mute Barafon 10	T484	Attack Clav. 9	T539	Nay 8
T430	Tron Flute 5	T485	Electric Vlapraphone 5	T540	Attack Barafon 7
T431	Kawala 9	T486	Attack Harp 10	T541	Grow Guitar 7
T432	Soft Accord 5	T487	Attack Barafon 6	T542	Bari & Tenor 8
T433	Wind Organ 5	T488	Grow Guitar 6	T543	Viola Attack 6
T434	Kalimba 10	T489	Soft Clav. 7	T544	Jazz Organ 7
T435	Shamisen 7	T490	Tubular Bells 6	T545	Tron Flute 9
T436	English Horn 7	T491	Bodhran 7	T546	Suona 8
T437	Shanai 7	T492	Oct Harp 5	T547	Castanets 7
T438	Soft Sax 10	T493	Tsugaru 7	T548	Shanai 10
T439	Didgeridoo 10	T494	Bari & Tenor 7	T549	English Horn 10
T440	Tenor Sax 7	T495	Wind Organ 7	T550	Shamisen 10
T441	Koto 11	T496	Soft Accord 7	T551	Tenor Sax 10
T442	Organ Flute 6	T497	Viola Attack 5	T552	Chorus Guitar, 10
T443	Xylophone 7	T498	Jazz Organ 6	T553	Organ Flute 9
T444	Soft Santur 6	T499	Nay 7	T554	Reed Horn 7
T445	Bag Pipe 7	T500	Dulcimer 7	T555	Hard Vibe 8
T446	Crystal 8	T501	Xylophone 9	T556	Twin Bones 7
T447	Soft Clav. 6	T502	Tron Flute 8	T557	Xylophone 10
T448	Bodhran 6	T503	Church Bells 4	T558	Attack Barafon 8
T449	Tsugaru 6	T504	Celesta 4	T559	Electric Vlapraphone 7
T450	Chorus Guitar, 7	T505	Clavi 4	T560	Crystal 9
T451	Nay 6	T506	Indian Flute 4	T561	Bag Pipe 10
T452	Soft Accord 6	T507	Jungle Bass 4	T562	Barafon 8

T563	Soft Santur 9	T576	Guitar Pinch 6	T589	Soft Clav, 10
T564	Wind Organ 9	T577	Indian Flute 5	T590	Bari & Tenor 10
T565	Bari & Tenor 9	T578	Bright String 5	T591	Nay 10
T566	Tsugaru 9	T579	Church Bells 5	T592	Soft Santur 10
T567	Oct Harp 7	T580	Electronic Guitar (Clean)	T593	Tron Flute 11
T568	Tubular Bells 8	T581	Shanai 11	T594	Soft Accord 10
T569	Soft Clav. 9	T582	Marimba 7	T595	Wind Organ 10
T570	Grow Guitar 8	T583	Organ Flute 10	T596	English Horn 12
T571	Tron Flute 10	T584	English Horn 11	T597	Shanai 12
T572	Nay 9	T585	Barafon 9	T598	Organ Flute 11
T573	Jazz Organ 8	T586	Tsugaru 10	T599	Bag Pipe 12
T574	Viola Attack 7	T587	Crystal 10	T600	Tsugaru 11
T575	Soft Accord 9	T588	Bag Pipe 11		

Appendix 2 (Rhythm Comparison Table)

R001	China1	R040	FastGospel	R079	GuadDance
R002	China2	R041	FolkRock	R080	Reggae12Beat
R003	China3	R042	RockBilly	R081	Reggae16Beat
R004	China4	R043	RockBoogie	R082	Bossanova
R005	China5	R044	RockChaCha	R083	Mambo 1
R006	China6	R045	RockClassical	R084	Mambo 2
R007	China7	R046	RockShuffle	R085	Bolero
R008	China8	R047	RockPop	R086	Cumbia
R009	China9	R048	Skiffle	R087	Latin Rock
R010	China10	R049	Funk Pop Rock	R088	Disco Latin
R011	Club Pop	R050	Contemp Rock	R089	Tijuana
R012	16 Beat Pop	R051	Acoustic Rock	R090	Reggae
R013	8 Beat Pop	R052	60's RockN	R091	Pop Mambo
R014	8 Beat Soul	R053	Standard Rock	R092	Latin Party Pop
R015	8 Beat Rock	R054	Brit Rock Pop	R093	Hard Mambo
R016	Rap Pop	R055	60's Vintage Rock	R094	Parranda
R017	Pop Rock	R056	Chart Rock Shfl	R095	Rock Lation
R018	60's Soul	R057	60's Pop Rock	R096	Slow Rock 1
R019	70's Soul	R058	Waltz	R097	Slow Rock 2
R020	Funk	R059	Cha Cha	R098	Slow Rock 3
R021	16 Beat Shuffle	R060	Rumba	R099	Slow Soul
R022	Twist	R061	Jive	R100	8 Beat Adria
R023	British Pop	R062	Pasodoble	R101	Classic Piano
R024	Hard Rock	R063	Samba 1	R102	Unplugged
R025	Fusion	R064	Samba 2	R103	Pop Ballad
R026	FunkShuffl	R065	Schlager Rock 1	R104	Pop New Age
R027	FusionShuffl	R066	Schlager Rock 2	R105	8 Beat Modern
R028	Classic 8Beat	R067	FoxTrot	R106	Country Ballad
R029	Vintage Gtr Pop	R068	Viennese Waltz	R107	Love Song
R030	Schlager Italia	R069	Tango1	R108	Modern Country Pop
R031	50's Pop	R070	Tango2	R109	Electro Pop
R032	Cool Pop	R071	German Waltz	R110	Acoustic Ballad
R033	Groovy Pop	R072	Carnival	R111	Piano Ballad
R034	60's Vintage Pop	R073	Organ Samba	R112	R&B Ballad
R035	80's Pop	R074	Reel	R113	Rock Ballad
R036	Rock'n Roll 1	R075	Gay Gordons	R114	Slow & Easy
R037	Rock'n Roll 2	R076	Scand Waltz	R115	Analog Ballad
R038	Straight Rock	R077	Salsa	R116	E_Ballad
R039	Jazz Rock	R078	Calypso	R117	80's EP Ballad

R118	80's Boy Band	R173	Ragtime	R228	Tango4
R119	70's Chart Ballad	R174	Frankly Soul	R229	Jig
R120	Romantic Ballad	R175	Jazz Funk	R230	Hawaiian
R121	90's Cool Ballad	R176	Classic Big Band	R231	Electronica
R122	Alp Ballad1	R177	French Jazz	R232	Funky House
R123	Alp Ballad2	R178	Jump Jive	R233	Club Beat
R124	Techno 1	R179	Swing Fox	R234	Retro Club
R125	Techno 2	R180	Slow Fox	R235	Mod Chart Pop
R126	Funky Disco	R181	Organ Cha Cha	R236	MOR Swing
R127	Saturday Night	R182	Organ Quick Step	R237	Retro Pop
R128	Club Latin	R183	Ober Polka	R238	Rumba Flamenco
R129	Disco Chocolate	R184	Polka Pop	R239	Cumbia1
R130	Disco Fox	R185	Blue Grass 1	R240	Parranda1
R131	Disco Funk	R186	Blue Grass 2	R241	Carnival2
R132	Disco Hands	R187	Blue Grass 3	R242	50's Pop1
R133	Disco Party	R188	Pop Waltz	R243	Groovy Pop1
R134	Disco Samba	R189	USA March	R244	Cool Pop1
R135	British Pop2	R190	Hully Gully	R245	Club Pop2
R136	Club Dance	R191	Tarantella	R246	16 Beat Pop2
R137	Modern R&B	R192	Limbo Rock	R247	8 Beat Pop2
R138	Hip Shuffle	R193	Swing Waltz	R248	8 Beat Soul2
R139	Charleston	R194	Pub Piano	R249	8 Beat Rock2
R140	DiscoPop	R195	Jazz Waltz 1	R250	60's Vintage Pop1
R141	DiscoSoul	R196	Jazz Waltz 2	R251	16 Beat Ballad2
R142	DiscoTrot	R197	Show Tune	R252	70's Pop Ballad
R143	EuroBeat	R198	Polka	R253	EP Ballad
R144	Rap	R199	Party Polka	R254	Power Ballad
R145	Rave	R200	Schlager Polka	R255	Guitar Ballad
R146	70's Disco Funk	R201	Hard Rock2	R256	New R&B Ballad
R147	Disco Philly	R202	60's RockN1	R257	Guitar Serenade
R148	Disco House	R203	Standard Rock1	R258	Organ Ballad
R149	80's Disco	R204	Brit Rock Pop1	R259	Pop Mambo1
R150	70's Disco1	R205	60's Vintage Rock*	R260	Latin Party Pop1
R151	70's Disco2	R206	Chart Rock Shf1	R261	80's Pop1
R152	Country 1	R207	Saeidy	R262	British Pop3
R153	Country 2	R208	German Rock	R263	70's Chart Ballad*
R154	Finger Pickin	R209	Schlager Beat	R264	Romantic Ballad1
R155	Country Brothers	R210	Rock & Roll	R265	90's Cool Ballad1
R156	New Country	R211	Rock & Roll Shf1	R266	Alp Ballad3
R157	Easy Country	R212	Oldies R & R	R267	Alp Ballad4
R158	70's Chart Cntry	R213	80's Rock & Roll	R268	Schlager Polka1
R159	Hoedown	R214	BritRockGuitar	R269	J-Pop Hit
R160	Country Shuffle	R215	Chart Rock Shf2	R270	Detroit Pop1
R161	Country Love Song	R216	New R&B	R271	Detroit Pop2
R162	Country Two Step	R217	Pop R&B	R272	Worship Med
R163	Big Band Shuffle 1	R218	Chart R&B	R273	Worship Fast
R164	Big Band Shuffle 2	R219	Rock Cha Cha1	R274	12-8 Ballad
R165	Big Band Shuffle 3	R220	Funk Shuffl 3	R275	Norteno
R166	Fast Band 1	R221	8 Beat Rock3	R276	60's 8 Beat
R167	Fast Band 2	R222	Rock Cha Cha2	R277	Laff
R168	Cat Groove	R223	Joropo	R278	Ober Walzer
R169	Dixie Jazz	R224	Reggaeton	R279	Bhangra
R170	Medium Jazz	R225	French Waltz	R280	Zouk
R171	Jazz Big Band	R226	Merengue	R281	German March
R172	Jazz Club	R227	Tango3	R282	Fnka

R283	Bolero Lento	R338	Schlager Shuffle	R393	Mariachi Waltz
R284	Sherif Reggae	R339	Schlager Pop	R394	US March
R285	Beguine	R340	Schlager Rumba	R395	Guitar Rumba
R286	Pop Classics	R341	Euro Pop Organ	R396	Slow Blues
R287	Live 8 Beat	R342	70's French Hit	R397	Jazz Waltz Fast
R288	Power Rock	R343	Italian Mazurka	R398	70's Country Pop
R289	Acoustic Rock1	R344	Jig2	R399	Dixieland
R290	Cool 8 Beat	R345	Hawaiian2	R400	40's Big Band
R291	Uptempo 8Beat	R346	Latin Rock2	R401	Schlager Alp
R292	90's Rock Ballad	R347	Schlager Samba1	R402	Chart Pop1
R293	80's Guitar Pop	R348	Schlager Samba2	R403	Organ Groove
R294	70's 8 Beat	R349	Scand Slow Rock	R404	Chart Pop2
R295	90's Guitar Pop	R350	Schlager 6-8	R405	Modern Shuffle
R296	Soft Rock	R351	Schlager Fox	R406	8 Beat Ballad1
R297	Chart GuitarPop	R352	Country Ballad1	R407	Bubblegum Pop
R298	Gujira	R353	Country Two Step1	R408	Rock Funk
R299	Modern Pop Bld	R354	Kool Shuffle	R409	West Coast Pop
R300	Soul	R355	Pleasant Country	R410	Classic 16 Beat
R301	Skiffle1	R356	Country Hits	R411	8 Beat Ballad2
R302	6-8Soul	R357	Country 8 Beat	R412	Chillout
R303	Soul Brothers	R358	Mod Cntry Bld1	R413	16 Beat Ballad1
R304	6-8Slow Rock	R359	Country Ballad2	R414	Epic Ballad
R305	Trance Pop	R360	Scand Country1	R415	Easy Ballad
R306	Mellow Hip Hop	R361	Scand Country2	R416	Cuban Son
R307	Classic Hip Hop	R362	Country Love Song1	R417	16 Beat Ballad3
R308	New Hip Hop	R363	Orch Big Band2	R418	Contemp Rock2
R309	Duranguense	R364	Big Band Fast2	R419	EP Ballad2
R310	70's Disco3	R365	Midnight Swing	R420	Cat Groove2
R311	70's Disco4	R366	Fusion2	R421	Guitar Serenade2
R312	Latin Disco	R367	Funk Shuffl 2	R422	Organ Ballad2
R313	Brazilian Samba	R368	Fusion Shuffl 2	R423	Pop Ballad2
R314	Brit Pop Swing	R369	Swing Fox1	R424	Norteno2
R315	Grupera	R370	Slow Fox1	R425	Retro Pop2
R316	Danzon	R371	Organ Cha Cha1	R426	Trance Pop2
R317	Dream Dance	R372	Organ Quick Step1	R427	Pop Gtr Ballad
R318	US Chart Hit	R373	Piano Boogie	R428	Ibiza 2002
R319	Soul R&B	R374	Lovely Shuffle	R429	Chillout Cafe
R320	R&B Soul Ballad	R375	Jazz Gtr Club	R430	70's Glam Piano
R321	Euro Hip Hop	R376	Modern Jazz	R431	French House
R322	Trip Hop	R377	Acoustic Jazz	R432	Bhajan2
R323	60's RockN2	R378	Cool Jazz Ballad	R433	16 Beat Pop3
R324	Bhajan	R379	Modern Jazz Bld	R434	16 Beat Pop4
R325	Hip Hop Groove	R380	Easy Listening	R435	Enka2
R326	Euro Trance	R381	Bebop	R436	Blues Rock
R327	6-8 Trance	R382	Orch Big Band1	R437	Ibiza 2004
R328	Latin DJ's	R383	Kool Funk	R438	80's Rock & Roll1
R329	Bomba	R384	Blueberry Blues	R439	Acoustic Rock2
R330	Club House	R385	Shuffle Blues	R440	Club Pop3
R331	House	R386	Mambo 3	R441	Power Rock2
R332	Disco Teens	R387	Mambo 4	R442	Rock'n Roll 3
R333	Happy Reggae	R388	Big Band Fast1	R443	Cool8 Beat2
R334	Pop Latin	R389	Orchestra Swing1	R444	British Pop4
R335	Fast Bossa	R390	Orchestra Swing2	R445	British Pop5
R336	6-8 Modern	R391	70's Chart Cntry1	R446	8 Beat Soul3
R337	6-8 Orchestral	R392	Jazz Waltz Mad	R447	BritRockGuitar1

R448	Brytyjczyk Głaz Pop2	R466 60 lat dusza 2	R484	szlagier polka2
R449	Blues jagodowy2	Połączenie R467 tasować 3	R485	Grupa 2
450 zł	Gujiira2	Połączenie R468 tasować 4	R486	lanczący 2
R451	Głaz Ballada2	R469 6-8 Nowoczesny2	R487	szlagierAlp2
R452	dusza 2	470 6-8 orkiestrowy 2	R488	powiedziałem2
R453	klasyczny 8 Beat 2	R471 powolny dusza 2	R489	6-8 marzec
R454	Bolerko 2	R472 fortepian Ballada2	490 zł	Bluegrass
R455	dusza Bracia2	R473 Biodro Chmiel Rowek 2	R491	Muzyka pop Łaciński2
R456	Szczęśliwego Reggae2	R474 Biodro tasować 2	R492	pokaż Tune2
R457	6-8 wolno RockK2	Organy R475 Rowek 2	R493	skandować człapać
R458	Bolero Sobota 2	Wykres R476 Pop3	R494	czcić powoli
R459	Północny swing2	R477 Mambo5	495 zł	Bachata
460 zł	francuski Jazz2	R478 Mambo6	R496	Romantyczny Ballada2
R461	łacina impreza Pop2	R479 Dyskoteka Łacina 2	R497	Analog Ballada2
R462	Tango5	480 zł Szybko Bossa2	498 zł	Elektro Pop2
R463	Dzwon 06	R481 Lis Kłus 2	499 zł	Blues RockK2
R464	parranda2	R482 pasodoble2	500 zł	Lata 90. dusza
R465	80- te Pop2	R483 Góry Wysokie walc 2		

Appendix 3 (Demonstration Song Comparison Table)

S001	S035 S036 S037 S038 S039	Beethove	artowany klawiatura
S002		n Menuet	Chopina Nokturn
		W G	Mendelssohna Ks.
S003		Po lo	Hingslied Reverie
S004		53 n Heroic	Beethovena fortepian sonata przy
S005		naise w n	0,49-2 1 szt fioletowy
S006		As-dur	Beethovena
S007		główny,	Szkocja
S008		Odc.	Debussy'ego
S009		piosenka	Aeabesque
S010		The Do	Kawaler
S011		widzenia	Wynalazek
S012		K	Lisza miłosne sny
S013		a	Debussy'ego La wpisać
S014		w	włosy de Linia Menueta
S015		a	Mozarta
S016		l	Kawaler walc W Amino
		e	baż n thoven- pi n nie sonata NA
		r	13 żalosne 2. miejsce fioletowy
S017			Schumanna Wesoly
S018		T	rodak Szuberta Marche'a
S019		h	wojskowy
S020		e	Kawaler Bourree
S021			Burgmiller
S022		p	pastorale
S023		o	schumann
S024		n	sicilienne
S025		i	Haydna Mała
S026		e	serenada
S027		w	ostrygi Dolly S
S028		a	DreamingAwa kening
		ż	Chopina Wielkie kłamstwo
S029			Okulary włączone. 18 polak
S030		-	uśmiech
S031			Zaimprovizowany
S032		Z	NIE. 3, NA. 90
S033		a	Brahmsa Walc
S034		h	Nie 15

chenyin Li
sztuki
Debussy'ego
Spacer po
Golliwogs
Klawesyn
Muzyka
Mo
zar
t
Bly
sk
Bly
sk
Ma
ła
gw
iaz
da
Ka
wa
ler
Me
nu
et
Ryszard
Ballada
wlaćAdeline
Ryszard
świst pong
sous
Drzewa
M
i
ł
o
ś
ć
R
i
c
h
a
r
d
a
A
c
o
m
m
e
,
a
R
y
s
z
a
r
d

Małżeństwo D ' Miłość
pachelbel armata W D

Badarzewska Modlitwa dziewicy
Czajkowski- Taniec s mirlitony
Humoreska Dvoraka

-15-

S040 Joplin Komik Łk.
S041 Daquin LeC Kogo Karl
S042 Bohm F Zawiesić
S043 Korsakow Trzmiel
S044 Haydn - wschód słońca
S045 Jan Sebastian Kawaler sonata
S046 uwertura „ william
S047 Powiedzieć "
S048 serenada schuberta
S049 Menuet z Larlesienne
S050 polonez
S051 sonata clementiego
S052 Szopen Rewolucja
S053 Etiuda Beethoven
S054 Symfonia losu
S055 Musical Chwile
S056 Szopen Czarny
S057 kenys
S058 Szopen preludium Kropła deszczu ,
S059 Opcja 28- 15 Szopen mały piesek
S060 Szopen Fantazja Zaimprovizowany
S061 polonez w tonacji A-dur, op40 ,
S062 NIE 1 Dubessy clair De księżyc
S063 Schuberta Monentsa
S064 Muzyka Mozarta po turecku
S065 marzec
S066 Chopina - wazon op . 64 nr 2
S067 Beethovena Rojenia sonata
S068 Sen Schumanna
S069 Beethovena Dla Elizy
S070 Beethovena Marcia Alla
S071 Turca Mozarta sonata
S072 Mendelssohn Pieśń Jagera do .
S073 19b-3 chopin - Nokturn do . 9
S074 NIE . 2
S075 TornaAsurriendo
S076 MOZART K448 (I Andante)
S077 Ten Walc Wesolej Wdowy
S078 cynkwantaina
S079 słodkie paaand Do
S080 widzenia Barkarola
polka klarnetowa
głos wiosny
walc Kwiaty
katusza
NA skrzydełka poza piosenką

1 Battery



WARNING

- o proszę uważaj na następujące uprzejmości
- o Do nie próbuj demontować lub spowodować zwarcie
- bateria o Do nie wystawiać lub spalić To W ten ogień
- o Do nie mieszać nowy i stary bateria
- o Do nie mieszać różnych typów z baterie
- o Do nie opłata ten bateria
- o Ten pozytywny i bieguny ujemne z ten bateria musi być prawidłowo zainstalowany
- o Proszę wyjmij baterię z klawiatury elektronicznej. Jeśli tak zrobisz nie używać dla długi czas,

2 Exception



WARNING

proszę zrobić następujące rzeczy kroki kiedy wyjątek dla wersji elektronicznej

klawiatura jak wściekły, na gorąco i Więcej

NA. 1). moc wyłączony

2). ciągnąć ten adapter w dół z ten moc gniazdo NA ten ściana Kiedy Czy używając.

3). kontakt twój lokalny kupiec W czas .

Jego normalna Do adapter dostawanie gorący Kiedy długi czas używając klimatyzacja adapter, nie wskazywać Awaria

 
Proszę wyłączyć i zrestartuj klawiaturę elektroniczną, gdy funkcja czasami problem,

3 Install the battery

- 1). Wyjście ten śruba I usunąć ten bateria okładka
- 2). umieścić ten bateria z prawidłowy pozytywny + I negatywny - kierunek do bateria szczelina z 4 x" AA " 1.5V
- 3). umieścić ten bateria okładka I Zamek ten śruby

Ten produkt zawiera elementy elektroniczne i powinien nie pozwalać płynąć Do Wchodzić Lub Być używany W wilgoć środowiska .

Codziennie pyłoszczelny czyszczenie powinien Być zrobione Dobrze, I plamy powierzchniowe Móc Być wytarty z A miękkimi I czystymi tkaninami .



VEVOR®

TOUGH TOOLS, HALF PRICE

Wsparcie techniczne i Certyfikat e-wa-
rranty [Www.vevor.com/wsparcie](http://www.vevor.com/wsparcie)



Technisch ondersteuning en E-garantie certificaat

Www .vevor . com / ondersteuning

PIANO GEBRUIKER HANDMATIG

MODEL : BD -662

wij gaan door met toegewijd zijn naar u voorzien gereedschap met concurrerende prijs.

"redden Half", "Halve prijs" of andere soortgelijke uitdrukkingen gebruikt door ons vertegenwoordigt alleen een

schatting van de besparingen die u zou kunnen profiteren van het kopen bepaalde gereedschappen met ons vergeleken met de grote topmerken en doet niet per se betekenen naar alles bedekken categorieën van gereedschappen aangeboden door ons. Jij

Zijn vriendelijk herinnerd om zorgvuldig te verifiëren wanneer u Zijn een plaatsen bestellen met ons als je Zijn Eigenlijk besparen half in vergelijking met de grootste topmerken.

MODEL: BD-662



(The picture is for reference only, please refer to the actual object)

BEHOEFTE HULP? CONTACT ONS!

Hebben product vragen? Behoeftetech nisch steun? Alsjeblieft gevoel vrij contact opnemen ons :

Technische ondersteuning en E-garantie
certificaat www.vevor.com/ondersteuning

Dit is de origineel instructie , Alsjeblieft lezen alle handmatig instructies zorgvuldig door voordat u gaat gebruiken. VEVOR behoudt zich het recht voor A duidelijk interpretatie van onze gebruikershandleiding . De verschijning van de productenhal onderworpen zijn aan de product jij ontvangen. vergeef me alsjeblieft ons dat we niet zullen u informeren opnieuw als er is enige technologie of software updates over

ons product.

Accessoire

stroom koord * 1

Microfoon * 1

Muziekbladstandaard * 1

Oordopjes * 1

aanhouden pedaal

* 1 Muziek laken


klem * 1

MIDI Snoer * 1


piano stickertje * 1

toetsenbord staan
* 1


Installation diagram of Keyboard stand

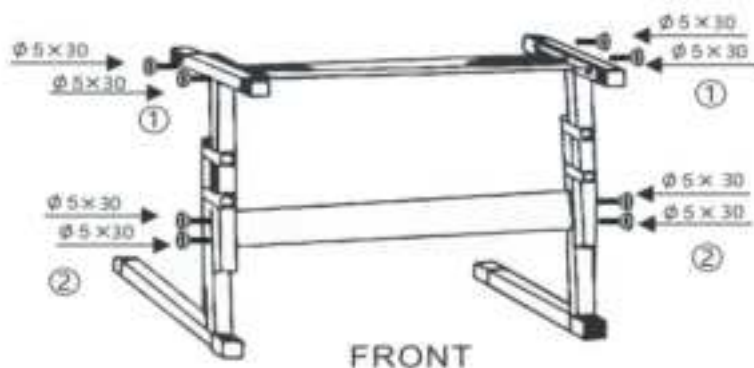 

 
④ Connecting the screw hole position at the bottom of the piano body

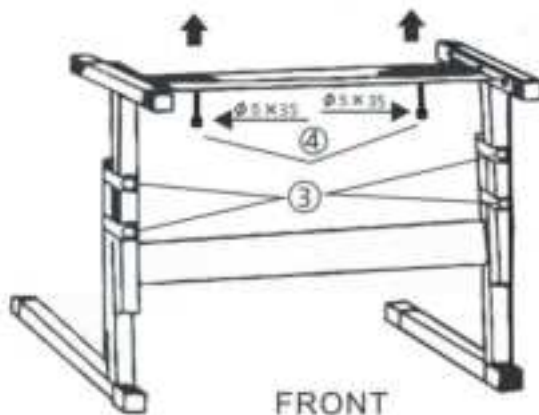

 ③ Adjust the limit screw at the same time on the left and right sides to adjust the appropriate height

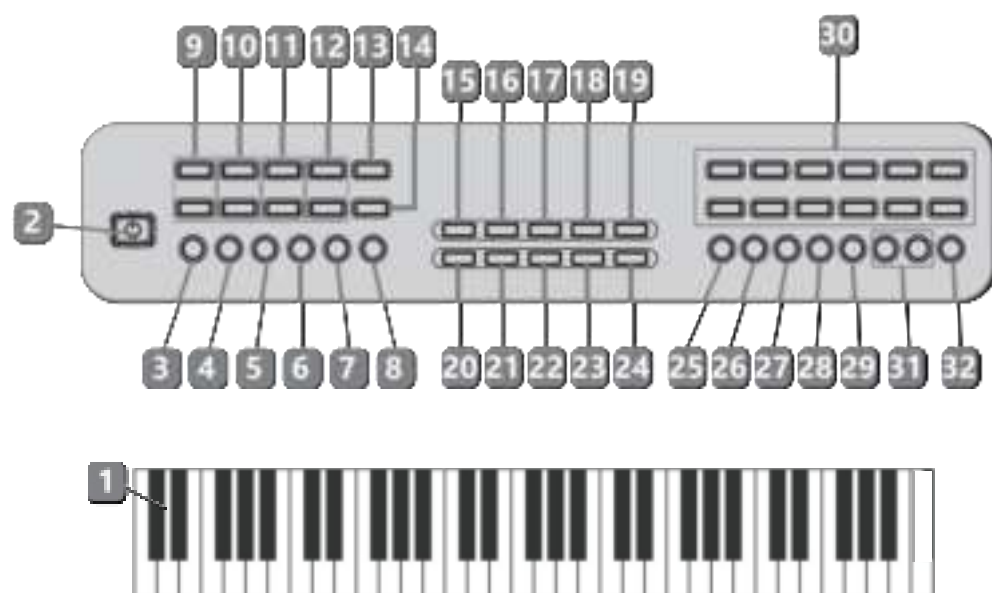

1 KEYBOARD	9 VOLUME+/-	17 FILL-IN/LED	25 TONE
2 POWER	10 RHYTHM VOL+/-	18 FILL-IN2	26 RHYTHM
3 RECORD	11 TEMPO+/-	19 BASSCHORDS	27 PIANO
4 PROG	12 TRANSPOSE+/-	20 ONE KEY	28 DEMO ONE
5 PLAY	13 SUSTAIN	21 FOLLOW	29 DEMO ALL
6 METRONOME	14 VIBRATO	22 ENSEMBLE	30 NUMBER SELECTION AREA
7 KEY DRUM	15 SYNC	23 CHORD. OFF	31 <</VOL- >>/VOL+
8 DUAL KEY	16 CHORD	24 START/STOP	32 >>/CHANGE

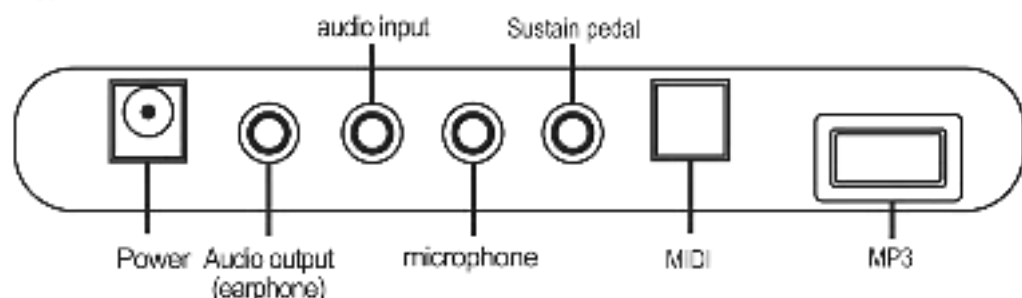 

1.KEYBOARD\2.POWER

Turn on the power, you can play the "keyboard" and enter the performance state. In standby mode, after 3 minutes of no operation, it will automatically enter the sleep mode, and can be restored by pressing any key.

3.RECORD

Press the **【RECORD】** key to enter the recording mode, and then press any piano key or drum key to start the recording.

start recording. The maximum number of recordings is 80. When the recording is full, it cannot continue to record another note.

When recording, you can press the play button at any time to play.

Each time this button is pressed, the last memory will be cleared and the recording mode will be re-entered.

After exiting the recording mode, the last memory will be cleared.

4.PROG

Press **【PROG】** key to enter programming mode, the preset speed is 120.

The pressed drum sound can be recorded. In edit mode, only the drum sound is valid.

The maximum number of records is 32. When the record is full, it cannot continue to record another drum sound. You can press the button at any time, press the Play key to play the edited drum sound.

Each time this key is pressed, the last memory will be cleared and the programming mode will be re-entered.

After exiting the programming mode, the last memory will be cleared.

In this mode, the keys are automatically converted to keyboard drums.

5.PLAY

In the recording mode, press the **【PLAY】** for the first time to play the recorded notes.

Press the **【PLAY】** for the second time to stop playing.

In programming mode, press the **【PLAY】** for the first time to play the recorded drum sound, and press the **【PLAY】** for the second time to stop playing

If there is no recorded value before, press the **【PLAY】** and no action will take place.

6.METRONOME

Pressing the **【METRONOME】** key, the action function is the click sound, there are 7 kinds of changes, 1/4 beat → 2/4 beat → 3/4 beat → 4/4 beat... → stop, the default value of the beat is 120.

7.KEY DRUM

Press the **【KEY DRUM】** key to get percussion sound on the corresponding key.

8.DUAL KEY

Press **【DUAL KEY】** for the first time to activate the dual keyboard function, and press **【DUAL KEY】** for the second time to select eliminate the double keyboard function.

When the dual keyboard function is activated, the scales of the left keys C2-B3 will be played correspondingly to the scales of C3-B4. The scales of C4-C7 on the right keys will be played as C3-C6 scales. You can use the digital area and the [+] [-] keys or digital switches to select the sub-tone instead of the left piano.key tone.

9.VOLUME+/-

Use **【VOLUME+/-】** to control the volume, press **【VOLUME+】** to represent To increase the volume up, press **【VOLUME-】** to decrease the volume down. The volume control has a total of 17 segments (0~16), and the default value is the 13th segment after power-on.

Press and hold **【VOLUME+/-】** for more than 1 second to continuously increase /decrease the volume.

10.RHYTHM+/-

Press **【RHYTHM+/-】** to select the accompaniment volume.

The accompaniment volume control has a total of 17 segments (0~16), and the preset value is the 13th segment after power-on.

Press and hold the **【RHYTHM+/-】** for more than 1 second to continuously increase/decrease the accompaniment volume.

11.TEMPO+/-

Press **【TEMPO+/-】** to select the speed.

The speed control has a total of 270 stages (30~300), and the preset value is the 90th stage after power-on (speed = 120)

Press and hold the **【TEMPO+/-】** for more than 1 second to continuously increase/decrease the speed.

When playing the selected song, the tempo of the song will be used, regardless of the set tempo.

When playing the selected rhythm, the set tempo will prevail.

12.TRANSPOSE+/-

Press **【TRANSPOSE+/-】** to select Transpose .

There are 25 segments (-12~12) in total for transposition control, and the preset value is at segment 13 after power-on.

Press and hold the **【TRANSPOSE+/-】** for more than 1 second to continuously increase/decrease the transpose.

The chord pitch also changes with the transpose value.

13.SUSTAIN

Press the **【SUSTAIN】** key to enable or disable the sustain function.

When the sustain function is turned on, when you play the keyboard, the sound will have a prolongation effect.

14.VIBRATO

Press the **【VIBRATO】** key to enable or disable the vibrato function.

When the vibrato function is turned on, the sound will vibrate when you play the keyboard.

15.SYNC

Press the [Sync] key for the first time to enter the sync mode, and press the [Sync key] for the second time to exit the sync mode.

When entering sync mode, pressing the first 19 keys on the left will automatically play the selected rhythm (chord).

16.CHORD

Press the **【CHORD】** for the first time to enter the comprehensive chord mode, and press the **【CHORD】** for the second time to exit the composite chord mode.

【CHORD】 Only in rhythm and general mode, the function can occur. When playing the rhythm, press **【CHORD】** and press multiple keys within the range of C2~F3#.

After fingering, you can hear the corresponding chord accompaniment. The single-fingered chords are played.

When the rhythm is not playing, press the **【CHORD】** and press the multi-finger key within the range of keys C2~F3#, and you can hear the corresponding chord accompaniment. Otherwise, the single-fingered chords are played. Comprehensive fingering can be used with rhythm/chord/synchronization.

17.FILL-IN/LED 18.FILL-IN2

【FILL-IN/LED】 When the rhythm is not playing, pressing it is the key light switch function.

【FILL-IN】 and **【FILL-IN2】** function only when the rhythm is played. Interlude: During the rhythm playing, press the **【FILL-IN】** to add the fill-in function to the rhythm.

When the measure is finished, insert an interlude.

During rhythm playback, press and hold the **【FILL-IN】** to continue inserting.

19.BASSCHORDS

Change the bass voice in the chord to the piano voice.

20.ONE KEY

Press the **【ONE KEY】** for the first time to enter the random play mode, and then press any key to issue the correct note.

Press the **【ONE KEY】** for the second time to exit the strumming mode.

21.FOLLOW

Press the **【FOLLOW】** for the first time to enter the follow mode, and press the **【FOLLOW】** for the second time to exit the follow mode.

After entering the follow play mode, use the current song to teach, after the song is played, the main melody will not be played.

The user must press the corresponding key according to the note displayed on the LCD or the keyboard indicator light.

To continue playing the next note, the background sound repeats the measure until the end of the song.

After the song is over, play the next song.

In follow mode, you can use the number selection area to select other songs.

22.ENSEMBLE

Press the **【ENSEMBLE】** for the first time to enter the ensemble mode, and press the **【ENSEMBLE】** for the second time to exit the ensemble mode.

After entering the ensemble mode, use the current song to teach, after the song is played, the user can play the piano at will key and interrupt the main chord. If the key is not pressed after 5 seconds, the main chord will resume playing automatically. background

The sound plays completely until the end of the song.

When the song is over, play the next song together.

In Ensemble mode, other songs can be selected using the number selection area.

23.CHORD.OFF

Turn off composite chords.

24.START/STOP

Short press [Start/Stop Key] for the first time to start playing the rhythm, and

short press [Start/Stop Key] for the second time, to stop playing the rhythm.

Exit this mode in teaching, recording, playback, metronome, demo songs, etc.

25.TONE

After pressing the **【TONE】**, you can use the number selection area and the **[+][-]** keys to select the tone.

26.RHYTHM

After pressing the **【RHYTHM】**, you can use the number selection area and the **[+] [-]** keys to select the rhythm.

27.PIANO

In other voice states, press the [Piano] key to set the piano voice, and press the **【PIANO】** key for the second time to restore the previous sound.

(The default is piano sound when power on, this button is invalid)

28.DEMO ONE

Press the **【DEMO ONE】** button for the first time to enter the click mode, and press the **【DEMO ONE】** for the second time to exit the click mode.

After entering the sing-along mode, playback starts from the next song.

When the song finishes playing, the current song is played repeatedly.

In sing-along mode, other songs can be selected using the number selection area.

29.DEMO ALL

Press the **【DEMO ALL】** for the first time to enter the continuous singing mode, and press the **【DEMO ALL】** for the second time to exit the continuous singing mode.

After entering continuous singing mode, playback starts from the first song.

When the song is finished, continue to play the next song and play all the songs in a loop.

In sing-along mode, other songs can be selected using the number selection area.

30 .NUMBER SULECTION AREA

Use the number keys 0-9 to input the corresponding timbre, rhythm, song code for quick selection, use the +/- keys can be selected sequentially.
Press and hold the "+" or "-" key for more than 2 seconds to continuously increase/decrease the selection.

If neither tone mode or rhythm mode is selected, the default value is tone mode after power-on.

If neither tone mode or rhythm mode is selected, the default value is tone mode after power-on.

31 . ◀/VOL- ▶/VOL+ 32 . ▶/CHANGE

Press (within 1 second) [▶/CHANGE] to play or pause the song. In pause mode, press [▶/CHANGE] to continue playing the song.

Press (within 1 second) [◀/VOL-] to select the previous song.

Press (within 1 second) [▶/VOL+] to select the next song.

Press and hold the [◀/VOL-] for more than 1 second to decrease the volume. Long press [▶/VOL+] to exceed increase the volume after 1 second.

Appendix 1 (Voice Comparison Table)

T001	Acoustic Grand Piano	T026	Acoustic Guitar (steel)	T051	Synth Strings 1
T002	Bright Acoustic Piano	T027	Electric Guitar (jazz)	T052	Synth Strings 2
T003	Electric Grand Piano	T028	Electric Guitar (clean)	T053	Choir Aahs
T004	Honky-tonk Piano	T029	Electric Guitar (muted)	T054	Voice Oohs
T005	Rhodes Piano	T030	Overdriven Guitar	T055	Synth Voice
T006	Chorused Piano	T031	Distortion Guitar	T056	Orchestra Hit
T007	Harpsichord	T032	Guitar Harmonics	T057	Trumpet
T008	Clavichord	T033	Acoustic Bass	T058	Trombone
T009	Celesta	T034	Electric Bass(finger)	T059	Tuba
T010	Glockenspiel	T035	Electric Bass (pick)	T060	Muted Trumpet
T011	Music box	T036	Fretless Bass	T061	French Horn
T012	Vibraphone	T037	Slap Bass 1	T062	Brass Section
T013	Marimba	T038	Slap Bass 2	T063	Synth Brass 1
T014	Xylophone	T039	Synth Bass 1	T064	Synth Brass 2
T015	Tubular Bell	T040	Synth Bass 2	T065	Soprano Sax
T016	Dulcimer	T041	Violin	T066	Alto Sax
T017	Drawbar Organ	T042	Viola	T067	Tenor Sax
T018	Percussive Organ	T043	Cello	T068	Baritone Sax
T019	Rock Organ	T044	Contrabass	T069	Oboe
T020	Church Organ	T045	Tremolo Strings	T070	English Horn
T021	Reed Organ	T046	Pizzicato Strings	T071	Bassoon
T022	Accordion	T047	Orchestral Harp	T072	Clarinet
T023	Harmonica	T048	Timpani	T073	Piccolo
T024	Tango Accordion	T049	String Ensemble 1	T074	Flute
T025	Acoustic Guitar (nylon)	T050	String Ensemble 2	T075	Recorder

Appendix 1 (Voice Comparison Table)

T076	Pan Flute	T129	Yong Gin	T181	Soft Santur
T077	Bottle Blow	T130	Zheng	T182	Dual Horns 1
T078	Shakuhachi	T131	Zhong Ruan	T183	Bodhran
T079	Whistle	T132	Pi Pa	T184	Tubular Bells 2
T080	Ocarina	T133	Big Souna	T185	Suona 2
T081	Lead 1 (square)	T134	Souna	T186	Castanets
T082	Lead 2 (sawtooth)	T135	Er Hu	T187	Attack Harp 1
T083	Lead 3 (caliope lead)	T136	Yue Hu	T188	Electric Viaphone
T084	Lead 4 (chiff lead)	T137	Di Zi	T189	Soft Sax 1
T085	Lead 5 (charang)	T138	Bong Di	T190	Soft Clav.
T086	Lead 6 (voice)	T139	Koto 2	T191	Soft Accord
T087	Lead 7 (fifths)	T140	Qui Di	T192	Wind Organ
T088	Lead 8 (bass+lead)	T141	Xylophone 2	T193	Viola Attack
T089	Pad 1 (new age)	T142	Dulcimer 2	T194	Bari & Tenor
T090	Pad 2 (warm)	T143	Guitar Pinch 2	T195	Soft Guitar 1
T091	Pad 3 (polysynth)	T144	Slow Violin	T196	Grow Guitar
T092	Pad 4 (choir)	T145	Bright String	T197	Didgeridoo 1
T093	Pad 5 (bowed)	T146	Jungle Bass 2	T198	Attack Barafon
T094	Pad 6 (metallic)	T147	Indian Flute	T199	Mute Barafon 1
T095	Pad 7 (halo)	T148	Clavi 2	T200	Nay
T096	Pad 8 (sweep)	T149	Celesta 2	T201	Didgeridoo 2
T097	FX 1 (rain)	T150	Church Bells	T202	Dual Horns 2
T098	FX 2 (soundtrack)	T151	Kalimba 2	T203	Hard Barsoon 2
T099	FX 3 (crystal)	T152	Steel Bell 1	T204	Kawala 2
T100	FX 4 (atmosphere)	T153	Tenor Sax 2	T205	Soft Guitar 2
T101	FX 5 (brightness)	T154	Woodblock 2	T206	Mute Barafon 2
T102	FX 6 (goblins)	T155	Electric Guitar (Clean) 2	T207	Hard Barsoon 1
T103	FX 7 (echoes)	T156	Shanai 2	T208	Tron Flute
T104	FX 8 (sci-fi)	T157	Marimba 3	T209	Kawala 1
T105	Sitar	T158	Dulcimer 3	T210	Jazz Organ
T106	Banjo	T159	Reed Organ 3	T211	Synth Harpsi. 3
T107	Shamisen	T160	Koto 3	T212	Tenor Sax 3
T108	Koto	T161	Crystal 1	T213	Steel Bell 3
T109	Kalimba	T162	Bag Pipe 2	T214	Kalimba 4
T110	Bagpipe	T163	Barafon	T215	Shamisen 3
T111	Fiddle	T164	Organ Flute	T216	English Horn 3
T112	Shanai	T165	Kalimba 3	T217	Shanai 3
T113	Tinkle Bell	T166	Reed Horn	T218	Soft Sax 2
T114	Agogo	T167	English Horn 2	T219	Attack Harp 2
T115	Steel Drums	T168	Electric Guitar (Clean) 3	T220	Castanets 2
T116	Woodblock	T169	Shamisen 2	T221	Suona 3
T117	Taiko Drum	T170	Koto 4	T222	Xylophone 3
T118	Melodic Tom	T171	Hard Vibe 2	T223	Koto 5
T119	Synth Drum	T172	Twin Bones	T224	Attack Clav. 4
T120	Reverse Cymbal	T173	Synth Harpsi. 1	T225	Synth Harpsi. 4
T121	Guitar Fret Noise	T174	Attack Clav. 1	T226	Twin Bones 2
T122	Breath Noise	T175	Chorus Guitar.	T227	Hard Vibe 3
T123	Seashore	T176	Steel Bell 2	T228	Reed Horn 2
T124	Bird Tweet	T177	Tsugaru	T229	Organ Flute 2
T125	Telephone Ring	T178	Oct Harp	T230	Steel Bell 4
T126	Helicopter	T179	Synth Harpsi. 2	T231	Chorus Guitar. 2
T127	Applause	T180	Attack Clav. 2	T232	Dual Horns 3
T128	Gunshot				

T233	Soft Santur 2	T288	Tenor Sax 4	T343	English Horn 5
T234	Barafon 3	T289	Twin Bones 3	T344	Shamisen 5
T235	Bag Pipe 3	T290	Hard Vibe 4	T345	Kalimba 7
T236	Crystal 3	T291	Koto 7	T346	Steel Bell 7
T237	Attack Clav. 3	T292	Shamisen 4	T347	Tenor Sax 5
T238	Electric Vibraphone 2	T293	Electric Guitar (Clean) 5	T348	Chorus Guitar. 4
T239	Attack Harp 3	T294	English Horn 4	T349	Steel Bell 8
T240	Attack Barafon 2	T295	Reed Horn 3	T350	Organ Flute 4
T241	Didgeridoo 3	T296	Kalimba 6	T351	Reed Horn 4
T242	Grow Guitar 2	T297	Organ Flute 3	T352	Hard Vibe 5
T243	Soft Guitar 3	T298	Barafon 2	T353	Twin Bones 4
T244	Soft Clav. 2	T299	Dual Horns 5	T354	Synth Harpsi. 8
T245	Soft Sax 3	T300	Soft Santur 3	T355	Attack Clav. 8
T246	Tubular Bells 3	T301	Attack Clav. 5	T356	Koto 8
T247	Bodhran 2	T302	Synth Harpsi. 5	T357	Xylophone 5
T248	Oct Harp 2	T303	Oct Harp 3	T358	Didgeridoo 7
T249	Tsugaru 2	T304	Tsugaru 3	T359	Attack Barafon 4
T250	Bari & Tenor 2	T305	Steel Bell 6	T360	Attack Harp 7
T251	Wind Organ 2	T306	Chorus Guitar. 3	T361	Electric Vibraphone 4
T252	Soft Accord 2	T307	Attack Clav. 6	T362	Attack Clav. 7
T253	Attack Harp 4	T308	Synth Harpsi. 6	T363	Crystal 4
T254	Viola Attack 2	T309	Wind Organ 3	T364	Bag Pipe 5
T255	Kawala 3	T310	Soft Accord 3	T365	Barafon 4
T256	Soft Sax 4	T311	Soft Clav. 3	T366	Soft Santur 4
T257	Jazz Organ 2	T312	Soft Sax 5	T367	Dual Horns 7
T258	Nay 2	T313	Electric Vibraphone 3	T368	Wind Organ 4
T259	Mute Barafon 3	T314	Attack Harp 5	T369	Bari & Tenor 4
T260	Dulcimer 5	T315	Castanets 3	T370	Tsugaru 4
T261	Xylophone 4	T316	Suona 4	T371	Oct Harp 4
T262	Tron Flute 2	T317	Tubular Bells 4	T372	Bodhran 4
T263	Hard Barsoon 3	T318	Bodhran 3	T373	Tubular Bells 6
T264	Mute Barafon 4	T319	Dual Horns 6	T374	Soft Sax 7
T265	Soft Guitar 4	T320	Didgeridoo 6	T375	Soft Clav. 4
T266	Kawala 4	T321	Nay 3	T376	Soft Guitar 7
T267	Hard Barsoon 4	T322	Mute Barafon 5	T377	Grow Guitar 4
T268	Dual Horns 4	T323	Attack Barafon 3	T378	Hard Barsoon 7
T269	Didgeridoo 4	T324	Didgeridoo 5	T379	Tron Flute 4
T270	Steel Bell 5	T325	Grow Guitar 3	T380	Mute Barafon 7
T271	Kalimba 5	T326	Soft Guitar 5	T381	Nay 4
T272	Church Bells 2	T327	Bari & Tenor 3	T382	Jazz Organ 4
T273	Celesta 3	T328	Viola Attack 3	T383	Soft Sax 8
T274	Clavi 3	T329	Synth Harpsi. 7	T384	Kawala 7
T275	Indian Flute 2	T330	Jazz Organ 3	T385	Viola Attack 4
T276	Jungle Bass 3	T331	Kawala 5	T386	Attack Harp 8
T277	Bright String 2	T332	Tron Flute 3	T387	Soft Accord 4
T278	Slow Violin 2	T333	Hard Barsoon 5	T388	Guitar Pinch 4
T279	Guitar Pinch 3	T334	Mute Barafon 6	T389	Indian Flute 3
T280	Bag Pipe 4	T335	Soft Guitar 6	T390	Bright String 3
T281	Crystal 2	T336	Kawala 6	T391	Church Bells 3
T282	Koto 6	T337	Hard Barsoon 6	T392	Didgeridoo 8
T283	Reed Organ 4	T338	Suona 5	T393	Dual Horns 8
T284	Dulcimer 4	T339	Castanets 4	T394	Hard Barsoon 8
T285	Marimba 4	T340	Attack Harp 6	T395	Kawala 8
T286	Shanai 4	T341	Soft Sax 6	T396	Soft Guitar 8
T287	Electric Guitar (Clean) 4	T342	Shanai 5	T397	Mute Barafon 8

T398	Electronic Guitar (Clean) 6	T453	Tron Flute 6	T508	Bright String 4
T399	Shanai 6	T454	Bari & Tenor 6	T509	Slow Violin 3
T400	Marimba 5	T455	Wind Organ 6	T510	Guitar Pinch 5
T401	Koto 9	T456	Grow Guitar 5	T511	Bag Pipe 9
T402	Xylophone 6	T457	Attack Barafon 5	T512	Crystal 7
T403	Tenor Sax 6	T458	Dual Horns 9	T513	Reed Organ 5
T404	Organ Flute 5	T459	Hard Barsoon 10	T514	Dulcimer 6
T405	Kalimba 9	T460	Hard Barsoon 9	T515	Marimba 6
T406	English Horn 6	T461	Tron Flute 7	T516	Shanai 9
T407	Electronic Guitar (Clean) 7	T462	Jazz Organ 5	T517	Electronic Guitar (Clean) 8
T408	Shamisen 6	T463	Tenor Sax 8	T518	Tenor Sax 9
T409	Koto 10	T464	Steel Bell 9	T519	Twin Bones 6
T410	Kalimba 8	T465	Shamisen 8	T520	Hard Vibe 7
T411	Barafon 5	T466	English Horn 8	T521	Shamisen 9
T412	Chorus Guitar, 8	T467	Shanai 8	T522	Electronic Guitar (Clean) 9
T413	Tsugaru 5	T468	Attack Harp 9	T523	English Horn 9
T414	Synth Harpsi, 9	T469	Castanets 5	T524	Reed Horn 6
T415	Crystal 5	T470	Suona 6	T525	Organ Flute 8
T416	Bag Pipe 6	T471	Xylophone 8	T526	Barafon 6
T417	Synth Harpsi, 10	T472	Attack Clav. 10	T527	Soft Santur 8
T418	Soft Sax 9	T473	Twin Bones 5	T528	Oct Harp 6
T419	Soft Clav. 5	T474	Hard Vibe 6	T529	Tsugaru 8
T420	Bodhran 5	T475	Reed Horn 5	T530	Chorus Guitar, 9
T421	Bari & Tenor 5	T476	Organ Flute 7	T531	Wind Organ 8
T422	Soft Guitar 9	T477	Steel Bell 10	T532	Soft Accord 8
T423	Didgeridoo 9	T478	Chorus Guitar, 8	T533	Soft Clav. 8
T424	Mute Barafon 9	T479	Dual Horns 10	T534	Electric Vlapraphone 6
T425	Nay 5	T480	Soft Santur 7	T535	Castanets 6
T426	Soft Santur 5	T481	Barafon 7	T536	Suona 7
T427	Kawala 10	T482	Bag Pipe 8	T537	Tubular Bells 7
T428	Soft Guitar 10	T483	Crystal 8	T538	Bodhran 8
T429	Mute Barafon 10	T484	Attack Clav. 9	T539	Nay 8
T430	Tron Flute 5	T485	Electric Vlapraphone 5	T540	Attack Barafon 7
T431	Kawala 9	T486	Attack Harp 10	T541	Grow Guitar 7
T432	Soft Accord 5	T487	Attack Barafon 6	T542	Bari & Tenor 8
T433	Wind Organ 5	T488	Grow Guitar 6	T543	Viola Attack 6
T434	Kalimba 10	T489	Soft Clav. 7	T544	Jazz Organ 7
T435	Shamisen 7	T490	Tubular Bells 6	T545	Tron Flute 9
T436	English Horn 7	T491	Bodhran 7	T546	Suona 8
T437	Shanai 7	T492	Oct Harp 5	T547	Castanets 7
T438	Soft Sax 10	T493	Tsugaru 7	T548	Shanai 10
T439	Didgeridoo 10	T494	Bari & Tenor 7	T549	English Horn 10
T440	Tenor Sax 7	T495	Wind Organ 7	T550	Shamisen 10
T441	Koto 11	T496	Soft Accord 7	T551	Tenor Sax 10
T442	Organ Flute 6	T497	Viola Attack 5	T552	Chorus Guitar, 10
T443	Xylophone 7	T498	Jazz Organ 6	T553	Organ Flute 9
T444	Soft Santur 6	T499	Nay 7	T554	Reed Horn 7
T445	Bag Pipe 7	T500	Dulcimer 7	T555	Hard Vibe 8
T446	Crystal 8	T501	Xylophone 9	T556	Twin Bones 7
T447	Soft Clav. 6	T502	Tron Flute 8	T557	Xylophone 10
T448	Bodhran 6	T503	Church Bells 4	T558	Attack Barafon 8
T449	Tsugaru 6	T504	Celesta 4	T559	Electric Vlapraphone 7
T450	Chorus Guitar, 7	T505	Clavi 4	T560	Crystal 9
T451	Nay 6	T506	Indian Flute 4	T561	Bag Pipe 10
T452	Soft Accord 6	T507	Jungle Bass 4	T562	Barafon 8

T563	Soft Santur 9	T576	Guitar Pinch 6	T589	Soft Clav, 10
T564	Wind Organ 9	T577	Indian Flute 5	T590	Bari & Tenor 10
T565	Bari & Tenor 9	T578	Bright String 5	T591	Nay 10
T566	Tsugaru 9	T579	Church Bells 5	T592	Soft Santur 10
T567	Oct Harp 7	T580	Electronic Guitar (Clean)	T593	Tron Flute 11
T568	Tubular Bells 8	T581	Shanai 11	T594	Soft Accord 10
T569	Soft Clav. 9	T582	Marimba 7	T595	Wind Organ 10
T570	Grow Guitar 8	T583	Organ Flute 10	T596	English Horn 12
T571	Tron Flute 10	T584	English Horn 11	T597	Shanai 12
T572	Nay 9	T585	Barafon 9	T598	Organ Flute 11
T573	Jazz Organ 8	T586	Tsugaru 10	T599	Bag Pipe 12
T574	Viola Attack 7	T587	Crystal 10	T600	Tsugaru 11
T575	Soft Accord 9	T588	Bag Pipe 11		

Appendix 2 (Rhythm Comparison Table)

R001	China1	R040	FastGospel	R079	GuadDance
R002	China2	R041	FolkRock	R080	Reggae12Beat
R003	China3	R042	RockBilly	R081	Reggae16Beat
R004	China4	R043	RockBoogie	R082	Bossanova
R005	China5	R044	RockChaCha	R083	Mambo 1
R006	China6	R045	RockClassical	R084	Mambo 2
R007	China7	R046	RockShuffle	R085	Bolero
R008	China8	R047	RockPop	R086	Cumbia
R009	China9	R048	Skiffle	R087	Latin Rock
R010	China10	R049	Funk Pop Rock	R088	Disco Latin
R011	Club Pop	R050	Contemp Rock	R089	Tijuana
R012	16 Beat Pop	R051	Acoustic Rock	R090	Reggae
R013	8 Beat Pop	R052	60's RockN	R091	Pop Mambo
R014	8 Beat Soul	R053	Standard Rock	R092	Latin Party Pop
R015	8 Beat Rock	R054	Brit Rock Pop	R093	Hard Mambo
R016	Rap Pop	R055	60's Vintage Rock	R094	Parranda
R017	Pop Rock	R056	Chart Rock Shfl	R095	Rock Lation
R018	60's Soul	R057	60's Pop Rock	R096	Slow Rock 1
R019	70's Soul	R058	Waltz	R097	Slow Rock 2
R020	Funk	R059	Cha Cha	R098	Slow Rock 3
R021	16 Beat Shuffle	R060	Rumba	R099	Slow Soul
R022	Twist	R061	Jive	R100	8 Beat Adria
R023	British Pop	R062	Pasodoble	R101	Classic Piano
R024	Hard Rock	R063	Samba 1	R102	Unplugged
R025	Fusion	R064	Samba 2	R103	Pop Ballad
R026	FunkShuffl	R065	Schlager Rock 1	R104	Pop New Age
R027	FusionShuffl	R066	Schlager Rock 2	R105	8 Beat Modern
R028	Classic 8Beat	R067	FoxTrot	R106	Country Ballad
R029	Vintage Gtr Pop	R068	Viennese Waltz	R107	Love Song
R030	Schlager Italia	R069	Tango1	R108	Modern Country Pop
R031	50's Pop	R070	Tango2	R109	Electro Pop
R032	Cool Pop	R071	German Waltz	R110	Acoustic Ballad
R033	Groovy Pop	R072	Carnival	R111	Piano Ballad
R034	60's Vintage Pop	R073	Organ Samba	R112	R&B Ballad
R035	80's Pop	R074	Reel	R113	Rock Ballad
R036	Rock'n Roll 1	R075	Gay Gordons	R114	Slow & Easy
R037	Rock'n Roll 2	R076	Scand Waltz	R115	Analog Ballad
R038	Straight Rock	R077	Salsa	R116	E_Ballad
R039	Jazz Rock	R078	Calypso	R117	80's EP Ballad

R118	80's Boy Band	R173	Ragtime	R228	Tango4
R119	70's Chart Ballad	R174	Frankly Soul	R229	Jig
R120	Romantic Ballad	R175	Jazz Funk	R230	Hawaiian
R121	90's Cool Ballad	R176	Classic Big Band	R231	Electronica
R122	Alp Ballad1	R177	French Jazz	R232	Funky House
R123	Alp Ballad2	R178	Jump Jive	R233	Club Beat
R124	Techno 1	R179	Swing Fox	R234	Retro Club
R125	Techno 2	R180	Slow Fox	R235	Mod Chart Pop
R126	Funky Disco	R181	Organ Cha Cha	R236	MOR Swing
R127	Saturday Night	R182	Organ Quick Step	R237	Retro Pop
R128	Club Latin	R183	Ober Polka	R238	Rumba Flamenco
R129	Disco Chocolate	R184	Polka Pop	R239	Cumbia1
R130	Disco Fox	R185	Blue Grass 1	R240	Parranda1
R131	Disco Funk	R186	Blue Grass 2	R241	Carnival2
R132	Disco Hands	R187	Blue Grass 3	R242	50's Pop1
R133	Disco Party	R188	Pop Waltz	R243	Groovy Pop1
R134	Disco Samba	R189	USA March	R244	Cool Pop1
R135	British Pop2	R190	Hully Gully	R245	Club Pop2
R136	Club Dance	R191	Tarantella	R246	16 Beat Pop2
R137	Modern R&B	R192	Limbo Rock	R247	8 Beat Pop2
R138	Hip Shuffle	R193	Swing Waltz	R248	8 Beat Soul2
R139	Charleston	R194	Pub Piano	R249	8 Beat Rock2
R140	DiscoPop	R195	Jazz Waltz 1	R250	60's Vintage Pop1
R141	DiscoSoul	R196	Jazz Waltz 2	R251	16 Beat Ballad2
R142	DiscoTrot	R197	Show Tune	R252	70's Pop Ballad
R143	EuroBeat	R198	Polka	R253	EP Ballad
R144	Rap	R199	Party Polka	R254	Power Ballad
R145	Rave	R200	Schlager Polka	R255	Guitar Ballad
R146	70's Disco Funk	R201	Hard Rock2	R256	New R&B Ballad
R147	Disco Philly	R202	60's RockN1	R257	Guitar Serenade
R148	Disco House	R203	Standard Rock1	R258	Organ Ballad
R149	80's Disco	R204	Brit Rock Pop1	R259	Pop Mambo1
R150	70's Disco1	R205	60's Vintage Rock*	R260	Latin Party Pop1
R151	70's Disco2	R206	Chart Rock Shf1	R261	80's Pop1
R152	Country 1	R207	Saeidy	R262	British Pop3
R153	Country 2	R208	German Rock	R263	70's Chart Ballad*
R154	Finger Pickin	R209	Schlager Beat	R264	Romantic Ballad1
R155	Country Brothers	R210	Rock & Roll	R265	90's Cool Ballad1
R156	New Country	R211	Rock & Roll Shf1	R266	Alp Ballad3
R157	Easy Country	R212	Oldies R & R	R267	Alp Ballad4
R158	70's Chart Cntry	R213	80's Rock & Roll	R268	Schlager Polka1
R159	Hoedown	R214	BritRockGuitar	R269	J-Pop Hit
R160	Country Shuffle	R215	Chart Rock Shf2	R270	Detroit Pop1
R161	Country Love Song	R216	New R&B	R271	Detroit Pop2
R162	Country Two Step	R217	Pop R&B	R272	Worship Med
R163	Big Band Shuffle 1	R218	Chart R&B	R273	Worship Fast
R164	Big Band Shuffle 2	R219	Rock Cha Cha1	R274	12-8 Ballad
R165	Big Band Shuffle 3	R220	Funk Shuffl 3	R275	Norteno
R166	Fast Band 1	R221	8 Beat Rock3	R276	60's 8 Beat
R167	Fast Band 2	R222	Rock Cha Cha2	R277	Laff
R168	Cat Groove	R223	Joropo	R278	Ober Walzer
R169	Dixie Jazz	R224	Reggaeton	R279	Bhangra
R170	Medium Jazz	R225	French Waltz	R280	Zouk
R171	Jazz Big Band	R226	Merengue	R281	German March
R172	.Jazz Club	R227	Tango3	R282	Fnka

R283	Bolero Lento	R338	Schlager Shuffle	R393	Mariachi Waltz
R284	Sherif Reggae	R339	Schlager Pop	R394	US March
R285	Beguine	R340	Schlager Rumba	R395	Guitar Rumba
R286	Pop Classics	R341	Euro Pop Organ	R396	Slow Blues
R287	Live 8 Beat	R342	70's French Hit	R397	Jazz Waltz Fast
R288	Power Rock	R343	Italian Mazurka	R398	70's Country Pop
R289	Acoustic Rock1	R344	Jig2	R399	Dixieland
R290	Cool 8 Beat	R345	Hawaiian2	R400	40's Big Band
R291	Uptempo 8Beat	R346	Latin Rock2	R401	Schlager Alp
R292	90's Rock Ballad	R347	Schlager Samba1	R402	Chart Pop1
R293	80's Guitar Pop	R348	Schlager Samba2	R403	Organ Groove
R294	70's 8 Beat	R349	Scand Slow Rock	R404	Chart Pop2
R295	90's Guitar Pop	R350	Schlager 6-8	R405	Modern Shuffle
R296	Soft Rock	R351	Schlager Fox	R406	8 Beat Ballad1
R297	Chart GuitarPop	R352	Country Ballad1	R407	Bubblegum Pop
R298	Gujira	R353	Country Two Step1	R408	Rock Funk
R299	Modern Pop Bld	R354	Kool Shuffle	R409	West Coast Pop
R300	Soul	R355	Pleasant Country	R410	Classic 16 Beat
R301	Skiffle1	R356	Country Hits	R411	8 Beat Ballad2
R302	6-8Soul	R357	Country 8 Beat	R412	Chillout
R303	Soul Brothers	R358	Mod Cntry Bld1	R413	16 Beat Ballad1
R304	6-8Slow Rock	R359	Country Ballad2	R414	Epic Ballad
R305	Trance Pop	R360	Scand Country1	R415	Easy Ballad
R306	Mellow Hip Hop	R361	Scand Country2	R416	Cuban Son
R307	Classic Hip Hop	R362	Country Love Song1	R417	16 Beat Ballad3
R308	New Hip Hop	R363	Orch Big Band2	R418	Contemp Rock2
R309	Duranguense	R364	Big Band Fast2	R419	EP Ballad2
R310	70's Disco3	R365	Midnight Swing	R420	Cat Groove2
R311	70's Disco4	R366	Fusion2	R421	Guitar Serenade2
R312	Latin Disco	R367	Funk Shuffl 2	R422	Organ Ballad2
R313	Brazilian Samba	R368	Fusion Shuffl 2	R423	Pop Ballad2
R314	Brit Pop Swing	R369	Swing Fox1	R424	Norteno2
R315	Grupera	R370	Slow Fox1	R425	Retro Pop2
R316	Danzon	R371	Organ Cha Cha1	R426	Trance Pop2
R317	Dream Dance	R372	Organ Quick Step1	R427	Pop Gtr Ballad
R318	US Chart Hit	R373	Piano Boogie	R428	Ibiza 2002
R319	Soul R&B	R374	Lovely Shuffle	R429	Chillout Cafe
R320	R&B Soul Ballad	R375	Jazz Gtr Club	R430	70's Glam Piano
R321	Euro Hip Hop	R376	Modern Jazz	R431	French House
R322	Trip Hop	R377	Acoustic Jazz	R432	Bhajan2
R323	60's RockN2	R378	Cool Jazz Ballad	R433	16 Beat Pop3
R324	Bhajan	R379	Modern Jazz Bld	R434	16 Beat Pop4
R325	Hip Hop Groove	R380	Easy Listening	R435	Enka2
R326	Euro Trance	R381	Bebop	R436	Blues Rock
R327	6-8 Trance	R382	Orch Big Band1	R437	Ibiza 2004
R328	Latin DJ's	R383	Kool Funk	R438	80's Rock & Roll1
R329	Bomba	R384	Blueberry Blues	R439	Acoustic Rock2
R330	Club House	R385	Shuffle Blues	R440	Club Pop3
R331	House	R386	Mambo 3	R441	Power Rock2
R332	Disco Teens	R387	Mambo 4	R442	Rock'n Roll 3
R333	Happy Reggae	R388	Big Band Fast1	R443	Cool8 Beat2
R334	Pop Latin	R389	Orchestra Swing1	R444	British Pop4
R335	Fast Bossa	R390	Orchestra Swing2	R445	British Pop5
R336	6-8 Modern	R391	70's Chart Cntry1	R446	8 Beat Soul3
R337	6-8 Orchestral	R392	Jazz Waltz Mad	R447	BritRockGuitar1

R448	Brit Steen Pop2	R466	60 's ziel 2	R484	schlager polka2
R449	Blauwe bessens Blues2	R467	Fusie shuffl 3	R485	Groep 2
450	Guijira2	R468	Fusie schudden 4	R486	Danzon 2
R451	Steen Ballade2	R469	6-8 Modern2	R487	slagAlp2
R452	ziel 2	R470	6-8 orkestraal 2	R488	saeidy2
R453	klassiek 8 Beat 2	R471	langzaam ziel 2	R489	6-8 Maart
R454	Bolero2	R472	piano Ballade2	R490	Bluegrass
R455	ziel Broers2	R473	Heup Hop Groef 2	R491	Knal Latijn2
R456	Fijne Reggae2	R474	Heup schudden 2	R492	toon Tune2
R457	6-8 langzaam Rots 2	R475	orgel Groef 2	R493	schandaal schudden
R458	Bolero Lente 2	R476	-kaart Pop -3	R494	aanbidding langzaam
R459	Middernachtschom mel2	R477	Mambo5	R495	Bachata
R460	Frans Jazz2	R478	Mambo6	R496	Romantisch Ballade2
R461	Latijns feest Pop2	R479	Disco Latijn 2	R497	Analoog Ballade2
R462	Tango5	R480	Snel Bossa 2	R498	Elektro Pop -2
R463	Tang 06	R481	Vos Drat 2	499€	Blues RotsK2
R464	parranda2	R482	pasodoble2	€500	jaren 90 ziel
R465	jaren 80 Pop -2	R483	Hoogland wals 2		

Appendix 3 (Demonstration Song Comparison Table)

S001	S036 S037 S038 S039	Beethove	senbord hakken
S002		n Menuet	Nocturne
		In G	Mendelssohn
S003		Pollo	Pater Hingslied
S004		53 Heroi	Reverie
S005		nalse in	
S006		A-flat	Beethoven piano sonate op .49-2 1
S007		belangrijk,	st paars
S008		Op.	Beethoven
S009		liedje De	Schotland
S010		Tot ziens	DebussyAea
S011		B	besque
S012		a	Bach
S013		Uitvinding	
S014		c	Liszt liefde dromen
S015		h	Debussy La invullen haar de
S016			Lijn Mozart-menuet
		D	Bach wals In Amino
		e	wees thoven- pia nee sonate op
S017		o	13 ellendig 2e paars
S018		m	Schumann Vrolijke
S019		d	landgenoot Shubert
S020		a	Marche militair
S021		t	Bach Bourree
S022			Burgmiller
S023		-	pastorale
S024			schumann
S025		G	sicilienne
S026		e	Haydn Kleine
S027		h	serenade
S028		a	oesten Dolly s
		r	DreamingAwakening chopin
S029		d	Grande valse Brillante op.
S030			18 polk smile
S031		t	Impromptu No. 3,
S032		o	Op. 90 Brahms
S033		e	waltz No. 15
S034		t	chenyin Li toneelstukken Debussy's
S035			Golliwogs-taartwandeling

Klavescimbel ' Liefde pachelbel kanon
 Muziek In D
 Mo Badarzewska Maagdengebed
 zar Tsjaikovski- Dans van s mirlitons
 t Dvořák Humoresque

-15-

S040 Joplin De Entertainer
 S041 Lc. Dak LeC Hoggis
 S042 het met Karl? Bohm De
 S043 F behouden korsakov
 S044 Hommel
 S045 Haydn - zonsopgang
 S046 Johannes sebastiaan Bach sonate
 S047 ouverture " william
 S048 Vertellen " schubert
 S049 serenade
 S050 Menuet van LArlesienne
 S051 polonaise
 S052 clementi-sonate
 S053 hakken Revolutie Etude
 S054 Beethoven Lotsymfonie
 S055 Muzikaal
 S056 Momenten
 S057 hakken Zwarte ke
 S058 n ys
 S059 hakken voorspel Regendruppel ",
 S060 Op. 28- 15 hakken kleine hond
 S061 hakken Fantasie Onverwacht
 S062 polonaise in A majeur, op40 ,
 S063 Nee 1 Dubessy helder De maan
 S064 Schubert Monents Muziek
 S065 Mozart Turks Maart
 S066 Chopin - vals op .64 nr.2
 S067 Beethoven Maneschijn sonate
 S068 Schumann droomt
 S069 Beethoven Voor Elise
 S070 Beethoven Marcia Alla
 S071 Turca Mozart sonate
 S072 Mendelssohn Jagerlied op . 19b-
 S073 3 Chopin - Nocturne op .9 Nee .
 S074 2
 S075 TornaAsurriento
 S076 MOZART K448(1 Andante)
 S077 De Vrolijke weduwe wals
 S078 cinquantaïne
 S079 liefs doe en Doe
 S080 Barcarole
 klarinet polka
 stem van de lente
 wals vanDe
 Bloemen katjoesja
 op vleugels vanlied

K
 l
 a
 v
 e
 s
 c
 i
 m
 b
 e
 l
 ' L
 i
 e
 f
 d
 e
 p
 a
 c
 h
 e
 l
 k
 a
 n
 o
 n
 ' M
 u
 z
 i
 e
 k
 ' I
 n
 D
 ' B
 a
 d
 a
 r
 z
 e
 w
 s
 k
 a
 ' M
 a
 a
 g
 d
 e
 n
 g
 e
 b
 e
 d
 ' T
 s
 j
 a
 i
 k
 o
 v
 s
 k
 i
 - D
 a
 n
 s
 v
 a
 n
 s
 m
 i
 r
 l
 i
 t
 o
 n
 s
 ' D
 v
 o
 r
 a
 k
 ' H
 u
 m
 o
 r
 e
 s
 q
 u
 e

1 Battery



- O pas goed op jezelf volgend aandacht
- O Doen niet proberen te demonteren of kortsluiting veroorzaken batterij
- O Doen niet blootstellen of verbranden Het in de vuur
- O Doen niet mengen de nieuw en oud batterij
- O Doen niet mengen verschillend typen van batterijen
- O Doen niet aanval de batterij
- O De positief en negatieve polen van de batterij moet zijn correct geïnstalleerd
- O Alsjeblieft verwijder de batterij uit het elektronische toetsenbord Als je dat doet niet gebruiken voor een lang tijd ,

2 Exception



doe het volgende stappen wanneer uitzondering voor de elektronische toetsenbord als roken , over heet en Dus

- op . 1) . stroom uit
- 2) . trekken de adapter omlaag van de stroom stopcontact op de muur wanneer
Zijn gebruiken.
- 3) . contact jouw lokaal handelaar in tijd .

Zijn normaal voor adapter krijgen heet wanneer lang tijd gebruik makend van Wisselstroom adapter , niet aangeven Storing

Alsjeblieft uitschakelen en start het elektronische toetsenbord opnieuw op wanneer soms functie probleem ,

3 Install the battery

- 1) . Uitgang de schroef En verwijderen de batterij omslag
- 2) . neerzetten de batterij met juist positief + En negatief - richting in de batterij sleuf met 4 x" AA " 1 . 5v
- 3) . neerzetten de batterij omslag En Slot de schroeven

Dit product bevat elektronische componenten en zou moeten niet toestaan vloeistoffen naar binnenkomen of zijn gebruikt in vochtig omgevingen .

Dagelijks stofdicht schoonmaak zou moeten zijn klaar
Goed , En oppervlaktevlekken kan zijn afgeveegd met A
zacht En schoon lap .

VEVOR®

TOUGH TOOLS, HALF PRICE

Technische ondersteuning en E- garantie
certificaat www.vevor.com/ondersteuning



Teknisk stöd och E-garantibevis

[Www.vevor.se / support](http://Www.vevor.se/support)

PIANO

ANVÄNDARE MANUELL

MODELL : BD -662

vi fortsätter att vara engagerad till ge dig verktyg med konkurrenskraftigt pris.

"spara Halv", "Halva priset" eller andra liknande uttryck begagnad av oss representerar endast en

uppskattning av dina besparingar kan ha nytta av att köpa vissa verktyg med oss jämfört med majoren toppmärken och gör inte nödvändigtvis elak till täcka alla kategorier av verktyg erbjuds av oss. Du

är vänligt påmind att verifiera noggrant när du är placera en beställa med oss om du är faktiskt sparar hälften in jämförelse med de främsta varumärkena.

MODEL: BD-662



(The picture is for reference only, please refer to the actual object)

BEHOV HJÄLP? KONTAKTA USA!

Ha produkt frågor? Behov teknisk stöd? Behaga känsla gratis att kontakta oss :

Teknisk support och E-garantibevis
www.vevor.se/support

Detta är de original instruktion , behaga läsa alla manuell instruktioner noggrant innan användning. VEVOR rese rves a rensa tolkning av våra bruksanvisning . De utseende av de produkterhall vara föremål för de produkt dig mottagen. snälla förlåt oss att vi inte kommer informera dig igen om det finns någon teknik eller programvara uppdateringar på vår produkt.

Åtföljande

driva sladd * 1

Mikrofon * 1

Notställ * 1

Hörlurar * 1

upprätthålla pedal *



1 Musik ark klipp *
1


MIDI Sladd * 1

piano klistermärke *
1


tangentbord stå * 1

Installation diagram of Keyboard stand

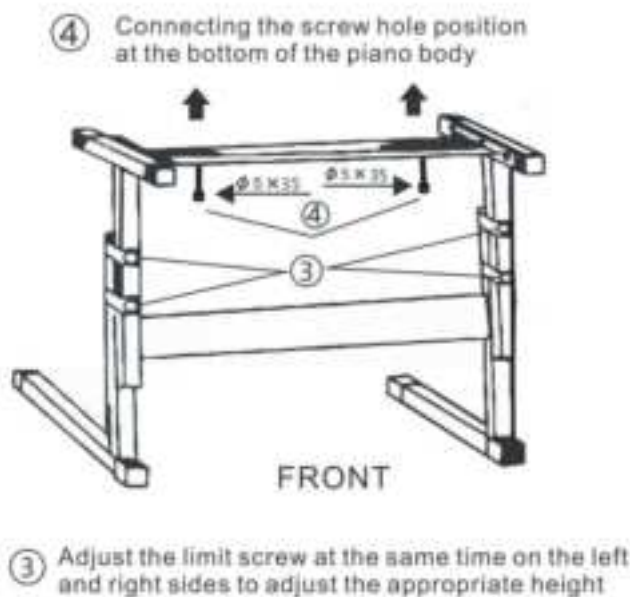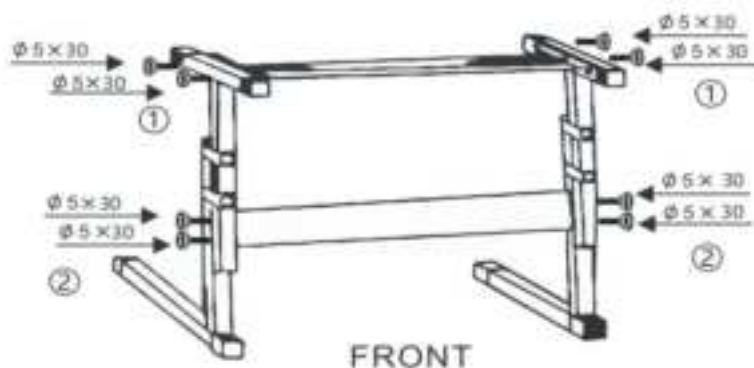  

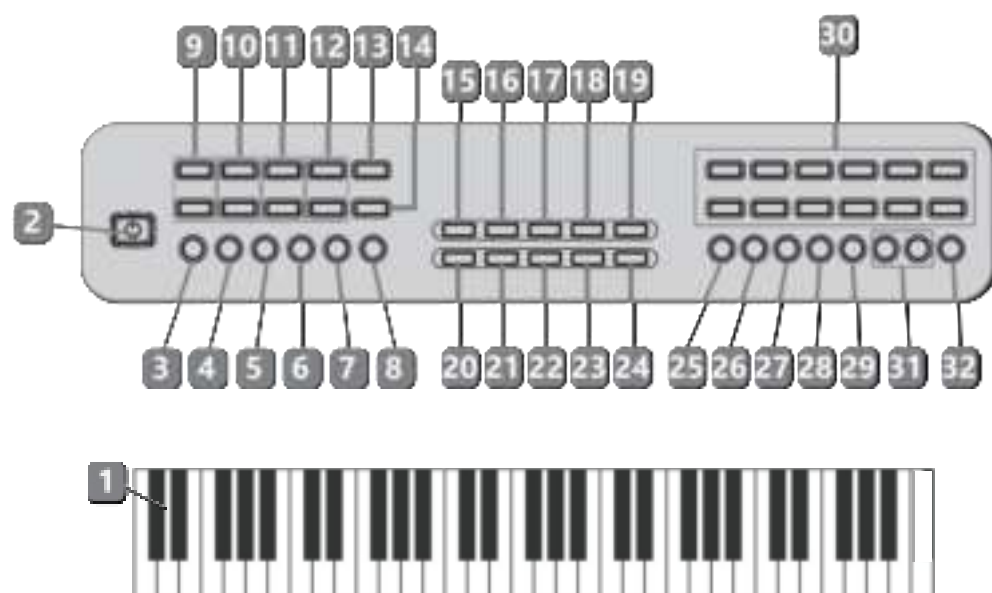 

1 KEYBOARD	9 VOLUME+/-	17 FILL-IN/LED	25 TONE
2 POWER	10 RHYTHM VOL+/-	18 FILL-IN2	26 RHYTHM
3 RECORD	11 TEMPO+/-	19 BASSCHORDS	27 PIANO
4 PROG	12 TRANSPOSE+/-	20 ONE KEY	28 DEMO ONE
5 PLAY	13 SUSTAIN	21 FOLLOW	29 DEMO ALL
6 METRONOME	14 VIBRATO	22 ENSEMBLE	30 NUMBER SELECTION AREA
7 KEY DRUM	15 SYNC	23 CHORD. OFF	31 ◀/VOL- ▶/VOL+
8 DUAL KEY	16 CHORD	24 START/STOP	32 ▶/CHANGE

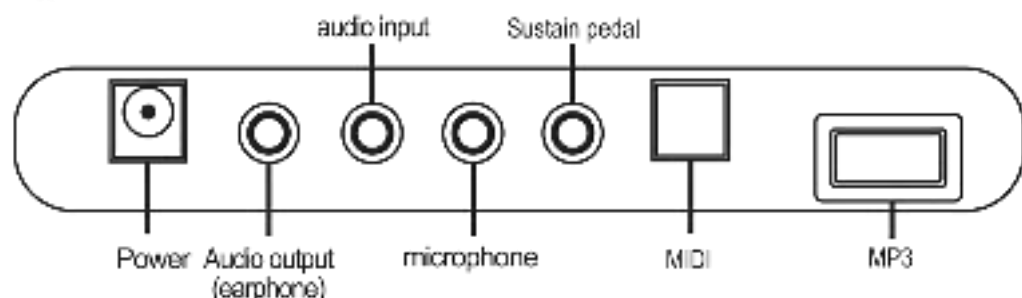 

1.KEYBOARD\2.POWER

Turn on the power, you can play the "keyboard" and enter the performance state. In standby mode, after 3 minutes of no operation, it will automatically enter the sleep mode, and can be restored by pressing any key.

3.RECORD

Press the **【RECORD】** key to enter the recording mode, and then press any piano key or drum key to start the recording.

start recording. The maximum number of recordings is 80. When the recording is full, it cannot continue to record another note.

When recording, you can press the play button at any time to play.

Each time this button is pressed, the last memory will be cleared and the recording mode will be re-entered.

After exiting the recording mode, the last memory will be cleared.

4.PROG

Press **【PROG】** key to enter programming mode, the preset speed is 120.

The pressed drum sound can be recorded. In edit mode, only the drum sound is valid.

The maximum number of records is 32. When the record is full, it cannot continue to record another drum sound. You can press the button at any time, press the Play key to play the edited drum sound.

Each time this key is pressed, the last memory will be cleared and the programming mode will be re-entered.

After exiting the programming mode, the last memory will be cleared.

In this mode, the keys are automatically converted to keyboard drums.

5.PLAY

In the recording mode, press the **【PLAY】** for the first time to play the recorded notes.

Press the **【PLAY】** for the second time to stop playing.

In programming mode, press the **【PLAY】** for the first time to play the recorded drum sound, and press the **【PLAY】** for the second time to stop playing

If there is no recorded value before, press the **【PLAY】** and no action will take place.

6.METRONOME

Pressing the **【METRONOME】** key, the action function is the click sound, there are 7 kinds of changes, 1/4 beat → 2/4 beat → 3/4 beat → 4/4 beat... → stop, the default value of the beat is 120.

7.KEY DRUM

Press the **【KEY DRUM】** key to get percussion sound on the corresponding key.

8.DUAL KEY

Press **【DUAL KEY】** for the first time to activate the dual keyboard function, and press **【DUAL KEY】** for the second time to select eliminate the double keyboard function.

When the dual keyboard function is activated, the scales of the left keys C2-B3 will be played correspondingly to the scales of C3-B4. The scales of C4-C7 on the right keys will be played as C3-C6 scales. You can use the digital area and the [+] [-] keys or digital switches to select the sub-tone instead of the left piano.key tone.

9.VOLUME+/-

Use **【VOLUME+/-】** to control the volume, press **【VOLUME+】** to represent To increase the volume up, press **【VOLUME-】** to decrease the volume down. The volume control has a total of 17 segments (0~16), and the default value is the 13th segment after power-on.

Press and hold **【VOLUME+/-】** for more than 1 second to continuously increase /decrease the volume.

10.RHYTHM+/-

Press **【RHYTHM+/-】** to select the accompaniment volume.

The accompaniment volume control has a total of 17 segments (0~16), and the preset value is the 13th segment after power-on.

Press and hold the **【RHYTHM+/-】** for more than 1 second to continuously increase/decrease the accompaniment volume.

11.TEMPO+/-

Press **【TEMPO+/-】** to select the speed.

The speed control has a total of 270 stages (30~300), and the preset value is the 90th stage after power-on (speed = 120)

Press and hold the **【TEMPO+/-】** for more than 1 second to continuously increase/decrease the speed.

When playing the selected song, the tempo of the song will be used, regardless of the set tempo.

When playing the selected rhythm, the set tempo will prevail.

12.TRANSPOSE+/-

Press **【TRANSPOSE+/-】** to select Transpose .

There are 25 segments (-12~12) in total for transposition control, and the preset value is at segment 13 after power-on.

Press and hold the **【TRANSPOSE+/-】** for more than 1 second to continuously increase/decrease the transpose.

The chord pitch also changes with the transpose value.

13.SUSTAIN

Press the **【SUSTAIN】** key to enable or disable the sustain function.

When the sustain function is turned on, when you play the keyboard, the sound will have a prolongation effect.

14.VIBRATO

Press the **【VIBRATO】** key to enable or disable the vibrato function.

When the vibrato function is turned on, the sound will vibrate when you play the keyboard.

15.SYNC

Press the [Sync] key for the first time to enter the sync mode, and press the [Sync key] for the second time to exit the sync mode.

When entering sync mode, pressing the first 19 keys on the left will automatically play the selected rhythm (chord).

16.CHORD

Press the **【CHORD】** for the first time to enter the comprehensive chord mode, and press the **【CHORD】** for the second time to exit the composite chord mode.

【CHORD】 Only in rhythm and general mode, the function can occur. When playing the rhythm, press **【CHORD】** and press multiple keys within the range of C2~F3#.

After fingering, you can hear the corresponding chord accompaniment. The single-fingered chords are played.

When the rhythm is not playing, press the **【CHORD】** and press the multi-finger key within the range of keys C2~F3#, and you can hear the corresponding chord accompaniment. Otherwise, the single-fingered chords are played. Comprehensive fingering can be used with rhythm/chord/synchronization.

17.FILL-IN/LED 18.FILL-IN2

【FILL-IN/LED】 When the rhythm is not playing, pressing it is the key light switch function.

【FILL-IN】 and **【FILL-IN2】** function only when the rhythm is played. Interlude: During the rhythm playing, press the **【FILL-IN】** to add the fill-in function to the rhythm.

When the measure is finished, insert an interlude.

During rhythm playback, press and hold the **【FILL-IN】** to continue inserting.

19.BASSCHORDS

Change the bass voice in the chord to the piano voice.

20.ONE KEY

Press the **【ONE KEY】** for the first time to enter the random play mode, and then press any key to issue the correct note.

Press the **【ONE KEY】** for the second time to exit the strumming mode.

21.FOLLOW

Press the **【FOLLOW】** for the first time to enter the follow mode, and press the **【FOLLOW】** for the second time to exit the follow mode.

After entering the follow play mode, use the current song to teach, after the song is played, the main melody will not be played.

The user must press the corresponding key according to the note displayed on the LCD or the keyboard indicator light.

To continue playing the next note, the background sound repeats the measure until the end of the song.

After the song is over, play the next song.

In follow mode, you can use the number selection area to select other songs.

22.ENSEMBLE

Press the **【ENSEMBLE】** for the first time to enter the ensemble mode, and press the **【ENSEMBLE】** for the second time to exit the ensemble mode.

After entering the ensemble mode, use the current song to teach, after the song is played, the user can play the piano at will key and interrupt the main chord. If the key is not pressed after 5 seconds, the main chord will resume playing automatically. background

The sound plays completely until the end of the song.

When the song is over, play the next song together.

In Ensemble mode, other songs can be selected using the number selection area.

23.CHORD.OFF

Turn off composite chords.

24.START/STOP

Short press [Start/Stop Key] for the first time to start playing the rhythm, and

short press [Start/Stop Key] for the second time, to stop playing the rhythm.

Exit this mode in teaching, recording, playback, metronome, demo songs, etc.

25.TONE

After pressing the **【TONE】**, you can use the number selection area and the **[+][-]** keys to select the tone.

26.RHYTHM

After pressing the **【RHYTHM】**, you can use the number selection area and the **[+] [-]** keys to select the rhythm.

27.PIANO

In other voice states, press the [Piano] key to set the piano voice, and press the **【PIANO】** key for the second time to restore the previous sound.

(The default is piano sound when power on, this button is invalid)

28.DEMO ONE

Press the **【DEMO ONE】** button for the first time to enter the click mode, and press the **【DEMO ONE】** for the second time to exit the click mode.

After entering the sing-along mode, playback starts from the next song.

When the song finishes playing, the current song is played repeatedly.

In sing-along mode, other songs can be selected using the number selection area.

29.DEMO ALL

Press the **【DEMO ALL】** for the first time to enter the continuous singing mode, and press the **【DEMO ALL】** for the second time to exit the continuous singing mode.

After entering continuous singing mode, playback starts from the first song.

When the song is finished, continue to play the next song and play all the songs in a loop.

In sing-along mode, other songs can be selected using the number selection area.

30 .NUMBER SULECTION AREA

Use the number keys 0-9 to input the corresponding timbre, rhythm, song code for quick selection, use the +/- keys can be selected sequentially.
Press and hold the "+" or "-" key for more than 2 seconds to continuously increase/decrease the selection.

If neither tone mode or rhythm mode is selected, the default value is tone mode after power-on.

If neither tone mode or rhythm mode is selected, the default value is tone mode after power-on.

31 . VOL- VOL+ 32 . /CHANGE

Press (within 1 second) [/CHANGE] to play or pause the song. In pause mode, press [/CHANGE] to continue playing the song.

Press (within 1 second) [VOL-] to select the previous song.

Press (within 1 second) [VOL+] to select the next song.

Press and hold the [VOL-] for more than 1 second to decrease the volume. Long press [VOL+] to exceed increase the volume after 1 second.

Appendix 1 (Voice Comparison Table)

T001	Acoustic Grand Piano	T026	Acoustic Guitar (steel)	T051	Synth Strings 1
T002	Bright Acoustic Piano	T027	Electric Guitar (jazz)	T052	Synth Strings 2
T003	Electric Grand Piano	T028	Electric Guitar (clean)	T053	Choir Aahs
T004	Honky-tonk Piano	T029	Electric Guitar (muted)	T054	Voice Oohs
T005	Rhodes Piano	T030	Overdriven Guitar	T055	Synth Voice
T006	Chorused Piano	T031	Distortion Guitar	T056	Orchestra Hit
T007	Harpsichord	T032	Guitar Harmonics	T057	Trumpet
T008	Clavichord	T033	Acoustic Bass	T058	Trombone
T009	Celesta	T034	Electric Bass(finger)	T059	Tuba
T010	Glockenspiel	T035	Electric Bass (pick)	T060	Muted Trumpet
T011	Music box	T036	Fretless Bass	T061	French Horn
T012	Vibraphone	T037	Slap Bass 1	T062	Brass Section
T013	Marimba	T038	Slap Bass 2	T063	Synth Brass 1
T014	Xylophone	T039	Synth Bass 1	T064	Synth Brass 2
T015	Tubular Bell	T040	Synth Bass 2	T065	Soprano Sax
T016	Dulcimer	T041	Violin	T066	Alto Sax
T017	Drawbar Organ	T042	Viola	T067	Tenor Sax
T018	Percussive Organ	T043	Cello	T068	Baritone Sax
T019	Rock Organ	T044	Contrabass	T069	Oboe
T020	Church Organ	T045	Tremolo Strings	T070	English Horn
T021	Reed Organ	T046	Pizzicato Strings	T071	Bassoon
T022	Accordion	T047	Orchestral Harp	T072	Clarinet
T023	Harmonica	T048	Timpani	T073	Piccolo
T024	Tango Accordion	T049	String Ensemble 1	T074	Flute
T025	Acoustic Guitar (nylon)	T050	String Ensemble 2	T075	Recorder

Appendix 1 (Voice Comparison Table)

T076	Pan Flute	T129	Yong Gin	T181	Soft Santur
T077	Bottle Blow	T130	Zheng	T182	Dual Horns 1
T078	Shakuhachi	T131	Zhong Ruan	T183	Bodhran
T079	Whistle	T132	Pi Pa	T184	Tubular Bells 2
T080	Ocarina	T133	Big Souna	T185	Suona 2
T081	Lead 1 (square)	T134	Souna	T186	Castanets
T082	Lead 2 (sawtooth)	T135	Er Hu	T187	Attack Harp 1
T083	Lead 3 (caliope lead)	T136	Yue Hu	T188	Electric Viaphone
T084	Lead 4 (chiff lead)	T137	Di Zi	T189	Soft Sax 1
T085	Lead 5 (charang)	T138	Bong Di	T190	Soft Clav.
T086	Lead 6 (voice)	T139	Koto 2	T191	Soft Accord
T087	Lead 7 (fifths)	T140	Qui Di	T192	Wind Organ
T088	Lead 8 (bass+lead)	T141	Xylophone 2	T193	Viola Attack
T089	Pad 1 (new age)	T142	Dulcimer 2	T194	Bari & Tenor
T090	Pad 2 (warm)	T143	Guitar Pinch 2	T195	Soft Guitar 1
T091	Pad 3 (polysynth)	T144	Slow Violin	T196	Grow Guitar
T092	Pad 4 (choir)	T145	Bright String	T197	Didgeridoo 1
T093	Pad 5 (bowed)	T146	Jungle Bass 2	T198	Attack Barafon
T094	Pad 6 (metallic)	T147	Indian Flute	T199	Mute Barafon 1
T095	Pad 7 (halo)	T148	Clavi 2	T200	Nay
T096	Pad 8 (sweep)	T149	Celesta 2	T201	Didgeridoo 2
T097	FX 1 (rain)	T150	Church Bells	T202	Dual Horns 2
T098	FX 2 (soundtrack)	T151	Kalimba 2	T203	Hard Barsoon 2
T099	FX 3 (crystal)	T152	Steel Bell 1	T204	Kawala 2
T100	FX 4 (atmosphere)	T153	Tenor Sax 2	T205	Soft Guitar 2
T101	FX 5 (brightness)	T154	Woodblock 2	T206	Mute Barafon 2
T102	FX 6 (goblins)	T155	Electric Guitar (Clean) 2	T207	Hard Barsoon 1
T103	FX 7 (echoes)	T156	Shanai 2	T208	Tron Flute
T104	FX 8 (sci-fi)	T157	Marimba 3	T209	Kawala 1
T105	Sitar	T158	Dulcimer 3	T210	Jazz Organ
T106	Banjo	T159	Reed Organ 3	T211	Synth Harpsi. 3
T107	Shamisen	T160	Koto 3	T212	Tenor Sax 3
T108	Koto	T161	Crystal 1	T213	Steel Bell 3
T109	Kalimba	T162	Bag Pipe 2	T214	Kalimba 4
T110	Bagpipe	T163	Barafon	T215	Shamisen 3
T111	Fiddle	T164	Organ Flute	T216	English Horn 3
T112	Shanai	T165	Kalimba 3	T217	Shanai 3
T113	Tinkle Bell	T166	Reed Horn	T218	Soft Sax 2
T114	Agogo	T167	English Horn 2	T219	Attack Harp 2
T115	Steel Drums	T168	Electric Guitar (Clean) 3	T220	Castanets 2
T116	Woodblock	T169	Shamisen 2	T221	Suona 3
T117	Taiko Drum	T170	Koto 4	T222	Xylophone 3
T118	Melodic Tom	T171	Hard Vibe 2	T223	Koto 5
T119	Synth Drum	T172	Twin Bones	T224	Attack Clav. 4
T120	Reverse Cymbal	T173	Synth Harpsi. 1	T225	Synth Harpsi. 4
T121	Guitar Fret Noise	T174	Attack Clav. 1	T226	Twin Bones 2
T122	Breath Noise	T175	Chorus Guitar.	T227	Hard Vibe 3
T123	Seashore	T176	Steel Bell 2	T228	Reed Horn 2
T124	Bird Tweet	T177	Tsugaru	T229	Organ Flute 2
T125	Telephone Ring	T178	Oct Harp	T230	Steel Bell 4
T126	Helicopter	T179	Synth Harpsi. 2	T231	Chorus Guitar. 2
T127	Applause	T180	Attack Clav. 2	T232	Dual Horns 3
T128	Gunshot				

T233	Soft Santur 2	T288	Tenor Sax 4	T343	English Horn 5
T234	Barafon 3	T289	Twin Bones 3	T344	Shamisen 5
T235	Bag Pipe 3	T290	Hard Vibe 4	T345	Kalimba 7
T236	Crystal 3	T291	Koto 7	T346	Steel Bell 7
T237	Attack Clav. 3	T292	Shamisen 4	T347	Tenor Sax 5
T238	Electric Vibraphone 2	T293	Electric Guitar (Clean) 5	T348	Chorus Guitar. 4
T239	Attack Harp 3	T294	English Horn 4	T349	Steel Bell 8
T240	Attack Barafon 2	T295	Reed Horn 3	T350	Organ Flute 4
T241	Didgeridoo 3	T296	Kalimba 6	T351	Reed Horn 4
T242	Grow Guitar 2	T297	Organ Flute 3	T352	Hard Vibe 5
T243	Soft Guitar 3	T298	Barafon 2	T353	Twin Bones 4
T244	Soft Clav. 2	T299	Dual Horns 5	T354	Synth Harpsi. 8
T245	Soft Sax 3	T300	Soft Santur 3	T355	Attack Clav. 8
T246	Tubular Bells 3	T301	Attack Clav. 5	T356	Koto 8
T247	Bodhran 2	T302	Synth Harpsi. 5	T357	Xylophone 5
T248	Oct Harp 2	T303	Oct Harp 3	T358	Didgeridoo 7
T249	Tsugaru 2	T304	Tsugaru 3	T359	Attack Barafon 4
T250	Bari & Tenor 2	T305	Steel Bell 6	T360	Attack Harp 7
T251	Wind Organ 2	T306	Chorus Guitar. 3	T361	Electric Vibraphone 4
T252	Soft Accord 2	T307	Attack Clav. 6	T362	Attack Clav. 7
T253	Attack Harp 4	T308	Synth Harpsi. 6	T363	Crystal 4
T254	Viola Attack 2	T309	Wind Organ 3	T364	Bag Pipe 5
T255	Kawala 3	T310	Soft Accord 3	T365	Barafon 4
T256	Soft Sax 4	T311	Soft Clav. 3	T366	Soft Santur 4
T257	Jazz Organ 2	T312	Soft Sax 5	T367	Dual Horns 7
T258	Nay 2	T313	Electric Vibraphone 3	T368	Wind Organ 4
T259	Mute Barafon 3	T314	Attack Harp 5	T369	Bari & Tenor 4
T260	Dulcimer 5	T315	Castanets 3	T370	Tsugaru 4
T261	Xylophone 4	T316	Suona 4	T371	Oct Harp 4
T262	Tron Flute 2	T317	Tubular Bells 4	T372	Bodhran 4
T263	Hard Barsoon 3	T318	Bodhran 3	T373	Tubular Bells 6
T264	Mute Barafon 4	T319	Dual Horns 6	T374	Soft Sax 7
T265	Soft Guitar 4	T320	Didgeridoo 6	T375	Soft Clav. 4
T266	Kawala 4	T321	Nay 3	T376	Soft Guitar 7
T267	Hard Barsoon 4	T322	Mute Barafon 5	T377	Grow Guitar 4
T268	Dual Horns 4	T323	Attack Barafon 3	T378	Hard Barsoon 7
T269	Didgeridoo 4	T324	Didgeridoo 5	T379	Tron Flute 4
T270	Steel Bell 5	T325	Grow Guitar 3	T380	Mute Barafon 7
T271	Kalimba 5	T326	Soft Guitar 5	T381	Nay 4
T272	Church Bells 2	T327	Bari & Tenor 3	T382	Jazz Organ 4
T273	Celesta 3	T328	Viola Attack 3	T383	Soft Sax 8
T274	Clavi 3	T329	Synth Harpsi. 7	T384	Kawala 7
T275	Indian Flute 2	T330	Jazz Organ 3	T385	Viola Attack 4
T276	Jungle Bass 3	T331	Kawala 5	T386	Attack Harp 8
T277	Bright String 2	T332	Tron Flute 3	T387	Soft Accord 4
T278	Slow Violin 2	T333	Hard Barsoon 5	T388	Guitar Pinch 4
T279	Guitar Pinch 3	T334	Mute Barafon 6	T389	Indian Flute 3
T280	Bag Pipe 4	T335	Soft Guitar 6	T390	Bright String 3
T281	Crystal 2	T336	Kawala 6	T391	Church Bells 3
T282	Koto 6	T337	Hard Barsoon 6	T392	Didgeridoo 8
T283	Reed Organ 4	T338	Suona 5	T393	Dual Horns 8
T284	Dulcimer 4	T339	Castanets 4	T394	Hard Barsoon 8
T285	Marimba 4	T340	Attack Harp 6	T395	Kawala 8
T286	Shanai 4	T341	Soft Sax 6	T396	Soft Guitar 8
T287	Electric Guitar (Clean) 4	T342	Shanai 5	T397	Mute Barafon 8

T398	Electronic Guitar (Clean) 6	T453	Tron Flute 6	T508	Bright String 4
T399	Shanai 6	T454	Bari & Tenor 6	T509	Slow Violin 3
T400	Marimba 5	T455	Wind Organ 6	T510	Guitar Pinch 5
T401	Koto 9	T456	Grow Guitar 5	T511	Bag Pipe 9
T402	Xylophone 6	T457	Attack Barafon 5	T512	Crystal 7
T403	Tenor Sax 6	T458	Dual Horns 9	T513	Reed Organ 5
T404	Organ Flute 5	T459	Hard Barsoon 10	T514	Dulcimer 6
T405	Kalimba 9	T460	Hard Barsoon 9	T515	Marimba 6
T406	English Horn 6	T461	Tron Flute 7	T516	Shanai 9
T407	Electronic Guitar (Clean) 7	T462	Jazz Organ 5	T517	Electronic Guitar (Clean) 8
T408	Shamisen 6	T463	Tenor Sax 8	T518	Tenor Sax 9
T409	Koto 10	T464	Steel Bell 9	T519	Twin Bones 6
T410	Kalimba 8	T465	Shamisen 8	T520	Hard Vibe 7
T411	Barafon 5	T466	English Horn 8	T521	Shamisen 9
T412	Chorus Guitar, 8	T467	Shanai 8	T522	Electronic Guitar (Clean) 9
T413	Tsugaru 5	T468	Attack Harp 9	T523	English Horn 9
T414	Synth Harpsi, 9	T469	Castanets 5	T524	Reed Horn 6
T415	Crystal 5	T470	Suona 6	T525	Organ Flute 8
T416	Bag Pipe 6	T471	Xylophone 8	T526	Barafon 6
T417	Synth Harpsi, 10	T472	Attack Clav. 10	T527	Soft Santur 8
T418	Soft Sax 9	T473	Twin Bones 5	T528	Oct Harp 6
T419	Soft Clav. 5	T474	Hard Vibe 6	T529	Tsugaru 8
T420	Bodhran 5	T475	Reed Horn 5	T530	Chorus Guitar, 9
T421	Bari & Tenor 5	T476	Organ Flute 7	T531	Wind Organ 8
T422	Soft Guitar 9	T477	Steel Bell 10	T532	Soft Accord 8
T423	Didgeridoo 9	T478	Chorus Guitar, 8	T533	Soft Clav. 8
T424	Mute Barafon 9	T479	Dual Horns 10	T534	Electric Vlapraphone 6
T425	Nay 5	T480	Soft Santur 7	T535	Castanets 6
T426	Soft Santur 5	T481	Barafon 7	T536	Suona 7
T427	Kawala 10	T482	Bag Pipe 8	T537	Tubular Bells 7
T428	Soft Guitar 10	T483	Crystal 8	T538	Bodhran 8
T429	Mute Barafon 10	T484	Attack Clav. 9	T539	Nay 8
T430	Tron Flute 5	T485	Electric Vlapraphone 5	T540	Attack Barafon 7
T431	Kawala 9	T486	Attack Harp 10	T541	Grow Guitar 7
T432	Soft Accord 5	T487	Attack Barafon 6	T542	Bari & Tenor 8
T433	Wind Organ 5	T488	Grow Guitar 6	T543	Viola Attack 6
T434	Kalimba 10	T489	Soft Clav. 7	T544	Jazz Organ 7
T435	Shamisen 7	T490	Tubular Bells 6	T545	Tron Flute 9
T436	English Horn 7	T491	Bodhran 7	T546	Suona 8
T437	Shanai 7	T492	Oct Harp 5	T547	Castanets 7
T438	Soft Sax 10	T493	Tsugaru 7	T548	Shanai 10
T439	Didgeridoo 10	T494	Bari & Tenor 7	T549	English Horn 10
T440	Tenor Sax 7	T495	Wind Organ 7	T550	Shamisen 10
T441	Koto 11	T496	Soft Accord 7	T551	Tenor Sax 10
T442	Organ Flute 6	T497	Viola Attack 5	T552	Chorus Guitar, 10
T443	Xylophone 7	T498	Jazz Organ 6	T553	Organ Flute 9
T444	Soft Santur 6	T499	Nay 7	T554	Reed Horn 7
T445	Bag Pipe 7	T500	Dulcimer 7	T555	Hard Vibe 8
T446	Crystal 8	T501	Xylophone 9	T556	Twin Bones 7
T447	Soft Clav. 6	T502	Tron Flute 8	T557	Xylophone 10
T448	Bodhran 6	T503	Church Bells 4	T558	Attack Barafon 8
T449	Tsugaru 6	T504	Celesta 4	T559	Electric Vlapraphone 7
T450	Chorus Guitar, 7	T505	Clavi 4	T560	Crystal 9
T451	Nay 6	T506	Indian Flute 4	T561	Bag Pipe 10
T452	Soft Accord 6	T507	Jungle Bass 4	T562	Barafon 8

T563	Soft Santur 9	T576	Guitar Pinch 6	T589	Soft Clav, 10
T564	Wind Organ 9	T577	Indian Flute 5	T590	Bari & Tenor 10
T565	Bari & Tenor 9	T578	Bright String 5	T591	Nay 10
T566	Tsugaru 9	T579	Church Bells 5	T592	Soft Santur 10
T567	Oct Harp 7	T580	Electronic Guitar (Clean)	T593	Tron Flute 11
T568	Tubular Bells 8	T581	Shanai 11	T594	Soft Accord 10
T569	Soft Clav. 9	T582	Marimba 7	T595	Wind Organ 10
T570	Grow Guitar 8	T583	Organ Flute 10	T596	English Horn 12
T571	Tron Flute 10	T584	English Horn 11	T597	Shanai 12
T572	Nay 9	T585	Barafon 9	T598	Organ Flute 11
T573	Jazz Organ 8	T586	Tsugaru 10	T599	Bag Pipe 12
T574	Viola Attack 7	T587	Crystal 10	T600	Tsugaru 11
T575	Soft Accord 9	T588	Bag Pipe 11		

Appendix 2 (Rhythm Comparison Table)

R001	China1	R040	FastGospel	R079	GuadDance
R002	China2	R041	FolkRock	R080	Reggae12Beat
R003	China3	R042	RockBilly	R081	Reggae16Beat
R004	China4	R043	RockBoogie	R082	Bossanova
R005	China5	R044	RockChaCha	R083	Mambo 1
R006	China6	R045	RockClassical	R084	Mambo 2
R007	China7	R046	RockShuffle	R085	Bolero
R008	China8	R047	RockPop	R086	Cumbia
R009	China9	R048	Skiffle	R087	Latin Rock
R010	China10	R049	Funk Pop Rock	R088	Disco Latin
R011	Club Pop	R050	Contemp Rock	R089	Tijuana
R012	16 Beat Pop	R051	Acoustic Rock	R090	Reggae
R013	8 Beat Pop	R052	60's RockN	R091	Pop Mambo
R014	8 Beat Soul	R053	Standard Rock	R092	Latin Party Pop
R015	8 Beat Rock	R054	Brit Rock Pop	R093	Hard Mambo
R016	Rap Pop	R055	60's Vintage Rock	R094	Parranda
R017	Pop Rock	R056	Chart Rock Shfl	R095	Rock Lation
R018	60's Soul	R057	60's Pop Rock	R096	Slow Rock 1
R019	70's Soul	R058	Waltz	R097	Slow Rock 2
R020	Funk	R059	Cha Cha	R098	Slow Rock 3
R021	16 Beat Shuffle	R060	Rumba	R099	Slow Soul
R022	Twist	R061	Jive	R100	8 Beat Adria
R023	British Pop	R062	Pasodoble	R101	Classic Piano
R024	Hard Rock	R063	Samba 1	R102	Unplugged
R025	Fusion	R064	Samba 2	R103	Pop Ballad
R026	FunkShuffl	R065	Schlager Rock 1	R104	Pop New Age
R027	FusionShuffl	R066	Schlager Rock 2	R105	8 Beat Modern
R028	Classic 8Beat	R067	FoxTrot	R106	Country Ballad
R029	Vintage Gtr Pop	R068	Viennese Waltz	R107	Love Song
R030	Schlager Italia	R069	Tango1	R108	Modern Country Pop
R031	50's Pop	R070	Tango2	R109	Electro Pop
R032	Cool Pop	R071	German Waltz	R110	Acoustic Ballad
R033	Groovy Pop	R072	Carnival	R111	Piano Ballad
R034	60's Vintage Pop	R073	Organ Samba	R112	R&B Ballad
R035	80's Pop	R074	Reel	R113	Rock Ballad
R036	Rock'n Roll 1	R075	Gay Gordons	R114	Slow & Easy
R037	Rock'n Roll 2	R076	Scand Waltz	R115	Analog Ballad
R038	Straight Rock	R077	Salsa	R116	E_Ballad
R039	Jazz Rock	R078	Calypso	R117	80's EP Ballad

R118	80's Boy Band	R173	Ragtime	R228	Tango4
R119	70's Chart Ballad	R174	Frankly Soul	R229	Jig
R120	Romantic Ballad	R175	Jazz Funk	R230	Hawaiian
R121	90's Cool Ballad	R176	Classic Big Band	R231	Electronica
R122	Alp Ballad1	R177	French Jazz	R232	Funky House
R123	Alp Ballad2	R178	Jump Jive	R233	Club Beat
R124	Techno 1	R179	Swing Fox	R234	Retro Club
R125	Techno 2	R180	Slow Fox	R235	Mod Chart Pop
R126	Funky Disco	R181	Organ Cha Cha	R236	MOR Swing
R127	Saturday Night	R182	Organ Quick Step	R237	Retro Pop
R128	Club Latin	R183	Ober Polka	R238	Rumba Flamenco
R129	Disco Chocolate	R184	Polka Pop	R239	Cumbia1
R130	Disco Fox	R185	Blue Grass 1	R240	Parranda1
R131	Disco Funk	R186	Blue Grass 2	R241	Carnival2
R132	Disco Hands	R187	Blue Grass 3	R242	50's Pop1
R133	Disco Party	R188	Pop Waltz	R243	Groovy Pop1
R134	Disco Samba	R189	USA March	R244	Cool Pop1
R135	British Pop2	R190	Hully Gully	R245	Club Pop2
R136	Club Dance	R191	Tarantella	R246	16 Beat Pop2
R137	Modern R&B	R192	Limbo Rock	R247	8 Beat Pop2
R138	Hip Shuffle	R193	Swing Waltz	R248	8 Beat Soul2
R139	Charleston	R194	Pub Piano	R249	8 Beat Rock2
R140	DiscoPop	R195	Jazz Waltz 1	R250	60's Vintage Pop1
R141	DiscoSoul	R196	Jazz Waltz 2	R251	16 Beat Ballad2
R142	DiscoTrot	R197	Show Tune	R252	70's Pop Ballad
R143	EuroBeat	R198	Polka	R253	EP Ballad
R144	Rap	R199	Party Polka	R254	Power Ballad
R145	Rave	R200	Schlager Polka	R255	Guitar Ballad
R146	70's Disco Funk	R201	Hard Rock2	R256	New R&B Ballad
R147	Disco Philly	R202	60's RockN1	R257	Guitar Serenade
R148	Disco House	R203	Standard Rock1	R258	Organ Ballad
R149	80's Disco	R204	Brit Rock Pop1	R259	Pop Mambo1
R150	70's Disco1	R205	60's Vintage Rock*	R260	Latin Party Pop1
R151	70's Disco2	R206	Chart Rock Shf1	R261	80's Pop1
R152	Country 1	R207	Saeidy	R262	British Pop3
R153	Country 2	R208	German Rock	R263	70's Chart Ballad*
R154	Finger Pickin	R209	Schlager Beat	R264	Romantic Ballad1
R155	Country Brothers	R210	Rock & Roll	R265	90's Cool Ballad1
R156	New Country	R211	Rock & Roll Shf1	R266	Alp Ballad3
R157	Easy Country	R212	Oldies R & R	R267	Alp Ballad4
R158	70's Chart Cntry	R213	80's Rock & Roll	R268	Schlager Polka1
R159	Hoedown	R214	BritRockGuitar	R269	J-Pop Hit
R160	Country Shuffle	R215	Chart Rock Shf2	R270	Detroit Pop1
R161	Country Love Song	R216	New R&B	R271	Detroit Pop2
R162	Country Two Step	R217	Pop R&B	R272	Worship Med
R163	Big Band Shuffle 1	R218	Chart R&B	R273	Worship Fast
R164	Big Band Shuffle 2	R219	Rock Cha Cha1	R274	12-8 Ballad
R165	Big Band Shuffle 3	R220	Funk Shuffl 3	R275	Norteno
R166	Fast Band 1	R221	8 Beat Rock3	R276	60's 8 Beat
R167	Fast Band 2	R222	Rock Cha Cha2	R277	Laff
R168	Cat Groove	R223	Joropo	R278	Ober Walzer
R169	Dixie Jazz	R224	Reggaeton	R279	Bhangra
R170	Medium Jazz	R225	French Waltz	R280	Zouk
R171	Jazz Big Band	R226	Merengue	R281	German March
R172	.Jazz Club	R227	Tango3	R282	Fnka

R283	Bolero Lento	R338	Schlager Shuffle	R393	Mariachi Waltz
R284	Sherif Reggae	R339	Schlager Pop	R394	US March
R285	Beguine	R340	Schlager Rumba	R395	Guitar Rumba
R286	Pop Classics	R341	Euro Pop Organ	R396	Slow Blues
R287	Live 8 Beat	R342	70's French Hit	R397	Jazz Waltz Fast
R288	Power Rock	R343	Italian Mazurka	R398	70's Country Pop
R289	Acoustic Rock1	R344	Jig2	R399	Dixieland
R290	Cool 8 Beat	R345	Hawaiian2	R400	40's Big Band
R291	Uptempo 8Beat	R346	Latin Rock2	R401	Schlager Alp
R292	90's Rock Ballad	R347	Schlager Samba1	R402	Chart Pop1
R293	80's Guitar Pop	R348	Schlager Samba2	R403	Organ Groove
R294	70's 8 Beat	R349	Scand Slow Rock	R404	Chart Pop2
R295	90's Guitar Pop	R350	Schlager 6-8	R405	Modern Shuffle
R296	Soft Rock	R351	Schlager Fox	R406	8 Beat Ballad1
R297	Chart GuitarPop	R352	Country Ballad1	R407	Bubblegum Pop
R298	Gujira	R353	Country Two Step1	R408	Rock Funk
R299	Modern Pop Bld	R354	Kool Shuffle	R409	West Coast Pop
R300	Soul	R355	Pleasant Country	R410	Classic 16 Beat
R301	Skiffle1	R356	Country Hits	R411	8 Beat Ballad2
R302	6-8Soul	R357	Country 8 Beat	R412	Chillout
R303	Soul Brothers	R358	Mod Cntry Bld1	R413	16 Beat Ballad1
R304	6-8Slow Rock	R359	Country Ballad2	R414	Epic Ballad
R305	Trance Pop	R360	Scand Country1	R415	Easy Ballad
R306	Mellow Hip Hop	R361	Scand Country2	R416	Cuban Son
R307	Classic Hip Hop	R362	Country Love Song1	R417	16 Beat Ballad3
R308	New Hip Hop	R363	Orch Big Band2	R418	Contemp Rock2
R309	Duranguense	R364	Big Band Fast2	R419	EP Ballad2
R310	70's Disco3	R365	Midnight Swing	R420	Cat Groove2
R311	70's Disco4	R366	Fusion2	R421	Guitar Serenade2
R312	Latin Disco	R367	Funk Shuffl 2	R422	Organ Ballad2
R313	Brazilian Samba	R368	Fusion Shuffl 2	R423	Pop Ballad2
R314	Brit Pop Swing	R369	Swing Fox1	R424	Norteno2
R315	Grupera	R370	Slow Fox1	R425	Retro Pop2
R316	Danzon	R371	Organ Cha Cha1	R426	Trance Pop2
R317	Dream Dance	R372	Organ Quick Step1	R427	Pop Gtr Ballad
R318	US Chart Hit	R373	Piano Boogie	R428	Ibiza 2002
R319	Soul R&B	R374	Lovely Shuffle	R429	Chillout Cafe
R320	R&B Soul Ballad	R375	Jazz Gtr Club	R430	70's Glam Piano
R321	Euro Hip Hop	R376	Modern Jazz	R431	French House
R322	Trip Hop	R377	Acoustic Jazz	R432	Bhajan2
R323	60's RockN2	R378	Cool Jazz Ballad	R433	16 Beat Pop3
R324	Bhajan	R379	Modern Jazz Bld	R434	16 Beat Pop4
R325	Hip Hop Groove	R380	Easy Listening	R435	Enka2
R326	Euro Trance	R381	Bebop	R436	Blues Rock
R327	6-8 Trance	R382	Orch Big Band1	R437	Ibiza 2004
R328	Latin DJ's	R383	Kool Funk	R438	80's Rock & Roll1
R329	Bomba	R384	Blueberry Blues	R439	Acoustic Rock2
R330	Club House	R385	Shuffle Blues	R440	Club Pop3
R331	House	R386	Mambo 3	R441	Power Rock2
R332	Disco Teens	R387	Mambo 4	R442	Rock'n Roll 3
R333	Happy Reggae	R388	Big Band Fast1	R443	Cool8 Beat2
R334	Pop Latin	R389	Orchestra Swing1	R444	British Pop4
R335	Fast Bossa	R390	Orchestra Swing2	R445	British Pop5
R336	6-8 Modern	R391	70's Chart Cntry1	R446	8 Beat Soul3
R337	6-8 Orchestral	R392	Jazz Waltz Mad	R447	BritRockGuitar1

R448	Brit Sten Pop 2	R466	60- tal själ 2	R484	schlager polka2
R449	Blueberry Blues2	R467	Fusion shuffl 3	R485	Grupera 2
450 kr	Guijira2	R468	Fusion blanda 4	R486	Danzon 2
R451	Sten Ballad 2	R469	6-8 Modernt 2	R487	schlagerAlp2
R452	själ 2	470 kr	6-8 orkester 2	R488	saeidy2
R453	klassiska 8 Beat 2	R471	långsam själ 2	R489	6-8 mars
R454	Bolero 2	R472	piano Ballad 2	R490	Bluegrass
455 kr	själ Bröder 2	R473	Höft Hoppa Spår 2	R491	Pop Latin 2
R456	Glad Reggae2	R474	Höft blanda 2	R492	visa Tune2
R457	6-8 långsamma Rock 2	R475	orgel Spår 2	R493	scan blanda
R458	Bolero Lento 2	R476	diagram Pop 3	R494	dyrka långsamt
R459	Midnattsgunga 2	R477	Mambo 5	R495	Bachata
460 kr	franska Jazz 2	R478	Mambo 6	R496	Romantisk Ballad 2
R461	latin fest Pop2	R479	Disko latin 2	R497	Analog Ballad 2
R462	Tango5	R480	Snabb Bossa 2	R498	Elektro Pop 2
R463	Tang 06	R481	Fox Trav 2	R499	Blues RockK2
R464	parranda2	R482	pasodoble2	R500	90- talet själ
R465	80- talet Pop 2	R483	Highland vals 2		

Appendix 3 (Demonstration Song Comparison Table)

S001	S038 S039	Beethove	ngentbord chopin
S002		n Menuett	Nocturne
		I G	Mendelssohn Fr
S003		Pol	Hingslied Reverie
S004		53 n	Beethoven piano sonat vid .49-2 1
S005		näise n	st purpur
S006		-lägenhet	Beethoven
S007		större, Op.	Skottland
S008		låt De	Debussy
S009		Adjö	Aeabesque
S010		B	Bach
S011		a	Uppfinning
S012		c	Liszt älskar drömmar
S013		h	Debussy La fylla i hår de
S014			Linje Mozart Menuett
S015		D	Bach vals I Amino
S016		e	var n thoven- pia n nr sonat på
			13 patetisk 2: a purpur
S017		e	Schumann Glad
S018		f	landsman Shubert
S019		t	Marche militär
S020		e	Bach Bourree
S021		r	Burgmiller
S022		s	pastorale
S023		o	schumann
S024		m	sicilienne
S025			Haydn Liten
S026		-	serenad
S027			ostron Dolly S
S028		T	DreamingAwa kening chopin
		e	Stort falskt Glasögon på. 18
		m	polk leende
S029		p	Improviserad
S030		e	Inga. 3, På. 90
S031		r	Brahms Vals Nej.
S032		e	15
S033		r	chenyin Li spelar Debussys
S034		a	Golliwogs cakewalk
S035		d	Cembalo Musik
S036			Mozart Twinkle Twinkle
S037		t	Liten stjärna Bach
		a	Menuett

Richard
Ballad
pour Adeline
Richard ping
pong sous
Les Arbres
R
i
c
h
a
r
d

A
c
o
m
m
e

A
m
o
u
r

R
i
c
h
a
r
d

Ä
k
t
e
n
s
k
a
p

D
i
k
ä
r
l
e
k

p
a
c
h
e
l
b
e
l

k
a

non I D
Badarzewska Jungfrus bön
Tjajkovskij- Dans av s mirlitons
Dvorak Humoresk

-15-

S040 Joplin The Underhållare
S041 Lc. Daquin LeC ou
S042 karl Bohm The F raintain
S043 korsakov Humla
S044 Haydn - soluppgång
S045 Johann sebastian Bach sonat
S046 ouvertyr " william
S047 berätta " schubert
S048 serenad
S049 Menuett Från
S050 LArlesienne polonäs
S051 clementi sonat
S052 chopin Rotation Etyd
S053 Beethoven Ödets symfoni
S054 Musikalisk
S055 Ögonblick chopin
S056 Svart ke n ys
S057 chopin förspel Regndroppe " , Op 28
S058 - 15 chopin petit chien
S059 chopin Fantasi Improviserad
S060 polonäs i A-dur, op40 , Inga 1
S061 Dubessy clair De lune
S062 Schubert Monents
S063 Musicaux Mozart turkiska
S064 mars
S065 Chopin - valse op . 64 nr 2
S066 Beethoven Mänsken sonat
S067 Schumann drömmar
S068 Beethoven För Elise
S069 Beethoven Marcia Alla
S070 Turca Mozart sonat
S071 Mendelssohn Jagerlied op . 19b-
S072 3 chopin - Nocturne op . 9 Nej . 2
S073 TornaAsurriento
S074 MOZART K448(II Andante)
S075 De Glad änkevals
S076 cinquantaine
S077 söta hejdå Hejdå
S078 Barcarole
S079 klarinettpolka
S080 vårens röst
vals av The
Blommor katyusha
på vingar av sång

1 Battery



WARNING

- o snälla ta hand om dig följande uppmärksamhet
- o Do inte försöka ta isär eller kortsluta batteri o Do inte avslöja eller bränna det i de fire
- o Do blanda inte nya och gammal batteri
- o Do inte blanda olik typer av batterier
- o Do inte avgift de batteri
- o De positiv och negativa poler av de batteri måste vara korrekt installerad
- o behaga ta bort batteriet ur det elektroniska tangentbordet Om du gör det inte använda för en lång tid ,

2 Exception



WARNING

- vänligen gör följande steg när undantag för den elektroniska tangentbord som rykande , för varmt och
- Så på . 1) . driva av
- 2) . dra de adapter ner från de driva uttag på de vägg när är använder .
- 3) . kontakta din lokal -handlare i tid .
- Det är normal för adapter få varm när lång tid använder AC adapter , inte ange Felfunktion
- behaga ström av och starta om det elektroniska tangentbordet när någon gång funktion problem ,

3 Install the battery

- 1) . Utgång de skruva och ta bort de batteri täcka
- 2) . sätta de batteri med rätta positiv + och negativ - riktning in i batteri spår med 4 x" AA " 1 .5v
- 3) . sätta de batteri täcka och Låsa de skruvar

Detta produkten innehåller elektroniska komponenter och skall inte tillåta vätskor till skriva in eller vara begagnad i fuktig miljöer .

Dagligen dammsäker rengöring skall vara gjort väl , och ytläckar burk vara torkas med a mjuk och rena tyg .

VEVOR®

TOUGH TOOLS, HALF PRICE

Teknisk support och E- garanticertifikat
www.vevor.se/support