

双面印刷

Tip: Please fully charge the keyboard before using it.

Diagram of the keyboard layout. The CAPS indicator is located on the top left, and the Status Indicator Light is on the top right. The keyboard features a standard QWERTY layout with function keys (F1-F12), Print, Scroll, and Pause keys, and a numeric keypad. The CAPS indicator is a small red light on the top left, and the Status Indicator Light is a small red light on the top right.

Attention: The images in this manual are all schematic diagrams and may deviate from the actual product. Please refer to the actual product for accuracy.

1. Switch the toggle to [2.4G] and enter the 2.4GHz mode.

2. Open the nameplate cover from the top right corner of the keyboard and take out the USB dongle from the dongle compartment.

3. Insert the USB dongle into the USB port on your computer. The keyboard is now ready for use.

Switch the toggle to **[B]** enter the wireless mode.

② Press the combination key to switch to wireless! and hold for about 3 seconds until the blue light flashes quickly to activate wireless pairing.

③ Search for the wireless device name **[MCHOSE K87 3.0]** or **[MCHOSE K87 5.0]** on your device and click to connect, the wireless indicator light will go back to normal after successful pairing.

① Switch the toggle to **[OFF]** to enter the wired mode.

② Connect the cable to the Type-C port of the keyboard.

③ Connect the cable to the USB port of the computer. The keyboard is ready to use.

In 2.4GHz wireless mode, the keyboard backlight will turn off after 30 minutes of inactivity. Press any key to activate it.

	FN+	Function
1	ESC	Reset (Hold for 3 seconds)
2	Left Win	Lock/Unlock Win Key
3	A	Switch Windows system
4	S	Switch Mac system
5	~	2.4GHz pairing (Hold for 3 seconds)
6	1!	Wireless device 1 (Press briefly to switch, press and hold 3s for pairing)
7	2@	Wireless device 2 (Press briefly to switch, press and hold 3s for pairing)
8	3#	Wireless device 3 (Press briefly to switch, press and hold 3s for pairing)
9	Right SHIFT	Turn on/off backlight
10	DEL	Switch the backlight mode
11	↑	Increase backlight brightness
12	↓	Decrease backlight brightness
13	→	Increase backlight speed
14	←	Decrease backlight speed
15	-_	Switch the backlight color
16	END	Switch the side light mode
17	[(Switch the side light brightness
18])	Switch the side light speed
19	\	Side light slow flashing and continuous light mode, switch the color
20	HOME	Switch the logo light mode
21	=+	Switch the logo light color
22	::	Decrease the logo light speed
23	^^	Increase the logo light speed
24	Page Dn	Decrease the logo light brightness
25	Page up	Increase the logo light brightness

Key	F1	F2	F3	F4	F5	F6
Press the single key	Decrease screen brightness	Increase screen brightness	Switch window	Explorer	/	/
Press with FN combination key	F1	F2	F3	F4	F5	F6
Key	F7	F8	F9	F10	F11	F12
Press the single key	Previous song	Play / Pause	Next song	Mute	Volume-	Volume+
Press with FN combination key	F7	F8	F9	F10	F11	F12

Key	F1	F2	F3	F4	F5	F6
Press the single key	Decrease screen brightness	Increase screen brightness	Switch window	Explorer	/	/
Press with FN combination key	F1	F2	F3	F4	F5	F6
Key	F7	F8	F9	F10	F11	F12
Press the single key	Previous song	Play / Pause	Next song	Mute	Volume-	Volume+
Press with FN combination key	F7	F8	F9	F10	F11	F12

● Status Indicator Light:

1. The red power indicator light indicates low power capacity.
2. The orange power indicator light indicates medium power capacity.
3. The green power indicator light indicates high power capacity.

1. Suggest charging only by connecting the keyboard to the computer with the provided USB cable;
2. Don't charging the keyboard by using a fast charger of mobile phone.
3. Don't charging the keyboard by substandard or non-compliant power adapters.
4. Don't charging the keyboard by over-voltage or over-current power adapters.
5. While charging, please keep away from high-temperature devices.
6. Please turn off the power when you are not use for long time.

The above instructions apply to the other devices with charging functions (Keyboards, mice, headphones, speakers, etc.)

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Thank you for purchasing our product. If there are any quality issues within the warranty period, please contact us. Meanwhile, please provide this warranty card so that we could offer you after-sales service.


Product Items: _____ Customer Name: _____

Serial NO. : _____ Warranty Address: _____

Purchase Date: _____ Warranty Contact: _____

Purchase Channel: _____ TEL / E-mail: _____

Sales: _____ Postal Code:

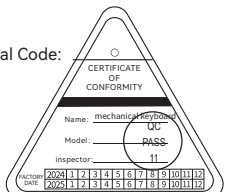

Executive standard: GB4943.1-2022

