


MEET YOUR KINDLE SCRIBE

- 1 Kindle Scribe
 - 2 Power
 - 3 USB-C port
 - 4 Premium Pen
 - 5 Eraser
 - 6 Shortcut button
- Go to the device's settings to change the shortcut

Also included: USB-C cable, replacement tips and replacement tool

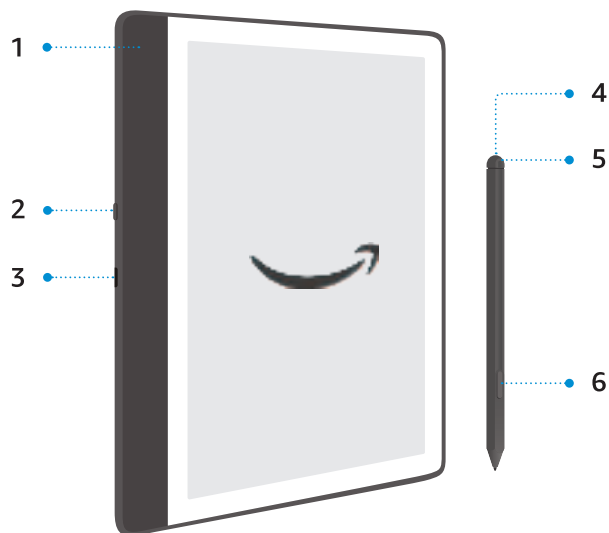

ACTIVATE YOUR KINDLE SCRIBE


- 1 **Power**
Long press the Power button to power on your Kindle Scribe.
- 2 **Setup**
Follow the on-screen instructions to get started.

Tip: for more information, go to the Kindle User Guide in your device's settings.

HOW TO REPLACE PEN TIPS

- 1 Remove the old tip using the included replacement tool.
- 2 Insert the replacement tip into the opening until it's seated.

Replace the tips if they're worn down or the pen writes without touching the screen.

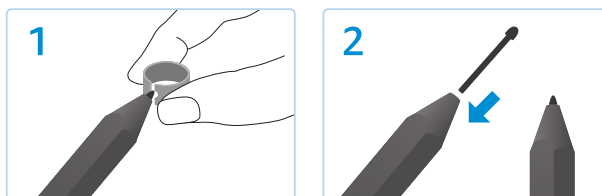

Help and accessible information



amazon.com/setup/KindleScribe

