

TROUBLESHOOTING

Problem		Possible cause/action
After power is supplied, the power level display fails to light up.		• The plug is not inserted tightly. • The switch, socket, fuse and power cord are not in good condition.
The power level display lights up but heating does not start.		• The pot material is not suitable. • For other reasons, please contact your service technician.
Heating stops suddenly during operation.		• The ambient temperature is too high. • The air inlet or outlet is blocked. • The voltage is outside the range of this appliance. • The timing period has reached. • The system protection functions and is conducting energizing test.
Code of failure.	E3, E6	Wait a few minutes for the temperature of the appliance to become normal. Press the power control button and the induction cooktop will operate as usual.
	E7, E8	Wait a few minutes. When the voltage is back to normal, the induction cooktop will operate as usual.
	E1, E2, E4, E5, Eb, EC	Please contact your service technician.



Environmental Information

RoHS
Compliant.

If at any time in future you need to dispose of this product please do NOT dispose of this product with household waste. Please send this product to collecting points where available.

This product is RoHS compliant.