



Mixer Plus DJ/Karaoke Media Controller

User's Guide for Model IBDJ883 v3141-01

For the most up-to-date version of this User's Guide, go to www.iliveelectronics.com

Safety Instructions & Warnings

Important Safety Instructions

- Read these Instructions.
- Keep these Instructions.
- Heed all Warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



FCC Warnings

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference, and
- 2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment:

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Battery Warnings

- **WARNING:** Do not ingest the battery, Chemical Burn Hazard.
- If the remote control supplied with this product contains a coin/button cell battery and the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.
- Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children.
- If you think batteries might have been swallowed or placed inside and part of the body, seek immediate medical attention.
- **CAUTION:** Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- **WARNING:** There is a danger of explosion if you attempt to charge standard Alkaline batteries in the unit. Only use rechargeable NiMH batteries.
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
- Do not mix old and new batteries.
- Completely replace all old batteries with new ones.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc) batteries.
- Batteries should be recycled or disposed of as per state and local guidelines.

Additional Warnings and Precautions

- **CAUTION:** TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.
- Mains plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.
- **CAUTION:** Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.
- **WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- **WARNING:** Use of this unit near fluorescent lighting may cause interference regarding use of the remote. If the unit is displaying erratic behavior move away from any fluorescent lighting, as it may be the cause.
- **WARNING:** Shock hazard - Do Not Open.
- Caution and marking information is located at the rear or bottom of the apparatus.
- **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain, moisture, dripping, or splashing.
- Objects filled with liquids, such as vases, shall not be placed on the apparatus.



WARNING: To reduce the risk of electric shock, do not remove cover (or back). No user-serviceable parts inside. Refer servicing to qualified service personnel.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of un-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



WARNING: This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov. **This product meets and complies with required Federal product guidelines.**

Table of Contents

Setup	5
Features	
Includes	
Power	
Overview	6
Controls	
Top View	
Side View	
Connecting to Other Devices	9
Connecting to External Speakers	
RCA Audio Output	
Pairing to a Bluetooth Device and Playing Audio Wirelessly	
Bluetooth Transmitter Mode	
Using the Aux In	
Connecting a USB Drive	
Customer Support	12
Contact Information	
Warranty	
International Support	

Setup

Features

 
- Bluetooth Wireless - range 60 ft.
- EQ presets
- USB input - up to 128GB, support MP3
- Microphone input (1/4")
- Guitar input (1/4")
- Headphone Jack (1/4")
- Aux In (3.5mm audio input)
- RCA stereo output
- 2x DJ jog wheels with DJ effects
- 8x DJ sound effects and jingles
- LCD display
- Built-in smartphone/tablet stand

Includes

- AC/DC power adapter


Power

Plug the AC/DC power adapter (included) into a standard wall outlet with the included power cord and the DC power input on the top of the unit.

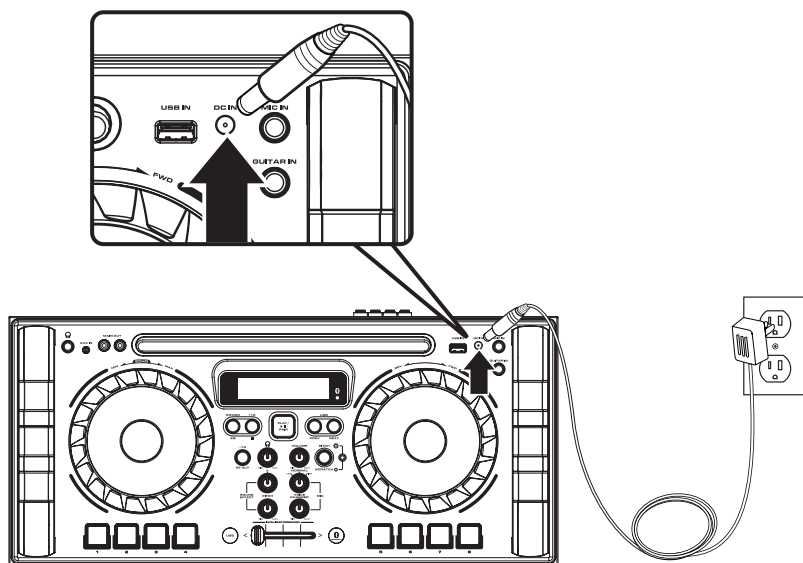

Overview

 Controls

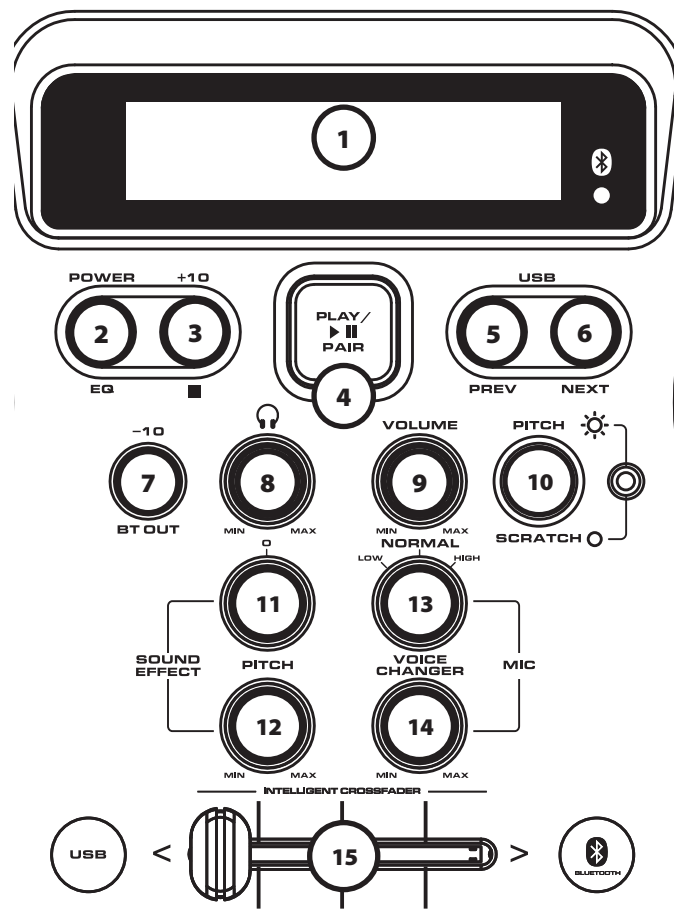

Overview

Controls

1. LCD Display Screen

2. Power/EQ

Press to power ON.

Press and Hold to power OFF.

After power on, press to choose equalizer setting:
Rock, Classic, Jazz, Pop, or none.

3. +10 /Stop

Press to skip 10 tracks ahead (USB MODE).

Press and hold to stop playback.

4. Play / Pause / Pair

Press to play or pause audio (USB MODE).

Press and hold to pair to a Bluetooth device.

5. Previous (USB Mode)

Press to skip to the previous track (USB Mode).

6. Next (USB Mode)

Press to skip to the next track (USB MODE).

7. -10 / BT Out

Press to skip 10 tracks backward (USB MODE).

Press and hold to turn Bluetooth Transmitter Mode On/Off.

8. Headphone Volume

Turn to adjust volume of connected headphones.

9. Master Volume

Turn to adjust volume of the speaker system.

10. Pitch / Scratch

Press to select function mode for the Right Effect Wheel. Light ON indicates Pitch selected.

11. Sound Effects Pitch Adjustment

Turn to adjust Pitch for Sound Effects.

12. Sound Effects Volume Adjustment

Turn to adjust Volume for Sound Effects.

13. Microphone Voice changer Adjustment

Turn to adjust Voice changer for the Mic input.

14. Microphone Volume Adjustment

 
Turn to Volume for the Mic input.

15. Crossfade Slider


Slide to adjust the fade between the USB and Bluetooth sources. Adjust fully to one or the other to only hear that source.

Overview

Top View

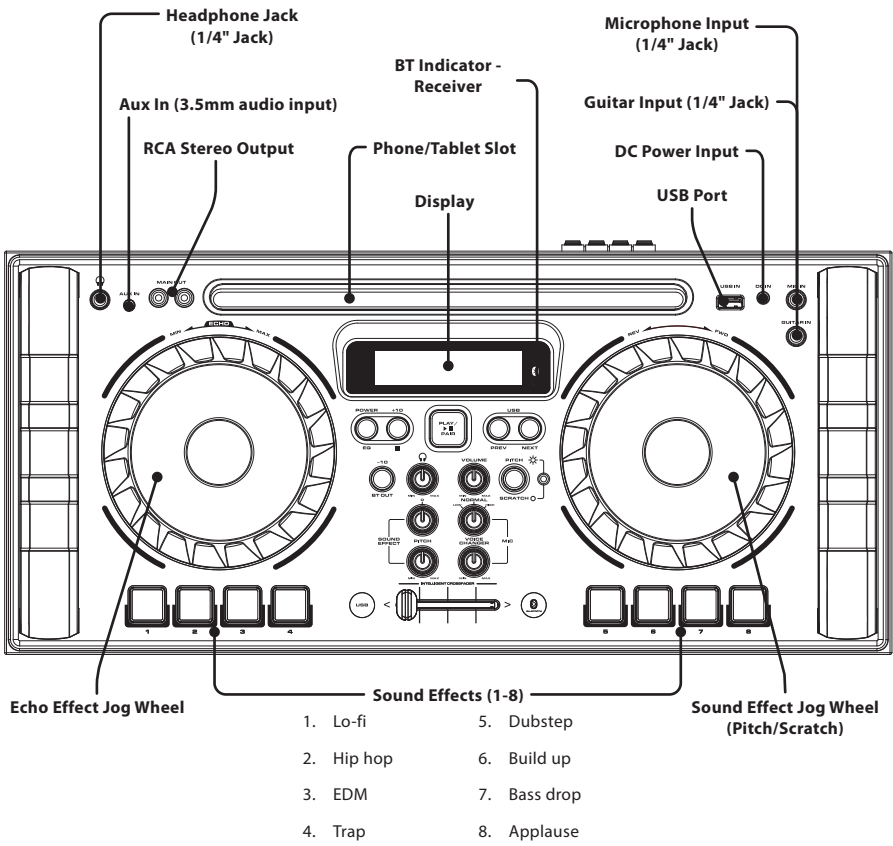

Side View

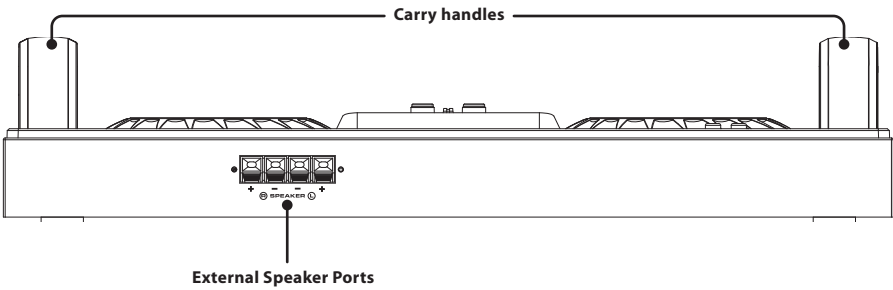 

Connecting to Other Devices

Connect External Speakers

 
Requires speaker wire (not included). Note: Connected speaker must have low impedance (between 4–8ohms)

1. Connect speaker wires to the **External Speaker Ports** on the unit by pressing down the red (positive terminal) and black (negative terminal) clips and inserting the speaker wire.
2. Connect the speaker wires to the input terminals on your speaker matching the positive and negative terminals to those on the unit.
3. Audio played through the unit will now be heard through the connected speakers.

RCA Audio Output

Requires RCA audio cables (red/white, not included).

1. Connect RCA stereo audio cables to the **Master Output** on the unit and the **RCA audio inputs** on an external audio system or device.
2. Adjust the external stereo system to accept input from the unit.
3. Audio played through the unit will now be heard through the connected stereo system.

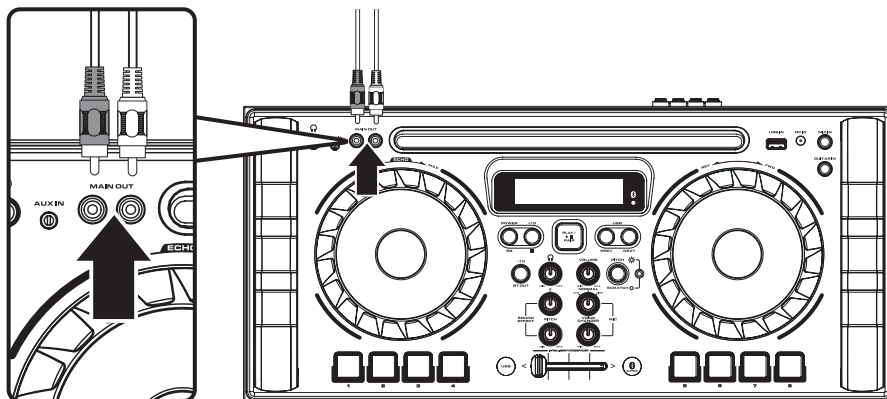

Connecting to Other Devices

Pairing to a Bluetooth Device and Playing Audio Wirelessly

After initial pairing to a Bluetooth device, the unit will stay paired unless unpaired manually by the user, or erased due to a reset of the device. If your device should become unpaired or you find it is unable to connect, repeat these steps.

Audio played through Bluetooth will play in USB Modes.

1. When the unit powers on, the system is automatically ready to pair to a device, indicated by a slowly flashing blue light under the  symbol next to the LED display.
2. To manually enter pairing mode, press and hold the **Play/Pause/Pair** button until the pairing indicator begins flashing quickly. *When pairing, remain within 3 feet of the unit.*
3. From your smartphone or other Bluetooth device, access Bluetooth Settings and search for nearby devices. Select **IBDJ883** when it is discovered.
4. When successfully paired, a bluetooth connected sound will be heard and the pairing indicator will change to a solid blue. Audio played from the connected device should now be heard through the speaker connected to the unit. Use the controls on the connected Bluetooth device to select and begin playing audio.

Bluetooth Transmitter Mode

After initial pairing to a Bluetooth device, the unit will stay paired unless unpaired manually by the user, or erased due to a reset of the device.

1. When the unit powers on, Press and Hold BT button, the words BT OUT will slowly flash on the LCD display.
2. Turn on Bluetooth on your Bluetooth receiver device (such as headphones or speakers). *If you are having trouble connecting your Bluetooth device, turn off Bluetooth on other Bluetooth enabled devices that you do not wish to use.*
3. The unit will auto scan for nearby Bluetooth devices. When successfully paired, the words BT OUT will stop flashing on the LCD display. Audio played through **USB, Aux, Guitar, or Microphone** connection on the unit will now be heard on the connected Bluetooth receiver device.

Note:

Master Volume not apply to BT Transmitter Mode.

 
To pair a different Bluetooth receiver device, turn off Bluetooth on the previously paired device. Press and hold the **BT OUT** button to turn off the Bluetooth Transmitter function. Then, press and hold the **BT OUT** button to turn on the Bluetooth Transmitter function. The unit will begin to autoscan for a new device.

Using the Aux In

Audio played through the Aux In will play in USB Modes.


3.5 mm audio input cable not included.

1. Using a 3.5 mm audio input cable, connect the **Aux In** on the unit and the audio output/headphone jack on a smartphone, tablet, or other audio source.
2. The unit will detect the connection automatically. Audio played through the connected device will now be heard through the speaker connected to the unit.

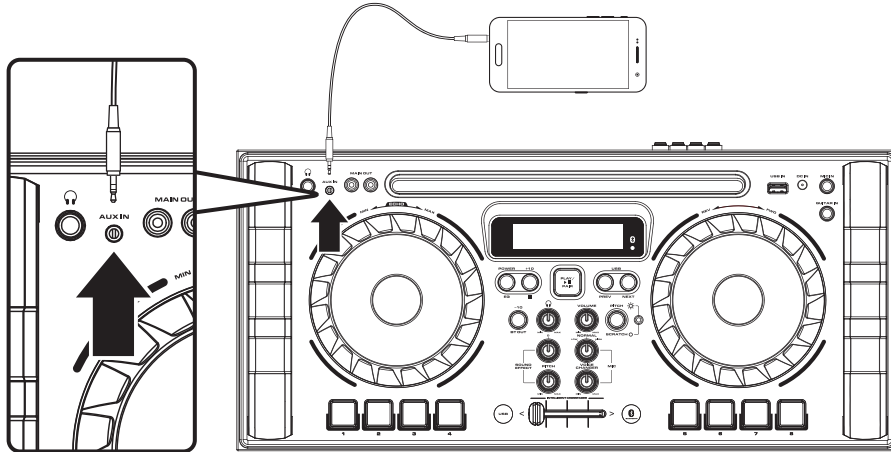

Connecting a USB Drive

 1. Load a USB thumb drive into the USB Port on the speaker.
2. Use the controls on the unit to play content from the connected USB thumb drive.

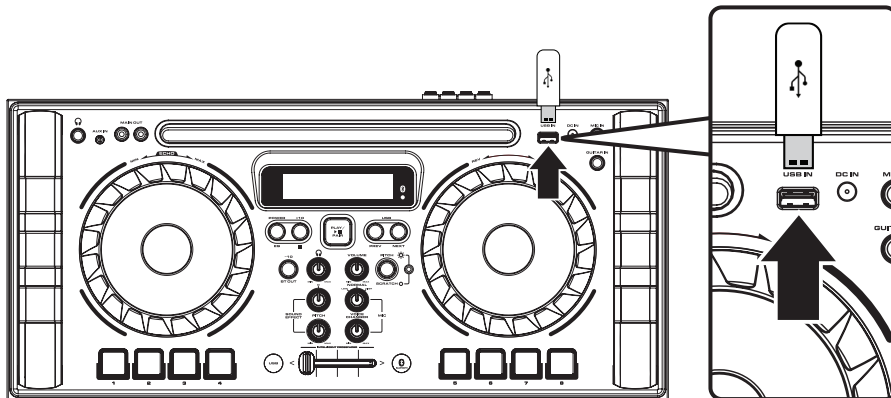

Customer Support

Contact Information

Website: www.iLiveElectronics.com

Email Support: prodinfo@dpiinc.com

Email Parts: partsinfo@dpiinc.com

Phone Support: 1-888-999-4215

Warranty

For Warranty Information and the most up-to-date version of this User's Guide, go to: www.iLiveElectronics.com

International Support

To download this User's Guide in English, Spanish, and French, or to get answers to frequently asked questions, visit the support section at: www.iLiveElectronics.com

Para descargar este Manual del Usuario en inglés, español y francés, o para obtener respuestas a preguntas frecuentes, visite la sección de apoyo en: www.iLiveElectronics.com

Pour télécharger ce guide de l'utilisateur en anglais, espagnol ou français, ou pour obtenir des réponses à des questions fréquemment posées, consultez la rubrique d'assistance sur: www.iLiveElectronics.com

Copyright © 2023 Digital Products International (DPI, Inc.) All other trademarks appearing herein are the property of their respective owners. Specifications are subject to change without notice.



***Protect for Today
Sustain for Tomorrow***