

# PERGOLUX

REMOTE CONTROL S2



## **PERGOLUX SKYDANCE**

Operating instructions for remote control and electronics

### **Operating instructions for the remote control**

The remote control has six channels that can be used to control various functions or accessories.

The selected channel is displayed at the top of the remote control with the channels 1-6. You can switch between the channels using the arrows

#### **Channel 1:** LED control

When channel 1 is lit, the LED lighting can be switched on by pressing the up arrow. When the LEDs are turned on, the brightness of the LED lighting can be dimmed by pressing the down arrow

To switch off the lighting, press the square button in the middle of the remote control.

#### **Channel 2:** Louvres

When channel 2 is lit, the slats can be opened by pressing the down arrow and closed by pressing the up arrow. If the down arrow or the up arrow is pressed for three seconds the slats close or open completely.

If the square button is pressed during opening or closing the slats stop.

**Channels 3 to 6:** are free and not assigned to any function. The HEATER can be connected to any of these channels.

**Changing the battery:** at the bottom of the back of the remote control remote control, the battery cover can be pushed down to remove the battery.


**Storage:** only store the remote control in a dry place. Remove the battery if the remote control will be inactive for more than 4 weeks.

**SAFETY INSTRUCTIONS:** Make sure that there are never people or objects between or in the vicinity of the slats when they are in motion! There is an acute risk of injury! Never leave children unattended!



## Disconnecting and Connecting the Remote to the Control Box

Below you can see a diagram of the structure of the control unit, which is used to the connection to the remote control is established and the remote control. Familiarize yourself with the setup in order to continue with the next steps.

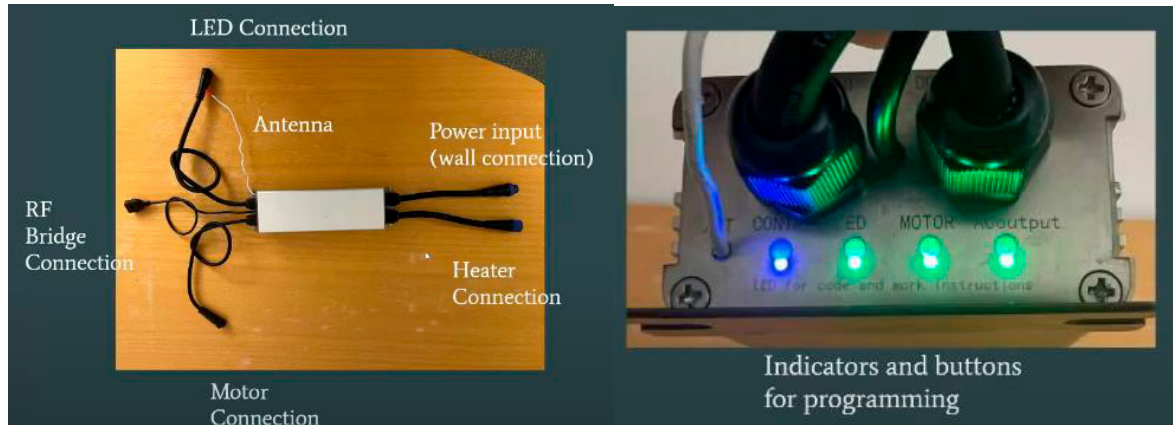

## Unpairing the connection

1. Open the access panel in the beam of the PERGOLUX SKYDANCE, the control unit is located behind it. The Control Box is located inside the beam for Sundream and Pergola (LEDs)
2. Now press and hold the corresponding LED indicator light on the control unit for 7 seconds.

The LED will begin to flash slowly, continue holding the button and as soon as the LED light flashes quickly, the connection to the remote control is deleted.

## Recoupling the connection

1. Select the corresponding channel on the remote control (1 for LED lighting and 2 for slats)
2. Press and hold the corresponding button on the control unit for 4 seconds
3. When the LED indicator on the control unit flashes quickly, it is in programming mode.
4. Press the up arrow on the remote control - the LED display on the control unit should now flash once.
5. The remote control is now programmed to the corresponding function.

**SAFETY INSTRUCTION:** Make sure that there are never people or objects between or near the slats when they are in motion! There is acute risk of injury! Never leave children unattended!


If you have any further questions about proper use, please contact customer service. We will be more than happy to help!

# PERGOLUX

## REMOTE CONTROL S2


---

### CHANGING LED-LIGHT COLOUR

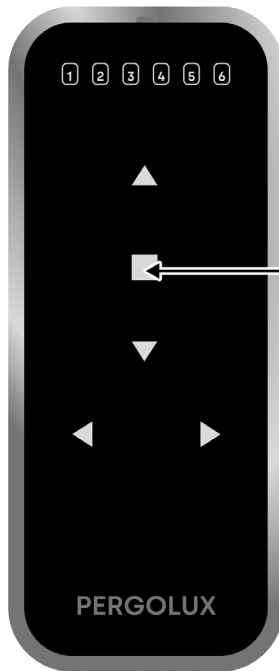

Press and hold the "STOP" button for 5 seconds, until the LED lights start changing colors.

 Press the "STOP" button again to select the color you would like.

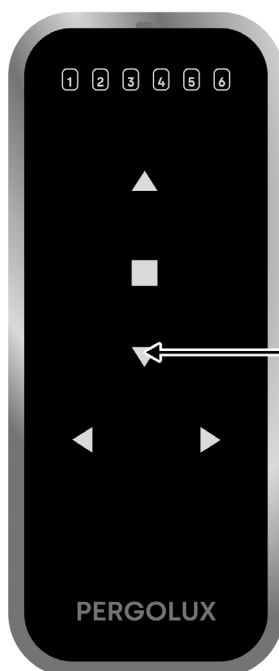


To dim the lights, press and hold the "DOWN" button.

# PERGOLUX

 
## REMOTE CONTROL S2

---

### CHANGING LED-LIGHT COLOUR

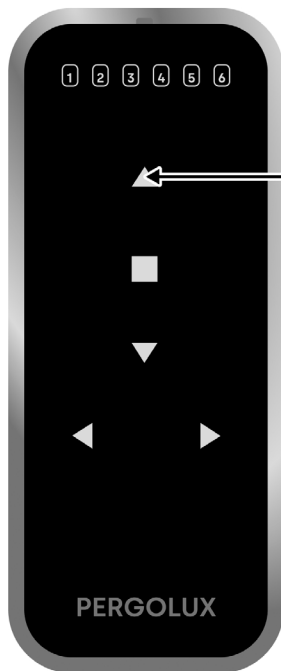

 To brighten the lights,  
press and hold the "UP"  
button.

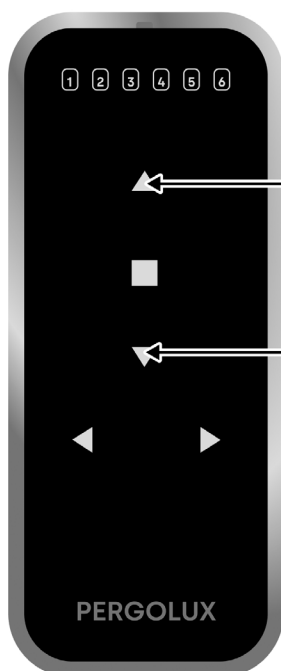

Press the "DOWN" button  
twice to save the changes.

\*\* Press the "UP" button and the  
light will appear in the hue/  
saturation you have saved.

# PERGOLUX

REMOTE CONTROL S2

