


84x108mm

84mm 正面

反面

FERVENT®

FR-118BT-S

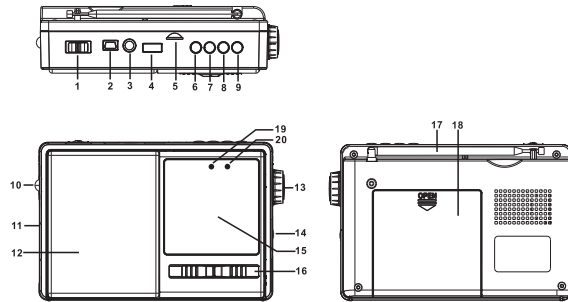

- 1 LAMP OR TORCH SWITCH
- 2 USB-MINI JACK-5V IN
- 3 PHONE JACK
- 4 USB JACK
- 5 TF JACK
- 6 PREV
- 7 PLAY/PAUSE
- 8 NEXT
- 9 MODE
- 10 LED-TORCH

- 11 LED-LAMP
- 12 SPEAKER
- 13 TUNING
- 14 POWER ON/OFF AND VOLUME
- 15 TUNING WINDOW AND POINTER
- 16 BAND SWITCH
- 17 FM AND SW ANT
- 18 BATTERY DOOR
- 19 CHARGE LAMP
- 20 PLAY LAMP

OPERATING INSTRUCTION

RADIO OPERATING :

1. Turn the Function switch(16) to RADIO position.
2. When connect the DC power inside the DC socket (14), The battery is being charged and the charge LED is on,machine will be worked by DC default. When pull out the DC power , the machine will be worked by battery default.
3. Turn the volume knob (14) adjust it to the appropriate volume.
4. Turn the band switch (16) to FM, turn the tuner(13) and watch the tuning frequency indicating window (7) and indicator select the program which you want to receive.
5. When you receive FM and SW station , please pull out the telescopic antenna (17) to get the best reception by changing its length and angle.
6. Receiving AM by using the internal magnetic antenna, and you can get the best reception by rotating the direction of the radio.
7. In order not to affect others, please insert the earphones in the earphones in the Headphones jack(3), you can listen to the by earphones.when you would not like to use, please set the switch to OFF position.

READER PLAYBACK OPERATING:

1. With TF card , USB reader(Maximum support 16G).
2. No need to shift among USB/TF card, machine automatically read the first input media device .If first input TF card,you need to take out TF card , then machine can read MP3 music file from U Disc
3. Turn the Function switch (16) to MP3 position And adjust volume knob (12) to the appropriate volume.
4. Press the (7) for PLAYBACK/PAUSE, Press the button(8) for NEXT,Long press the button(8) for fast forward

Press the button(9) for PREVIOUS,Long press the button(9) for REWIND.

POWER SUPPLY:

1. Can use 3.7V 800mAh Lithium Battery(BL-5C).
2. Can use UM-1 1.5V two batteries.
3. DC 5V input.

ATTENTION PLEASE:

- ★ When the radio signal and music play is distortion, please promptly to Charge or replace battery.
- ★ Insert the power sockets for DC-5V to recharge , the machine recharge time for 8 -10hours.
- ★ Long time no use , please remove battery within the storehouse(14), prevent dry battery leakage is damaged.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

The device has been evaluated to meet general RF exposure requirement , the device can be used in portable exposure condition without restriction