

X2 Mechanical Keyboard and Mouse Set



IN THE BOX:

Lemokey X2 Mechanical Keyboard x 1 M55 Mouse x 1 Type-C Cable x 1 Keycap-Switch Puller x1 Extra Keycaps Set x 1 Manual x 1

Keyboard Quick Start Guide

 $\bf 1$ The keyboard's default layout is configured for Windows. To use it with MacOS, please remap it using VIA.

Windows



2 The VIA Key Remapping Software

Please visit <u>usevia.app</u> to use the online VIA software to remap the keys. If the VIA cannot recognize your keyboard, please reach our support to get the instruction.



*The online VIA software can only run on the latest version of Chrome, Edge, and Opera browsers yet.

 
*VIA only works when the keyboard is connected by wire to the computer.

3 The Backlight

Press FN + Q to change the lighting effect



Press FN + TAB to turn the backlight on/off



4 Adjust The Backlight Brightness

Press FN + W to increase the backlight brightness



Press FN + S to decrease the backlight brightness



5 The Key Rollover

Press FN + N to switch between 6-key rollover and N-key rollover



6-key rollover: the keyboard can detect up to 6 simultaneous key inputs.

N-key rollover: the keyboard can detect all key inputs without limit to
the number of key presses.

*The keyboard enables N-key rollover by default.

6 Factory Reset



Troubleshooting? Don't know what's going on with the keyboard?

- 1 Download the right firmware and QMK Toolbox from our website.
- ② Unplug the power cable and remove the space bar keycap to find the reset button on the PCB
- ③ Hold the reset key first, then plug in the power cable. Release the reset key, and the keyboard will now enter DFU mode.
- (4) Flash the firmware with the QMK Toolbox.
 (5) Factory reset the keyboard by pressing FN + J + Z (for 4 seconds).

^{*}Step by step guide can be found on our website.

X2 MECHANICAL KEYBOARD SPECIFICATIONS

	Specifications
Layout	Fu ll Sized
Switch type	Mechanical
Width	128.6 mm
Length	437.7 mm
Front height	16.5 mm (without keycaps) 33.2 mm (with keycaps installed)
Back height	20 mm (without keycaps) 37.4 mm (with keycaps installed)
Keyboard feet height	1.3 mm
Angle	2 / 7 degree

X2 MECHANICAL KEYBOARD OVERVIEW





- (1) Caps Lock Indicator
- 2 Windows Lock Indicator
- 3 Num Lock Indicator
- 4 Scroll Lock Indicator
- ⑤ Type-C Port

DEFAULT KEY LAYOUT:

LAYER 0: This is the default layer.



LWin=Left Windows LAIt=Left Alt RAIt=Right Alt RApp=Right App RCtI=Right CtrI

LAYER 1: This layer will be activated when you press the FN/MO(1) key.

Scr- Scr+ Task	File BL- BL+ Prvs Play	Next Mute Vol- Vol+	Print Cortan E	BLCycle A		7
		∇ ∇ ∇	\Box	∇ ∇	∇	\Box
					∇ ∇	
▼ ▼ ▼ ▼	V V MRRO V V	▼ ▼ ▼ ▼	\forall \foral			

LAYER 2/LAYER 3: This is a blank layer.

KEY DESCRIPTION

	Key Description
Scr-	Screen Brightness Decrease
Scr+	Screen Brightness Increase
BL-	Backlight Decrease
BL+	Backlight Increase
Prvs	Previous
Play	Play/Pause
Next	Next
Mute	Mute
Vol-	Volume Decrease
Vol+	Volume Increase
NKRO	N-key rollover

	Key Description
BL Toggle	Turn Backlight on/off
BL Cycle	Backlight Cycle
MO(1)	Layer 1 will be activated when holding this key
MO(2)	Layer 2 will be activated when holding this key
MO(3)	Layer 3 will be activated when holding this key
MO(4)	Layer 4 will be activated when holding this key

Third-party input tools are not compatible with the keyboard.

Due to compatibility, versions, brands and drivers of Windows/Android OS, functions of third-party input tools may be affected while using the keyboard. Please make sure your operating system and drivers are up to date.

Certain multimedia keys or function keys do not work.

Functions of certain multimedia keys may be disabled due to compatibility, versions, brands, and drivers of devices.


Safety Precaution:

Keep the product, accessories and packaging parts out of the reach of children to prevent any accidents and choking hazards.

Always keep the product dry to avoid corrosion.

Do not expose the product to extreme temperatures below -10°C ($5^{\circ}F$) or above $50^{\circ}C$ ($131^{\circ}F$) to preserve the lifespan of the keyboard and battery.

Mouse Quick User Guide

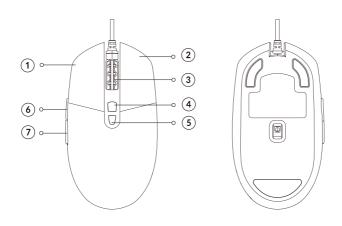

- 1 Left button
- 2 Right button
- 4 DPI+ button
- (5) DPI- button
- 3 Middle wheel button
- 6 Forward button
- Backward button

DPI indicator

First level	800 DPI
Second level	1600 DPI (default)
Third level	2400 DPI
Fourth level	4000 DPI

Light effects

Next light effect: Left button + Forward button

Previous light effect: Left button + Backward button

*The M55 mouse offers a choice of 8 lighting effects.

How to factory reset

Hold down the "DPI + button", "Left button" and "Forward button" simultaneously for 4 seconds, and all the LED lights on the mouse will blink. It will blink three times to indicate that the factory reset is successful.



Mouse specification

Weight: $110 \pm 5 g$

Size: 116.7 x 64 x 38.6 mm Connectivity: Type-A wired

Report rate (polling rate) : 125 Hz - 250 Hz - 500 Hz - 1000 Hz (default)

*The default polling rate is 1000 Hz, which can be modified through the driver.



Find us at:
https://www.lemokey.com
Support@lemokey.com

@ @lemokey
@ @lemokey.keyboard
% @lemokey_com
Designed by Lemokey
Made in China

Lemokey

X2 键鼠套装

内容清单

Lemokey X2 机械键盘 x 1 M55 鼠标 x 1 USB线 x 1 拔轴键器 x 1 赠送键帽套装 x 1 说明书 x 1

键盘快速上手指南

1、本产品默认系统为Windows系统,可使用在线 VIA 软件将您的Windows按键映射为Mac按键。



2、关于VIA映射软件

可以访问 usevia.app使用在线VIA软件, VIA是可以映射按键的软件。 如果VIA软件不能识别你的键盘, 请联系我们以获得技术支持。



- *在线VIA只能在最新版本的Chrome, Edge和Opera浏览器中运行。
- *VIA仅在键盘通过线连接到计算机时有效。

3、更改键盘背光模式以及快速关闭/开启键盘背光

组合FN+Q键,更改键盘背光模式



组合FN+TAB键,可快速关闭/开启键盘背光



4、调整键盘背光亮度

组合FN+W键,提高键盘背光亮度



组合FN+S键,减少键盘背光亮度



5、切换按键无冲

组合FN+N键,可快速切换六键无冲/全键无冲



六键无冲:键盘支持最多同时输入键位为六个 全键无冲:键盘支持同时输入键位数量无限制 *键盘默认为全键无冲

6、恢复出厂模式



如果键盘出现了故障,不知道怎么办?

- ①从我们的网站为您的键盘下载正确的固件和QMK工具箱。
- ② 拔掉键盘上的数据线和空格键键帽,您可以看到空格键下方的金属 复位按钮。
- ③ 首先长按住复位按钮,然后将数据线插入键盘。放开这个复位按钮, 此时键盘会进入DFU模式。
- ④ 然后您可以使用QMK工具箱进行刷新固件的操作。
- ⑤ 固件刷新完成后,将键盘恢复出厂设置长按FN+J+Z(等待四秒)。


^{*}步骤指南可以在我们的网站上找到。

X2 键盘规格

规格			
按键	104键		
开关类型	机械轴		
宽度	128.6mm		
长度	437.7mm		
键盘下沿高度	16.5mm (不含键帽) / 33.2mm (含键帽高度)		
键盘上沿高度	20mm (不含键帽) / 37.4mm (含键帽高度)		
键盘脚垫高度	1.3mm		
键盘倾斜角度	2° / 7°		

X2 键盘按键说明



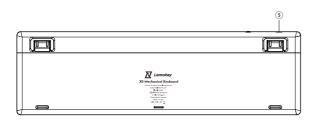

- ① Caps Lock 指示灯
- ② Windows Lock 指示灯
- ③ 数字锁定指示灯
- ④ Scroll Lock指示灯
- ⑤ Type-C接口

按键布局

层0: 这是默认图层。



LWin=Left Windows LAIt=Left Alt RAIt=Right Alt RApp=Right App RCtl=Right Ctrl

层1: 当您长按FN/MO(1)键时,层1将被激活使用。

Scr- Scr+	Task File BL- BL+ Prvs	Play	Mute Vol- Vol+	Print Co	tan BLCycle	Ā a	=
					7 🗸	\Box	abla
Toggle					7 🔻		∇
∇ BL-				_	_	▽ -	_
		Ľ	∇	7	-]		∇
□ □ 0x700b □ □	▽				7 🔻	\Box	

层2/层3:这是一个空白层。



X2 键盘多媒体按键说明

	按键说明		按键说明
Scr-	屏幕亮度-	BL Toggle	关闭/开启键盘背光
Scr+	屏幕亮度+	BL Cycle	灯光循环
BL-	键盘背光亮度-	MO(1)	按住MO(1),层1将被激活
BL+	键盘背光亮度+	MO(2)	按住MO(2),层2将被激活
Prvs	上一曲	MO(3)	按住MO(3),层3将被激活
Play	播放/暂停	MO(4)	按住MO(4),层4将被激活
Next	下一曲		
Mute	静音		
Vol-	音量-		
Vol+	音量+		
NKRO	全键无冲		

第三方输入工具与键盘不兼容。

答:由于Windows/Android操作系统的兼容性、版本、品牌和驱动程序,使用键盘时,第三方输入工具可能会受到影响、请确保您的操作系统和驱动程序是最新的。

某些多媒体键或功能键在设备上不起作用。

答:由于设备的兼容性,系统版本,驱动程序等原因,某些多媒体键或者功能键可能无法使用。

*多媒体键: [臺/湊/읍/읍/忠/尐//ऽ□/ऽ□/▷□/▷▷/ऽ/幻/亞/岛)


功能键: F1/F2/F3/F4/F5/F6/F7/F8/F9/F10/F11/F12

安全预防措施:

防止儿童接触到产品、附件和包装部件,以防止任何意外和窒息的危险。保持产品干燥、避免腐蚀。

不要将产品暴露在低于-10°C(5°F)或高于50°C(131°F)的极端温度下,以保持键盘的寿命。

鼠标按键说明

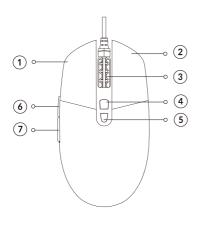



- ①左键
 - 键 ②右键
- ④ DPI+按钮 ⑤ DPI- 按钮
- ③ 中键滚轮
- ⑥ 前进键
- ⑦ 后退键

DPI档位

一档	800 DPI
二档	1600 DPI(出厂默认档位)
三档	2400 DPI
四档	4000 DPI

灯效调整

上一个灯效:左键+前进键 下一个灯效:左键+后退键 *M55提供8种灯效选择

恢复出厂设置

依序组合长按DPI按键+鼠标左键+前进键4秒, 鼠标灯光整体闪烁3次后,恢复为出厂设置



鼠标规格

重量:110±5g

尺寸:116.7*64*38.6mm

工作模式:有线模式

回报率:125、250、500、1000Hz

*默认为1000Hz,可通过驱动修改



Find us at:
https://www.lemokey.com
Support@lemokey.com

@lemokey
@lemokey.keyboard
% @lemokey_com
Designed by Lemokey
Made in China

执行标准: GB/T 14081-2010 售后热线: 400-0766268

地 址:深圳市龙岗区坂田街道大发埔社区

大发路24号文坑工业区2栋201