





FALKOR MINI

FALKOR MICRO

WARNING: Read the ENTIRE instruction manual to become familiar with the features of the product before operating. Failure to operate the product correctly can result in damage to the product, personal property and cause serious injury.

 


Age Recommendation: Not for children under 14 years. This is not a toy.

NOTICE: This product is only intended for use with unmanned. hobby- grade, remote-controlled vehicles and aircraft. FOXEER disclaims all liability outside of the intended purpose and will not provide warranty service related thereto.

SUPPORT: Visit www.foxeer.com/ to get more information.

CAMERA-OSD SWITCH CONNECTION



5 Pin Harness VCC DC 4.6-20V In (Red) GND Ground Wire(Black) Video out(Yellow)

VSEN Voltage Senser(Blue) OSD OSD (White)

. Connect the VSEN cable Wherever

Mini/Micro Camera Back OSD Switch Front

CAUTION: If you are using ESC's with active braking, we recommend powering the camera system through a BEC or voltage regulator.

CAMERA-VIDEO TRANSMITTER CONNECTION

To connect the camera directly to the video transmitter, plug the 3 pin wiring harness from the video transmitter into the camera, or you can power the camera by other device, PDB, FC, Bat...

Main MENU

MENU: Push MENU(center button) to go to the main menu.

UP/DOWN: Move up and down through the menu.

Left/Right: Modify the menu parameters.

MAIN MENU	
► AE	Ļ
WB	1
DAY NIGHT	L ل
IMAGE ENHANCE	1
VIDEO SETTING	7
SPECIAL SETTING	L.
LANGUAGE	◆ ENGLISH ▶
RESET	
SAVE EXITI	

∢12 >

∢GLOBE →

4AUTO⊁

4AUTO⊁

FXPOSURE

▶ BRIGHTNESS

ADVANCED

RETURN

AE ADVANCED

▶ SHUTTER CTRL

GAIN CTRL

EXPOSURE MODE

DAY NIGHT

MODE: FXT(external)/ AUTO/ COLOR/ BW(black and white).

DAY NIGHT	
▶ MODE	◆ EXT →
RETURN	

IMAGE ENHANCE

3DNR: AUTO/MANUAL (0~30)

CONTRAST: AUTO/MANUAL (0~40) SHARPNESS: AUTO/MANUAL(0~16) COLOR GAIN: AUTO/MANUAL (0~30)

IMAGE ENHANCE ▶ CONTRAST < AUTO ▶ CHADDNECC 4 AUTO F COLOR GAIN **◆ AUTO → ◆** AUTO ► RETURN

ΑE

Auto Exposure.

- 1. BRIGHTNESS: 0~30.

- GLOBE(Global)
- BLC(Back light control): 1~8
- SHUTTER CTRL:

MANUAL: PAL(1/25~1/10000) / NTSC(1/30~1/10000)

• GAIN CTRL:

2. EXPOSURE MODE:

• FLC(Front light control): 1~8

3. ADVANCED: SHUTTER CTRL/GAIN CTRL.

RETURN AUTO

AUTO

MANUAL: ANALOG GAIN(1~16) / DIGITAL GAIN(1~15)

VIDEO SETTING

VIDEO STANDARD: PAL/NTSC

D-WDR: OPEN/CLOSE

VIDEO SETTING		
۲	VIDEO STANDARD	∢PAL⊁
ı	HD FORMAT	CVBS
ı	D-WDR	◆ OPEN ▶
l	RETURN	

SPECIAL SETTING

VIDEO SCALE: 4:3 / 16:9 NAME: OPEN/CLOSE VOLTAGE: OPEN/CLOSE TIMER: OPEN/CLOSE

PTZ MENU	
▶ VIDEO SCALE	44:3 ►
NAME	◆ OPEN ▶
VOLTAGE	◆ OPEN ▶
TIMER	◆ OPEN ▶
IMAGE STYLE	SUNSET ▶
RETURN	

White Balance do not suggest changing it.

MODE: ATW/ MWB.

WB

• MWB: RGAIN: 0~32 BGAIN: 0~32



LANGUAGE

LANGUAGE: ENGLISH /中文/ PYCCKNN / ESPANOL / ITALIANO /FRANCAIS/ POLSKIM/ PORTUGUES / 日本语 / EAAHNIKA

RESET

RESET: Return to camera's initial setting.