


ACTIVESHOP[®]

Instructions for Use OCHO PRO 8 UV lamp



Importer:

ACTIVESHOP SP. Z O.O.
ul. Graniczna 8b, building
DC2A 54-610 Wrocław,
Poland
www.activeshop.com.pl
Rev. A/02/2025

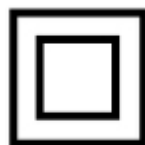

OCHO PRO 8 UV LAMP is the latest generation, professional lamp that quickly and evenly cures all gels, hybrid varnishes and other light-curable preparations thanks to dual led technology. It emits white light that does not tire the eyes. The PRO 8 lamp has a high-powered energy-saving light source with a dual wavelength range of 365nm and 405nm. In addition, there are 40 LEDs, which give a total maximum power of 84W. The lamp has a built-in motion sensor, a 30s, 60s and 120 seconds timer, and when the sensor is activated, it lights continuously for up to 120 seconds. The 120-second "**Low Heat Mode**" is a mode in which the lamp's power gradually increases every 30 seconds. It eliminates the burning sensation when applying builder gels. The large electronic display makes it easy to control the time.

HOW TO USE:

1. Connect the power supply to the lamp. Do not do this with wet or damp hands.
2. Turn on the device with the ON/OFF button for it to start working.
3. There are 3 time buttons on the device 30S, 60S, 120s. The 120 mode is "Low Heat Mode." The power is increased gradually to minimize the possible discomfort caused during the curing of varnish or gel.
4. When you insert your hand into the lamp, a sensor activates the device.
5. The maximum operating time, without selecting the appropriate mode, is 120s.

The 120-second mode relies on the fact that the power of the lamp gradually increases. It eliminates the burning sensation during the application of builder gels.

NOTE!!!

The choice of time to cure hybrid varnish or gel mass should always be adjusted according to the brand manufacturer's recommendations.

RECOMMENDATIONS:

1. Carefully read the instruction manual before using the lamp for the first time.
2. Do not look directly at the LED light, as it may damage your eyesight.
3. Do not use the lamp when the power supply is damaged.
4. Exposure for too long may cause skin damage.
5. Use products designed for LED light curing.
6. Remember to unplug the device from the contact when you are done using it.
7. Keep the device away from children
8. Keep the device away from water or other liquids.
9. Keep the device away from flammable and combustible
10. The lamp is designed only for curing all kinds of hybrid polishes and gel masses, not for regular nail polishes. Make sure your nail polish is compatible before use.
11. Do not soak the device. Do not disinfect with excessive amounts of liquid. Water or disinfectant liquid getting inside the device, may damage it. It is recommended to maintain the UV/LED lamp with special agents.

TECHNICAL DATA:

Rated voltage	110/240V
Rated frequency	50Hz
Power	84W
Number of diodes	42
Wavelength of light	365nm, 405nm
Dimensions	23x20,5x12cm

PRODUCT FEATURES:

1. **UV/LED Dual Light.** 2x faster curing than traditional nail lamps.
2. **Three time setting modes** - 30, 60, 120seconds. Time can be adjusted according to the type of product and manufacturer's recommendations.
3. **Low Heat Mode (120s)** - a mode during which the lamp heats up gradually, thus offsetting the possible discomfort and burning sensation that can occur when curing varnish or gel.
4. **LCD display** for easy reading of remaining working time.
5. **The base is easy to remove**, making the pedicure procedure easier and more comfortable. (To remove the base of the device, slide it backwards).
6. **Automatic infrared sensor.** The lamp will automatically turn on/off when you put your hand inside.
7. **Long-lasting LEDs.** 42 long-lasting LEDs with a lifetime of 50,000 hours
8. **Protects eyes and skin.** Instead of the usual violet light, the nail lamp uses a soft white light that is painless and harmless to nails, eyes and skin.

SAFETY MEASURES

1. The device is a professional equipment for use in beauty parlors. Operation of the device only by qualified cosmetic personnel avoids undesirable consequences during treatment.
2. Do not disassemble the device or attempt to use it for purposes other than those indicated in this manual. All servicing and repairs must be performed only by an authorized service technician (ACTIV Tomasz Pacholczyk company).
3. Do not install or operate the device near liquids, wet places or with wet hands - so that no liquids get into the device.
4. Immediately remove the plug from the socket and contact an authorized service provided by ACTIV Tomasz Pacholczyk in the following cases: a) liquid has gotten into the device, b) the device emits a strange smell, smoke or makes strange sounds, c) the power cord has been damaged, d) the device has been knocked over or its housing has been damaged.
5. Do not lay any objects on the cables. Do not install the device where someone may step on the power cord.
6. For safety purposes, unplug the power cord from the outlet each time you finish working with the device.
7. Do not insert anything into the opening of the device. If a foreign object gets into the hole, remove the cord from the outlet and contact the distributor or manufacturer.
8. Do not place the device on an unstable cart, shelf or vehicle. If dropped, the device may be damaged.
9. In order to guarantee the established useful life of the device, it is recommended to keep an interval of one minute before pressing the power button again (between switching on and off and vice versa).
10. The power supply must comply with the specifications on the nameplate. Otherwise, there is a risk of incorrect operation of the device its damage and even burning.

CAUTION:

1. In case of damage to the power cord or other malfunctions, contact an authorized service center - this will avoid danger.
2. This equipment may be used by children at least 8 years of age and by persons of diminished physical and mental capabilities and persons with inexperience and lack of familiarity with the equipment, if supervision or instruction on how to use the equipment in a safe manner is provided so that the associated risks are understood.
3. The equipment is not intended for play by children. Do not allow children to play with the equipment.
4. Do not leave the appliance unattended when children or persons without sufficient knowledge of the use of the appliance are in the vicinity.
5. This electrical appliance is not a toy. Improper use or contact with the electrical appliance may pose a health risk or lead to death, so use and store the appliance out of the reach of children.



DISPOSAL OF THE DEVICE

Dispose of used electrical appliances, fixtures and packaging to raw material reprocessing centers in accordance with environmental protection principles. Do not dispose of electrical appliances in household waste containers. Follow the rules for discarding this type of equipment. In order to protect the environment in accordance with Directive 2012/19/EC on waste electrical and electronic equipment, waste electrical equipment should be collected separately and then handed over to collection centers for waste electronic and electrical equipment.

electronic and electrical equipment.

At the end of their useful life, and old appliances contain full-value recyclable components, so they should be handed over for reprocessing. Therefore, they should be handed over to appropriate collection points, as well as they can also be handed over to the ACTIV Tomasz Pacholczyk Company.

STORAGE AND TRANSPORT

The device should be transported at a temperature in the range of (-) 20 °C to (+) 50 °C only in its original packaging. Store the device in a well-ventilated and relative humidity of no more than 75%. Operating temperature from (+) 10 °C to (+) 40 °C. During storage and transportation processes, the device must not be thrown or dropped, exposed to mechanical shocks or atmospheric agents.