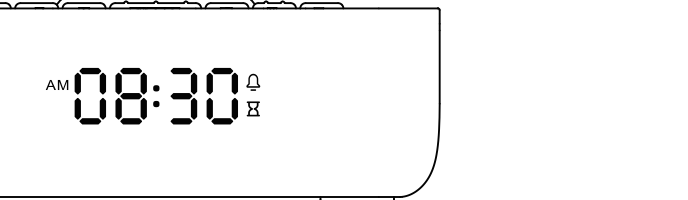 
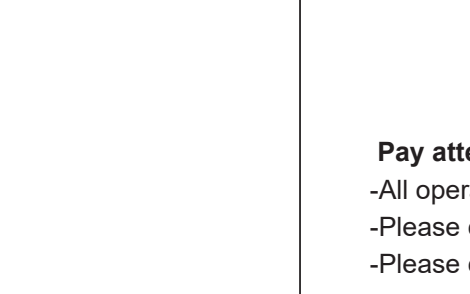 
 
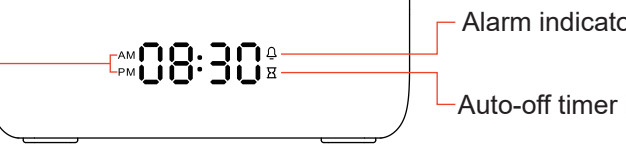 
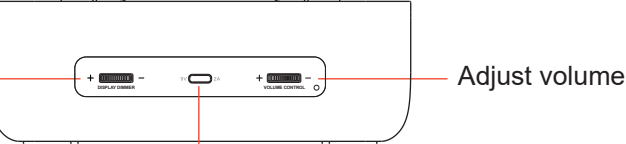 
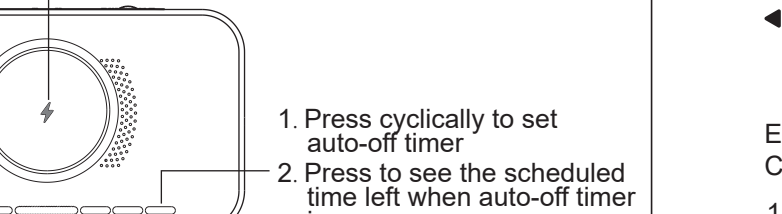 


说明书标准：材质-128铜版纸，风琴折， 尺寸：160*90mm

 R9 Wireless Charging Sound Machine User Manual  Get warranty/support with customer@reachershop.com	Instructional Video You can get our Reacher product instructional video when you scan the QR code below and input item model R9. Link: https://www.youtube.com/channel/UCvpUg6_WyxmEFQebi7FFVw  1	 Pay attention -All operations will auto-exit and save settings if there is no operation within 5 seconds. -Please check the "AM " & " PM " indicators when you set the time and alarm. -Please check if your mobile phone has wireless charging capability for charging. 1	 AM/PM appear in 12H mode Alarm indicator Auto-off timer indicator  Adjust display dimmer Adjust volume Power connector 2	Top View  Centred on wireless charging zone 1. Increase/decrease the time when set the time and alarm clock 2. Select sound when set the sound machine 1. Press cyclically to set auto-off timer 2. Press to see the scheduled time left when auto-off timer is on 1. Enter alarm setting 2. Hold to turn ON/OFF Enter 9mins snooze Turn ON/OFF sound machine 3	Time Setting ① Press " " to select hour → minute → time format. (12/24H) ② Press " ◀ / ▶ " to change the selected content. ③ Press " ⌂ " to confirm the selected setting. Example: The default time is "AM 12:00 ", but the correct time is "AM 12:30 ". Correct the minute as below. 1. Press " ⌂ " once, " 12 " flash. Press " ⌂ " again, " 00 " flash. 2. Press " ◀ / ▶ " until " 00 " becomes " 30 ". 3. Press " ⌂ " again, " 12H " flash. 4. Press " ⌂ " again to finish the setting. 4	Alarm Setting ⌂ ① Press " ⌂ " to select hour → minute → ringtone. ② Press " ◀ / ▶ " to change the selected content. ③ Scroll " + [BRIGHTNESS] - " (on back panel) to change ringtone volume. ④ Press " ⌂ " to confirm the alarm setting. Alarm Pause /Snooze SNOOZE ⌂ ① Press " SNOOZE " to get 9 minutes snooze. ② Press " ⌂ " to stop the alarm when it's ringing. The alarm will go off the next day. - If you do not press any button, it will automatically turn off after 10 minutes. 5	Alarm ON/OFF ⌂ Long press " ⌂ " to turn ON/OFF the alarm completely. -The " ⌂ " will disappear when you completely turn off the alarm. Sound Machine 🎵 ① Press " 🎵 " to enter sound machine setting. ② Press " ◀ / ▶ " to change sound content. ③ Scroll " + [BRIGHTNESS] - " (on back panel) to change sound volume. Auto-off Timer ⌂ Press cyclically " ⌂ " to select auto-off timer when the sound machine is on. (30mins/1H/2H/OFF) 6	Wireless Charging ⚡ Centre your phone in the wireless charging zone on top of the product. -Please charge with a bare phone or phone with a metal-free & less than 3mm thick phone case. Dimmer Display + [BRIGHTNESS] - Scroll " + [BRIGHTNESS] - " (on back panel) to adjust display brightness. Restore Factory Setting ◀ ⌂ When there is a problem with the machine, you can reset the R9 by following method: -Simultaneously hold " ◀ " and " ⌂ " to restore factory settings. 7	Safety Instructions • To reduce the risk of fire or electric shock, do not expose this unit to rain or moisture. • To avoid damage, never place the unit near radiators, in front of heating vents, under direct sunlight, or near water. • When disconnecting the power supply, pull the plug first. Do not pull the cord by itself. Never handle the power plug with wet hands, as this could cause fire or electric shock. • Do not open the housing. • Do not twist or pinch the power supply cord. If the plug or power supply cord needs to be replaced, ensure that it complies with the manufacturer's recommendation. Support & Warranty Reacher backs 45-day money back and a 12-month warranty for products in our store. 7×12H service: customer@reachershop.com. Input:9V-2A Output:15W(MAX) 8
--	---	---	--	--	---	--	---	--	--

FCC Requirement

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.