


* Do not place system in high temperatures or humid

environments, keep the system dry and handle with care

* In order to avoid electric shock and other accidents, do not

Caution

to avoid damage.

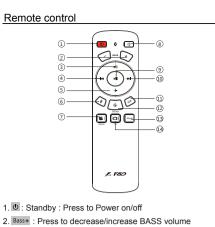



- 1. 0 : Standby : Press to Power on/off
- 2. Bass+ : Press to decrease/increase BASS volume
- 3. : Increase master volume

1

6

- 4. : Bluetooth mode and USB mode: Short press to select previous song and long press to select previous folder
- 6. * : Bluetooth: Short press to select Bluetooth mode, long press
- 7. : Movie mode: short press One short press then the source icon of current mode will blink 4 times to represent that
- 8. 4: Press to mute or unmute the sound
- 9. 📶 : Bluetooth mode and USB mode: Press to play or pause the music
- 10. : USB mode: Short press to select next song and long press to select next folder
- 11. AUX : Prees to select AUX mode
- 12. O Source: Press to switch among audio sources: (Bluetooth), COA(Coaxial), OPT(Optical), AUX & USB
- 13. Reset: Short press to go to default settings
- mode once blink to represent the TV mode is ON

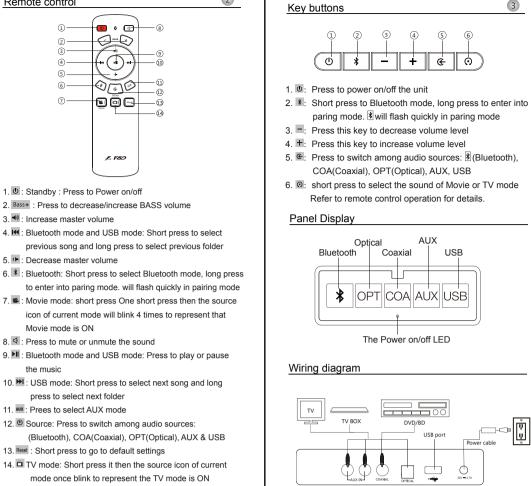

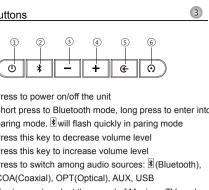

Bluetooth mode Basic Requirements 3.Bluetooth device must be within 10 meters of T-388 Steps or Bluetooth connection

- 1.Bluetooth function must be activated first on Bluetooth device 2.Bluetooth device must support Bluetooth A2DP
- 1. Select 3 input
- 2. Long press the 🕏

Operation guidance

- 3. will appears on the display
- 4. You now have 30 seconds to register your mobile device
- 5. Start the search on your mobile device
- 6. If the mobile device requires an access code, please enter 0000
- 7. Once confirmed, the connection will be done automatically and 🛚 will appear in the display

If T-388 connects with multiple mobile devices within a short period of time, both will connect automatically after selecting Bluetooth mode and device Bluetooth function is activated.

- USB mode 1. Plug in USB card
- 2. Card reader supporting max 32GB as well as MP3/WMA dual formats supports 32GB max
- 3. Play music (refer to remote control function)



AUX mode

 
- 1. Short press to switch audio source to AUX mode.
- 2. Connect the speaker with audio source through signal cable (output interface of devices as TV, PC, Mobile phones, etc.)
- 3. Adjust volume while playing music. Optical mode

1. Short press to switch audio source to OPT mode. Connect the speaker with audio source through OPT signal cable (output interface of devices as TV. PC. etc.)

SHENZHEN FENDA TECHNOLOGY CO.,LTD.GUANGDONG.PRC ADD: Fenda Hi-Tech Park, Zhoushi Road, Shiyan, Baoan, Shenzhen, Guangdong, PRC Tel: +86-755-27486668 (800 line) Fax: +86-755-27353777 P.C.: 518108

5 2. Adjust volume while playing music 1. Short press to switch audio source to COA mode. Connect

the speaker with audio source through COA digital signal cable (output interface of devices such as TV, PC, etc.)



Wireless connection between soundbar and subwoofer (first time)

- 1. Connect subwoofer power cable to wall power, LED on top of subwoofer will flash slowly to show it is waiting for pairing.
- 2. Connect soundbar power adapter to wall power and red LED will will turn on. Short press "O", and then a "O" button for about 5 seconds and soundbar will enter pairing mode. Wait about 1 minute, soundbar and subwoofer will pair automatically. Voice prompt will confirm successful pairing and LED on top of subwoofer will turn on.
- 3. If pairing unsuccessfully, please repeat the above steps (1) and (2).

Wireless connection between soundbar and subwoofer (paired already)

- 1. Connect subwoofer power cable to wall power, LED on top of subwoofer will flash slowly, searching for paired soundbar.
- 2. Connect soundbar power adapter to wall power, soundbar and subwoofer will pair automatically. After pairing successfully, there will be voice prompt and LED on top of subwoofer will turn on.
- 3. If soundbar and subwoofer did not pair successfully after waiting for several minutes, please disconnect subwoofer wall power and connect again. If automatic pairing continues to be unsuccessful, please follow follow instructions for "Wireless connection between soundbar and subwoofer (first time)".

Specifications

Output power(RMS): 100W+20W*2 Speaker unit: Subwoofer: 8" 3Ω

Satellites:full range 2" 3Ω ,tweeter 1" 8Ω utput power(RMS): 100W+20W*2 Speaker unit:Subwoofer: 8" 3Ω

Satellites:full range 2" 3Ω ,tweeter 1" 8Ω Frequency Response:Subwoofer: 20Hz-120Hz Satellites:130Hz-20KHz

Separation: >40dB Power: 100-240V~50/60Hz 1.5A

Dimension Subwoofer: W268XD264XH396MM Soundbar: W909XD48XH73MM

Troubleshooting

Problem	Possible Cause	Solution
T-388 does not turn on	Power cable not connected to the power outlet and/or F&D System	Check connection
Sound reproduction too soft	Volume of F&D System set too low	increase the volume using the "Volume" button. increase the volume of the source device
T-388 does not respond to remote control.	The battery is empty	Replace battery, observe correct polarit at insertion
No sound reproduction	Source device not producing any signal.	Digital output on the source device not activated (please refer to device instructions)
	Cable not correctly connected/faulty cable.	Check the connection of the source device to the F&D System and change the cable if necessary.
	Distance between device and speaker is greater than 10 meters	put your Bluetooth device closer to the speaker
	Bluetooth device not connected successfully	please restart the speaker and try again

F80 WARRANTY CARD

END-USER'S COPY WARRANTY REGISTRATION CERTIFICATE

Mr./Mrs/Ms First Name:
Last Name:
Address:
Contact No.:
Product Name:
Model No.:
Serial No.:
Date Purchased:
Invoice No :

Retail Outlet Where Purchased: __

(Please print the name & address)

SECTION 1

WARRANTY TERMS & CONDITIONS

Interface diagram at back

The warranty will be effective only if the warranty card is completed and returned to the company within 14 days from the date of purchase. We guarantee the provision of free services of F F89 product within the warranty period, from its date of purchase from our Authorised Dealer. The period and conditions of our warranty service are as follow:

1. The warranty covers services by our 🗷 🕬 Authorised Dealer. This warranty card together with the receipt must be presented when servicing is required. This warranty card is irreplaceable in the event of loss.

2. Repair services will be provided for defects arising from normal

usage for the following period, commencing from the date of purchase from our 🗷 🕬 Authorised Dealer. (Parts would be

replaced when necessary)

Full particulars not clearly shown or alterations made against

For e.g.: Alteration of the date of purchase, serial umbers-altered or removed.

B. This unit being tampered with, altered in any way by any unauthorised technicians or which has been subjected to misuse negligence or accident. This guarantee does not cover damage

ring in transit by or from the cumtomer. C. The defect is caused by the attack of household pests, fire, lighting, natural disasters, pollution, abnormal voltage or the usage

Shenzhen Fenda Technology Co., Ltd. Add : Fenda Hi-Tech Park,Zhoushi Road,Shiyan,Baoan,Shenzhen,China P.C. : 518108 Http://www.fenda.com

DISTRIBUTOR'S COPY WARRANTY REGISTRATION CERTIFICATE

Mr./Mrs/Ms First Name:	
Last Name:	
Address:	
Contact No.:	
Product Name:	
Model No.:	
Serial No.:	
Date Purchased:	
Invoice No.:	

Retail Outlet Where Purchased: ___

SECTION 2

and returned to the company within 14 days from the date of purchase. We guarantee the provision of free services of Free product within the warranty period, from its date of purchase from our Authorised Dealer. The period and conditions of our warranty service are as follow: 1. The warranty covers services by our 🗷 🕬 Authorised Dealer.

WARRANTY TERMS & CONDITIONS

The warranty will be effective only if the warranty card is completed

This warranty card together with the receipt must be presented when servicing is required. This warranty card is irreplaceable in the event of loss.

2. Repair services will be provided for defects arising from normal usage for the following period, commencing from the date of purchase from our press Authorised Dealer. (Parts would be replaced when presented the provided to the following period to the following

replaced when necessary)

servicing is required. Full particulars not clearly shown or alterations made against

For e.g.: Alteration of the date of purchase, serial imbers-altered or removed.

B. This unit being tampered with, altered in any way by any

unauthorised technicians or which has been subjected to misuse negligence or accident. This guarantee does not cover damage occuring in transit by or from the cumtomer.

C. The defect is caused by the attack of household pests, fire, lighting, natural disasters, pollution, abnormal voltage or the usage of generator.

enzhen Fenda Technology Co., Ltd. d : Fenda Hi-Tech Park,Zhoushi Road,Shiyan,Baoan,Shenzhen,China E. : 518108 Http://www.fenda.com

展开尺寸 成型尺寸 材质要求 128g铜版纸

印刷要求

工艺要求

页码数(页)

	✓ F8D 奋达科技	时 间	订 单 号
	品牌 🖊 🗫	公司型号	客户型号
128g铜版纸	版本	设计内容 说明书	料 号
单黑正反印刷	中 子 ヤ 十	<u>结 构</u> 电 声	PLM文档编号
无处理	设计者 杨改改	标 准 化	<u>项目经理</u> 产品经理
风琴折	复核	业务	核准