



Bottom Loading Water Dispenser

— *with* —
Coffee Brewer Module

Model #601001

⚠ WARNING

TO REDUCE THE RISK OF INJURY AND PROPERTY DAMAGE, USER MUST READ THIS MANUAL BEFORE ASSEMBLING, INSTALLING & OPERATING DISPENSER.

SAVE THIS MANUAL FOR FUTURE USE



Please visit **www.PrimoWater.com** for more useful information, instructional videos, tips and special offers.

IMPORTANT: Do not return dispenser to store. If you have questions or issues please contact 1-866-429-7566 for expert assistance.

FEATURES & FUNCTIONS

To watch videos detailing the features and functions of this unit, please visit www.primowater.com.

1 Coffee Maker Lid	Located on top. Provides access to brewing filter where coffee is loaded.
2 Filter Basket	Filter Basket - Coffee grinds go here or it can be removed and replaced with a paper filter.
3 Coffee Maker Controls	Touch sensitive. Unlock or select from 2, 4 or 12 cups.
4 Stainless Thermal Carafe	Keeps coffee hot for up to 2 hours.
5 Carafe Switch	Located on wall behind carafe. Eliminates water from flowing out of the dispenser unless carafe is properly installed.
6 Dispenser Controls	Touch sensitive. Unlock, Hot and Cold.
7 Empty Bottle Indicator	Blinks to alert you water bottle is empty
8 Spout	Hot & Cold water comes out here. Silver coating helps kill bacteria from standing water.
9 Bottle Support	Helps align sports bottles and glasses with spout to eliminate spills.
10 LED Nightlight	Located behind bottle support. Helps in low light.
11 Probe Assembly	Located inside cabinet. Connects to bottle to allow water to be pumped into hot and cold tanks.
12 Drip Tray	Collects spills. Remove to empty when full.
13 Drip Tray Cover	Hole in center of stainless steel cover helps align glass with spout to eliminate spills.
14 Full Tray Indicator	Red float warns when tray needs to be emptied.
15 Probe Hanger	Located inside door at top. When changing bottles, hang probe here to help keep it clean.
16 Water Bottle	Not included. Uses 3, 4 or 5 gallon bottles. Go to www.PrimoWater.com to find Primo Water at a store near you.
17 Energy Saver Switches	Located on back of dispenser. Switch red control to off to stop heating. Switch green control to off to stop cooling.
18 Drain	Located on back of dispenser. Remove with caution to drain water from hot tank.
19 Nightlight Switch	Located on back of dispenser. Allows you to choose to have the nightlight ON or OFF.
20 Feet	Adjustable to level dispenser on uneven surfaces.



Please visit www.PrimoWater.com for more useful information, instructional videos, tips and special offers.

IMPORTANT: Do not return dispenser to store. If you have questions or issues please contact 1-866-429-7566 for expert assistance.

! WARNING

SAFETY PRECAUTIONS


To reduce risk of injury and property damage, user must read this entire guide before assembling, installing & operating dispenser.

Failure to execute the instructions in this manual can cause personal injury or property damage and may void warranty.

This product dispenses water at very high temperatures. Failure to use properly can cause personal injury.

When operating this dispenser, always exercise basic safety precautions, including the following:

- Prior to use, this dispenser must be properly assembled and installed in accordance with this manual.
- This dispenser is intended for water dispensing only. Do NOT use other liquids. Do NOT use for other purposes. Never use any other liquid in the dispenser other than known and microbiologically safe bottled water.
- For indoor use only. Keep water dispenser in a dry place away from direct sunlight. Do NOT use outdoors.
- Install and use only on a hard, flat and level surface.
- Do NOT place dispenser into an enclosed space or cabinet.
- Do NOT operate dispenser in the presence of explosive fumes.
- Position back of dispenser no closer than 4 inches from wall and permit free airflow between wall and dispenser. There must be at least 4 inches clearance on the sides of the dispenser to permit airflow.
- Use only properly grounded outlets.
- Do not connect your water dispenser to an extension or surge protector.
- Always grasp plug and pull straight out from outlet. Never unplug by pulling on power cord.
- Do NOT use dispenser if cord becomes frayed or otherwise damaged.
- To protect against electric shock, do NOT immerse cord, plug, or any other part of dispenser in water or other liquids.
- Ensure dispenser is unplugged prior to cleaning.
- Never allow children to dispense hot water without proper and direct supervision. Unplug unit to prevent unsupervised use by children.
- Service should be performed only by a certified technician. Please contact us at 866-429-7566 for assistance.

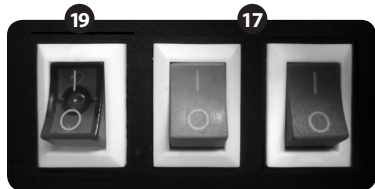

GETTING STARTED

To watch videos of the processes noted in this section, please visit www.primowater.com.

LOCATE DISPENSER

1. Place dispenser upright.

Notice: To avoid damage to compressor, allow dispenser to sit upright at least 45 minutes before proceeding.

2. Locate dispenser on a hard and level surface in a cool shaded location near a grounded wall outlet.

Notice: Do NOT plug in power cord yet.

3. Position dispenser so the back is at least 4 inches from wall and there are at least 4 inches of clearance on both sides.
4. Level dispenser by raising and lowering feet. Turn clockwise to raise height and counterclockwise to lower.

INSTALL DRIP TRAY

1. Place stainless steel drip tray cover into drip tray.
2. Slide assembly into door.

INSTALL COFFEE BREWER MODULE

1. Remove organizer tray and save for future use.
2. Remove carafe from coffee brewer module.
3. Install module by placing front tab into the front of the dispenser. Lower back of module into dispenser until it clicks in place.

REMOVING COFFEE BREWER MODULE

Your Coffee Brewer Module can be removed at any time as long as it is not in use. Please note: the module will not function as a separate unit. It must be connected to your dispenser to brew coffee.

1. Remove carafe from coffee brewer module and ensure that the module is not in use.
2. Press the button on the back of the module to unlock the module from the dispenser.
3. Lift the module up and back to remove.
4. To protect power connector and water line, replace module with organizer tray.
5. Store in a cool, dry place while not connected to the dispenser.



5-gallon
Probe Assembly



3-gallon
Probe Assembly

INSTALL WATER BOTTLE

1. Open dispenser door.
2. Place probe assembly on probe hanger.
3. Place fresh bottle outside of cabinet.
4. Remove entire plastic cap from top of bottle.
5. Clean outside of new bottle with a cloth.
6. Place probe into bottle.
7. Slide collar down until it clicks in place.
8. Push head down until tubes hit bottom of bottle.
9. Slide bottle into cabinet and close door.


PROVIDE ELECTRICITY

1. Plug cord into ground fault interrupting receptacle.
2. At this time:
 - a. The lights on the dispenser and coffee brewer module will go through a test pattern. When complete the lock icons will be green, indicating there is power to both systems.
 - b. The pump will begin to move water from the bottle to the hot and cold tanks. It will take up to 20 minutes to fill the tanks for the first time. During this period the pump will run continuously. This is normal.


ACTIVATE HEATING & COOLING

Notice: This unit will not dispense hot or cold water until the switches are activated.

1. To activate, push top side of power switches in to start heating and cooling water.
 - If you do not want to heat water, push bottom side of red switch in.
 - If you do not want to cool water, push bottom side of green switch in.
2. Once the power switches are activated:
 - The wavy lines on the control panel will light up red, indicating the unit is heating water. Once water in the hot tank is properly heated, the red light will turn off automatically.
 - The snowflake icon on the control panel will light up blue, indicating the unit is chilling water. Once water in the cold tank is properly chilled, the blue light will turn off automatically.

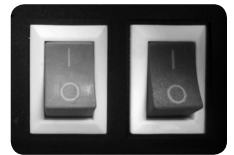

Hot & Cold Turned On

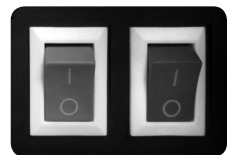

Hot & Cold Turned Off

ACTIVATE NIGHTLIGHT

Push top side of blue power switch in to turn light on. Push bottom side in to turn light off.



On



Off

REGISTER ONLINE

While you wait for the water to get hot and cold, please register your dispenser. This will be helpful should you need customer service assistance in the future. Go to www.PrimoWater.com and click on Customer Care.

Please visit www.PrimoWater.com for more useful information, instructional videos, tips and special offers.


IMPORTANT: Do not return dispenser to store. If you have questions or issues please contact 1-866-429-7566 for expert assistance.

DISPENSING WATER

To watch videos of the processes noted in this section, please visit www.primowater.com.

This unit has been tested and sanitized prior to packing and shipping. During transit dust and odors can accumulate in

the tank and lines. Dispense and dispose at least one quart of water prior to drinking any water.

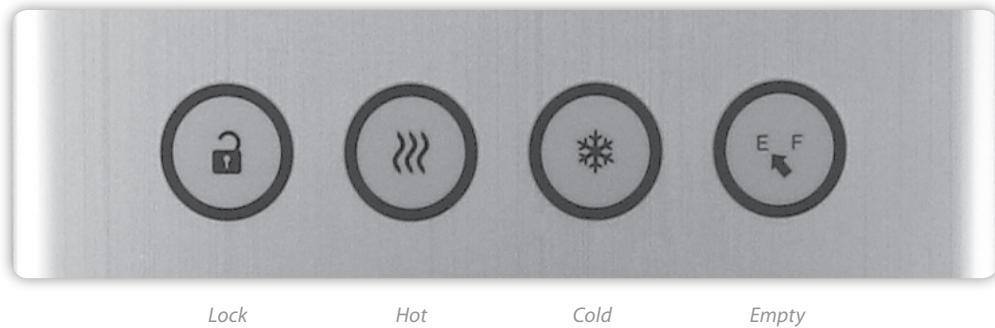

DISPENSING COLD WATER (37°F TO 50°F)

After setup, it will take up to 1 hour to get water to maximum cold temperature. During this time the compressor could run continuously. This is normal.

1. Center bottle, glass, pitcher or cooking pot below spout.
2. Touch cold water control to start cold water flow.
3. Release control once desired fill level is achieved.

DISPENSING HOT WATER (185°F – 210°F)

⚠ CAUTION

This unit dispenses water at temperatures that can cause severe burns. Avoid direct contact with hot water. Keep children and pets away from unit while dispensing. Never allow children to dispense hot water without proper and direct supervision. Unplug unit to prevent unsupervised use by children.

After setup, hot water will be available in 15-20 minutes.

Notice: Use only cups, mugs or pots that can safely contain hot water.

1. Center cup, mug or pot below spout.
2. Release safety lock by touching the lock icon. The green circle will light up indicating the control is unlocked. You have three seconds to contact the hot water control before the control is automatically locked.
3. Touch hot water control to start hot water flow.
4. Release control once desired fill level is achieved. Note - Once the control is released it relocks immediately.

CHANGING BOTTLES

When your bottle needs to be replaced the empty bottle icon on the far right of the control panel will flash orange to alert you. Replace the bottle as soon as possible.

Notice: Do not dispense hot or cold water if the orange light is flashing as you could empty the tanks and cause the dispenser to overheat.


1. Open dispenser door.
2. Slide empty bottle out of cabinet.
3. Remove probe assembly from empty bottle and let water from probe drip into bottle. Once dripping has stopped, place probe assembly on probe hanger.
4. Recycle empty bottle at your local exchange center to receive your next bottle at a discount.
5. Place fresh bottle outside of cabinet. Remove entire plastic cap from top of bottle. Clean outside of new bottle with a cloth.
6. Place probe into bottle. Slide collar down until it clicks in place. Push head down until tubes hit bottom of bottle.
7. Slide bottle into cabinet and close door.

MAKING COFFEE

To watch videos of the processes noted in this section, please visit www.primowater.com.

NOTES

1. Unlike traditional coffee brewers, this brewer does not contain a water reservoir. Water is pumped directly from the dispenser's hot tank to provide great tasting purified water to the brewing head.
2. The carafe, filter basket and filter holder provided with the brewer should be cleaned with dishwashing soap and warm water before using.
3. This brewer comes with a filter basket. It can also be used with standard paper filters and is designed to use coffee ground for drip coffee makers only.
4. Use only the carafe provided. The brewer will not operate with a carafe that was designed for other brewers.

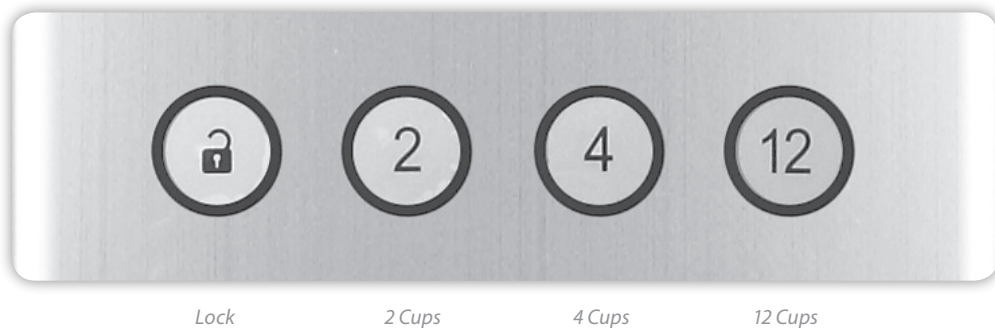

INSTALL CARAFE

1. Place lid onto carafe and turn to the closed position.
2. Position empty carafe into place.

Note - When the carafe is properly installed a thermo switch is activated telling the module to proceed. If you activate the controls without the carafe being properly installed, brewing will not begin and the green circle around the lock icon will blink to alert you.

MEASURE AND LOAD COFFEE INTO BREWER

1. Open lid.
2. This module is programmed to make 2, 4 or 12 cups of coffee at the touch of a button. Determine amount of cups to be brewed.
3. Add the appropriate amount of coffee grinds to the filter basket or paper filter.
4. Close lid.



ACTIVATE CONTROLS

1. Touch the lit green icon to unlock the controls. The green circle around the icon will light up.
2. Touch the control that matches the amount of cups you want to brew - 2, 4 or 12 cups.

Note - You have 3 seconds to activate the desired selection. If you fail to make a selection in 3 seconds the control will automatically relock.

3. If you activate in 3 seconds, the circle around the number you selected will begin to flash indicating brewing is underway. Water from the hot tank will automatically begin flowing to the filter basket.

BREW & ENJOY

1. Brewing is complete when the circle stops blinking and remains lit.
2. Remove carafe to pour. Lit circle around the cup indicator will go out once carafe is removed.
3. Coffee will remain hot inside carafe for up to 2 hours.
4. Discard used coffee grinds and paper filters. Rinse filter basket and carafe before brewing next pot.

TROUBLESHOOTING

To watch a complete library of troubleshooting videos, please visit www.primowater.com.

WATER IS LEAKING.

- Unplug dispenser, remove bottle and call 866-429-7566 for assistance.

NO WATER IS COMING FROM THE SPOUT.

- Make sure the bottle is not empty. If empty, replace it.
- Make sure there is power to the unit and you are operating controls per instructions.

COLD WATER IS NOT COLD.

- It takes up to one hour after setup to dispense cold water.
- Make sure the power cord is properly connected to a working outlet.
- Make sure the back of the dispenser is at least 4 inches from a wall and there is free airflow on all 4 sides of the dispenser.
- Make sure green power switch on back of dispenser is ON.
- If water still isn't cold, please call 866-429-7566 for assistance.

HOT WATER IS NOT HOT.

- It takes 15-20 minutes after setup to dispense hot water.
- Make sure the power cord is properly connected to a working outlet.
- Make sure red power switch on back of dispenser is ON.

NIGHTLIGHT IS NOT WORKING

- Make sure the power cord is properly connected to a working outlet.
- Make sure nightlight power switch on back of dispenser is ON.

COFFEE IS NOT BREWING

- Make sure there is power to the module. Lock icon is green when there is power.
- Make sure the carafe is in place and engaging the switch.
- Make sure the water bottle is not empty.
- Remember to unlock the control before choosing the amount of cups to make.
- Make sure the brewing basket is installed and the lid is closed.
- Make sure there is enough water in the bottle to replenish the hot tank before attempting to make a pot.
- If coffee doesn't start brewing within a few seconds, remove carafe to reset.

DISPENSER IS NOISY

- Make sure the dispenser is level by adjusting the height of the feet.

LIMITED WARRANTY

Primo Water Corporation, ("Vendor") warrants to the original purchaser of this dispenser, and to no other person, that if this dispenser is assembled and operated in accordance with the printed instructions accompanying it, then for a period of two (2) years from the date of purchase, all parts in such dispenser shall be free from defects in material and workmanship. Vendor may require reasonable proof of your date of purchase from an authorized retailer or distributor. Therefore, you should retain your sales slip or invoice. The Limited Warranty shall be limited to repair or replacement of parts, which prove defective under normal use and service and which Vendor shall determine in its reasonable discretion upon examination to be defective. Before returning any parts, you should contact Vendor's Customer Service Department using the contact information listed below. If Vendor confirms, after examination, a defect covered by this Limited Warranty in any returned part, and if Vendor approves claim, Vendor will replace such defective part without charge. If you return defective parts, transportation charges must be prepaid by you. Vendor will return replacement parts to original purchaser, freight or postage prepaid.

The Limited Warranty does not cover any failures or operating difficulties due to accident, abuse, misuse, alteration, misapplication, improper installation or improper maintenance or service by you or any third party, or failure to perform normal and routine maintenance on the dispenser, as set out in the User's Manual. In addition, the Limited Warranty does not cover damages to the finish, such as scratches, dents, discoloration or rust after purchase.

The Limited Warranty is in lieu of all other express warranties. Vendor disclaims all warranties for products that are purchased from seller other than authorized retailers or distributors. AFTER THE PERIOD OF THE TWO (2) YEAR EXPRESS WARRANTY, VENDOR DISCLAIMS ANY AND ALL IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. FURTHER, VENDOR SHALL HAVE NO LIABILITY WHATSOEVER TO PURCHASER OR ANY THIRD PARTY FOR ANY SPECIAL, INDIRECT, PUNITIVE, INCIDENTAL, OR CONSEQUENTIAL DAMAGES. Vendor assumes no responsibility for any defects caused by third parties. This Limited Warranty gives the purchaser specific legal rights; a purchaser may have other rights depending upon where he or she lives. Some jurisdictions do not allow exclusion or limitation of special, incidental or consequential damages, or limitations on how long a warranty lasts, so the above exclusion and limitations may not apply to you.

Primo Water Corporation
104 Cambridge Plaza Drive
Winston-Salem, NC 27104
866-429-7566
www.PrimoWater.com



Primo Water Corporation

104 Cambridge Plaza Drive
Winston-Salem, NC 27104

866-429-7566

www.PrimoWater.com

Please visit **www.PrimoWater.com** for more useful information, instructional videos, tips and special offers.

IMPORTANT: Do not return dispenser to store. If you have questions or issues please contact 1-866-429-7566 for expert assistance.