waterpik waterflosser Model WP-450/455/460/462

QUICK START GUIDE





Insert Tip:

Insert

Select the appropriate tip and insert into the unit. Press firmly until the tip clicks into place. To remove tip, push the tip eject button.

> Caution: Do not press tip eject button while unit is running.

Fill the Reservoir:



Unplug charging cord from unit prior to filling with water and during use.

Lift the flip top on reservoir and fill with lukewarm water. Refill as needed.

Usage:



To increase water pressure move to **HI** setting.

continued on back

This device is only compatible with a voltage system of 120VAC, 60Hz. Do not plug this device into a voltage system that is different.

5 On/Off Procedure:

Always place tip in mouth before turning unit on.

Lean over sink and close lips enough to prevent splashing, while still allowing water to flow from mouth into the sink. Turn unit **ON**.





Keep unit upright during use to ensure continuous water flow.

6 Technique Tips for Best Results:

Aim the water stream just above the gumline at a 90 degree angle.



Starting with the back teeth, follow the gumline and pause briefly between teeth.

Continue until all areas around and between teeth have been cleaned.

REGISTER
YOUR
PRODUCT
ONLINE NOW!

Receive up to \$44

in savings on the purchase of additional Waterpik® products.
www.waterpik.com/registration

e been cleaned.

Water Pik, Inc. 1.800.525.2774

www.waterpik.com

1730 East Prospect Road, Fort Collins, CO 80553-0001 USA

©2014 Water Pik, Inc. FN 20019052-F AA