


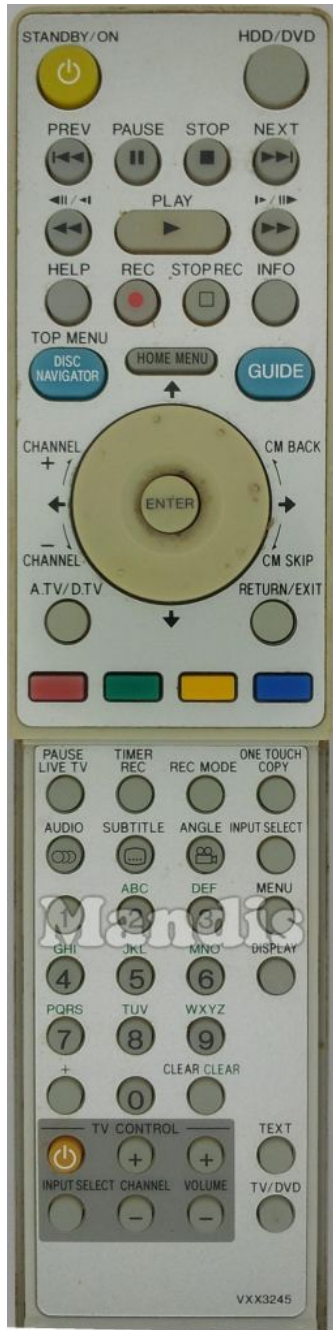

Original	Replacement	Original	Replacement
 Standby/On	 Power	 Enter	 Ok
 I<<	 I<<	 Up	 Up
 Pause	 Pause	 Down	 Down
 Stop	 Stop	 Right	 Right
 >>I	 >>I	 Left	 Left
 Play	 Play	 Channel+/CM	 Ch +
 <</II/<I	 <<	 CH+ Tv	 Shift + Ch +
 I>/II>/>>	 >>	 Channel-/CM Back	 Ch -
 Rec	 Rec	 Red	 Red
 Stop Rec	 Shift + Stop	 Green	 Green
 Info	 Info	 Yellow	 Yellow
 Home Menu	 Menu	 Blue	 Blue
 Help	 Shift + Smart	 1	 1
 Disc Navigator/Top	 Smart	 2	 2
 Guide	 Guide	 3	 3
 Return/Exit	 Exit	 4	 4
 A.TV/D.TV	 Back	 5	 5





Original		Replacement		Original		Replacement	
	6		6		Pause Line Tv		Text
	7		7		Timer Rec		Format
	8		8		Rec Mode	 + 	Shift + Rec
	9		9		One Touch		Media
	0		0		HDD/DVD	 + 	Shift + Media
	Clear	 + 	Shift + Exit		Text		Sleep
	O)/)/Audio		Dual		Tv/DVD	 + 	Shift + TV/R
	[...]/Subtitle		Subt		Vol- Tv		Vol -
	Camera/Angle		Options				
	Input Select		AV				
	Menu		List				
	Display	 + 	Shift + Info				
	Power Tv	 + 	Shift + Power				
	Input Select Tv	 + 	Shift + AV				
	CH- Tv	 + 	Shift + Ch -				
	Vol+ Tv		Vol +				
	+		TV/R				