



# LITTLE GREEN® PET PRO

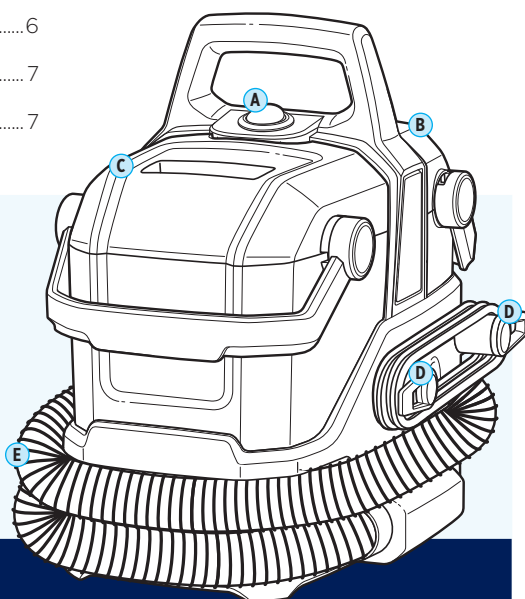 
## PORTABLE CARPET CLEANER

MODELS 3908, 3909

Filling the Clean Water Tank.....	3
Using Your Machine.....	4
Cleaning Machine with Self-Cleaning Tough Stain Tool.....	6
Emptying the Dirty Water Tank.....	6
After-Cleaning Care .....	7
Warranty .....	7

### Product Overview

- A. Power Switch
- B. Clean Water Tank
- C. Dirty Water Tank
- D. Quick Release™ Cord Wrap and Power Cord
- E. Flexible Hose



### Meet your new BISSELL® product!

Go to [support.BISSELL.com](https://support.BISSELL.com) for a walkthrough of your new purchase, including videos, tips, support, and more. Want to get started right away? This guide has all the information you need to set up your new product. Let's take a look...

# IMPORTANT SAFETY INSTRUCTIONS



## READ ALL INSTRUCTIONS BEFORE USING YOUR APPLIANCE.

When using an electrical appliance, basic precautions should be observed, including the following:



## WARNING

### TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

- Do not leave appliance when it is plugged in. Unplug from outlet when not in use and before servicing.
- Do not expose to rain. Store indoors.
- Use only cleaning products intended for use with this appliance to prevent internal component damage. See the Cleaning Formulas section of this guide.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Do not use for any purpose other than described in this user guide.
- Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water; do not attempt to operate it and have it repaired at an authorized service center.
- Do not pull or carry by cord, use cord as a handle, close door on cord, or pull

cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.

- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep openings free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts of the appliance and its accessories.
- Turn OFF all controls before plugging or unplugging appliance.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible materials (lighter fluid, gasoline, kerosene, etc.) or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches or hot ashes.
- Do not turn your appliance ON until you are familiar with all instructions and operating procedures.
- Keep appliance on a level surface.
- Liquid must not be directed towards equipment containing electrical components.
- Do not use appliance in an enclosed space filled with vapors given off by oil-based paint, paint thinner, some moth-proofing substances, flammable dust, or other explosive or toxic vapors.
- Do not use to pick up toxic material (chlorine bleach, ammonia, drain cleaner, etc.)
- Do not pick up hard or sharp objects such as glass, nails, screws, coins, etc.
- Plastic film can be dangerous. To avoid danger of suffocation, keep away from children.
- Connect to a properly grounded outlet only. See grounding instructions. Do not modify the three-prong grounded plug.
- Do not apply liquid directly to any person or animal.
- Do not carry the machine while in use.
- Plastic tanks are not dishwasher safe. Do not put tanks in dishwasher.

## SAVE THESE INSTRUCTIONS

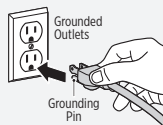 
THIS MODEL IS FOR HOUSEHOLD USE ONLY. COMMERCIAL USE OF THIS UNIT VOIDS THE MANUFACTURER'S WARRANTY.

## ⚠ WARNING

Improper connection of the equipment-grounding conductor can result in a risk of electrical shock. Check with a qualified electrician or service person if you aren't sure if the outlet is properly grounded. DO NOT MODIFY THE PLUG. If it will not fit the outlet, have a proper outlet installed by a qualified electrician. This appliance is designed for use on a nominal 120-volt circuit and has a grounding attachment plug that looks like the plug in the illustration. Make certain that the appliance is connected to an outlet having the same configuration as the plug. No plug adapter should be used with this appliance.

### GROUNDING INSTRUCTIONS

This appliance must be connected to a grounded wiring system. If it should malfunction or break down, grounding provides a safe path of least resistance for electrical current, reducing the risk of electrical shock. The cord for this appliance has an equipment-grounding conductor and a grounding plug. It must only be plugged into an outlet that is properly installed and grounded in accordance with all local codes and ordinances.


 





## IMPORTANT INFORMATION

To reduce the risk of a leaking condition, do not store where freezing may occur. Damage to internal components may result.

## TOOLS INCLUDED IN BOX WILL DIFFER BY MODEL

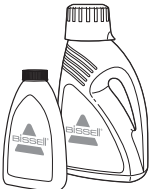 
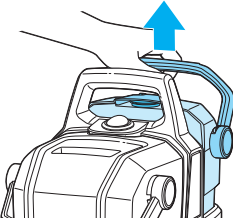 
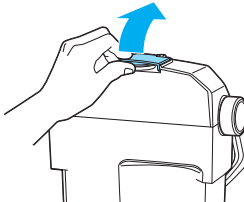 
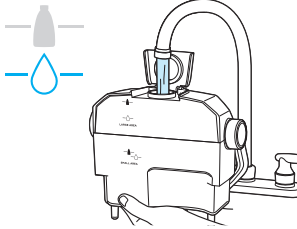 
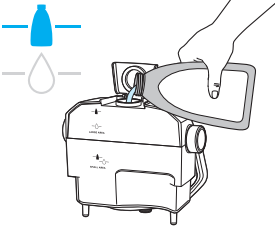 
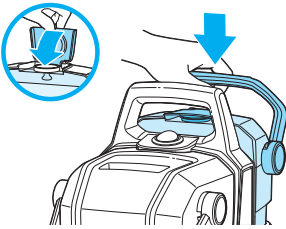 
To see what's included with your purchase, check the "Carton Contents" list on the top flap of the box.

				
Machine	Self-Cleaning Tough Stain Tool	Specialized Pet Hair Removal Tool Block	Spraying Crevice Tool (select models only)	Trial Formula(s) (vary by model)

## Filling the Clean Water Tank

Find more formulas at [BISSELL.com](https://www.bissell.com).

For optimal performance, use genuine BISSELL formulas in your machine. Other formulas or household cleaners may cause defects or damage to the machine.

		
<b>1.</b> Choose your formula.* Visit <a href="https://www.bissell.com">BISSELL.com</a> for formulas.	<b>2.</b> Remove clean water tank from machine by lifting carry handle.	<b>3.</b> Flip cap open.
		
<b>4.</b> Add warm water (140°F/60°C max) to water fill line based on size of your mess. Small Area: 28 oz Large Area: 56 oz	<b>5.</b> Add formula* to line based on size of your mess. Small Area: 4 oz Large Area: 8 oz	<b>6.</b> Close cap. Return clean tank to machine and click back into place.










\*Compatible BISSELL formulas include: Spot & Stain, PRO OXY Spot & Stain, PET Spot & Stain, PET PRO OXY Spot & Stain, Simply Spot & Stain PET.

**⚠ WARNING** To reduce the risk of fire and electric shock due to internal component damage, use only BISSELL cleaning formula intended for use with this machine.




# Using Your Machine
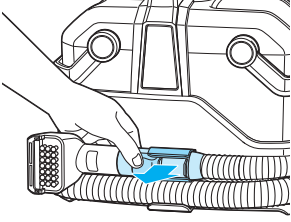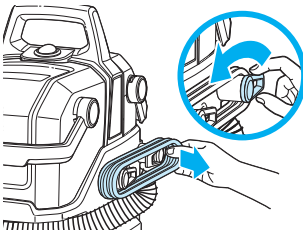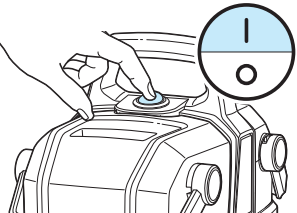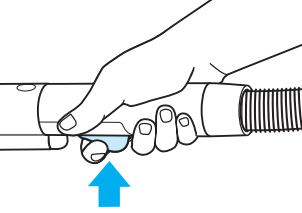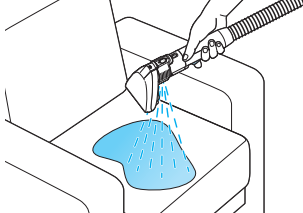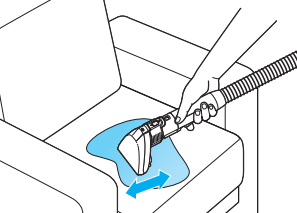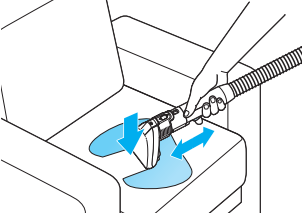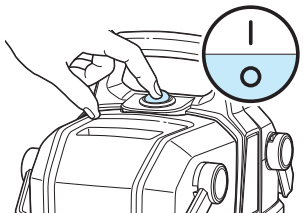         
## Before You Clean

- Vacuum to remove loose dirt from areas to be cleaned.
- Spray any BISSELL® stain pretreat formula on soiled areas and allow to sit for a few minutes.
- Tip: For upholstery, work in small sections until area is clean.



		
<p><b>1.</b> Release hose by pulling away from hose clip.</p>	<p><b>2.</b> Attach desired tool to hose until it clicks.</p>	<p><b>3.</b> Twist Quick Release Cord Wrap to remove cord. Plug cord into outlet.</p>
		
<p><b>4.</b> Turn machine ON.</p>	<p><b>5.</b> Press and hold trigger over sink or bowl to prime the machine until liquid sprays out.</p>	<p><b>6.</b> While holding tool above desired area, press and hold trigger to spray solution.</p>
		
<p><b>7.</b> Release spray trigger and gently scrub stain using bristles.</p>	<p><b>8.</b> With trigger released, press tool firmly against surface and pull towards you to remove stain. Repeat as needed.</p>	<p><b>9.</b> Turn machine OFF.</p>

## Cleaning with the Self-Cleaning Tough Stain Tool

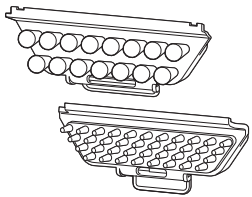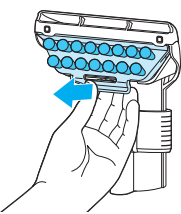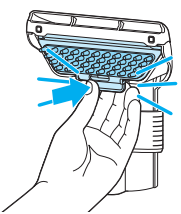   
		
<p><b>1.</b> Choose your cleaning method: Use the bristle block for everyday soft surface cleaning, or the rubberized block to remove embedded pet hair and debris.</p>	<p><b>2.</b> Pull bottom latch to release bristle block from tool.</p>	<p><b>3.</b> Insert your preferred tool attachment; it will click into place.</p>


<p><b>4.</b> Slide tool lever up to ensure tool is in SPRAY mode. Follow cleaning steps on pg 4.</p>


## Cleaning with the Spraying Crevice Tool (select models)

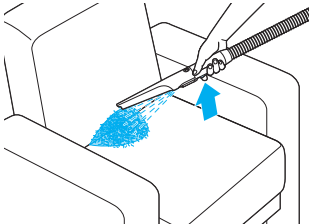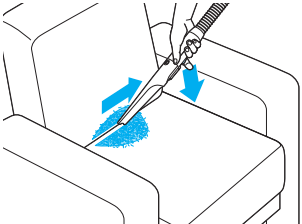  	
<p><b>1.</b> While holding tool above the stained area, press and hold the trigger to spray solution.</p>	<p><b>2.</b> Release spray trigger and press tool firmly against surface and pull toward you to remove the stain. Repeat this step as needed.</p>

## Cleaning Machine with Self-Cleaning Tough Stain Tool

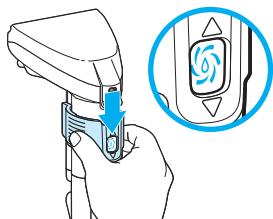 


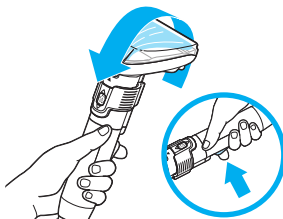 **1.** Turn machine ON. Slide tool lever down for CLEANOUT mode.




**2.** Press the trigger to activate the CLEANOUT function. Solution mixture will spray through the tool and hose.

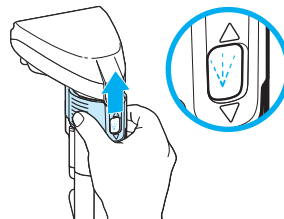 **Tip:** For a more thorough rinse, place suction nozzle on soft surface and tilt forward/backward.




**3.** To continue cleaning with your machine, slide the tool's lever upward to return to SPRAY mode.


## Emptying the Dirty Water Tank

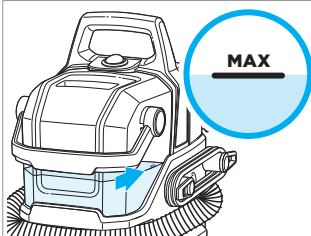 


**1.** Empty dirty water tank when water reaches "MAX" line. **Do not let water overflow.**

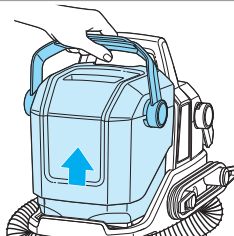 

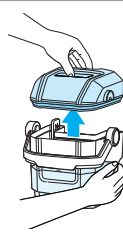 
**2.** Remove dirty water tank and carry to a water disposal area.



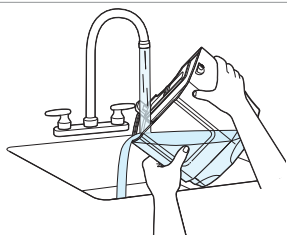 
**3.** To remove lid, hold bottom of dirty water tank and use handle inset to lift up and off.



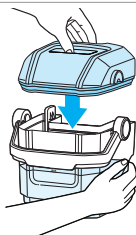 **4.** Pour out dirty water. Rinse tank to remove any debris.



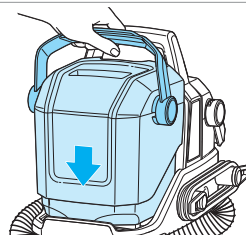 **5.** Align lid with bottom of tank and press down until secure.




**6.** Place dirty water tank back onto machine.

## After-Cleaning Care



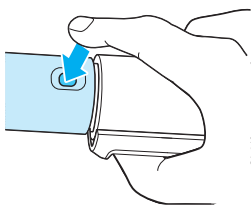 **1.** Be sure to empty dirty water tank after use (see above).




**2.** To disconnect tools, push down on button above hose grip and pull straight off. (Do NOT twist tool to remove it.)




**3.** Remove tool lens.



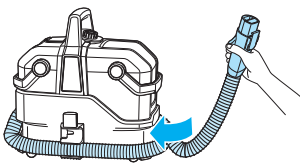 **4.** Rinse lens under clean, running water. Allow to dry before reinstalling.



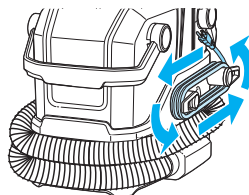 **5.** When finished using the machine, wrap cord around cord wrap for storage. Store indoors in a dry location in an area where it is not likely to get damaged.



**Note:** Any other maintenance or servicing not included in this manual should be performed by an authorized service representative.

## Warranty

Limited 3-year warranty, may vary by state. Visit [support.BISSELL.com](https://support.BISSELL.com) or call 1-800-237-7691 for complete warranty information.

### Terms and Conditions

Your purchase is subject to the BISSELL® Terms and Conditions, which includes dispute resolution through arbitration and class waiver. For complete terms or to opt out from arbitration or class waiver, visit [BISSELL.com/terms-of-use](https://BISSELL.com/terms-of-use) or call 1-800-237-7691.



BISSELL proudly supports BISSELL Pet Foundation® and its mission to help save homeless pets. When you buy a BISSELL® product, you help save pets, too. We're proud to design products that help make pet messes, odors and pet homelessness disappear.

Visit **BISSELLsavespets.com** to learn more.

## Need more support?

Head to **support.BISSELL.com** to troubleshoot, register your product, order spare parts, view your warranty, and more.



REGISTER



INFO



VIDEOS



PARTS



SUPPORT



©2024 BISSELL Inc. All rights reserved.  
Part Number 1640366 04/24 v10