

VOICE RECOGNITION TIPS
(if equipped)

BLUETOOTH®

Command

Example

Dial <Phone #> ——"Dial 71-4-9-6-5-3-0-0-0"

Call <Name> ——"Call John Smith"

Improving how you store your contacts can optimize your Bluetooth® Voice Recognition performance.
• Use full names instead of short or single-syllable names ("John" or "Dad").
• Avoid using special characters, symbols or abbreviations ("Ch") when saving contacts.

NAVIGATION

Command

Example

Find Address ——"7-2-3-4-5 1st Street, <House #, Street, Fountain Valley">
City, State"

Find <POI Name> ——"Find McDonald's"

Located on Rearview Mirror

LOCAL SEARCH

Command

Example

Find <POI Name> ——"Find Lowe's"near me"

<POI Name> ——"Starbucks"

- ☐ HOW TO DEFROST - page 14
 - Press the front defrost button.
 - Set to warmest temperature setting.
 - Set to highest fan speed.
- ☐ WINDSHIELD WIPER / WASHER - page 06
 - To activate wipers, move the switch down to one of the three positions (INT, LO, HI).
 - To adjust "INT" speed, move switch.
 - To spray washer fluid, pull lever toward you.
 - Push lever up for a single wiper pass.

- ☐ INTRODUCTION AND LOCATION OF THE SERVICE DEPARTMENT
- ☐ SET FIRST SERVICE APPOINTMENT
- ☐ REVIEW FACTORY RECOMMENDED MAINTENANCE SCHEDULE
- ☐ WAS THE CONDITION OF YOUR VEHICLE (AT DELIVERY) TO YOUR SATISFACTION?

Sales Consultant

Date

Sales Manager

Date

Customer

Date

Email

MAINTENANCE				
Scheduled Maintenance		Normal Usage		Severe Usage*
Tire Rotation	Perform	5,000	Perform	5,000
Climate Control Air Filter (for Evaporator and Blower Unit)	Replace	15,000	Replace	More Frequently
Air Conditioning Refrigerant	Inspect	15,000	Inspect	Same As Normal
Brake Hoses & Lines	Inspect	15,000	Inspect	Same As Normal
Drive Shafts & Boots	Inspect	15,000	Inspect	7,500
Front Disc Brake/Pads, Calipers & Rotors	Inspect	15,000	Inspect	More Frequently
Rear Brake Disc/Pads	Inspect	15,000	Inspect	More Frequently
Steering Gear Box, Linkage & Boots/ Lower Arm Ball Joint, Upper Arm Ball Joint	Inspect	15,000	Inspect	More Frequently
Suspension Mounting Bolts	Inspect	15,000	Inspect	Same As Normal
Brake fluid	Inspect	30,000	Inspect	Same As Normal
Coolant	1st Replace 120,000 or 120 mos. Add† Replace 30,000 or 24 mos.		Replace	Same As Normal
Reduction Gear Fluid	Inspect	37,500 or 30 mos.	Replace	75,000
*Check the engine oil regularly between recommended oil change. Hyundai recommends Quaker State oil.				
†See Owner's Manual for details.				

Looking for more detailed information? This Quick Reference Guide does not replace your vehicle's Owner's Manual. If you require additional information or are unsure of a specific issue, we recommend that you always refer to the vehicle's Owner's Manual or contact your authorized Hyundai dealer. The information contained in this Quick Reference Guide is correct at the time of printing; however, specifications and equipment can change without notice. No warranty or guarantee is being extended in this Quick Reference Guide, and Hyundai reserves the right to change product specifications and equipment at any time without incurring obligations. Some vehicles are shown with optional equipment.



HYUNDAI

IONIQ

ELECTRIC

Quick Reference Guide

Roadside Assistance: 1-800-243-7766

Consumer Affairs: 1-800-633-5151

Sirius XM® Radio: 1-800-967-2346

Blue Link: 1-855-2BLUELINK
(1-855-225-8354)



NP150AE191
(Rev 08/10/18)
Printing 08/13/18

HYUNDAI VEHICLE OWNER PRIVACY POLICY

 
Your Hyundai vehicle may be equipped with technologies and services that use information collected, generated, recorded or stored by the vehicle. Hyundai has created a Vehicle Owner Privacy Policy to explain how these technologies and services collect, use, and share this information.

You may read our Vehicle Owner Privacy Policy on the Hyundaiusa.com website at <https://www.hyundaiusa.com/owner-privacy-policy.aspx>

If you would like to receive a hard copy of our Vehicle Owner Privacy Policy, please contact our Customer Connect Center at:

Hyundai Motor America
Hyundai Customer Connect Center
P.O. Box 20850
Fountain Valley, CA 92728-0850
800-633-5151 consumeraffairs@hmmausa.com

Hyundai's Customer Connect Center representatives are available Monday through Friday, between the hours of 5:00 AM and 7:00 PM PST and Saturday and Sunday between 6:30 AM and 3:00 PM PST (English). For Customer Connect Center assistance in Spanish or Korean, representatives are available Monday through Friday between 6:30 AM and 3:00 PM PST.

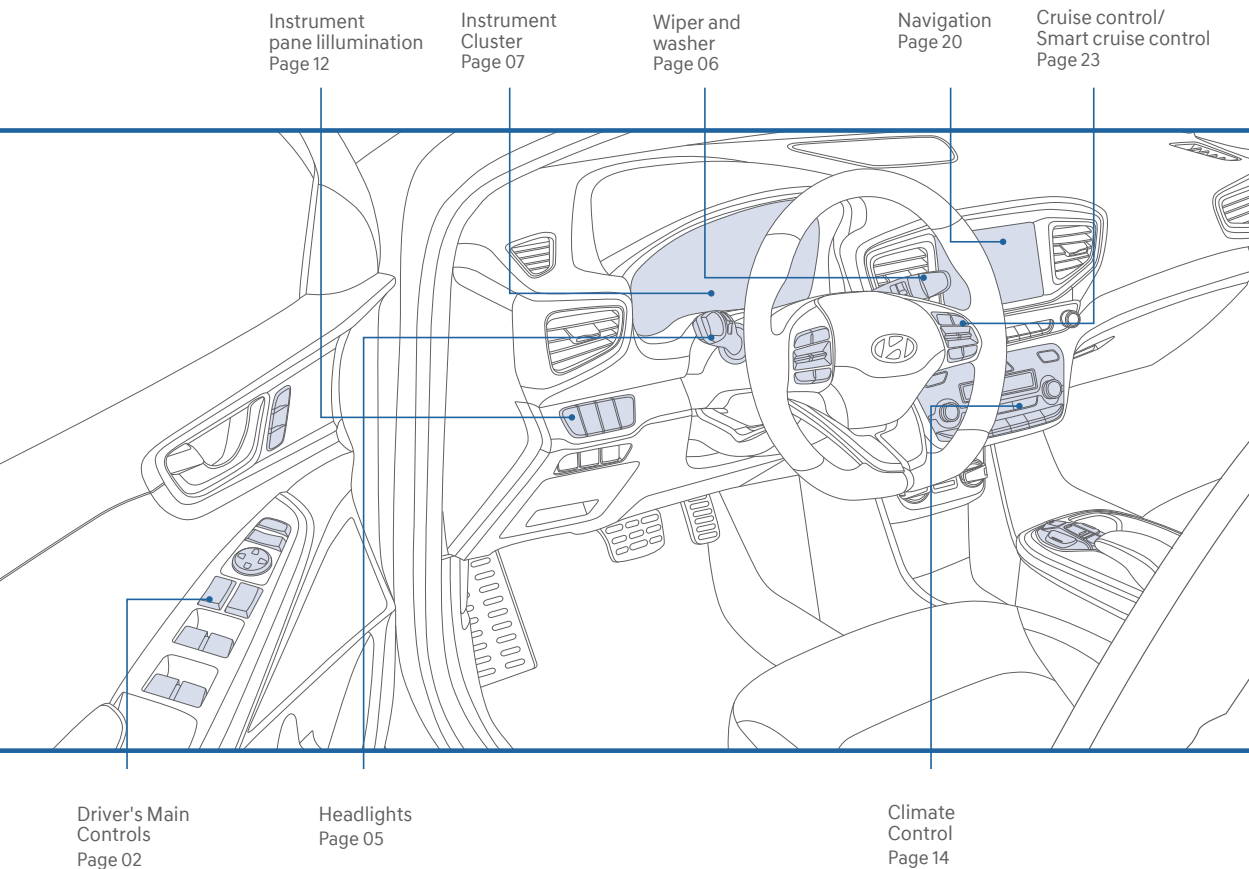

FEATURES AND CONTROLS

Aux. battery saver+	19
Charging door	04
Climate control	14
Driver's main controls	02
Dynamic bending light (DBL)	06
Electric vehicle system modes	13
Headlights	05
High voltage battery SOC(state of charge) gauge	10
High voltage battery cooling duct	02
Instrument cluster	07
Instrument panel illumination	12
LCD display control	11
LCD display modes	11
Liftgate opening	03
Seat-Manual driver's seat adjustment	01
Seat-Power driver's seat adjustment	01
Vehicle power gauge	09
Warning and indicators	08
Wiper and washer	06

MULTIMEDIA

AUX, USB and iPod® port	21
Clock adjustment	17
Navigation	20
Radio mode	18

DRIVING

Autonomous emergency braking (AEB)	22
Cruise control/smart cruise control	23
Electronic parking brake (EPB)	24
Regenerative Brake Level Control Paddles	22

WARNING!

To reduce the risk of serious injury to yourself and others, read and understand the important SAFETY INFORMATION in your Owner's Manual.

Use this Quick Reference Guide to learn about the features that will enhance your enjoyment of your Hyundai. More detailed information about these features are available in your Owner's Manual.

* Some vehicles may not be equipped with all the listed features.

MANUAL DRIVER'S SEAT ADJUSTMENT



Forward and backward ①



Seat height ②



 
Seatback angle ③



POWER DRIVER'S SEAT ADJUSTMENT



Forward and backward ①



Seat height ①



 
Seatback angle ②



Lumbar support ③



DRIVER'S MAIN CONTROLS

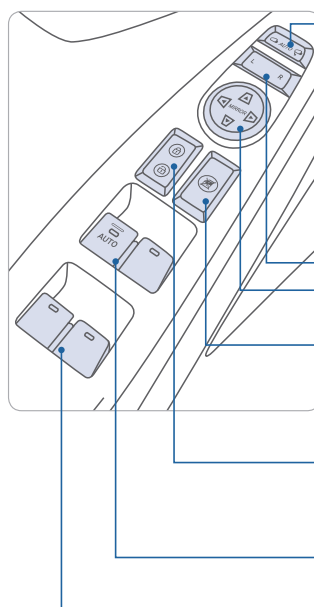

Folding outer side view mirrors

Press to fold/unfold mirrors. Press the lock or unlock button on the smart key in AUTO position, and the mirrors will be folded or unfolded.

Outer side view mirror

- Press the L or R button.
- Adjust the mirror by using the directional switch.

Power window lock button

Disables the power window switches on the rear passenger doors.

 
Door lock

Locks/unlocks all doors.

Window switches

- Front doors power window switches.
- Rear doors power window switches.

HIGH VOLTAGE BATTERY COOLING DUCT

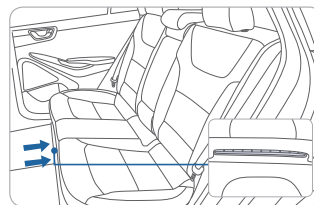


The high voltage battery cooling duct is located at the bottom center of the rear seats.

NOTE:

Do not obstruct the air intake with any other objects.

 LIFTGATE OPENING


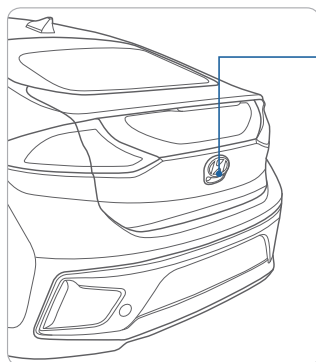


Press to open.
Smart key needs to be within the range.




Press and hold to unlock tailgate.

  CHARGING DOOR

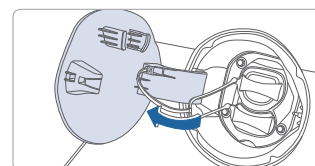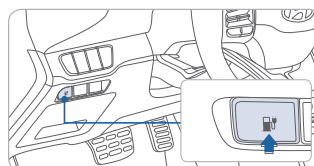

 
Push the charging door open button to open the charging door.
After recharging, install the bottom inlet cover first before installing the upper inlet cover. And, close the charging door until it is latched securely.

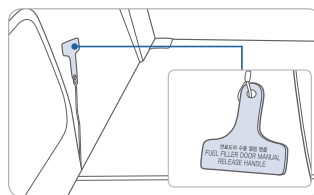

Emergency charging door opening


Open the tailgate and slightly pull the emergency cable.

 In case charging door does not open by pressing dash button, pull the emergency cable.

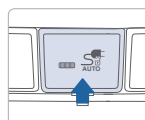


Plug unlock when fully charged

 Press to enable to unlock the plug when full charged.

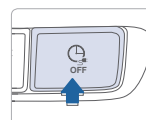

Charge timer activation

 Press to turn off scheduled charge timer.

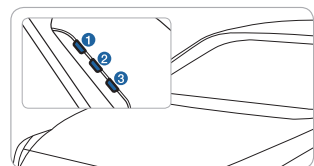

Charge indicator (on dash)

When Charger is plugged in:

Green Light ON: Charging is progress

 
Green Light OFF: Charging is complete

Green Light Blinking: Scheduled charge time is programmed, but currently not charging

Red Light Blinking: Charging malfunction.

Please visit your local Hyundai dealership

HEADLIGHTS

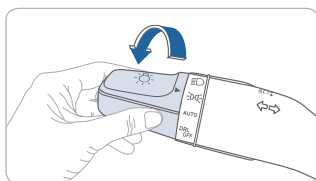


- ▶ | Headlights
- ▶ | Parking lights
- ▶ | **AUTO** Auto headlights
- ▶ | **DRL OFF** All lights Off


Headlight Delay

Headlights may stay on for 15 seconds after exiting and locking vehicle. Press the lock button on the smart key twice to turn the headlights off.

 Turn signals and lane change signals

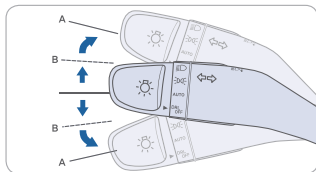

High beam / Smart high beam

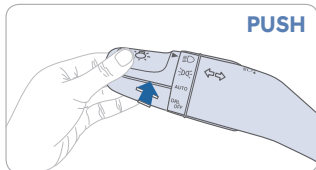 


NOTE: To turn off the high beam, pull the lever towards you.


Smart High Beam Function

1. Select auto position.
2. Push lever forward to engage Auto High Beam.
3. Push lever forward again to disengage.

 Flashing headlights

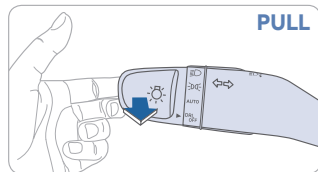


DYNAMIC BENDING LIGHT (DBL)

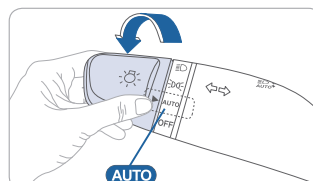 

DBL uses the steering angle and vehicle speed to help keep your field of vision wide by swiveling and leveling the headlamp.

- To turn DBL on, turn the knob to the AUTO position when the vehicle is in the ready (🚗) mode.
- To turn DBL off, turn the knob back to the former position.

 WIPERS AND WASHER

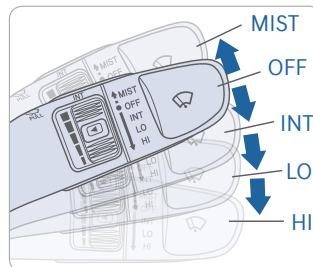


MIST - Single wipe

OFF - Off

INT - Intermittent wipe

LO - Low wiper speed

 
HI - High wiper speed

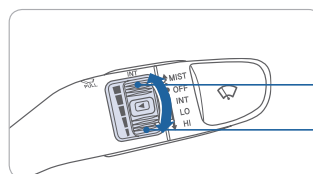

Intermittent wipe time adjustment
Move the speed control switch

Fastest wiper speed

 Slowest wiper speed

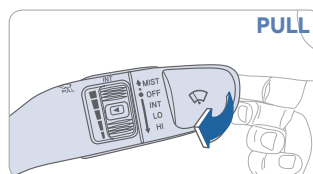

Windshield Washer

Pull the lever gently towards you to spray washer fluid on the windshield and to run the wipers 1-3 cycles.

INSTRUMENT CLUSTER



- ① ECO guide
- ② Speedometer
- ③ Warning and indicator lights
- ④ LCD display (including Trip computer)
- ⑤ Battery SOC (State of Charge) gauge

WARNINGS AND INDICATORS

Ready indicator	Service warning light	Power down warning light
Charging indicator	High voltage battery low level warning light	Air bag warning light
Seat belt warning light	Parking brake & brake fluid warning light	EPB Electric Parking Brake (EPB) warning light
Anti-lock Brake System (ABS) warning light	Electronic Brake force Distribution (EBD) System warning light	Electric Power Steering (EPS) warning light
Charging system warning light (for 12-volt battery)	TPMS Malfunction / Low tire pressure warning light	AUTO HOLD AUTO HOLD indicator
Autonomous Emergency Braking (AEB) warning light	Lane Keep Assist System (LKAS) indicator	LED headlamp warning light
Master warning light	Electronic Stability Control (ESC) Indicator Light	Electronic Stability Control (ESC) OFF indicator light
Adaptive Front Lighting System (AFLS) warning light	Immobilizer indicator	Turn signal indicator light
High beam indicator light	Light ON indicator light	CRUISE Cruise indicator
SET Cruise SET indicator	SPORT mode indicator	ECO mode indicator

Main indicators in cluster for Electric Vehicle



Ready indicator

When the vehicle is ready to be driven, this indicator is illuminated.
When the ready indicator goes off or blinks, we recommend the vehicle be checked by an authorized HYUNDAI dealer.



Service warning light

If a problem with the electric vehicle control system occurs, the service warning light will illuminate.
We recommend the vehicle be checked by an authorized HYUNDAI dealer.



Power down warning light

When the vehicle power should be limited for the safety of the electric vehicle, this warning light illuminates.
Charge the battery immediately when the high voltage battery level is not enough.



Charging cable indicator

This indicator shows the charging status of the high voltage battery.
• When a charge cable is connected, the indicator illuminates in red. The approximate charge time will be displayed on the dash after a few minutes.

 


High voltage battery low level warning light

This warning light illuminates when the high voltage battery level is low.
When the warning light turns ON, charge the battery immediately.

NOTE: DC Quick charge session is time limited and may not reach maximum charge in one session depending on initial battery % SOC. The maximum charge possible in Ioniq Electric is 94% SOC on a DC Quick charger which will show a slightly lower range than with Level-1 and 2 chargers with maximum possible charge to 100%SOC.

VEHICLE POWER GAUGE

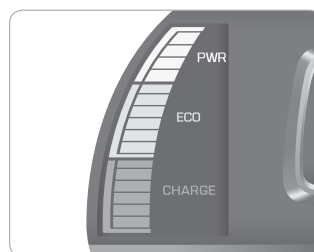

The ECO guide shows the energy consumption rate of the vehicle and the charge/discharge status of the regenerative brakes.

POWER

It shows the energy consumption rate of the vehicle when driving uphill or accelerating.

 
ECO

It shows the energy consumption rate during normal driving condition.

CHARGE

It shows the charging status of the battery when it is being charged by the regenerative brakes (decelerating or driving on a downhill road).

HIGH VOLTAGE BATTERY SOC (STATE OF CHARGE) GAUGE

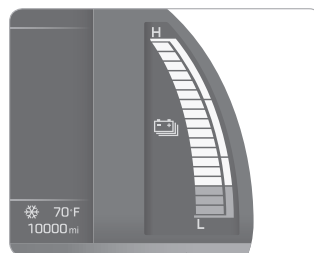


The SOC gauge shows the charging status of the high voltage battery.

“L(Low)” position on the indicator indicates that there is not enough energy in the high voltage battery.

“H(High)” position indicates that the driving battery is fully charged.


When there are 2~3 gauge bars (near the “L(Low)” area) on the gauge, the warning light turns ON and, the vehicle can drive an additional 12~18 miles depending on the driving condition. Charging is required.

 LCD DISPLAY CONTROL

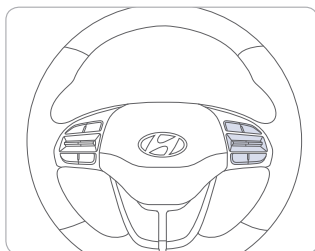


- ① : MODE button for changing modes
- ② : MOVE switch for changing items
- ③ : SELECT / RESET button for setting or resetting the selected item

 Type A

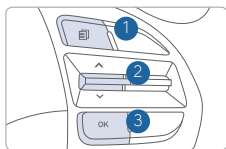


Type B

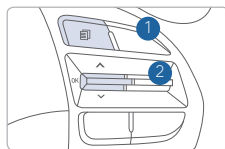 


LCD DISPLAY MODES

Modes	Symbol	Explanation
Trip Computer		This mode displays driving information such as the tripmeter, fuel economy, etc.
Turn By Turn (TBT) (if equipped)		This mode displays the state of the navigation.
Assist		- This mode displays the state of the Advanced Smart Cruise Control (ASCC) and Lane Keep Assist System (LKAS). - This mode displays information related to Tire Pressure.
User Settings		In this mode, you can change settings of the doors, lamps, etc.
Warning		This mode displays warning messages related to the Blind Spot Detection system, etc.

 
INSTRUMENT PANEL ILLUMINATION

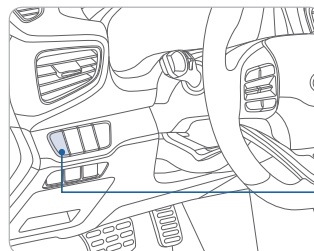

 Press the illumination control button to adjust the instrument cluster illumination brightness.

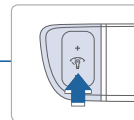


AUX. BATTERY SAVER+

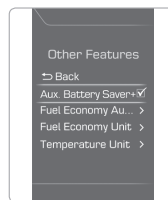 

The Aux. Battery Saver+ function monitors the charging status of the 12 V auxiliary battery. If the auxiliary battery level is low, the main high voltage battery charges the auxiliary battery. The default setting for Aux. Battery Saver+ is ON. The driver may cancel the function. Go to 'User Settings → Other Features → Aux. Battery Saver+'.



 The message is displayed if the Aux. Battery Saver+ function was activated.

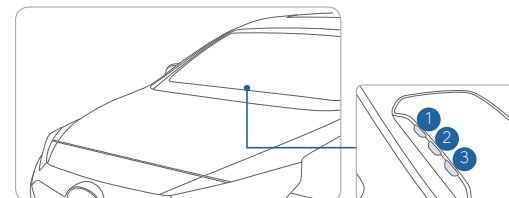


When the function is activating the third Charging Indicator Lamp will blink.

NOTE:



Do not touch the high voltage electric wire (orange), connector, and all electric components and devices when the function is activating.

ELECTRIC VEHICLE SYSTEM MODES

 Type A

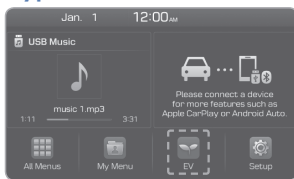

Type B

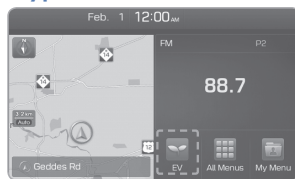  


Press the EV icon on the AVN Home screen or the EV button on the HVAC panel to view the EV menu.

Type A




 Type B

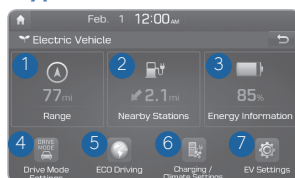


- 1 Range: Displays EV distance based on the current battery charge.
- 2 Nearby stations : Searches for every electric charging station of current location.
- 3 Energy information : Displays battery information and electricity use.
- 4 Drive mode settings : Climate Control, Coast Energy Regeneration, and Maximum Speed Limit can be set for three different drive modes.
- 5 ECO driving : ECO Level information and ECO Driving history are displayed.
- 6 Charging/Climate settings : A departure time and climate temperature can be set so battery charging and climate temperature adjustment are automatically completed before the set departure time.
- 7 EV settings : You can change the settings for charging current.
(for charging current, EV warnings, and drivable routes : type B)

 CLIMATE CONTROL

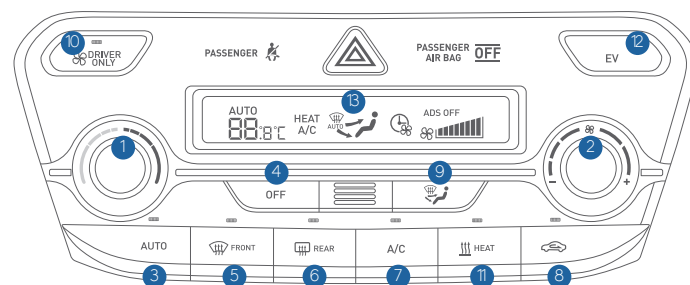

- | | |
|-----------------------------------|---------------------------------------|
| 1 Temperature control knob | 8 Air intake control button |
| 2 Fan speed control knob | 9 Mode selection button |
| 3 AUTO (automatic control) button | 10 Driver only button |
| 4 OFF button | 11 HEAT button |
| 5 Front windshield defrost button | 12 EV menu button |
| 6 Rear window defrost button | 13 Climate control information screen |
| 7 Air conditioning button | |

 
DEFOGGING / DEFROSTING



1. Press the front windshield defrost control button.



 
2. Set the temperature control to the warmest setting.



3. Set the fan speed to the highest setting.

NOTE: To reduce the tendency of the glass fogging and also to improve visibility, keep the interior surface of the windshield clean by wiping it with a clean cloth and glass cleaner. In addition, select air intake control to the outside (fresh) air position whenever possible while operating the vehicle.

 AUTOMATIC HEATING / AIR CONDITIONING




1. Press the AUTO button.



2. Set the temperature control to the desired setting.

Controls the modes, fan speeds, air intake and air-conditioning automatically.

 
SYSTEM OFF

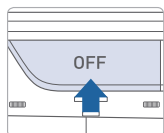

Pressing the OFF button will place the system in the OFF mode.

- Blower will turn off.
- Outside (fresh) air position will be selected.
- Vented air will be at last set temperature.

 
MODE SELECTION

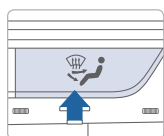

Changes the direction of the air flow as follow.



 EV MODE

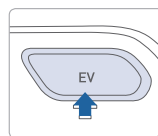

Push the EV button to enter the EV menu on the AVN screen. The EV menu has 6 or 7 menus such as Nearby Stations, Energy Information, Drive Mode, ECO driving, etc.

AIR INTAKE CONTROL

 


Recirculated air position



Outside (fresh) air position

HEAT BUTTON




Push the HEAT button to turn the heater on. Push the button again to turn the heater off.

DRIVER ONLY



If you press the DRIVER ONLY button, cold air mostly blows in the direction of the driver's seat.


 
REAR WINDOW DEFROSTER



Press to activate/deactivate the rear window defroster.

CLOCK ADJUSTMENT

  With Audio

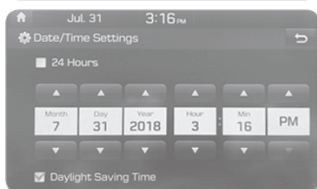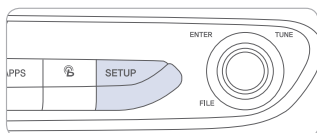

1. Press the SETUP button on the audio head unit.
2. Select Date/Time.
3. Select the desired items.

Date/Time

If you tap any value, you can directly enter the number in the screen.

 
 
24 Hours

The time display is set in 24-hour format.

Daylight Saving Time

The daylight saving time (DST) is applied.

With Navigation

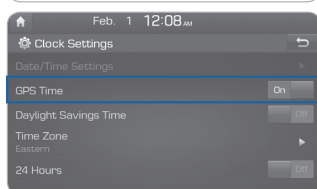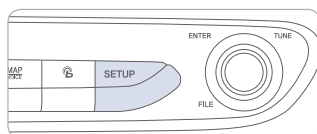

1. Press the SETUP button on the navigation head unit.
2. Select Clock.
3. Select the desired items.

GPS time

Displays time according to the received GNSS (Global Navigation Satellite System) time.

Daylight Saving Time

 
The daylight saving time (DST) is applied.

24 Hours

The time display is set in 24-hour format.

RADIO MODE

Display Audio

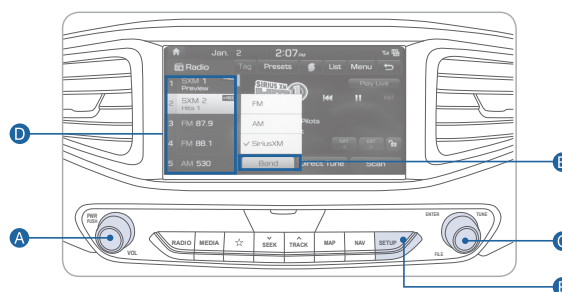

Press POWER button **A** to turn radio on.

TUNING/LISTENING TO CHANNELS

1. Press BAND button **B** on screen to select FM/AM/SiriusXM®.
2. ROTATE TUNE knob **C** to desired channel.

 
NOTE A clear view of the southern sky helps ensure SiriusXM® radio reception.

SETTING PRESET MEMORY BUTTONS


Press and hold any preset button **D** on the screen until an audible beep is heard to store current channel.

ADJUSTING THE SOUND CONTROL

1. Press the SETUP button **E** and press the SOUND button on screen to display the Sound Settings screen.
2. Touch on-screen arrows to adjust desired setting.

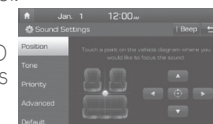

Navigation

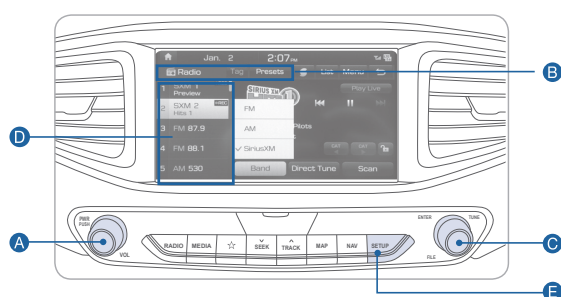 

Press **POWER** button **A** to turn radio on.

• TUNING/LISTENING TO CHANNELS

1. Press **BAND** button **B** on screen to select FM/AM/SiriusXM®.
2. ROTATE **TUNE** knob **C** to desired channel.

NOTE A clear view of the southern sky helps ensure SiriusXM® radio reception.

• SETTING PRESET MEMORY BUTTONS

Press and hold any preset button **D** on the screen until an audible beep is heard to store current channel.

 
• ADJUSTING THE SOUND CONTROL

1. Press the **SETUP** button **E** and press the **SOUND** button on screen to display the Sound Settings screen.
2. Touch on-screen arrows to adjust desired setting.



NAVIGATION

Basic features on map screen

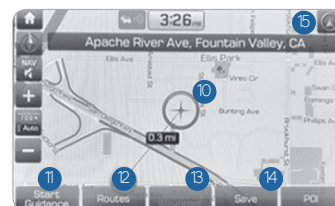

- 1 Place button : Goes to destination entry screen; Allows PIO search or Address entry.
- 2 Home button : Go to the Home screen.
- 3 Map button : Change the map view mode.
- 4 NAV volume button : Adjusts the volume.
- 5 Zoom in button : Zoom the map view screen in.
- 6 Map scale display : Set the zoom level automatically according to the guidance.
- 7 Zoom out button : Zoom the map view screen out.
- 8 Quick menu button : Quick and easy selection of a destination and options.
- 9 NAV button : Enter the navigation menu screen.
- 10 Map scroll mark : Touch to scroll the map.
- 11 Destination button : Confirms route calculation for the destination previously entered.
- 12 Waypoint button : Set a waypoint to the current route.
- 13 Save button : Saves the entered location into the Navigation System address book.
- 14 POI button : Find a POI (Point Of Interest) around the current position.
- 15 Vehicle position mark : View the vehicle's current position on the map screen.

 
Destination search screen



Press **[NAV]** on the map screen and, finds a destination by using the **[Destination]** menu.

- 1 Address : Set destination by address search.
- 2 Previous destinations : Select from previously inputted addresses and POIs.
- 3 Local search : Uses Google Local Search via the vehicle's connected services system.
- 4 POI categories : Select the desired item in the sub-categories.
- 5 Charging stations : Select the desired destinations among the searched charging stations.
- 6 Restaurants : Lists available restaurants within a predefined radius of the current vehicle position.
- 7 Emergency : Select the desired destination among the searched emergency facilities.
- 8 Address Book : Search the destination with the address book.
- 9 Coordinates : You can find a destination by entering the coordinates of latitude and longitude.


AUX, USB AND IPOD® PORT

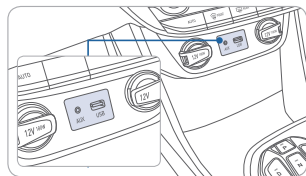

Use the input jack to connect an external audio device and listen to it through the audio system in your vehicle.

iPod® is a trademark of Apple, Inc.

 AUTOMATIC WITH PUSH BUTTON DRIVE SELECTOR

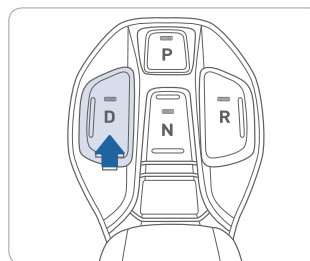


Select gear positions by pressing the shift button. The gear position is displayed in the instrument cluster.

For your safety, always depress the brake pedal while shifting to another gear.




 REGENERATIVE BRAKE LEVEL CONTROL PADDLES

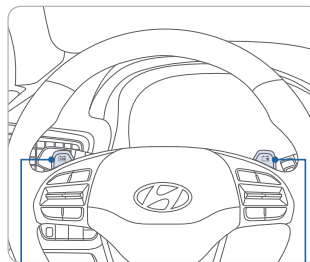

The paddle shifter is used to adjust the regenerative braking rate from 0 to 3 during decelerating or braking.

 
- Left side(⬅️): Increases regenerative braking and deceleration.
- Right side(➡️): Decreases regenerative braking and deceleration.

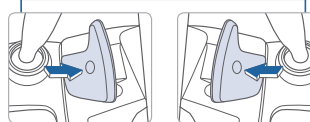

The paddle shifter does not operate.


- When the two paddle shifters are pulled at the same time.
- When the Cruise Control system or Advanced Cruise Control system is activated.

 CRUISE CONTROL / SMART CRUISE CONTROL

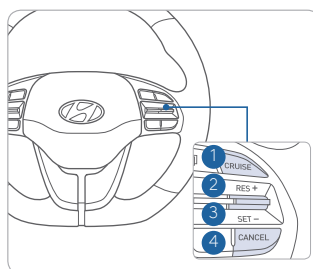

The Cruise Control system allows you to program the vehicle to maintain a constant speed without depressing the accelerator pedal.

 - 1 To turn On/Off cruise control.
- 2 Toggle switch UP to Resume or Increase the cruise control speed.
- 3 Toggle switch DOWN to Set or Decrease the cruise control speed.
- 4 To Cancel the Cruise Control.

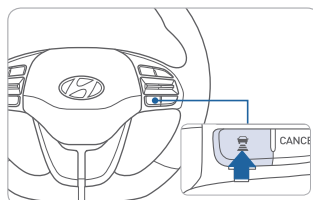

Setting Vehicle Distance (Smart Cruise Control only)

Press the button to set and maintain the vehicle-to-vehicle distance without pressing the accelerator or brake pedal.

The vehicle-to-vehicle distance 1 will automatically activate when you set the cruise speed 2. Each time the button is pressed, the vehicle-to-vehicle distance changes as follows:



Setting Cruise Control

1. Press the "CRUISE" button 1 to turn on Cruise Control. The icon will illuminate in the instrument cluster.
2. Toggle "-SET" switch (3) DOWN to set cruising speed.

Adjusting the vehicle speed

 
 
1. Toggle "+RES" switch 2 UP to increase cruising speed.
2. Toggle "-SET" switch 3 DOWN to decrease cruising speed.

Note: Quick toggle up/down will change speed by 1 mph. Holding switch up/down will change speed by 10 mph.

To Cancel Cruise Control

Press the "CANCEL" button 4 or depress the brake pedal.

ELECTRONIC PARKING BRAKE (EPB)

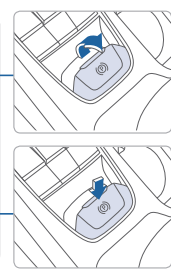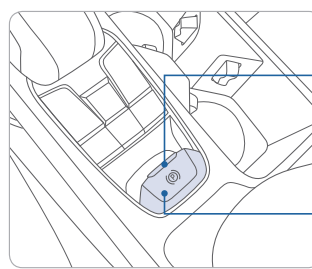


Applying

Stop the vehicle then pull up the EPB switch

Releasing

 Press the EPB switch while depressing the brake pedal.

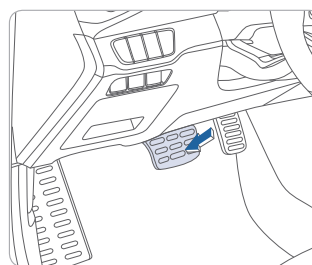

Automatic releasing

- When shifted to P:
Depress the brake pedal and shift out of P to R or D.
- When shifted to N:
Depress the brake pedal and shift out of N to R or D.

NOTE: If necessary, emergency braking is possible by pulling up and holding the EPB switch.

MEMO

IONIQ CUSTOMER DELIVERY CHECKLIST

CUSTOMER NAME	DEALERSHIP NAME
SALES CONSULTANT	DATE
VIN	

BEFORE DELIVERY

- ☐ SET TIRE PRESSURE LF __ RF __ RR __ LR __
- ☐ VERIFY VEHICLE IS CLEAN, IN GOOD CONDITION, FREE OF CHIPS AND SCRATCHES - CLEAN WINDSHIELD AND BACK WINDOW
- ☐ ENSURE FLOOR MATS ARE SNAPPED INTO PLACE

WALK THE CUSTOMER THROUGH EACH OF THE FOLLOWING KEY DELIVERY FEATURES

- ☐ REVIEW QUICK REFERENCE GUIDE
- ☐ PAIR CUSTOMER'S PHONE TO THE BLUETOOTH SYSTEM
- ☐ OPERATION OF THE NAVIGATION SYSTEM
- ☐ REVIEW AND TEAR OFF VOICE COMMAND / QUICK TIP CARD
- ☐ OPERATION OF THE AUDIO SYSTEM

BLUETOOTH® HANDS-FREE

CONNECTING YOUR PHONE

- On the radio:
1. Push the **SETUP** button.
 2. Select **Bluetooth**.
 3. Select **Bluetooth Connection**.
 4. Select **Add New**.
- In your phone's Bluetooth settings:
5. Select the <Vehicle Name> on your phone.
 6. Enter the passkey from the radio or accept the authorization pop-up on your phone.

SWITCHING BETWEEN PAIRED PHONES

- Using Voice Command:
- "Change Bluetooth device"

- On the radio:
1. Push the **SETUP** button.
 2. Select **Bluetooth**.
 3. Select **Bluetooth Connection**.
 4. Select **Connect** next to the desired phone.

For more information, visit HyundaiBluetooth.com