
### **SUPER CONSOLE X4 PLUS**

# **User Manual**

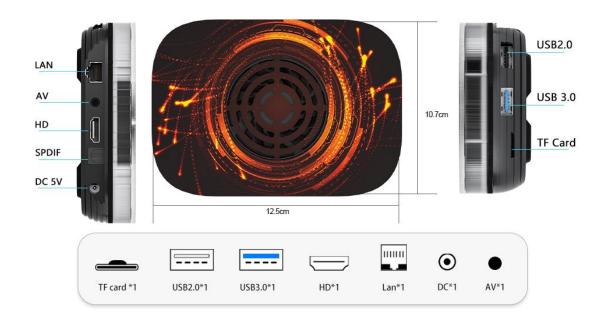

Model:Super Console X4 PLUS 3 System:EmuElec/Android/CoreElec

CPU:Amlogic S905X4 RAM:4GB DDR3

GPU:Mail-G31 MP2 ROM:32GB eMMC

DC Power:5V/3A Bluetooth: BT4.0

WiFi:2.4G/5G Language: Multi-languages

### 1. Product Information

Product size: 12.5cm\*10.7cm\*4cm

Product weight: 200g

Support HDMI-compatible

Support 2.4G/5G WiFi. 10/1000M LAN

Support Multi-language

Three Systems: EmuELEC4.5 & Android 11 & CoreELEC

## 2. Product Features

\* Mini size, retro design, palm size, can be put in the pocket, it's the best choice for family, travel, party, corporate entertainment.

- \* Equipped with upgraded S905X4 chip, Amlogic Quad Core ARM Cortex-A55 CPU, 4-core processor, main frequency 2.0GHz. Powerful GPU:ARM Mail-G31 MP2.
- \* Built-in up to 90000+ retro games.
- \* Support more than 60+ emulators, such as PSP,DC,PS1,Sega Saturn,N64 NEOGEO,MAME etc.
- \* 4G RAM DDR3+ 32G ROM eMMC
- \* 2.4G/5G WiFi, 10/1000M LAN, BT4.0
- \* Support: AV1, H.265, 8K Video, 4K@60fps, HD 2.1, USB3.0
- \* Game Console \ TV and CoreELEC Three systems, support to connect to WIFI, Youtube online TV, movies, online access to information, support Google play to add applications
- \* The built-in automatic cooling fan greatly improved cooling effect
- \* Equipped with two wireless controllers, you can play with friends and family at any time.
- \* Linux open source system, suitable for DIY. For the specific method of downloading the game, please refer to the instructions or consult our customer service.

#### 3. PACKING LIST

- 1\* SURPER CONSOLE X4 PLUS
- 1\* TF Card(Game System)
- 1\*4G Card (CoreELEC)
- 2\* Controllers
- 1\*TV Remote Control
- 1\*Power Adapter
- 1\* HDMI Cable
- 1\*User Manual

### 4. Highlights of Latest Upgrades:

- (1) 4-core processor, main frequency 2.0GHz, Mail-G31 MP2, support running Sega Saturn, smooth running PSP.PS1, DC, MAME, etc.
- (2) DDR3 memory, running faster
- (3) EmuElec 4.5+Android 11+CoreElec .

# **5. How to Switch Three Systems**

#### TV system:

When the TF card is not inserted, it is Android TV system, it supports watching TV, Youtube, Googleplay.

Switch TV system into game system: (Use remote control)

My Application>>LiberELEC>>OK>>Allow

## **Switch Game System to TV system: (Use remote control)**

Press the Gamepad "Start" Button--Choose the "Quit"---"Reboot From NAND"---"YES"

## **CoreELEC System:**

Remove game card,insert 4G Card → Turn on the power

# 6. System Startup and Shutdown

- (1) System Startup: Press the power button on remote control to startup the system.
- (2) Shut Down: Press SELECT---->>Press the power button on remote control to shutdown the system.

# 7. Common hotkey settings


Left/right cross keys and joystick	Switch emulator platform
B key (right side function key)	Enter or confirm
A key (lower function key)	Return or cancel
START Key	Set up
SELECT Key	Soft restart or soft shutdown setting
L2/R2	Game menu page flip
Select + Start(press twice)	Quite Game  ( Quite game's hotkeys are available throughout the system, but most of the other hotkeys only work when using the retroarch core.)
L3 + R3	Menu Toggle Controller Combo
Select + L1	Load State
Select + R1	Save State
Select + B	Reset Game

# 8 . More Settings

(1) Language Setting

System Settings-Language

START---->>SYSTEM SETTINGS---->>LANGUAGE

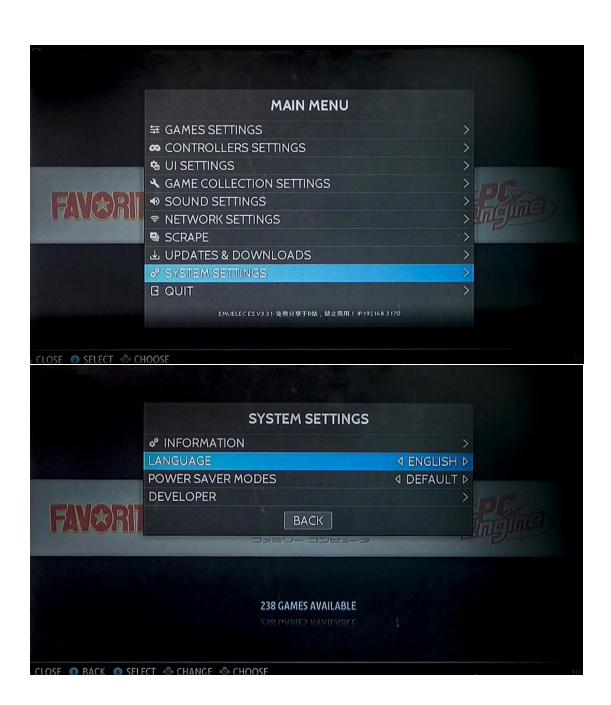

	LANGUAGE	
	BASQUE	
	正體中文	
	简体中文	
	DEUTSCH	TO CO.
	ENGLISH	156000
	ESPAÑOL	
	FRANÇAIS	The section of
	ITALIANO	
	PORTUGUES BRASILEIRO	
	PORTUGUES PORTUGAL	
	BACK	
BACK 👶 CHOOSE	the second second second second second	10




## (2) Controller Button Mapping

After the USB interface is connected to the handle, press the handle B (OK) button to enter the handle button setting.







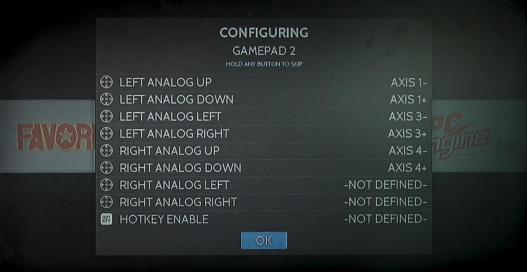


## (3)WIFI Connection


START---->>NETWORK SETTINGS---->>ENABLE WIFI, then select the wifi network as required and fill in the password;





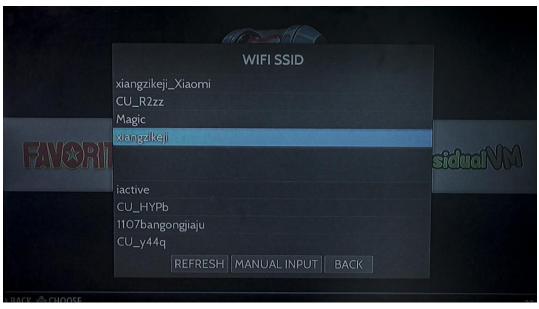



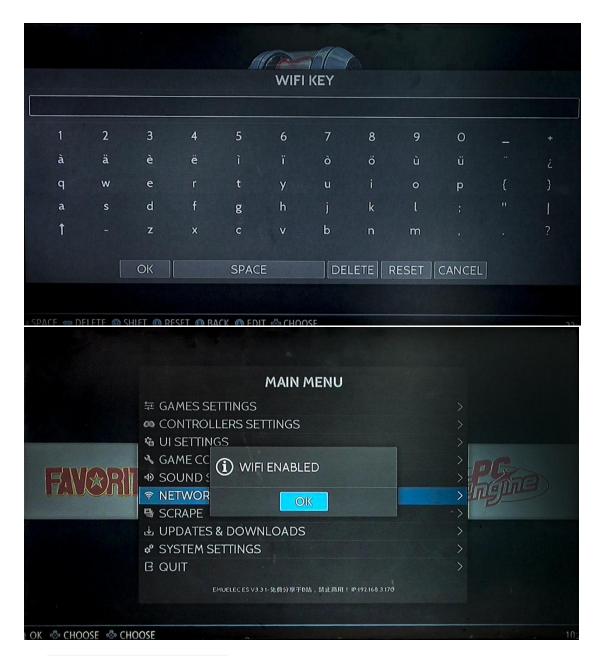

## 9. Adding Game Methods

There are many ways to copy games:

## The First Type:


The first way, if you use the memory card equipped with the game console, you can directly insert it into the win10 computer,

find the data mobile hard disk, and directly copy the game to the corresponding emulator in the roms folder.

**The second Type:** (network connection)


(1) Please connect the device to the network first.

View the IP address of the device

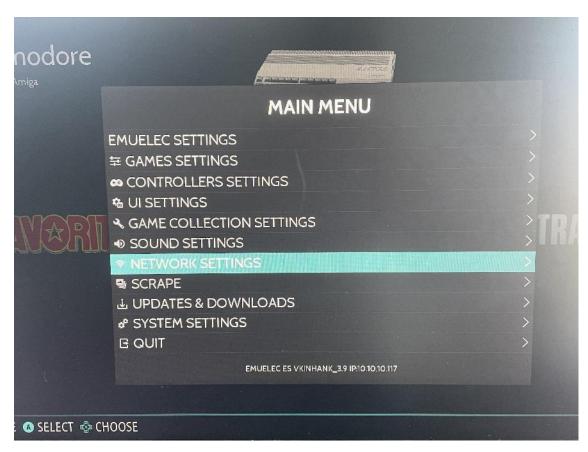




In the example below, the IP address is: 10.10.10.117 In the computer resource manager, enter \\10.10.10.117 and press Enter.

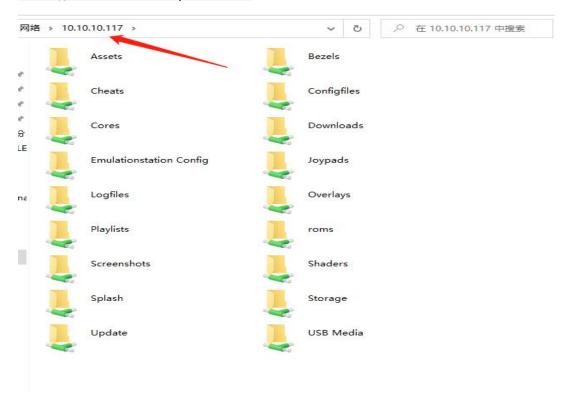

If prompted to enter a user name and password, the default user name: root, password: emuelec.

# (2) Open the Storage/Roms Folder:

You can see many sub folders, each of which corresponds to a simulator game, and the corresponding game needs to be placed in the corresponding folder to be correctly identified

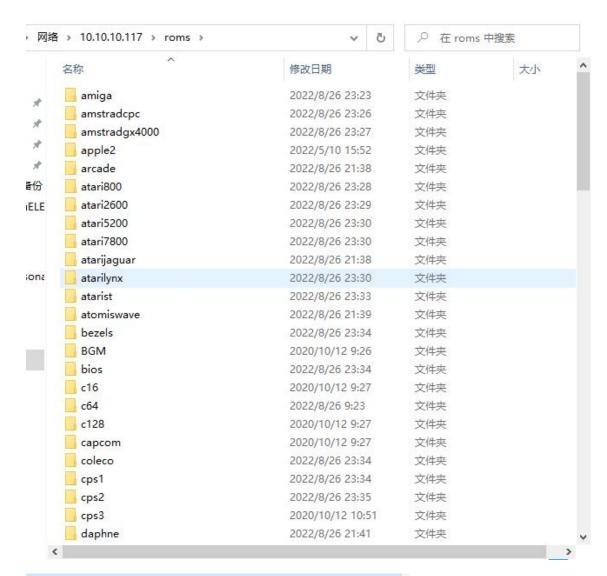

## (3) Example of the folder list corresponding to the simulator:


Arcade-FBA format	roms\arcade\fba
Arcade-MAME format	roms\arcade\mame2003
SNES	roms\nes
PSP	roms\psp
PS1	roms\psx
NES/FC	roms\nes

**Note:** The system distinguishes games by folder name, do not modify any directory structure, just copy the game files to the folder of the corresponding simulator.


# 10. Change Game Emulators:

There may be multiple emulator files. If individual games cannot be opened or you want to try the effects of other simulators, please use the following methods to change the simulator:

Select the game you want to change the emulator--->>Long press the B key--->>Game settings menu--->>Advanced Game Options--->>Emulator--->>Choose the right emulator

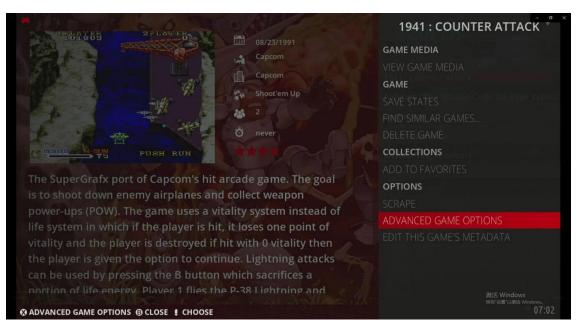



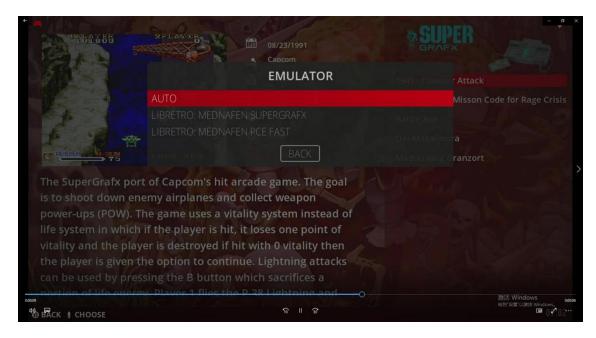

### 11. Precautions

The resolution of the game system is adaptive, do not change the resolution of the game system.

It is not recommended to upgrade the game system by yourself

Do not store the machine in a dusty, humid, high temperature and strong magnetic environment.

It is forbidden to use in high temperature and high humidity environment (this product is not waterproof).

When you carry this machine out, participate in high-intensity sports such as running, climbing, etc., please fix the machine firmly on your body or backpack to avoid damage caused by falling from a height or squeezing heavy objects.

When the power adapter is fully charged, please do not touch the power video unit with wet hands to prevent electric shock.

Some games of this product contain violent scenes, please be careful with children before using them. Parents are also requested to do a good job of supervising their children and not to indulge for a long time.

Do not disassemble the machine without authorization.













### 12. More Tutorial Videos:

For more usage methods, please refer to:

URL 1: <a href="https://www.youtube.com/channel/UC9pHw2msnsd8i1QZVY180eQ?view\_as=subscriber">https://www.youtube.com/channel/UC9pHw2msnsd8i1QZVY180eQ?view\_as=subscriber</a>

