

LA CROSSE<sup>®</sup>  
TECHNOLOGY

# WALL OR TABLE DIGITAL CLOCK

 


SET UP GUIDE

MODEL: W72258

## Power Up

1. Insert 3-AAA alkaline batteries into your Clock.
2. Configure your basic settings.

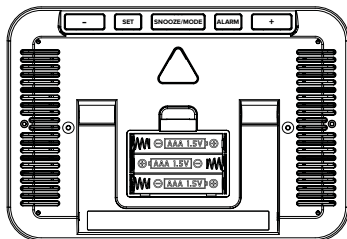

## Settings Menu

1. Hold the **SET** button until the display changes to enter the Settings Menu.
2. Press and release the **+** or **-** button to adjust values.
3. Press and release the **SET** button to confirm and move to next item.
4. Press and release the **SNOOZE/MODE** button at any time to exit.

 
### Settings order:

- Hour
- Minutes
- Year
- Month
- Date

**Weekday:** Weekday will set automatically when the Year, Month, and Date are set.

## Custom Display

Press and release the **SNOOZE/MODE** button to select between Calendar or Seconds Display.


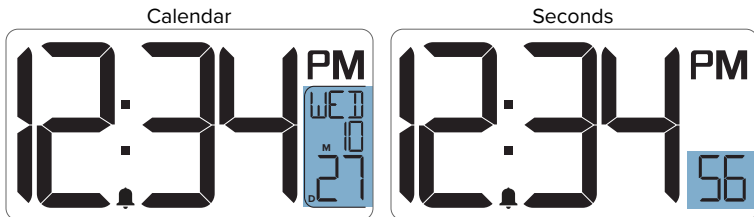


## Time Alarm Settings


1. Hold the **ALARM** button until the display changes to enter the Alarm Settings. “AL” will show in the lower right corner.
2. Press and release the **+** or **-** button to adjust values.
3. Press and release the **ALARM** button to confirm and move to next item.
4. Press and release the **SNOOZE/MODE** button at any time to exit.

### Settings order:

  - Hour
- Minutes

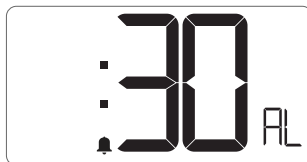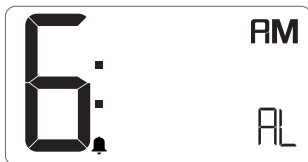


## Activate/Deactivate Alarm

- The alarm is active when set.
- Press and release the **ALARM** button to deactivate or activate the alarm.
- The alarm time will show briefly.
- The Alarm Icon  is displayed when the alarm is active.



## Snooze

 - When the alarm sounds, press and release the **SNOOZE/MODE** button to silence the alarm for 10 minutes.
- The Snooze Icon **Zz** will flash.
- Press and release any button except **SNOOZE/MODE** to silence the alarm for 24 hours.
- If no buttons are pressed, the alarm sound will turn off automatically after 2 minutes

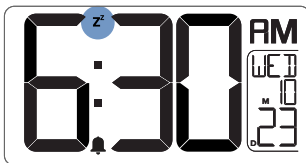

## Low Battery Icon


When the Low Battery Icon  shows, replace the batteries.

## Specifications

**Power:** 3 “AAA” (LR3, IEC) Alkaline Batteries (not included)

**Battery Life:** 24 + months

 **Dimensions:** 7.13” L x 0.83” W x 4.88” H (18.11cm L x 2.11cm W x 12.40cm H)

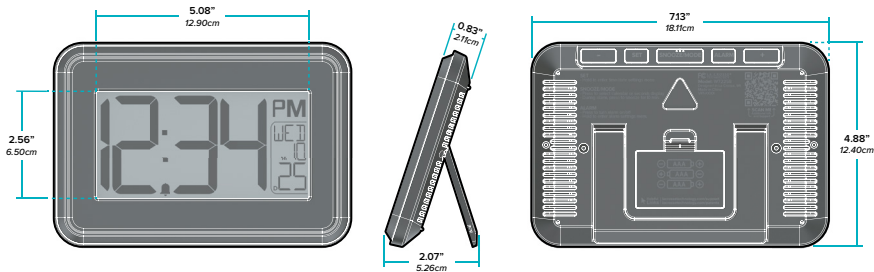

## Stay in Touch!

Ask questions, watch set up videos, and provide feedback on our social media outlets. Follow La Crosse Technology on Youtube, Facebook, Instagram, and X (Twitter).



## Warranty & Patents

La Crosse Technology, Ltd. provides a **1-year limited time warranty** (from date of purchase) on this product relating to manufacturing defects in materials & workmanship. In accordance with the Song-Beverly Act, in the state of California, the warranty on this item becomes effective on the date of delivery.

La Crosse Technology, Ltd, 2830 S. 26th St., La Crosse, WI 54601  
Phone: 608.782.1610

For Full Warranty Details, Visit: [www.lacrossetechnology.com/pages/warranty](http://www.lacrossetechnology.com/pages/warranty)  
Patents: [www.lacrossetechnology.com/pages/patents](http://www.lacrossetechnology.com/pages/patents)

## We're Here to Help

If you require additional assistance, get in touch with our friendly customer support team based in La Crosse, WI.

Self-Help: [bit.ly/w72258\\_support](http://bit.ly/w72258_support)

Online: [bit.ly/contact\\_techsupport](http://bit.ly/contact_techsupport)

Phone: 1.608.782.1610

Our knowledgeable team is available:  
Mon-Fri 8am-6pm CST

**SCAN HERE**  
**Additional Info**  
**and Support** ✓



**WARNING** This product can expose you to chemicals including acrylonitrile, 1, 3-butadiene, and styrene, which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to: [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)

## Care & Maintenance

When batteries of different brand or type are used together, or new and old batteries are used together, some batteries may be over-discharged due to a difference of voltage or capacity. This can result in venting, leakage, and rupture and may cause personal injury.

- Do not mix Alkaline, Lithium, standard, or rechargeable batteries.
- Always purchase the correct size and grade of battery most suitable for the intended use.
- Always replace the whole set of batteries at one time, taking care not to mix old and new ones, or batteries of different types.
- Clean the battery contacts and also those of the device prior to battery installation.
- Ensure the batteries are installed correctly with regard to polarity (+ and -).
- Remove batteries from product during periods of non-use. Battery leakage can cause corrosion and damage to this product.
- Remove used batteries promptly.
- For recycling and disposal of batteries, and to protect the environment, please check the internet or your local phone directory for local recycling centers and/or follow local government regulations.

## FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

### **Caution!**

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**All rights reserved.** This manual may not be reproduced in any form, even in part, or duplicated or processed using electronic, mechanical or chemical process without the written permission of the publisher. This booklet may contain errors or misprints. The information it contains is regularly checked and corrections are included in subsequent editions. We disclaim any responsibility for any technical error or printing error, or their consequences. All trademarks and patents are recognized. The manufacturer is not responsible for any radio or TV interference caused by unauthorized changes or modifications to this equipment. Such changes or modifications could void the user authority to operate the equipment.

LA CROSSE<sup>®</sup>  
TECHNOLOGY