Network Indoor Station

UD20183B-D

## **HIKVISION**

#### ENGLISH

#### Diagram References

1 Appearance

1 Screen 2 Microphone 3 Debugging Port 4 Network Interface

5 Loudspeaker 6 TF Card Slot 7 Alarm Terminal 8 Reserved

9 Power Terminal

- The appearance of the device varies according to different models. Refers to the actual device for detailed
- The debugging port is used for debugging only.

#### Terminal and Wiring

There are 20 pins in the terminal on the rear panel of the indoor station: 2 RS-485 pins, 5 reserved pins, 4 relay output pins, 8 alarm input pins, and 1 GND pin.

Note: There are 20 pins in the terminal on the rear panel of the DS-KH6320-TE1: 11 reserved pins, 8 alarm nput pins, and 1 GND pin. Please refer to the specific model.

#### 3 Installation

It supports wall mounting. There are two installation modes.

#### Installation Accessory Description

The wall mounting plate and junction box are required to install the indoor station onto the wall

The dimension of junction box should be 75 mm (width)  $\times$  75 mm (length)  $\times$  50 mm (depth). The dimension of wall mounting plate is shown.

- Make sure the device in the package is in good condition and all the assembly parts are included.
- The power supply the indoor station supports is 12 VDC. Please make sure your power supply matches your indoor station
- Make sure all related equipments are power-off during the installation.
- Check the product specification for the installation environment.

#### ★Wall Mounting with junction Box

- 1. Chisel a hole in the wall. The size of the hole should be 76 mm (width) × 76 mm (length) × 50 mm (depth).
- 2. Insert the junction box to the hole chiseled on the wall.
- 3. Fix the wall mounting plate to the junction box with 2 screws.
- 4. Hook the indoor station to the wall mounting plate tightly by inserting the plate hooks into the slots on the rear panel of the indoor station, during which the lock catch will be locked automatically.

#### Wall Mounting without junction Box

- 1. Insert 2 expansion tubes into the wall.
- 2. Fix the wall mounting plate to the junction box with 2 screws.
- 3. Hook the indoor station to the wall mounting plate tightly by inserting the plate hooks into the slots on the rear panel of the indoor station, during which the lock catch will be locked automatically.

#### 4 Getting Started

#### 1 Activate Indoor Station

You are required to activate the device first by set  $\,t\,$  i  $\,$  ngs a strong password before you can use the device.

- 1. Power on the device. It will enter the activation page automatically
- 2. Create a password and confirm it.
- 3. Tap OK to activate the indoor station.

#### Quick Configuration

- 1. Choose Language and tap Next.
- 2. Set network parameters and tap Next. - Edit Local IP, Subnet Mask and Gateway parameters.
- Enable DHCP, the device will get network parameters automatically. 3.

#### Configure the indoor station parameters.

- Select Indoor Station and tap Next to link main door station
- i. Edit Floor and Room No.
- ii. Create and confirm SIP register password.


Note: If you want to add the indoor station to the door station, the SIP password of the indoor station should be the same as the registration password of the door station


- c. Tap Advanced Settings to edit Community No, Building No. and Unit No.
- d. Optional: Enable Indoor Station Settings and select the indoor station to link.
- Select Indoor Extension and tap Next to link indoor station.
- i. Edit No., Room Name.
- ii. Create and confirm SIP register password.


4. Linked related devices and tap Next. If the device and the indoor station are in the  $\,$ same LAN, the device will be displayed in the list. Tap the device or enter the serial No.


- i. Tap the setings icon to pop up the Network Settings page.
- ii. Edit the network parameters of the door station manually or enable DHCP to get the network parameters automatically
- e. Tap OK to save the settings.
- 5. Tap Finish to save the settings.

Refers to Video Intercom Network Indoor Station Configuration Guide (Scan the QR code) for details. Refers to Video Intercom Network Indoor Station Operation Guide (Scan the QR code) for details

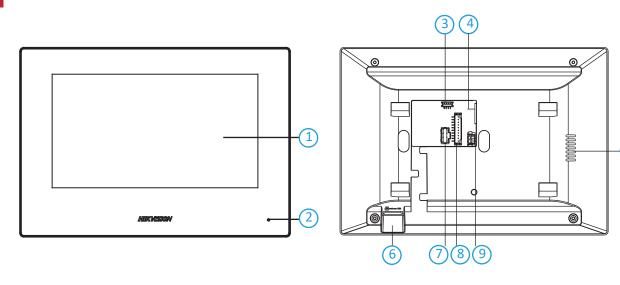


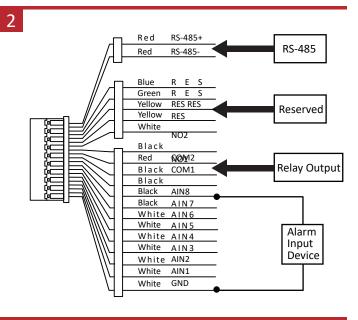

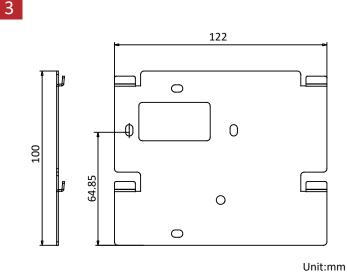

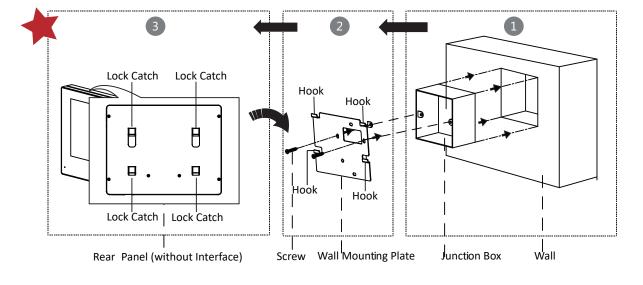

(5)

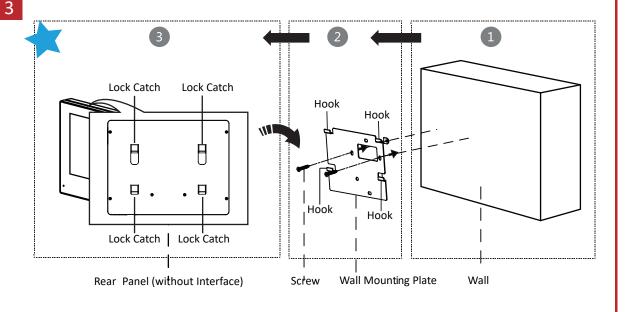

Scan the QR code to get the User Manual for detailed information.





# DS-KH6320-WTE1 Network Indoor Station





The KH6 series IP indoor station, with 7-inch touch screen, brings you a fluent video and audio communication. By considerating the difficulty of deployment of the traditional video intercom, the device has improved the design and can deploy the whole video intercom system by itself independently, without extra devices or configurations, which reduces the deployment time and cost. You can view, chat with, and send permission for the visitor via mobile phone in anywhere. The device can also link other control systems, such as CCTV system, elevator control system, etc.

- 7-inch TFT touch screen with 1024 × 600 resolution
- Convenient Hik-Connect APP Mobile Control
- Receive calls, open the door and live view remotely
- Easy to use without PC
- Easy wizard for quick set up
- Configure the whole system on one touch screen
- Live view of the door station and cameras in public areas
- Support voice messages when no response from the indoor station
- Receive alarms by linkage with a alarm system and notify the center to handle in time
- Elevator access control



# Specification

System parameters			
Operation system	Linux		
ROM	Linux		
	32 MB		
RAM	128 MB		
Processor	Embeded high performance processor		
Display parameters			
Screen size	7-inch		
Operation method	Capacitive touch screen		
Туре	Colorful TFT		
Resolution	1024 × 600		
Video parameters			
Lens	/		
Resolution	/		
FOV	1		
Wide dynamic range (WDR)	1		
Video compression standard	/		
Focal length	/		
Audio parameters			
Audio input	1 built-in omnidirectional microphone		
Audio compression standard	G.711U/G.711A		
Audio output	1 built-in loudspeaker		
Audio compression bitrate	64 Kbps		
Audio quality	Noise suppression and echo cancellation		
Volume adjustment	Adjustable		
Capacity			
	TF card inser		
	ted: 200 captured pictures, 200 alarm records		
Message capacity	Without TF card: 2 MB RAM for picture storage; The storage number is decided by the		
	picture size, 200 alarm records		
Notice capacity	200		
Linked indoor extensions capacity	16		
Linked doorphone capacity	17		
Linked network camera capacity	16		
Network parameters			
Network protocol	TCP/IP, SIP, RTSP		
Wi-Fi	2.4 GHz, IEEE802.11b, IEEE802.11g, IEEE802.11n		
Bluetooth	/		
3G/4G	/ /		
Zigbee	/		
Device interfaces			
Alarm input	8		
Network interface	1 RJ-45 10/100 Mbps self-adaptive		
TAMPER	/		




RS-485	1 RS-485 (Half duplex)		
USB	1		
TF card	Support TF card, up to 128 G		
Alarm output	2		
Lock control	2 relays, Max. 30 VDC 0.3 A		
General			
Button	/		
Installation	Surface mounting		
Indicator	/		
Weight	Net weight: 355 g (0.8 lb)		
	Gross weight: 683 g (1.5 lb)		
Protective level	1		
Working temperature	-10 °C to 55 °C (14 °F to 131 °F)		
Working humidity	10% to 90% (no-condensing)		
Dimension (W $\times$ H $\times$ D)	200 mm × 140 mm × 15.1 mm (7.9" × 5.5" × 0.6")		
Battery	/		
Application environment	Indoor		
Power consumption	≤ 5 W		
Language	English, Russian, Bulgarian, Hungarian, Greek, German, Italian, Czech, Slovak, French,		
	Polish, Dutch, Portuguese (Brazil), Spanish, Hebrew, Romanian, Turkish, Estonian,		
	Danish, Swedish, Norwegian, Finnish, Vietnamese, Croatian, Slovenian, Serbian, Arabic,		
	Portuguese (Portugal), Lithuanian, Uzbek, Kazakh, Mongolian, Ukrainian		

## Available Model

DS-KH6320-WTE1

## Dimension



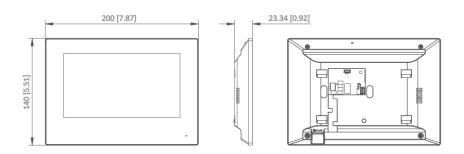



- Accessory
- Optional

DS-KAW50-1 50W 12V Power	DS-KABH6320-T Indoor Station	DS-KAW50-1N 50W 12V Power
Adapter	<b>Table Bracket</b>	Adapter
	E	