 
 


# INTELLIGENT TOILET

 
## USER MANUAL

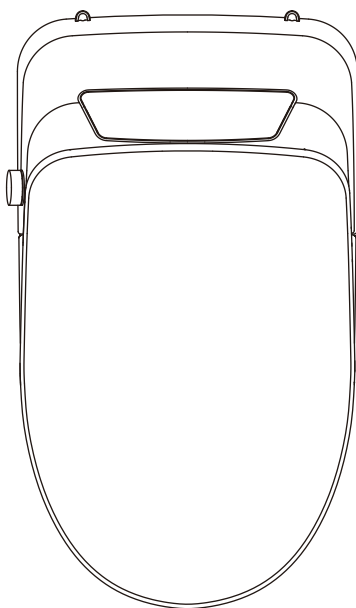


## Item List(Confirm that all below items are inside the box)

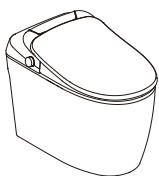

①Intelligent toilet  
(1 set)



②Remote control set  
(1 set)

 

③T-valve



 
④Wax Ring



⑤Backup battery set



⑥User Manual

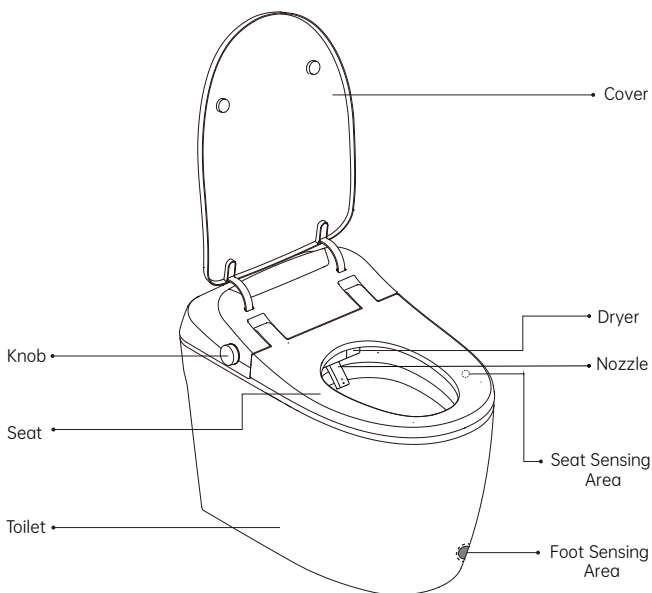

SIZE:680mm\*405mm\*510mm

\* Illustrations above are for references only.  
Actual objects may look different in person.

### Before you Install

1. Confirm dimensions of product with installation space.

2. Check your installation conditions.

(water supply, water pressure, electrical circuit)


3. Pay attention to other objects.

• Other objects (door, cabinet, etc.) may affect the installation or sensing functions.


# Cautions and Warnings

This product is classified as Class 1 Equipment ,

 
**READ ALL INSTRUCTIONS BEFORE USING.**

 **Grounded** This product should be grounded.

- Make sure that a properly grounded outlet has been installed.
- Improper use of the grounding plug can result in a risk of electric shock.
- Check with a qualified electrician or serviceman if the grounding wire instructions are not completely understood, or if in doubt as to whether the product is properly grounded.


 **Warning** Any misuse from ignoring the content of this label may cause serious injury or death.

- Never disassemble, repair or alter. This product shall be repaired by professionals only.
- Do not get any water or cleaning solution on the top unit or power plug.
- Keep cigarettes and other open flames away from the product.
- Do not plug or unplug the power plug with wet hands.
- Do not use the product if a malfunction occurs.
- Do not use other water than allowed by the laws and ordinances of the region of use. Only use potable water. Do not use seawater or recycled water.
- Do not fold or crush the water supply hose.
- To prevent a sudden water leak, do not remove the water filter drain valve or other hose when the shutoff valve is open.
- Do not use a loose or faulty electrical outlet.
- Do not use any power supply other than the one specified.
- Do not do anything that may damage the power cord or power plug.  
Do not strike, yank, twist, excessively bend, damage, alter, or heat the power cords.  
Also, do not place anything heavy on, bind or pinch the power cords.
- If the power cord is damaged, to prevent any injuries or accidents, it should be replaced by a professional.
- Do not use during thunderstorms (pull out the power plug during storms) .
- Do not spray urine at the dryer trap.
- Do not stick a finger or anything else into the warm air outlet.
- Do not flush anything other than bodily waste and toilet paper.
- Do not apply strong force, mechanical shock, step on or stand on the toilet seat, toilet lid or top unit.

 **Caution** Any misuse from ignoring the content of this label May cause personal injury or product damage.

- Prevent any exposed skin contact with heated seat too long to prevent low temperature burning.
- Do not spray urine in the direction of the bidet nozzle.
- Please use the water supply hose accompanying with new machine.  
The old hose assembly shall not be used again
- Do not install the product at a place with excessive humidity, where moisture may condense at the surface of the product.
- Avoid direct sunlight or heat.
- When not using the product for a long time, close the shutoff valve, drain the water from the top unit and water supply hose, and unplug the power plug from the outlet.
- Any water left in the product may be frozen during the winter season. Please keep the product in room temperature before reinstallation or usage.
- When install the product in the room, a stop valve shall be installed in a close proximity.  
For emergency circumstances, the water inlet valve shall be stopped without using any tools; otherwise unexpected failure may cause the loss to the customer.
- Do not use any hard setting material (cement mortar) while installing the toilet.  
Thermal expansion of hard setting material (cement mortar) will damage or crash the feet of toilet.
- Periodically remove dust and dirt from the power plug and make sure it is securely plugged into the wall outlet.
- Do not lean on cover when use this device to prevent product from damage.

# Cautions and Warnings

 **Caution** Any misuse from ignoring the content of this label May cause personal injury or product damage.

- Children, elders or those with disabilities from their body, sensitivity or mental disabilities or lacking of common sense should not use or get close to this product unless under close tutelage.
- Children are not allowed to use or touch this product.
- Do not leave children alone in a room with such product.
- To prevent the following persons from getting a moderate temperature burn during use, other person should turn off the toilet seat heater and set the dryer temperature to "Low".
- Young children, the aged and other users unable to set the temperature appropriately themselves.
- The ill, physically disabled and others who do not have freedom of movement.
- Those using any medicines that cause drowsiness (sleeping or cold medicine), those who have been drinking heavily, anyone severely fatigued and anyone else liable to fall asleep.
- When installing the water filter drain valve, make sure that it is securely tightened in its proper position.
- Do not use this product when the ambient temperature is likely to drop to 32°F (0°C) or lower.

## Warning

Do not use the product if a malfunction occurs.

In case of breakdown or other problem, be sure to cut off power by means such as unplugging the power plug.

Close the water shutoff valve to stop water supply. Connect the dealer for help.

Possible malfunctions:

- |   |   |
|---|---|
| -Water is leaking from a pipe or the top unit.              | -The product is cracked or broken.        |
| -The product emits smoke.                                   | -The product is abnormally hot.           |
| -The bowl unit is clogged.                                  | -The toilet seat cushion is out of place. |
| -The product makes a strange noise or emits a strange odor. |   |

# Maintenance

## This product is an electric appliance.

- Be careful not to let water seep inside or leave detergent in the gap between the top unit and bowl unit. (May damage plastic parts or cause a malfunction.)
- Keep the Seat Sensing Area clean, never cover it with seat sheath or other things.

## Toilet Clean

- Unplug the power plug from the outlet before cleaning.
- Wipe with a soft cloth that has been soaked in water and wrung-out thoroughly.
- For heavy dirt: Wipe with a soft cloth soaked in diluted, neutral kitchen detergent, and then wipe with a soft cloth soaked in water.
- Wipe off any cleaner that remains on the product.
- Wipe off all water that remains on the product to prevent water seep inside.
- For cleaning or maintenance of plastic parts, do not use any harsh cleaning agents.  
(These include, but are not limited to products such as: concentrated sulfuric acid, concentrated nitric acid, glacial acetic acid, carbon tetrachloride, chloroform, acetone, butanone, benzene, methylbenzene, phenol, methylphenol, dimethylformamide, methyl ether, soybean oil, acetate, 40% nitric acid, thick salt acid, 95% alcohol, gasoline, kerosene or brake oil, etc).

## Nozzle Clean

1. When unseated, long press Kid button on the Remote Control
  - Enter "Nozzle Self-Cleaning", the wand extends and water sprays out for cleaning.
  - "Nozzle Self-Cleaning" will run for 90s.
2. Wipe with a soft, wet cloth or clean it.
  - Do not pull, push or press the wand with excessive force.
  - Do not use any acid detergent.
3. Press Stop button to finish
  - The wand retracts.

## Others

- To prevent breaking, please empty water from the tank when not using the product for a long time.
- In case of freezing, unable to flush or wash, the cloth soaked in hot water can be covered on the water supply hose of the toilet or the connection part of the water supply hose to defrost it. (Do not pour hot water or blow hot air with high temperature on the product body, water supply hose and other objects).
- The shutoff valve should be cleaned every 6 months.
- The filter element should be changed every 3-6 months.

## Functions

Functions	Intorduction
Rear Wash	Clean your rear.(adjust water temperature,water pressure and nozzle position)
Front Wash	Clean your front.(adjust water temperature,water pressure and nozzle position)
Nozzle Self-cleaning	The nozzle automatically cleans itself before andafter usage.
Dryer	Dry your front and rear.
Water Pressure	4 levels adjustable water pressure.
Nozzle Position	4 Position adjustable nozzle position
Temperature Adjust	Adjust water/seat/dryer temperature between 4 levels
Oscillating Wash	The nozzle moves back and forth to cleaning.
Night light	Illuminate the toilet at night
Sensor Flush	Perform a flush by foot sensing.
Instant Heating	When the warm water cleaning is turned on, the rinsing water is heated instantly.
Energy-Saving mode	The toilet is running in low power mode.
Auto Open & Close	Movement and automatically opens the lid when approached and closes after the user walks
Sensor Seat Open	Open the seat by foot sensing.
Automatic Flushing	The toilet will automatically perform flushing after human body leaving the seat.
Auto per-wetting	When seated, a water jet wets the toilet bowl surface, avoiding waste sticking.

## Specification

Rated voltage		220V~,50Hz
Rated power		1400W
Power cord length		About 1.5m
Drainage way		Siphon
Clean	Rear Wash	Water flow:Max rear wash shall be no less than 450mL/min
	Front Wash	Water flow:Max rear wash shall be no less than 450mL/min
	Water temperature	OFF/ 35-40°C(4 levels)
	Max instantaneous power	1600W
	Safety device	Thermostat, Thermal fuse, Temperature sensor
Heated Seat	Seat temperature	OFF/ 35-39°C(4 levels)
	Max instantaneous power	45W
	Safety device	Thermostat, Thermal fuse, Temperature sensor

Dryer	Warm air temperature	OFF/ 35-39°C(4 levels)
	Max instantaneous power	250W
	Safety device	Thermal fuse, Bimetal thermostat
Water supply pressure		Min inlet water pressure 0.07MPa (dynamic) Max inlet water pressure 0.80MPa
Ambient temperature		IPX4
Inlet water temperature		5-35°C
Ambient temperature		0-40°C

## I Trouble Shooting

Symptoms	Possible Causes	Please check
Toilet doesn't working	Power failure	Wait until the power is restored.
	Plug not connected or no power to socket	Plug in or detect the socket
	The leakage circuit breaker on plug does not reset	Press "Reset" button on the plug
	Product is on standby mode	Press and hold "STOP" button at the remote control
Toilet fails to flush	Water failure	Wait until the water supply is restored
	Angle valve for water supply is closed	Open the angle valve for water supply
	Auto-flushing is deactivated	Press and hold "FLUSH" button at the remote control
Wash mode is abnormal	Not yet seated or current sitting posture unable to be sensed by the seat	Seated or adjust your sitting gesture
	Insufficient water pressure	Check bend problem on inlet hose, if so, adjust hose
The wash mode stops in the middle of use	Wash mode stops automatically after continuous flushing for 90s	If necessary, turn on the wash mode again
	The seat is unable to sense human body	Adjust your sitting gesture or sit on the toilet again
Dryer fan stops in operation process	The dryer fan stops automatically after continuous usage for 4min	If necessary, press the dryer button again
	The seat is unable to sense human body	Adjust your sitting gesture or sit on the toilet again
The seat is not warm	Seat temp set too low	Set seat temperature to proper leve

\* Before seeking assistance, please review the above problems and solutions.  
If you want to know about the service of warranty, please contact local dealers or wholesalers.