



TW04G尺寸77mm x 585mm 128g铜版纸

正面第一页

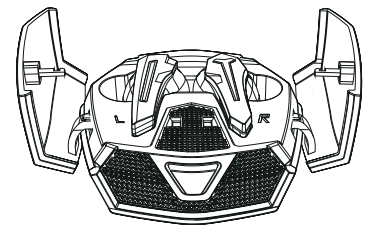

TW04G
无线耳机说明书
Wireless Earbuds Instructions

开关

长按左右耳机MFB键3秒
耳机开机并伴有提示音

手动开机

放入充电盒中拿起两个耳机

自动开机

蓝牙连接
从充电盒中拿起两个耳机

打开手机蓝牙

搜索连接设备

游戏音乐控制

L: 单击, 双击, 长按3秒(siri唤醒/退出)

R: 单击, 双击, 长按3秒(进入/退出)

通话语音控制

L: 单击, 双击, 双击

R: 单击, 双击, 双击

耳机恢复出厂设置

耳机在未连接状态下, 同时长按左右耳机5秒MFB键, 耳机清除TWS组队和设备配对记录成功。

L + R = 同时长按左右耳5秒

充电描述

耳机电量低时伴有提示音, 请及时放入仓内充电。

耳机: 灯闪烁, 灯灭

充电仓: 灯闪烁, 灯灭

基本参数

彩色灯带

LED 亮灭

当充电盒关闭时, 左右指示灯将亮起并呼吸, 这意味着两个耳机处于充电模式。

备注: 当充电盒的电量低于5%时, LED闪烁四次, 然后熄灭。将停止为耳机充电。

- 型号: TW04G
- 耳机电池: 40mAh
- 充电仓电池: 400mAh
- 播放时间: 5.5H(耳机) + 22H(充电仓)
- 充电时长: 1.5H
- 产品重量: 49±5g
- 扬声器单元: φ13mm
- 输入: DC5V=450mA

注意事项

- 请在常温环境中存放以及使用本产品;
- 请勿将本产品长期暴露在雨中或潮湿的环境中;
- 请勿丢弃, 避免因跌落造成产品损坏;
- 请勿自行拆解、修理和改造本产品;
- 请使用额定电压的电源充电器充电;
- 擅自拆解将使保修失效。
- 充电盒及耳机内的电池为不可更换电池
- 不得暴露在诸如日照、火烤或类似过热的环境中


保修卡

感谢您选择朗科产品。通过正规渠道购买的朗科产品依法享有国家规定的三包服务。查询具体细则请登录朗科中文网站: <http://www.netac.com.cn> 自签收之日起, 朗科无线蓝牙/有线耳机配件齐全且无人为损坏, 享有七天无理由退货, 十五天换货, 一年非人为有性能故障保修服务(有线耳机一年半)。

用户资料			
产品名称		联系电话	
产品SN码		联系地址	
顾客姓名		购买日期	

保修记录			
保修日期	故障及处理方法	完成日期	顾客签名

背面第一页



延期服务及更多礼遇
敬请关注朗科官方订阅号

北京朗科创新科技发展有限公司
地址: 北京市门头沟区石龙经济开发区永安路20号3号楼一层138室
深圳市朗科科技股份有限公司
地址: 深圳市南山区高新区南区高新南六道10号朗科大厦
服务电话: 400-105-5505
官方网址: www.netac.com.cn
Beijing Netac Innovation Technology Development Co., Ltd.
Location: 138-1-3 No.20, Yong'an Road, Mentougou District, Beijing, China
Netac Technology Co., Ltd.
Location: Netac Building, Number 6 High-tech South St, Nanshan District, Shenzhen, P.R.China 518057
Web: www.netac.com

Switch

Press and hold the MFB button on the left and right headphones for about 3 seconds to turn on the phone.

Manual startup

Turn on the charging case and the headphones will automatically turn on.

Auto startup

Bluetooth connectivity
Pick up two earbuds from the charging box

打开手机蓝牙

搜索连接设备

Game/Music Control

L: 单击, 双击, 长按3秒(siri唤醒/退出)

R: 单击, 双击, 长按3秒(enter/exit)

Call voice control

L: 单击, 双击, 双击

R: 单击, 双击, 双击

Restore earbuds to factory settings

When the earbuds are not connected, hold left and right earbuds MFB button 5 seconds to clear the TWS pairing and device pairing records.

L + R = Hold on left and right ear buds 5s

Charging description

When the earbud battery is low with warning tone. Please put it into the charge case to charge it in time.

EARBUDS: 灯闪烁, 灯灭

Charging compartment: 灯闪烁, 灯灭

Basic parameters

Colored light strip

LED lights up

Earpiece: when the charging case is closed, The left and right indicator will light up and breathe, which means that the two earbuds are in charging mode.

Remark: When the charging case has less than 5% power, LED flashes four times and then turns off, And will stop charging the earbuds

- Model: TW04G
- Earbud Battery: 40mAh
- Charging Case: 400mAh
- Play Time: 5.5H(Earbuds) + 22H(Charging Case)
- Charging Time: 1.5H
- Product Weight: 49±5g
- Speaker Unit: φ13mm
- Input: DC5V=450mA


matters needing attention

- Please store and use this product in normal temperature environment;
- Do not expose this product to rain or humid environment for a long time;
- Do not throw it to avoid product damage caused by falling;
- Do not disassemble, repair or transform this product by yourself;
- Please use the power charger with rated voltage to charge;
- Unauthorized disassembly will invalidate the warranty.
- The batteries in the charging stand and earphone are non replaceable batteries
- Do not expose to such conditions as sunlight, fire or similar overheating

FCC Compliance Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference.
(2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.



Les piles et batteries se recyclent

A DÉPOSER EN MAGASIN A DÉPOSER EN DÉCHÈTERIE

Points de collecte sur www.quefairedemesdechets.fr

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.