

# **SYLVANIA**

**BLUETOOTH TUBE SPEAKER WITH  
AUX/USB AND FM  
Model No.: SP826**



**User Manual**

**SYLVANIA is a registered trademark of  
OSRAM Sylvania Inc. used under license.**

## **DEAR CUSTOMER**

In order to achieve the best performance of your product, please read this instruction manual carefully before using, and keep it for future reference.

## **NOTE**

This unit may be submitted to changes in specifications, characteristics and/or operation without prior notice to the user, in order to continue improving and developing its technology.

## **Packing list**

Upon opening the package, please check for the following items:

- 1 x Speaker
- 1 x USB charging cable
- 1 x Instruction manual

## **Specification**

Power output: 9W

Input: DC 5V

Drivers: 4"Full Range


FM: 87.5~108.0 MHz

Battery Capacity: 1500mAh

Transmission Distance: 10m

Dimension: (WxHxD): 145 x 145x 280 mm

## Product overview

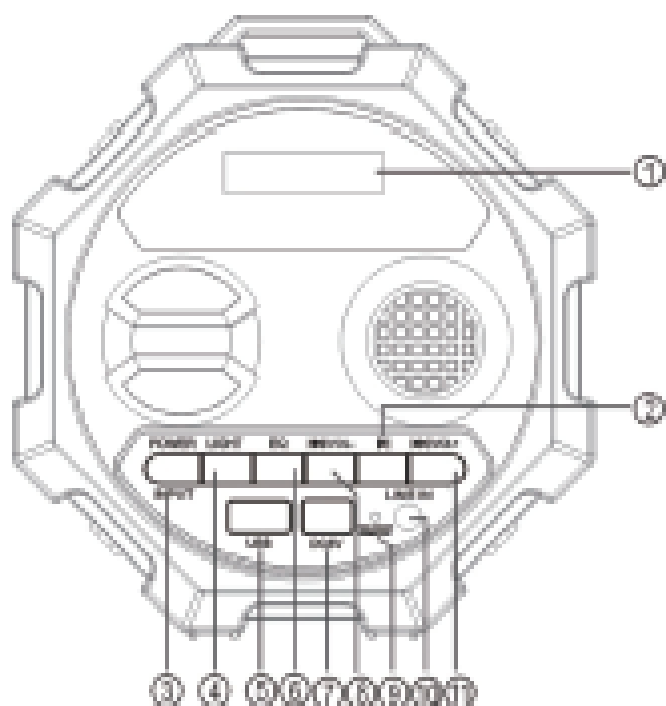

1. LED Display
2. Play/Pause (In FM mode, hold for 3 seconds the device will enter into automatic searching and saving the radio stations)
3. Power/Input (Hold for 3 seconds to switch on/off the unit, press once to switch mode selection for Bluetooth, FM Radio, Line Input, USB)
4. Light (Light mode selection & switch on/ off button)
5. USB JACK
6. EQ button
7. DC interface (5V)
8. Previous/VOL- (Hold for 3 seconds to decrease volume)
9. Charging Indicator RED=Charging GREEN= Full Charged
10. Line Input
11. Next/VOL+ (Hold for 3 seconds to increase volume)

---

## **POWER SOURCE**

1. Please charge the unit at least 4 hours before first time using.
2. Long press the POWER/INPUT button on the side panel to switch on or off the speaker.

## **CHARGE THE BATTERY**

When the battery is charging, the charge LED is red. After the battery has fully charged, the light turns to green.

1. Connect the USB cable to the DC IN JACK of the speaker firmly.
2. When the battery is fully charged, please disconnect the USB cable from the speaker.
3. The speaker works normally when charging.

## **POWER/INPUT BUTTON**

Press POWER/INPUT button on the side panel to select playing mode (LINE IN, USB, BT OR FM).

## **LIGHT BUTTON**

Press LIGHT button on the side panel to select light mode, there are 12 light modes for selection.

## **EQ BUTTON**

Press EQ button on the side panel to select EQ modes: Pop, Classical, Jazz and Rock.

## **PREVIOUS/NEXT BUTTON**

By pressing PREVIOUS/NEXT button on the side panel, you can select a specific song from the play list.

## **PAUSE/PLAY BUTTON**

To stop playing the current track, please press PAUSE/PLAY button on the side panel.

Press it once again to continue playing.

### **LINE IN JACK**

1. Connect an audio cable (not included) to the LINE IN JACK of the speaker and to the audio output socket on the external audio devices such as MP3 player, discman, etc, then select LINE by pressing the POWER/INPUT button on the side panel .

2. Play from an external audio device.

### **USB JACK**

Insert USB card directly for playing

### **FM FUNCTION**

1. Press POWER/INPUT to select FM radio

2. Long press PLAY/PAUSE button on side panel for automatic searching and saving the radio stations.

Press PREVIOUS/NEXT button to select the desired radio station.

Bluetooth connection and connect to the app" Speaker Pro"

Please press POWER/INPUT button onside panel to select Bluetooth mode.

1. Turn on the Bluetooth on your phone, and then select the "Syl-SP826" on the Bluetooth device list and tap to connect it.

2.After connected successfully, tap on the installed app "Speaker Pro"

3.Tap the Bluetooth icon then tapping the "Syl-SP826 app" to connect it.

4.After connected successfully, there will show" Connected" on

the list.

5. Tap the "back" to previous menu.

6. Tap the Bluetooth music play icon to select the desired song.

Below picture is the installed the app "Speaker Pro" in your phone.

Turn on the App "Speaker Pro" on your phone, there are 7 function icons on the main page:

1. Bluetooth Music play

2. USB play


3. Light control colour, brightness and light flash mode

4. FM Radio


5. Control Bluetooth connect

6. Line In input - mute


7. Equalizer, volume adjustment for music.

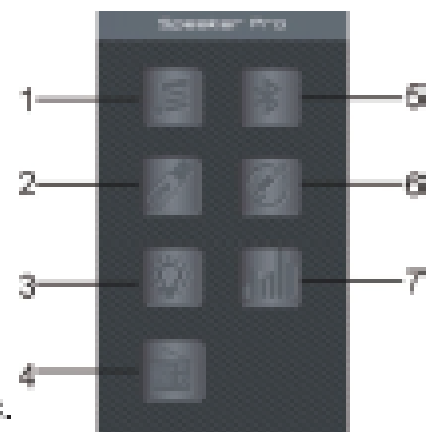


(1) Bluetooth Music play


Press  to enter into Bluetooth Music play page, Press "Pick songs to play" to pick song page to choose the song you want to play, also you can operate pause, play, backward, forward&volume adjustment, repeat, random play. Press "Back" to return to the main page.

(2) USB play






When inserted a USB into the speaker, press  to enter the USB play page. To choose a song and play music on the USB card, press "Play" icon to play the music, where you can operate pause, play, backward, forward & volume adjustment. Press "Back" to return to the main page.

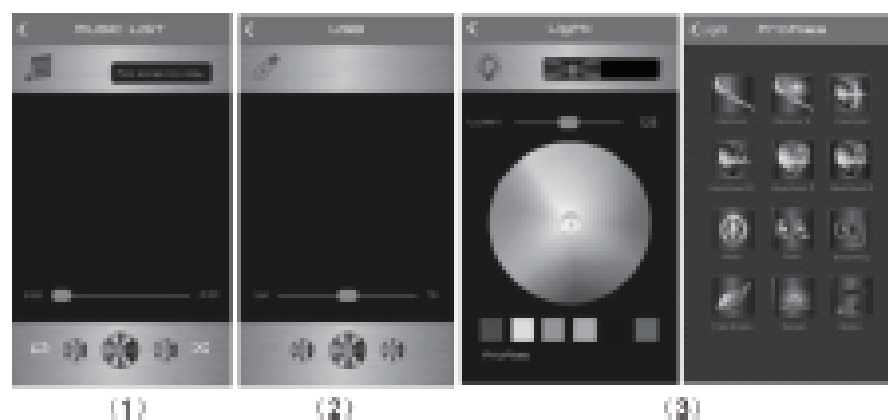(3) Light control colours, brightness and colour change mode

Press  to enter into Light Control page, you can select any colour to show the light colour on the speaker, as well as adjust the brightness of the light. To go back to main page, press "<" in the left corner.



#### (4) FM Radio

Press  to enter into FM radio mode, press SCAN to enter into radio program automatic scan. Press   for radio program manual scan,   Top and bottom trimming, Turn the TUNER button radio station can be adjusted. Slide around to adjust radio frequency between 87.5MHz~108.0MHz.


#### (5) Bluetooth connection

Press  to enter into Bluetooth Control connection page, then click "Syl-SP826 app" to connect to the speaker.

#### (6) Line In input - mute

Press  to enter into Line IN input page, press  to mute music, press  insert a line continue play. Press "Back" to main page.

#### (7) Equalizer regulation

Press  to enter the Sound Set page to adjust the music volume. Press MUSIC to adjust the volume, bass and treble. There are 4 pre-set EQ modes to choose from: Dance, Classical, Jazz or Rock. You can also press G-EQ to access the graphic equalizer to set up your preferred equalizer specification.



**Connect to audio from the cellphone/Pad/Computer/ Notebook/DVD/CD etc.**

Plug one end of the audio cable into the speaker and the other end into a cellphone or other audio device, the unit will cut in AUX mode immediately. Press the next/previous buttons to increase or decrease the volume.

### **FM Radio**

Press the POWER/INPUT button to enter FM mode, the LED display will show the FM frequency. Long press Play/Pause button to auto search the FM Channel and store it automatically. Press Previous or Next button to change the preset FM channel

### **USB mode**

Inserted the USB to this unit, it will switch in USB mode automatically, and press the play/pause button to play the music and press the next/previous button to select the song.

### **FAQ:**

1.Unable to turn on the speaker

Make sure the battery is full and the battery indicator light is on.

2.Unable to connect to BT-enabled device

Make sure that the device is in BT mode, and is within 10 meters

---

from the speaker.

Ensure that neither the speaker nor the device is blue-connected to any other devices.

3.No sound heard

The volume is at its lowers, please turn up the volume.

4.Button doesn't work

Please press button longer

5.The speaker has no response

Please power off and try again.

### **Do's and Don'ts**

Don't use abrasive cleaning solvents to clean the speaker.

Do not expose the speaker to extremely high or low temperature as this will shorten the life of electronic devices, distorting certain plastic parts.

Don't dispose of the speaker in a fire as it will result in an explosion.

Don't expose the speaker to contact with sharp objects as this will cause scratches and damage.

Don't attempt to disassemble the speaker as it may get damaged if you are not professional.

Do not expose the speaker to heat or fire. Avoid storage in direct sunlight.

Do not subject the speaker to mechanical shock.

Do not add any fluids or solids to your speaker.

Do not use the speaker if it has been damaged in any way.

### **FCC STASTMENTS:**

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide

reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the equipment into an outlet on a circuit different from that to which thereceiver is connected.
  - Consult the dealer or an experienced radio/TV technician for help
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

For service assistance and product information,  
please call: 1-800-968-9853.

Pour obtenir assistance et information appelez: 1-800-968-9853.

Curtis International Ltd.

7045 BECKETT DRIVE, UNIT 15, MISSISSAUGA, ON,

L5S 2A3 [www.curtisint.com](http://www.curtisint.com)

To make a warranty claim, do not return this product to the store. Please email [support@curtiscs.com](mailto:support@curtiscs.com) or call 1-800-968-9853.

### 90 day Year Warranty

This product is warranted to be free from defects in material and workmanship for a period of ninety (90) days from the date of original purchase. During this period, your exclusive remedy is repair or replacement of this product or component found to be defective, at our option; however, you are responsible for all costs associated with returning the product to us. If the product or component is no longer available, we will replace with a similar one of equal or greater value. Prior to a replacement being sent, the product must be rendered inoperable or returned to us.

This warranty does not cover glass, filters, wear from normal use, use not in conformity with the printed directions., or damage to the product resulting from accident, alteration, abuse, or misuse. This warranty extends only to the original consumer purchaser or gift recipient. Keep the original sales receipt, as proof of purchase is required to make a warranty claim. This warranty is void if the product is used for other than single-family household use or subjected to any voltage and waveform other than as on the specified rating on the label (e.g., 120V~60Hz). We exclude all claims for special, incidental, and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the purchase price. Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty. This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental, or consequential damages, so the foregoing limitations may not apply to you. For faster service, locate the model, type, and serial numbers on your appliance.