

INSTRUCTION MANUAL

42963516 Black


[KMT081]

5107_MAN_42963516_BT49 Speaker_v8


Artwork Proof Date: 12.11.2020
Number of artboards: 1

PAPER:
80gsm
Bright white uncoated paper

 PRINT COLOURS:

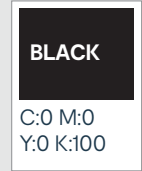

 PRINT FINISH:
Double sided
Folded in the centre

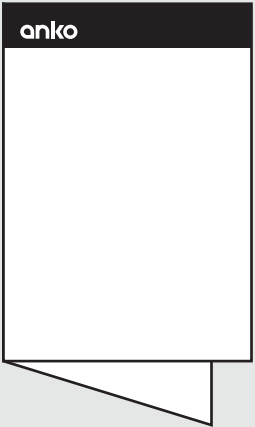

CHANGE LOG CREST INTERNAL USE ONLY

ARTWORK SHOULD NOT BE AMENDED WITHOUT PRIOR AGREEMENT FROM CREST.
ALL ARTWORK MUST BE APPROVED BY CREST PRIOR TO MASS PRODUCTION.
IF THERE ARE QUERIES ABOUT THIS ARTWORK PLEASE CONTACT:
EMAIL: design@crest.com.au
THANK-YOU.

© The Crest Company 2020. All rights reserved.

anko

Bluetooth® Light Up Speaker

Operating Instructions



- Includes:
- › Bluetooth® light up speaker
 - › charging cable (micro USB cable)
 - › audio cable (3.5mm AUX jack)
 - › user manual



42-963-516

Bluetooth name is KM42963516

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc., and any use of such marks by KMART AUSTRALIA is under licence.



 
 
WARNING Do not dispose of unit in fire or water. › Never attempt to disassemble and reassemble. › Waste electrical products should not be disposed of with household waste, please recycle where facilities exist. › Check with your local authority for recycle advice. › Keep your device and all accessories out of the reach of children and animals. › Small parts may cause choking or serious injury if swallowed. › Avoid exposing your device to very cold or very hot temperatures (below 0°C or above 45°C). › Extreme temperatures can cause deforming of the device and reduce the charging capacity and life of your device. › Do not allow your device to get wet—liquids can cause serious damage. › Do not handle your device with wet hands.

5107/8

This product shall be supplied by a power source not exceeding PS1 only. › This Bluetooth Speaker shall be charged by the supplied charging unit only.
CAUTION › The batteries in this product are not replaceable. › During Use, Storage or Transportation the battery should not be subjected to extremely low temperatures, or low air pressure at high altitude. › If the battery is exposed to extremely high temperatures it could result in an explosion or the leaking of flammable liquid or gas. › Please take care when disposing of the unit; disposal in a fire, oven, mechanically crushing or cutting machine could result in the battery exploding.

Function overview:

- 1 Volume Down/Previous Song
- 2 Play/Pause
- 3 Volume Up/Next Song
- 4 Mode
- 5 Phone
- 6 USB Port
- 7 Charging Port
- 8 AUX-In Port
- 9 Power ON/OFF
- 10 TF Card Slot
- 11 Bluetooth/Charging Indicator
- 12 Microphone

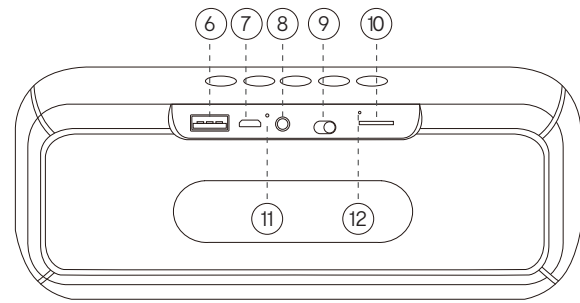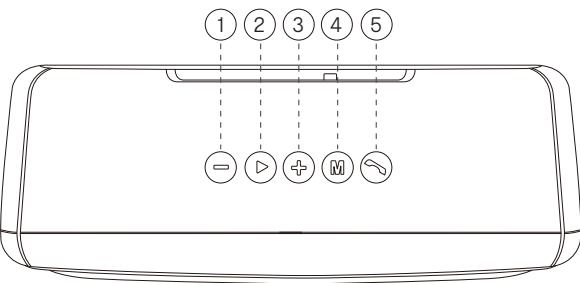

How to use this speaker:

Power ON/OFF Slide button to the right/left

Play Press button

Pause Press button

Next Track

Press the button to skip tracks

Previous Track

Press the button to skip tracks

Volume Up Press and hold the button

Volume Down Press and hold the button

Answer Call Press the button

Hold Call Press and hold the button

End Call Press the button

Reject Call Press and hold the button

Mode button

The Speaker automatically enters Bluetooth Mode when switched on. When multiple media devices are connected, you can cycle through Bluetooth, USB, AUX or TF Card mode by pressing the mode button.
Note: Some TF card and USB drive might conflict, please use one of them only.

Pairing the headset with Bluetooth devices

- › Slide power button to right, the LED flashes rapidly, indicating it is ready to pair with a Bluetooth device.
- › In the Bluetooth menu on the media device, search for “KM42963516” and connect. Enter Password “0000” or “1234” if a password is requested.
- › Once the Speaker is successfully paired and connected, the indicator light remains on and you can play music through the speaker. When playing music, the indicator light will flash blue.

AUX function

Use a 3.5mm Aux-in cable to connect your device through the AUX in port. Choose the music on your music list from your media device and play.

TF card play

Insert the TF Card into the TF Card socket to connect your device, the speaker will play the music automatically from the TF card. (Press the M button on the unit to select Music mode).

USB Operation

Insert the USB drive into the USB port. You will hear an alert. The speaker will play the music from the USB drive automatically. (Press the M button on the unit to select Music mode).

NOTE: USB port does not support USB charging for external device.

Receiving and Ending Calls

When there is an incoming call, the unit will pause the playback and ring to alert you of the call.

To answer the call, press the phone button. To end the call, press the phone button again. To hold the call, hold and press the Pause button. To reject the call, hold and press the phone button.

Battery charging

Please use provided micro USB cable for charging. Plug the micro USB cable end to the unit and the other USB A end into a PC USB port, wall charger or other 5V charging devices.

NOTE: slide the power button to left to turn the speaker OFF while charging.

Specifications:

Model No: 42963516

Version: V5.0 Multimedia bluetooth chipset

Working distance: 10 Metres

Output: 2 x 3W

Music time: 3 hours at 100% volume,
5 hours at 50% volume

Talk time: 4.5 hours

Standby time: 10 hours

Charging voltage: 5V d.c.

Charge time: 3~4 hours