

 
## TURBO SETTINGS

- Enter the TURBO Speed Function:**  
**ENABLE:** Press Turbo+ ABXY LT/RT LB/RB to enable the turbo on a particular button.  
**DISABLE:** Repeat above step to disable the turbo
- Adjust TURBO Speed:**  
Press Turbo+ DPAD (UP/DOWN) to increase or decrease the turbo speed.  
**Gamepad will Vibrate**
- Clear ALL TURBO Setting:**  
Long Press the turbo button to clear the turbo.  
All the 4 LEDs will blink with a vibration.



-8-


## CHANGING VIBRATION LEVELS

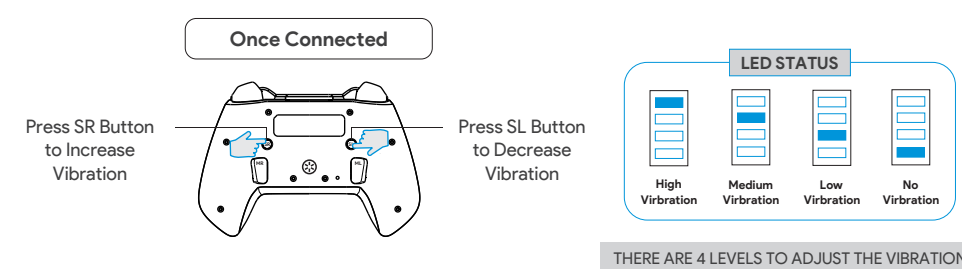

## RGB LED CONTROL

Press the RGB LED Control Button to switch between 3 Lighting Modes.

 - BREATHING RGB
- SINGLE COLOUR
- NO LED

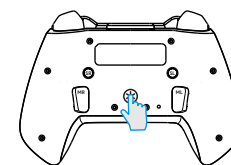

-9-

## PS4 TOUCH PANEL FUNCTION

**Enable Touch Panel Function**  
Press E Z + RIGHT JOYSTICK

**Disable Touch Panel Function**  
Again Press E Z + RIGHT JOYSTICK



## ENHANCE JOYSTICK PRECISION

 
**Enable Joystick Precision**  
Press E Z + LEFT JOYSTICK

**Disable Joystick Precision**  
Again Press E Z + LEFT JOYSTICK



## RESET THE GAMEPAD

In the unlikely event the Gamepad is not responsive, use a pin to press the RESET button located at the back.

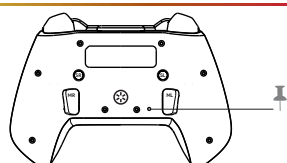

-10-

## TROUBLESHOOTING

**Why is this Gamepad not being detected by my device?**

- Make sure it is charged.
- Make sure it is in the correct pairing mode.
- Make sure it is not connected to any other device.
- You may need to unpair and repair it.

**Why is the Gamepad disconnecting?**  
The Gamepads needs to be charged.

**Facing any trouble with the connection?**  
The gamepad may require you to unpair and reset it for further use.

**Why is the Gamepad not working in all my games on Android or iOS?**  
Ensure the game has support of Gamepads.

**Why is the Gamepad not vibrating or speaker or headphone not working?**  
These are special PS4 features and do not work on Android and iOS.

## SPECIFICATIONS

Working Platforms	: iPhone, iPad, Android, PS3, PS4, PC, Switch	Connection Types	: Bluetooth v5.1
Working Modes	: iOS, Android, PS4, PC, Switch	Charging Time	: ~ 2-2.5 hrs
Play Time	: ~ 8 hrs	Working Distance	: 10 Feet
		Net weight	: 220g

-11-

## WARRANTY STATEMENT

Amkette EvoFox One Universal Wireless Gamepad is backed by a 1 year performance warranty against any manufacturing defects in material or workmanship from the date of original purchase. This warranty entitles the purchaser to get the product repaired or replaced at its discrete under the following conditions:

- The warranty applies to the original purchaser. Proof of original purchase is required.
- The warranty does not cover the damage caused by misuse, abuse or improper storage.
- In no event shall Amkette be responsible for any direct, incidental, consequential or other damages of any kind.

Please contact our Technical Support Line and/or send the defective product, postage pre-paid, together with the proof of purchase to our Customer Care Service Center to avail warranty service. Return postage will be paid by us.

## CUSTOMER CARE SERVICE CENTER

Amkette House, C-64/4, Okhla, Phase-II, New Delhi-110020

1800-11-9090 (Toll Free) (9:30 AM - 6:00 PM)

+91 9312691448 (9:30 AM - 6:00 PM)

techsupport@amkette.in

FOR HASSLE FREE SERVICE REGISTER YOUR PRODUCT AT [WWW.AMKETTE.COM/REGISTER](http://WWW.AMKETTE.COM/REGISTER)

 


ONE  
UNIVERSAL  
WIRELESS GAMEPAD

QUICK START GUIDE




## PRODUCT OVERVIEW

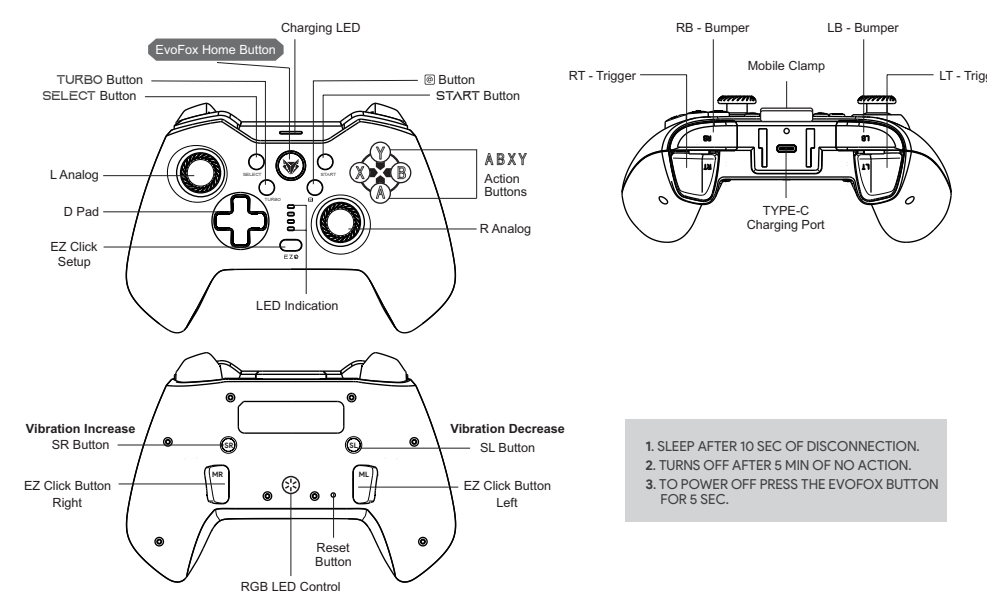


-2-

## IN THE BOX

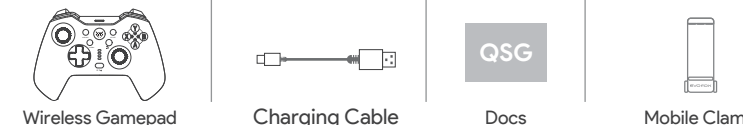 


## CHARGING THE GAMEPAD

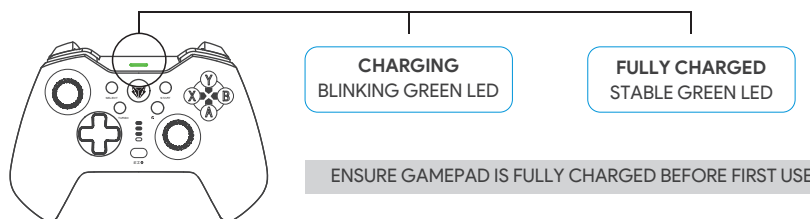 

-3-

## IPHONE, IPAD AND APPLE TV MODE

 
- Press +
- Open Bluetooth Settings on the device.
- Connect to "DUALSHOCK 4 Wireless Controller".

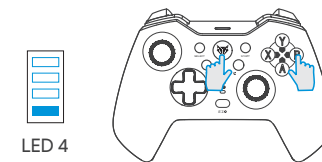

RECONNECTING: SIMPLY PRESS THE EVOFOX BUTTON TO POWER ON AND RECONNECT THE GAMEPAD

## ANDROID MODE

 - Press +
- Open Bluetooth Settings on the device.
- Connect to "Wireless Controller".

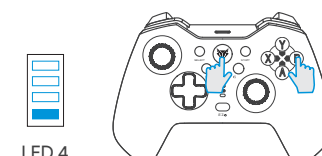

RECONNECTING: SIMPLY PRESS THE EVOFOX BUTTON TO POWER ON AND RECONNECT THE GAMEPAD

-4-

## ANDROID HID MODE

 
- Press +
- Open Bluetooth Settings on the device.
- Scan the devices and pair with "EvoFox One".



RECONNECTING: SIMPLY PRESS THE EVOFOX BUTTON TO POWER ON AND RECONNECT THE GAMEPAD

## PC X-INPUT MODE

- Press + RB Button
- Open Bluetooth Settings on the device.
- Connect to "Xbox Wireless Controller".

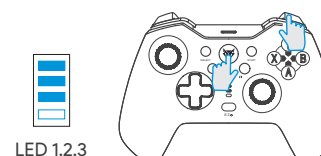

RECONNECTING: SIMPLY PRESS THE EVOFOX BUTTON TO POWER ON AND RECONNECT THE GAMEPAD

-5-

## PS4 / PS3 MODE

 
- Connect to PS4 or PS3 with the provided cable.
- Press button until LED turns ON.
- Disconnect the cable for wireless mode.



RECONNECTING: SIMPLY PRESS THE EVOFOX BUTTON TO POWER ON AND RECONNECT THE GAMEPAD

## SWITCH MODE

- Open Settings → Controllers → Change Grip / Order
- Press + L Button
- The Gamepad connects automatically after 7 seconds.

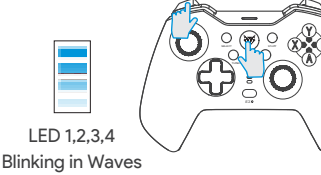


RECONNECTING: SIMPLY PRESS THE EVOFOX BUTTON TO POWER ON AND RECONNECT THE GAMEPAD

-6-

## EASY CLICK SETUP (MACROS)

 - Enable MACRO**  
Press E Z + MR or E Z + ML together to set Macro. Connection LED will Blink.

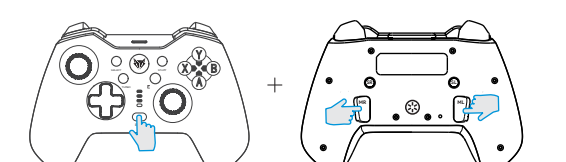

1. YOU CAN USE UP TO 14 BUTTON IMPRESSIONS TO SET UP THE MACRO.
2. THE BUTTON SHOULD BE PRESSED ONLY IN THEE SEQUENCE TO CREATE THE MACRO.

- Disable Macro**  
Repeat the above step 1.

- CLEAR MACRO'S**  
Long Press E Z to clear the MACRO. All 4 LEDs will Blink. Your MACRO is now cleared.



-7-