




User manual

Playing the speakers and subwoofer

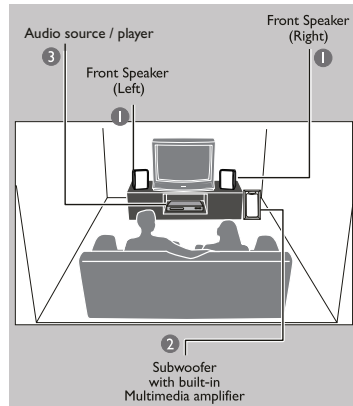

System positioning :

The subwoofer is recommended to be put on the floor to get a better acoustic effect.

For best possible surround sound, all the speakers (except subwoofer) should be placed at the same distance from the listening position.

Place the front left and right speakers at equal distances from the TV and at an angle of approximately 45 degrees (horizontal) from the listening position.

Helpful Hint:

- To avoid magnetic interference, do not position the speakers, too close to your TV.

General information

Safety instructions

Please read carefully the safety mark on the back side



This mark is intended to alert the user from the non isolated dangerous voltage within the product that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This mark is intended to alert the user for important operating and servicing instruction.

Warnings

- Avoid sustained periods on high-volume use, and do not turn the volume to maximum level while using high output signal, such as Mobile Phone or DVD, etc., as this will cause distortion and may damage the loudspeaker cones.
- Please switch off the system from the wall socket, when not in use.
- Do not open the cover or back panel to avoid electrical shock or any other accidents. No user-serviceable parts are inside.
- Only for indoor use.
- Plug the system to the AC outlet with the right voltage marked on the back panel of the Subwoofer.
- The MAINS plug is used as the disconnect device, the disconnect device shall remain readily operable.

- The product shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the product.
- Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
- Attention should be drawn to the environmental aspects of battery disposal.

Care and safety information

Avoid high temperatures, moisture, water and dust

- Apparatus should not be exposed to dripping or splashing of liquid.
- Do not place any source of danger on the Subwoofer, and satellite (e.g. liquid filled objects lighted candles).
- Do not install near heat sources.

Do not block any ventilation opening

- Place the apparatus in a location with adequate ventilation to prevent internal heat build up. Allow at least 10cm (4 inches) of free space all around the apparatus for adequate ventilation.
- At high volume the back cover of Subwoofer becomes hot. Do not touch it.


Care of the cabinet

- Use a soft cloth slightly moistened to clean the cabinet. Do not use a solution containing alcohol, spirits, ammonia or abrasives.

Accessories

Item	2RCA to 3.5mm stereo cable	Remote control	User manual	FM Antenna cable	optical cable
Quantity	1	1	1	1	1

Connections

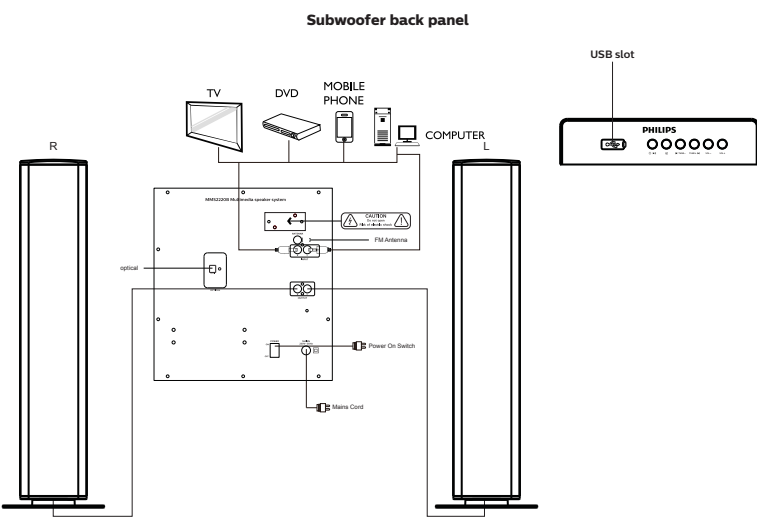

Top panel operation

- Power / Play/Pause:** Press to turn on speaker, long press into stand-by. PLAY/PAUSE on the USB/BT mode.
- Input Mode:** Short press to change the input mode: AU for audio in, Cd for CD in, 106.4 for FM, bt for Bluetooth, OP for optical. Long press to go for FM auto search and storage.
- TUNE-:** Short press to select previous station which had been stored. Long press to semi-automatic search for radio. In USB/BT mode, press "TUNE-" to play previous song.
- TUNE+:** Short press to select next station which had been stored. Long press to semi-automatic search for radio. In USB/BT mode, press "TUNE+" to play next song.
- VOL-:** Volume down.
- VOL+:** Volume up.

* AVAILABLE IF CONNECTED

Remote controls

-
- Power / Play/Pause
 - MUTE
 - 0-9
 - SOURCE
 - BASS-/+
 - EQ
 - VOL+
 8. TUNE-/SCN
 9. TUNE+
 10. MUTE
 11. VOL-
 12. TUNE-
 13. TUNE+
- Turn on/Stand-by the speaker.
 - Mute: Press "MUTE" to activate or deactivate mute.
 - 0-9: Numeric keys, with the help of these keys you can select song or track in USB. In FM, you can key in frequency, i.e. 92.7 for 92.7.
 - SOURCE: AU for audio in, Cd for CD in, 106.4 for FM, bt for Bluetooth, OP for optical.
 - BASS-/+: To decrease/increase the bass.
 - EQ: nor for Normal, CLA for Classic, COU for Country, POP for Pop, Jaz for Jazz, roc for Rock mode. (works only in USB/BT mode)
 - VOL+: Volume up.
 8. TUNE-/SCN: Short press To play or to pause songs. Long press "TUNE-" in FM mode, it will automatically search and save channels. For manual storage, user can press frequency (eg. 106.4) and press "TUNE-", station number will flash, press "TUNE-" or "TUNE+" to choose the serial, press "TUNE+" again to store the station.
 9. TUNE+: Play the previous song by pressing "TUNE+" at USB/BT mode. Choose previous channel by pressing "TUNE+" at FM mode.
 10. TUNE-: Play the next song by pressing "TUNE-" at USB/BT mode. Choose next channel by pressing "TUNE-" at FM mode.
 - VOL-: Volume down.
 - TUNE-: To search channel step by step (each step- 0.1 MHz), press "TUNE-" and hold to search previous channel, it will stop and play once previous channel been searched.
 - TUNE+: To search channel step by step (each step+ 0.1 MHz), press "TUNE+" and hold to search next channel, it will stop and play once next channel been searched.

* AVAILABLE IF CONNECTED



Register you product and get support at www.philips.com/welcome

Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license. This product has been manufactured by and is sold under the responsibility of MMD Hong Kong Holding Limited or one of its affiliates, and MMD Hong Kong Holding Limited is the warrantor in relation to this product.



总尺寸: 660x173mm
工艺: 风琴折
成品尺寸: 110x86.5mm

成品正面:



成品背面:

