### Veise

### Installation Manual

Model No. VE017





Scan the QR code and search **VE017** to get the video.

## **Need Help? Contact Us!**

Call us at **+1(855)400-3853** ( Monday-Friday 9:00am-5:00pm PST ), if you have any questions.








# >>> Content

Parts List	01
Installation Guide	02
Step 1: Prepare the Door & Check Dimensions	03
Step 2: Install the Latch & Strike	05
Step 3: Install Exterior Assembly	80
Step 4: Install Interior Assembly	10
How to Reset	12
Troubleshooting	13

### >> Installation Overview Assembly (G) Battery Cover (H) Exterior Assembly Screw (F) Exterior Assembly (B) Interior Assembly Screws (L) Reinforcement Plate (D-1) Latch Screws Strike Screws

# >> Parts List

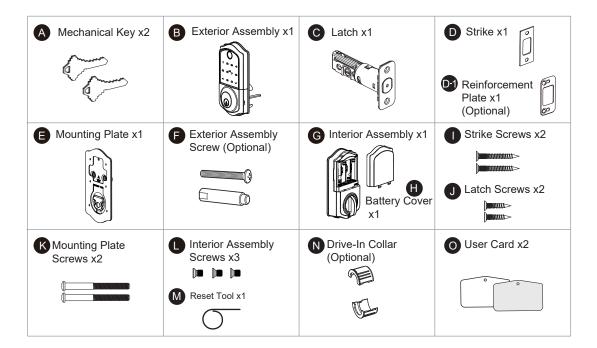




#### ▶ Step 1: Prepare the Door & Check Dimensions




The hole in the door is 1-1/2" or 2-1/8" (38mm or 54mm).

The hole in the door edge is 1" (25mm).

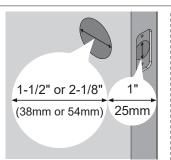


2

The backset is either 2-3/8" or 2-3/4" (60mm or 70mm).

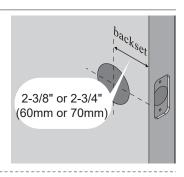



The door thickness is 1-3/8" to 2" (35mm to 50mm).

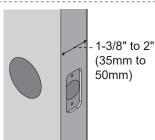


4

#### NOTE:

 Make sure the door frame is aligned with the door.
There are no

obstructions stuck in the door frame.






### ▶ Step 1: Prepare the Door & Check Dimensions


#### Optional: Instructions for doors with 1-1/2" (38mm) holes

1. Test whether you need to extend the Latch hole.

 Temporarily install the Latch bolt.




Fit properly

 

Fit improperly

If the Latch bolt is stuck, you need to extend the Latch hole.

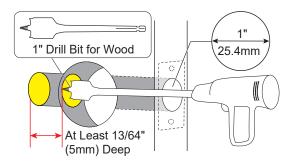


Extend the Latch hole at least 13/64" (5mm) deep by using a 1" (25.4mm) Drill Bit.



### ▶ Step 1: Prepare the Door & Check Dimensions


#### 2. Test the extended Latch hole.

Temporarily install the Latch bolt, rotate it with a screwdriver to test if it extends and retracts properly.

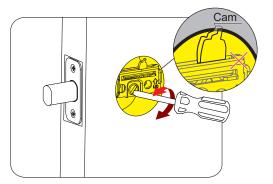


If the Latch bolt is stuck, remove the Latch bolt and chisel out a small channel at the top of the hole to give the Cam room to rotate.

(Refer to the following image)

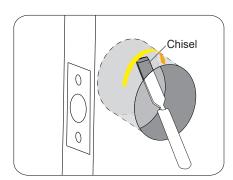


### ► Step 2: Install the Latch & Strike

Confirm the backset and adjust the Latch.

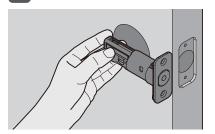


 Hold the Latch in front of the door hole, flush the Latch against the door edge. Is the slot hole centred in the door hole?




YES

 No need to adjust.



NO⇒

Slotted hole is NOT centred.

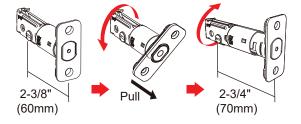



Rotate and pull the Latch as shown to extend the Latch.




    
- ► Step 2: Install the Latch & Strike
- 2 Install the Latch.



 















### ► Step 2: Install the Latch & Strike

3 Test if the Latch bolt extends and retracts properly by using a screwdriver.

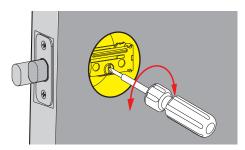

#### **⚠** Important:

Before installation, the Latch bolt should be retracted completely (in the unlocked position).






4 Install Strike on the door frame.


#### **!** Important:

Make sure the hole in door frame is drilled a minimum of 1" (25mm) deep.

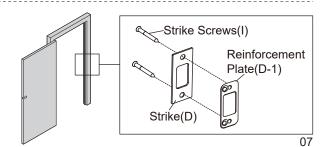


### ► Step 3: Install Exterior Assembly

Measure the diameter of the hole in the door.

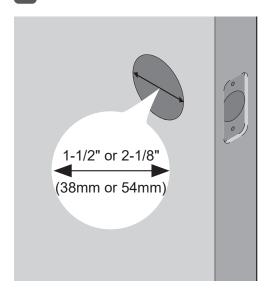

**2-1/8" (54mm)**Go to next step directly.

 1-1/2" (38mm)
Remove the spacer on the exterior assembly.






### ► Step 3: Install Exterior Assembly


Route the cable below the Latch and insert the Torque Blade through the slot in the Latch.

Do not put the Mechanical Key in the cylinder during the installation.

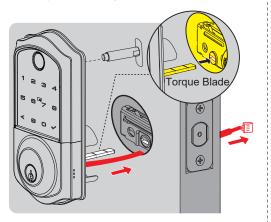


Install the Mounting Plate with the Mounting Plate Screws.

Do not overtighten screws.

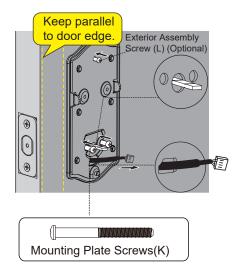

### ► Step 4: Install Interior Assembly

 1 Disassemble the Battery Cover.




**⚠** Important:

Do not load batteries until the lock is completely installed.

Insert the cable connector to the socket.

Push the connector in firmly until it is completely attached.

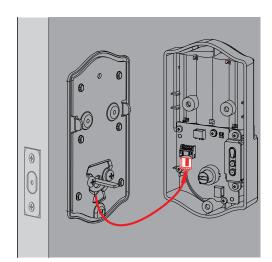




### ► Step 4: Install Interior Assembly


Attach Interior Assembly to Mounting Plate and tighten 3 Screws.

#### NOTE:

Be sure not to use the wrong screws, or it may lead to short-circuit and other problems.

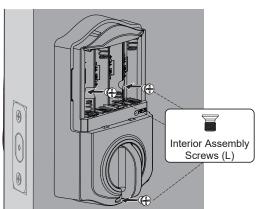

Insert 4 AA Alkaline batteries and put on the battery cover.

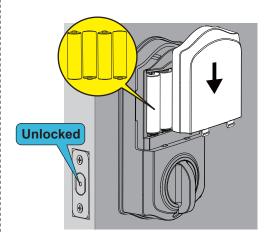


### **C** How to Reset

- 1 Keep the door open and unlocked.
- Remove one battery, press and hold the Reset Button for 5 seconds by using the Reset Tool.
- Keep holding the Reset Button and put the battery back, until you hear a long sound of beep and the Latch bolt extends out automatically.

Settings	Factory Default		
Master Code	12345678		
Auto Lock	Disabled		
Silent Mode	Disabled		
Wrong Entry Limit	10 times		
Shutdown Time	3 mins		
Vacation Mode	Disabled		



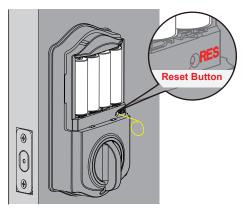

## Troubleshooting

#### ► The Latch bolt keeps going in and out.

Disassemble and reinstall the lock by following the installation tips.

- 1. Please don't insert the Mechanical Key in lock cylinder before or during installation.
- 2. Keep the Latch fully retracted and the Torque Blade horizontal.
- 3. Please make sure to route the cable below the Latch.
- 4. The Exterior and Interior Assembly should be installed parallel to the door edge.

#### ▶ I cannot remove my key unless it is in the locked position.

Uninstall the Interior and Exterior Assemblies. Before re-installation, please follow these guidelines:

- 1. Make sure the Latch bolt is in the retracted position.
- 2. Do not insert the Mechanical Key in lock cylinder before or during installation.
- 3. Make sure the Torque Blade is inserted horizontally.

#### ► Fail to reset.

- 1. The battery is low if the battery indicator light keeps flashing. Please replace it with 4 new batteries. (Alkaline batteries only)
- 2. Please refer to "How to Reset" section and perform a resetting again.

## Troubleshooting

- ► How to lock manually on the Keypad from outside?
- 1. Touch once.
- 2. Press and hold any button for 2 seconds.
- 3. Use your Fingerprint.
- ▶ The Latch bolt won't be extended out completely after installation.

Please review if the Exterior Assembly is aligned with the door parallelly. The Exterior Assembly should not be at a crooked angle.

If you have any questions, please contact us at +1(855)400-3853.

**Support@iveise.com Support@iveise.com** 



### Information & Safety Warnings

- Protect your User Codes and Master Code.
- Restrict access to your lock's Interior Assembly and routinely check your settings to ensure they have not been altered without your knowledge.
- Do not use an electric screwdriver during installation.
- This manufacturer advises that no lock can provide complete security by itself.
- This lock may be defeated by forcible or technical means, or evaded by entry elsewhere on the property.
- · No lock can substitute for caution, awareness of your environment, and common sense.
- Take care to ensure a long-lasting finish. Please use a soft and damp cloth to clean the lockset if you need. Using lacquer thinner, caustic soaps, abrasive cleaners or polishes could damage the coating and result in tarnishing.
- The lock is water-resistant. It can withstand water splashes; however, do not let water and liquids get into the lock.
- Avoid exposure to direct sunlight. Long-term exposure to direct sunlight may damage the lock.

# **Need Help? Contact Us!**

If you have any questions, please contact us at

**1**+1(855)400-3853

(Monday-Friday 9:00am-5:00pm PST)

If you have your order ID, videos or images of your problem (if necessary) ready before contacting Customer Support, we will solve your problem faster and better.