



MR SERIES VISM Model NNNH

Manufacturer | Vestek Safety Center

QUICK SETUP GUIDE

Follow these steps to get your safe up and running.

Step 1: Plug in the safe and install four AAA batteries. (Batteries not included.) This safe needs to be plugged in continuously for normal function and four AAA batteries need to be installed. These batteries provide backup power in the event of a power outage and will provide power for about 3 months in Low Power Mode allowing quick access to the safe.

Important! The safe will have periodically until four AAA batteries are installed to avoid any that no batteries are installed.

 
Step 2: Setup your safe with Vestek's VISM smartphone app. Using the Vestek VISM smartphone app, you can program your safe, customize safe settings, and receive live alerts of critical safe activity from anywhere around the world.

Step 3: Program the Master Code and Biometric Scanner. The VISM smartphone app will guide you through programming.

Step 4: Register the safe. Vestek provides many benefits including 24-hour warranty, technical support, and online replacement parts should you replace them.

AT A GLANCE

The Vestek® VISM MR is a tough and rugged, smart access, VISM® enabled smart safe. Its solid structure and penetration resistant design makes it ideal for storing valuables such as firearms, jewelry, cash, and other personal items. Powered by the AC power adapter and backup batteries, the safe combines high security with complete access control.



1. Master Keypad
2. Hideaway Key Hide Cover
3. LCD Screen
4. Power Port
5. Pull Out Shelf
6. Program Button
7. Battery Cover



LCD Screen



- | | | |
|----------------|---------------------|-------------------|
| 8. Safe Status | 11. Input Detection | 14. Battery Level |
| 9. Wi-Fi | 12. Sound | 15. Safe Name |
| 10. Home Key | 13. View on LCD | |



WARNINGS

To prevent damage to your Vestek® unit or injury to yourself or to others, read the following safety precautions before using this unit.

- Before using this safe, inspect the safe to make sure the door latches properly. You can perform a quick test by using the included mechanical key. Open and close the safe 3 times. Do not use the product if you notice any problem or defect. Please email Vestek customer support at support@vestekusa.com.
- Always check to make sure the safe door has latched when closing. The safe uses a rugged latch system. When closing, press firmly near the center of the front door. It may require a few tries and will lock automatically when closed properly.
- Change the default code to test as possible to prevent unauthorized access to your safe.
- DO NOT use the keys. In the event of power outage four AAA batteries will last about 3 months in Low Power Mode.
- DO NOT place or store the backup keys inside the safe at any time.
- DO NOT leave locked keys in this unit. Keys are not in use and must be handled with respect. Store properly.
- Keep this product away from small children as the package contains small items that could become a choking hazard.

Plug-in Required: This unit is powered by the AC power adapter and needs to be plugged in continuously for normal function.

Backup Battery Required: This safe has backup power via four AAA batteries (not included) and needs them for normal function.

Rugged: This rugged, rugged response quickly for rapid access and has a built-in proximity sensor that lights up when you hold smoothly against the safe.

Biometric Scanner: VISM Model can press up to 10 fingerprints, while standard Model supports up to 20 fingerprints.

Key: Two keys are provided for manual access to the safe.

Vestek VISM: Guided programming, manage safe settings, and receive live alerts from anywhere around the world with VISM.

HomeKey 1.0 Technology: Open the safe with HomeKey 1.0. A quick access point button that using the Vestek VISM smartphone app.

Security Alarm Mode: Alarms when the safe is opened without authorized access. Alarms are armed at 10 seconds. Registered users are made. The safe will not accept any entries for four minutes. If any additional attempts are made the alarm will keep. The security alarm mode can be cleared upon entry of the safe by any authorized access method including the backup keys.

POWER

This MR Series VISM safe needs to be plugged in continuously for normal function including the use of VISM and four AAA batteries need to be installed.

In the event of a power outage: The safe will default to Low Power Mode with the low battery will last about 3 months in this mode. The safe will go online any time when the safe is aware, and offline when it is standby. During standby, HomeKey is NOT supported.

Plug-in Required:

1. Plug in the safe using the included power adapter (3).

Backup Batteries Required:

2. Open the safe. Key entry is located at top of the safe.

3. Remove the battery compartment by pressing down on the tab near the top of the battery cover. Install four AAA batteries (5). For optimal performance, we recommend Duracell® or other reputable brand.



Online Support, Tutorial, and Vestek® VISM

Visit 24hour.vestek.com with your phone camera to visit VestekUSA.com support and select your model.

