


Conveyor Toaster user Manual

Specification Of The Toaster For Different Models:

Model	capacity (slices/per hour)	size (mm)	voltage(v)	power(w)
TT-150	150-180	560*290*415	110	1300
TT-300	300-350	560*370*415	110	2200
TT-450	450-500	560*470*415	110	2600

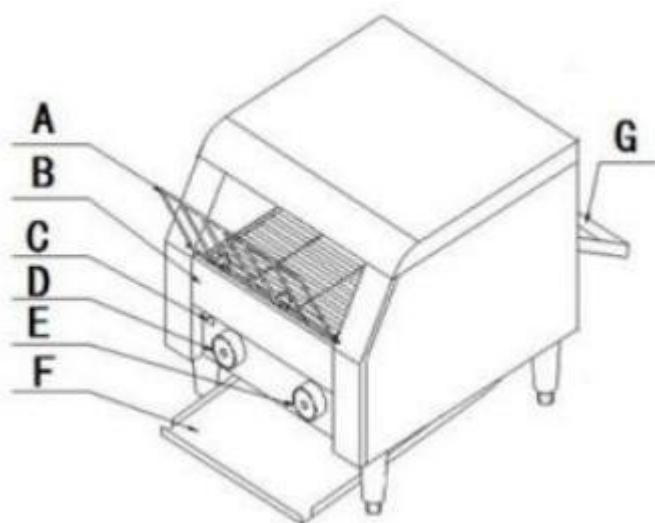

Name of the Components:

- A: Inputting net: Put bread on the net
B: Trash tray : For putting trash during producing
C: Power light(green): Machine is working well when power is on.
D: speed button: Adjusting speed of chain network
E: Gear button: For adjusting temperature of the bread.
F: Front side bread tray : Food sliding to front side after baking
G: Back side bread tray: Food sliding to back side after baking

Safety Precautions

The following safety precautions must be followed when using the product.

1. Please read the relevant instructions carefully before using the products.
2. Please don't share the same power and other high-power appliances to prevent overloading and cause other hazards.
3. Never touch the plate or around while the products is working or just close because they are very hot, it could result in burn.
4. If you have a child near the machine, please take extra care to use the product, don't let children alone and place the product in baby hand can reach.

5. Don't allow the product to be used in unattended.
6. Please don't contact the power line with sharp objects and hot surfaces, avoiding damaging the power line.
7. Always check the power line and plug if damaged, please stop using it once there are signs of damage, then looking for professional worker to repair or replacement.
8. Don't damage, excessively bend, stretch, twist the power line and put heavy objects on the power line or nip the power line.
9. After using it, the thermostat knob should be turned to the "O" position, and then pull the plug from the socket, to avoid the occurrence of leakage or insulation aging shock.
10. The product should be installed in a dry, clean, well-ventilated location and placed in level position.
11. In order to ensure safety, the product must be grounded, and install the leakage switch, ensure personal safety, otherwise shall not be used.
12. Please pull off the plug and until the product is completely cooled before moving, check or clean up.
13. Don't insert or unplug the plug with wet hand, avoiding the risk of electric shock.

Note for the first time use:

1. Pls check if power of the machine comply with your local power or not before using the machine.
2. Power light turns on after connecting the power, Press D to "3" gear (note: chain network will work faster if color is lighter).

Pls turn the button to "bread" on right side of the machine, then heats will come from both upper and lower heating tubes, it will heat up gradually.

Inside temperature of the toaster will reach 284°C in 12 minutes when bread has been put inside, then temperature will be constant at 284°C.
3. Machine should be pre-heat from 10-12 minutes, then bake 1-2 slices of bread for testing and check if color of the bread is Ok or not, if color is too light, and you want darker color, pls adjust D more than "3" gear (note: chain network will work slower if color of the bread is darker). After adjusting speed of the chain network, pls put the bread to chain network, bread will be moved inside of the machine when chain network is moving.
4. Bread will slide to Front side bread tray from firepot.
5. There is back side bread tray on back of the toaster, pls put the hook of the back tray down, the bread will slide to back side bread tray, pls put hook of the back tray up after getting the bread.
6. Pls adjust the gear to "BUNS" position, then only upper heating tube will work when baking steamed bread, pls adjust gear to "STBY" position when you only need warm up function.
7. Pls turn the button to "OFF" position and pull off plug.
8. Pls do not use the machine to heat up food with sugar or food will become liquid after heating, or it will damage the toaster.
9. If cable of toaster is broken, ONLY professional engineers can change it with specialized cable, pls be noted.

Care and Cleaning

1. unplug the power cable and ensure that the product is cooled completely, then cleaning and collection.
2. Cleaning cooking surface with a soft cloth or sponge dampened in a mild detergent.
3. please don't use wire brush, stiff brush or other corrosive liquids to clean it, avoiding damage the surface coating.
4. Never clean the product by sprinkling water and immersed in water.

special Declaration

1. All the contents of this information have been checked carefully, if there is any misunderstanding because of printing and content, our company will reserve the right offinal explanations.
2. If there is a technical improvement, we will compiled new specification into the Instructions, without prior notice. If the appearance of the product, color changes, please make the object as the standard.

warranty

1. Any user who buy our products of kitchen equipment series will enjoy 6 months free warrant.
2. For the warranty period, warranty certificate, invoice date or receipt date shall prevail. If there is no invoice, the date of production shall prevail.
3. one of the following conditions are not covered by the warranty.
 - A. As consumers use, storage, maintenance, damage caused by improper
 - B. product damage caused by improper maintenance of other companies.
 - C. No valid invoice or proof of purchase.
 - D. product damage caused by force majeure.
4. If the product is not covered by the warranty, our Customer service still warmly serve for you. If it is need to replace parts of the product, we only charge parts fee and transportation costs.
5. Repairing must show us warranty card, if there is no record on it, warranty card is invalid .

NEED HELP? CONTACT US!

Have product questions? Need Technical support?
please feel free to contact us:

✉ Mail: service@callsupports.com

❓ Help center: callsupports.com

📞 phone: 1 -888-968-7197

Extended warranty more than 2 years?
simply scan our QR Code

