

Visit Our Website



SCAN ME
PyleUSA.com

PYLE

PyleUSA.com



PHSKR20

3-Piece Wireless BT Streaming Stereo System

USER GUIDE

**READ ALL INSTRUCTIONS CAREFULLY BEFORE USING THIS PRODUCT.
RETAIN THIS OWNER'S MANUAL FOR FUTURE REFERENCE.**

TABLE OF CONTENTS

FEATURES AND TECHNICAL SPECS	3
SAFETY INSTRUCTIONS	4
REMOTE CONTROL	6
FRONT PANEL	9
REAR PANEL	10
CONNECTIONS	11
SYSTEM SETUP FOR DVD MODE	12
REMOTE FUNCTIONS	13
HOW TO SEARCH	15
SYSTEM SETUP	16
TROUBLESHOOTING	17
COMMON OPERATION	18
REGISTER PRODUCT	19

California Prop 65 Warning



WARNING:

This product contains Nickel Carbonate which is known to the state of California to cause cancer birth defects and other reproductive harm. Do not ingest.

For more info go to: www.P65warnings.ca.gov

Features:

- Compatible with DIVX / MPEG4/ DVD/DVD-R/DVD+R/DVD+RW/CD/VCD/SVCD/MP3/CD-R/CD-RW/JPEG
- Built-in FM Radio with USB Line in
- Digital Amplifier IC for Strong Sound
- Produce Instant Boost Bass and Max Volume Performance
- With Bluetooth Function and HDMI Port With Bluetooth Function and HDMI Port
- Includes Two Stereo Speakers and a Subwoofer
- Compatible with Bluetooth-Enabled Devices
- Sleek and Modern Design with LED Indicator
- Featured with Equalizer Effects such as (Jazz, Class, Rock, Flat, and Pop)
- Two Microphone Inputs and Guitar Inputs
- Clear and Powerful Sound
- Convenient Control Unit with Remote Control
- Allows Easy Access to Volume, Bass, and Treble Controls
- Includes 3.5mm Aux-in and RCA Input
- Compact Size for Easy Placement
- Two-Way Wooden Speaker Box

Technical Specs:

- Constructional Material: Plastic Front Body+Wooden Cabinet
- Power Output: 100 RMS - 400W P.M.P.O
- Impedance: 6 Ohm
- Frequency Response: 87.5-108Mhz
- Sensitivity (1w/1m): 650mV
- Signal Noise Ratio: 52dB
- T.H.D.: <10%
- Low Frequency: 120Hz-4KHz
- High Frequency: 4KHz-15KHz
- Wireless Microphone Range: Up to 60' ft.
- Remote Control Battery Operated, Requires (2) x 'AAA' Batteries (not Included)
- Battery Type: UM-4 1.5V Dry Battery
- Maximum USB Flash Support: 32GB
- Power Supply: 110/220V
- Product Dimensions (L x W x H): 11.6" x 11" x 28" –inches

Wireless Bluetooth Connectivity:

- Hassle-Free Pairing, Simple Music Streaming
- Compatible with All of Today's Latest Bluetooth Devices (Smartphones, Tablets, Laptops, Computers, etc.)
- Bluetooth Version: 5.0V
- Bluetooth Network Name: 'PyleUSA'
- Wireless Bluetooth Range: Up to 30.0' ft.

What's in the Box:

- BT Stereo System
- Remote Control
- AV Connection Cable
- Two Wireless Microphones
- Power Cord

FCC STATEMENT

This equipment has been tested and complies with the limits for a Class B digital device, per part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used per the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a specific installation. If this equipment does cause harmful interference to radio or television reception, determined by turning the equipment off and on, the user is encouraged to correct the interference with one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the distance between the equipment and the receiver. Connect the equipment to an outlet on a different circuit from the one the receiver is connected to. Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not explicitly approved by the manufacturer could void your authority to operate this equipment.

Compliance: This device complies with part 15 of the FCC Rules. Operation is subject to the following conditions: (1) This device must not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information:

The device meets general RF exposure requirements and can be used safely.

Safety Instructions

Basic Safety Requirements

1. Unplug the unit during lightning storms or when you do not intend to use it for a long period of time.
2. To remove the plug from the electrical outlet, do not pull on the supply cable. Grasp the plug firmly and pull to remove.

 
3. If the supply cord is damaged in any way, it must be replaced by the manufacturer, its service agent, or a similarly qualified person in order to avoid a hazard.
4. Place the unit where there is good ventilation. Place it on a flat, hard, and stable surface.
5. Do not place the unit on a bed, sofa, rug, or similar surface as this may block the ventilation openings.
6. Do not expose the unit to direct sunlight or place it in an abnormally hot location.
7. Do not place the unit under a heavy object or in an unventilated place.
8. This product has no user-serviceable parts. Do not attempt to repair this product yourself. Only qualified service personnel may service, repair, or maintain this product. Take the unit to an authorized service center for inspection and repair.
9. Due to the high risk of fire or electric shock, do not expose this unit to rain or moisture. Do not open the cabinet as dangerous high voltages are present inside the enclosure. Only authorized service personnel may attempt to open the cabinet.
10. There is a laser system inside this unit classified as CLASS 1 LASER PRODUCT. Do not stare directly into the beam as this may harm your eyes.
11. If it is very cold, please place the unit in a warm room and turn the power on for about an hour before using.
12. Always ensure that the product is unplugged from the electrical outlet before moving or cleaning. Clean it with a soft cloth slightly moistened with a mild detergent. Do not use any abrasive pads, scouring powder, or solvents such as alcohol as they will damage the surface of the unit.
13. **Do not use discs with scratches and/or deformities.**



Cracked



Broken

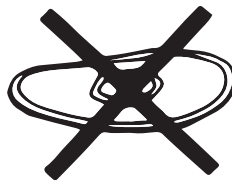

Deformed

As a disc is rotated at a high speed, it is dangerous to play a broken or deformed disc. Do not apply any tape or glue to the disc as this could lead to damage to the player. Should there be a strange noise or vibration while playing, if the picture or sound skips, or if the picture is distorted, stop the player immediately.

Remote Control Function Keys

Note: Use 2 x 'AAA' batteries (Not included). Keep away from children.



1. **Standby/Power on/off switch:** Press to open/close the unit power. In this mode, the unit is still consuming a small amount of power.

OPEN/CLOSE: ▲ Open/Close the disc tray.

2. **Mute:** Press to mute or unmute the sound

Zoom: Magnifies/Shrinks the screen image size

Angle: Choose different angles in the same image (Only supports multi-angle discs)

Mode: Press to choose DVD/USB/FM/Line in (AUX)/BT modes

3. **SUB/COPY:** Press subtitle button to display subtitles in DVD mode (Only supports multi-subtitle discs)

Copy: Copy music contents from loaded CD disc to inserted USB drive

PROGRAM: First, press PROG to enter program status. Then, press ◀ ▶ ▲ ▼ to select the item. Press 0 to 9 to specify the 2-digit order (To reset, press clear). Press ◀ ▶ ▲ ▼ to select Start, press OK to start programmed playback. Press **STOP** ■ twice to clear the whole program.

TREBLE: Treble adjustment

Step 1: Press Treble button.

Step 2: Turn Volume+/- knob

BASS: Bass adjustment

Step 1: Press Bass button.

Step 2: Turn Volume+/- knob

4. **Return:** After pressing "Menu" (In 'ON' mode), choose a program then press "Return" to top menu (Only for VCD/SVCD/DVD discs).

LANGUAGE: Choose different languages in DVD discs (Only supports multi-language discs).

OSD: Press OSD on the remote control to display single elapsed time, single remaining time, total elapsed time, total remaining time, and other information about the disc.

L/R: Press to set: Stereo, Mono L, Mono R, Auto L, Auto R in SVCD, VCD, or CD format.

5. **Repeat:**

Repeat 1, Repeat ALL, RANDOM, RANDOM OFF (Only for USB/VCD/CD discs)

Repeat chapter, Repeat Title, Repeat ALL, Repeat off (Only for DVD discs)

In USB mode: Includes Repeat directly

In FM/Line in/BT mode: Does not work

A-B Repeat: Specifies the parts you want to play repeatedly.

1. During playback, press A-B REPEAT to specify the starting point (point A).

2. When you reach the ending point (point B), press it again.

Vol-/Vol+: Decrease/increase the audio volume.

6. **SET UP:** Enter or exit the system setup menu.

RESET: Restore default settings.

◀ ▶ ▲ ▼ : Selects items, input position, etc.

For moving the display position of enlarged images.

For rotating JPEG images.

Enter: Confirm menu selection

Menu/PBC: Display the menu. Sets PBC of VCD equipped with Playback Control (PBC) Function to On/Off.

Top Menu: Displays the top menu

7. FM-/FM+ (REV/FWD)

In FM mode: Short press to next/previous channel

Press and hold for manual search (Unit will stop at the current scanning channel automatically)

In DVD/USB mode:

Forward/Backward (x2, x4, x8, x20)

Line in/BT: Does not work

PLAY/PAUSE/SCAN: Play or pause track.

Auto scanning the stations in FM mode.

STOP: Stop playback

CH-/CH+ (PREV/NEXT):

In FM/DVD/USB/BT mode: Previous/Next track

Line in/BT mode: Does not work

 
8. 1-10+: To select title/chapter/track numbers, etc.

e.g., 5: 5

15: 10+5 or 15 ➤ —

GO-TO: Specifies the point of time where you would like to start playback.

Front Panel

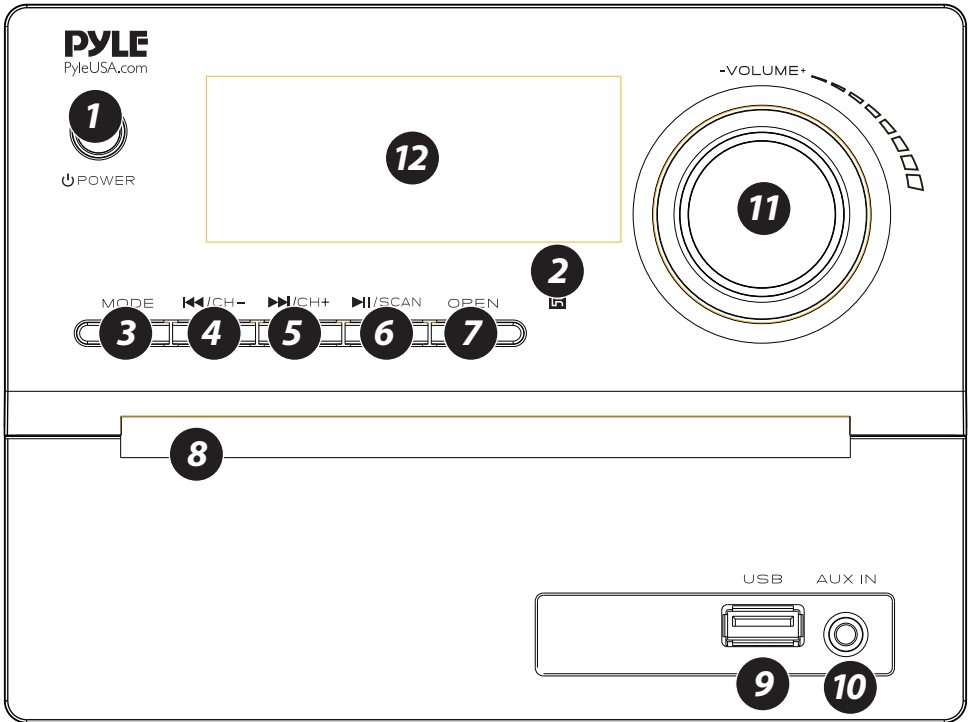

1. POWER BUTTON

7. OPEN/CLOSE BUTTON

2. REMOTE CONTROL SENSOR

8. DISC TRAY

3. MODE (DVD/USB/FM/AUX/BT)

9. USB PORT

4. PREV/CH-

10. AUX INPUT

 
5. NEXT/CH+

11. VOL+/VOL-

6. PLAY/PAUSE BUTTON

12. DISPLAY WINDOW

Rear Panel

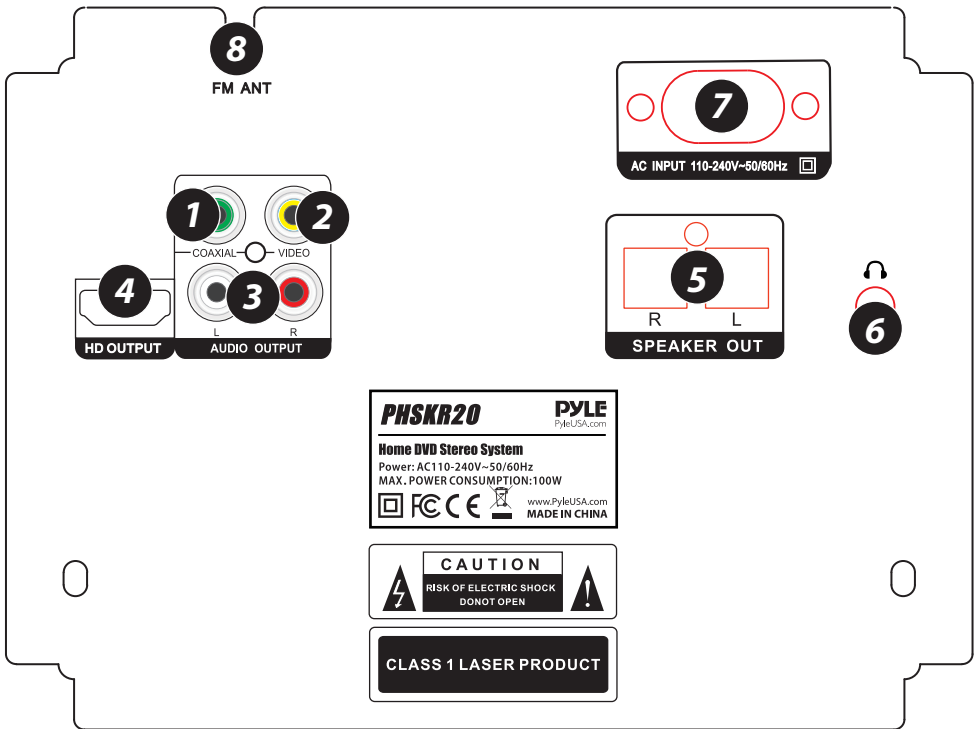

1. COAXIAL

2. VIDEO OUT

3. L/R

4. HD OUT

5. L/R SPEAKER OUT

 
6. HEADPHONE JACK

7. AC/DC POWER CORD

8. FM/ANT

CONNECTIONS

Connecting to a TV Set

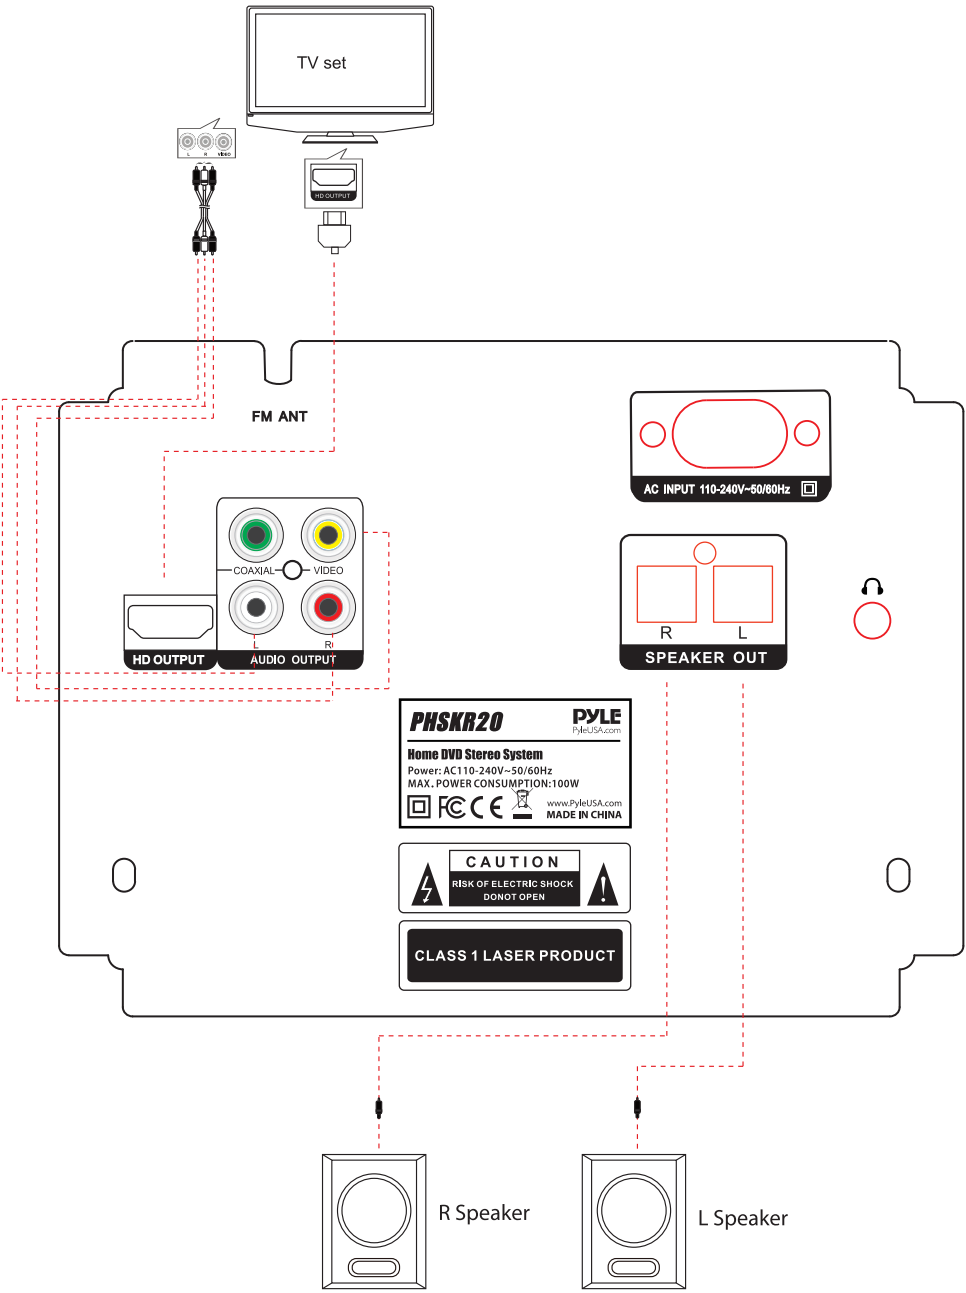

SYSTEM SETUP FOR DVD MODE

Setup

Follow the steps below to check the connection:

1. Turn **ON** the TV and shift to “**VIDEO INPUT**”.
2. Turn **ON** other units such as an audio system or VCR if they are connected.

Turning the Unit ON:

1. Press the **POWER** button on the panel. The DVD player will automatically read a disc if it has already been inserted in the player.
2. Press the **OPEN/CLOSE** button to open the disc tray to insert or replace a disc.
3. Insert a disc onto the disc tray and press the **OPEN/CLOSE** button again to close the disc tray. The screen will display the disc type.
4. The DVD player will select the state of playback.

DISC FORMAT	STATE OF PLAY
CD/ MP3	First track.
VCD/SVCD with PBC	From the menu screen, press the PBC button on the panel or on the remote control to play back from the beginning.
VCD/SVCD without PBC	Automatically plays from the beginning.

Note: *PBC is the abbreviation for PLAYBACK CONTROL. If a disc has PBC, it means that it has a menu from where you are able to choose a track, chapter, or other instruction at the beginning of playback.*

Playing a Disc

ACTION	BUTTON ON PANEL	KEY ON REMOTE CONTROL
Play	PLAY/PAUSE	PLAY
Pause	PLAY/PAUSE	PAUSE
Next track or chapter	NEXT	NEXT
Previous track or chapter	PREV	PREV
Stop	STOP	STOP

Turning the Unit OFF

Press the **STOP** button, then press the **OPEN/CLOSE** button to open the disc tray. Remove the disc and close the disc tray by pressing the **OPEN/CLOSE** button again. Then press the **POWER** button to turn off the player. It is recommended that discs are removed before the player is turned off. Remove the plug from the outlet on the wall if the player will not be used for a long time.

REMOTE FUNCTIONS

NO	OPERATION	DISC	INSTRUCTION
1	STOP/ RESUME	ALL FORMATS	Press STOP button to enter Stop mode. The TV screen will display the starter logo. With certain disc types, such as DVD, the player can resume playback from the point where it was stopped. Press RESUME to resume playback from the location where playback was stopped or from the beginning of the disc. Please note: The player will go into SCREEN SAVE MODE if there is no activity within one minute. Press any key to return to NORMAL mode.
2	FAST FORWARD	VCD, SVCD, DVD	Press FWD button to fast forward through the disc. Each time the FWD button is pressed, the fast forward motion speed changes. Press PLAY to resume normal playback.
3	REWIND	DVD, SVCD, VCD	Press REV button to rewind through the disc. Each time the REV button is pressed, the rewind motion speed changes. Press PLAY to resume normal playback.
4	REPEAT	DVD	To repeat a chapter, DVD title, or the whole DVD content, please see below: <ul style="list-style-type: none"> - Press REPEAT once to repeat the contents of the chapter. - Press it twice to repeat the contents of the title. - Press it three times to repeat the contents of the DVD disc. - Press it four times to cancel the repeat mode.
5	A-B REPEAT	ALL	To repeat a specific section of the DVD content, please follow the steps below: <ul style="list-style-type: none"> - Press the A-B key to set Point A as the starting point. - Press the key again to set Point B as the end point. The part between A and B will be played repeatedly. <ul style="list-style-type: none"> - Press A-B key a third time to cancel this function.
6	ZOOM	DVD, SVCD	Press the "ZOOM" button continuously to increase the size of the picture by X1, X2, or X4. Use the "UP", "DOWN", "LEFT", and "RIGHT" buttons to move the picture.
7	RETURN	DVD, SVCD, VCD2.0	Press this key to return to the main menu.
8	PBC PLAYBACK CONTROL	SVCD, VCD2.0	The PBC allows the user to play Video CDs interactively. If PBC is ON, the user can use the digit buttons to select a track but only from the menu. If PBC is OFF, the user can select the track directly.
9	MENU	DVD	Press this key to play the selected menu.
10	DIRECTION & ENTER	ALL FORMATS	Press this key to choose the selected column you want, and then press "ENTER" to confirm.
11	LANGUAGE/ SUBTITLE	DVD	Press this key to shift from one language (subtitle) to another (needs disc support).

REMOTE FUNCTIONS

NO	OPERATION	DISC	INSTRUCTION
12	L/R	DVD, SVCD, VCD	Continuously press this key to select left channel, right channel, or stereo. You should first choose audio output as 2 CH in the setup menu.
13	MUTE	ALL FORMATS	Press "MUTE" to turn off sound and press again to turn on.
14	VOLUME +/-	ALL FORMATS	Press "VOLUME" to increase and decrease the sound.
15	OSD	DVD, SVCD, VCD	On Screen Display (OSD). Users can select the whole setup menu and on-screen display language.
16	PROG	SVCD, VCD, CD	Press the PROG button to set up the playback sequence manually, i.e., if you want to playback track 2, 11, and 102, do the following: 1. Press 2, 2. Press +10, 1, 3. Press +10 ten times, then 2. Finally, press "PLAY" to go to your chosen track.
17	SETUP	ALL FORMATS	Press the "SETUP" button to select the various functions of your player, for example, audio output, parental control, etc. Refer to chapter 6 for further details.

HOW TO SEARCH


DISC	OPERATION	TV SCREEN
DVD	Press the GO-TO button once to display the Screen Search menu. Press it twice to cancel. In the Search Menu, you can use the UP/DOWN cursor buttons to select an item. Then press PLAY to confirm.	TITLE: 01/06CH CHAPTER: 001/002
DVD	<ul style="list-style-type: none"> • To play Title 2, press GO-TO on the remote control, then press 2 and then PLAY. • To play Title 1, Chapter 5, press GO-TO on the remote control, press RIGHT, then press 5 and PLAY. 	
	<p>Press "GO-TO" again to directly input a specific time. For example:</p> <ul style="list-style-type: none"> • If you want to play the DVD at the 1:23:45 point (one hour, twenty-third minute, and forty-fifth second), input 1, 2, 3, 4, 5 and press PLAY. • If you want to play the DVD at the 00:23:45 point (twenty-third minute and forty-fifth second), input 2,3,4,5 and press PLAY. 	TITLE: 2/2
SVCD VCD CD	<p>Press "GO-TO" to directly input the time. Please note:</p> <ol style="list-style-type: none"> 1. Turn off PBC for SVCD and VCD 2.0 before using the search function. 2. CD: You may directly input the track number you want to listen to. In other words, you do not need to use the search function. 	
MP3	The search function is not available when playing MP3 discs.	

SYSTEM SETUP

TV SYSTEM

Europe: PAL

 USA: NTSC

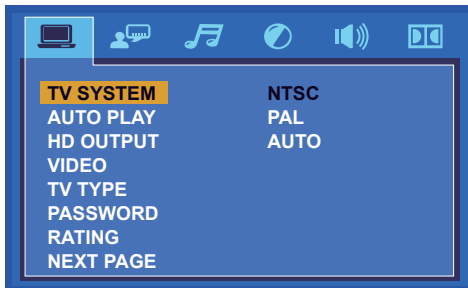

BRIGHTNESS

Use UP/Down arrows to adjust the brightness.



 
LANGUAGE SETUP

Select different on- Screen Display (OSD) language.




DOWNMIX

If two channels are required, select the stereo option.

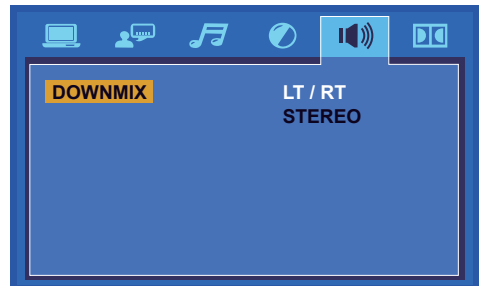

AUDIO SETUP

 
Use this menu to select your audio output.

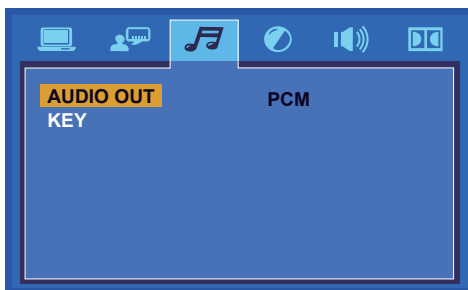

OP MODE

For night time playing, select LINE OUT to set volume at lower level.

 For daytime playing, select RF REMOD to set volume at a higher level.

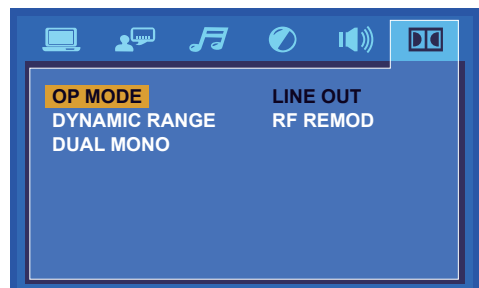

TROUBLESHOOTING

Before repairing, please take a look at the following problems and possible solutions first.

NO.	PROBLEM	SOLUTION
1	"No Disc"	If you place the disc on the tray and the player displays "No Disc" once loaded: 1. Check whether the disc is placed correctly (label side up). 2. Check the format of the disc. 3. Check whether the disc is dirty or damaged. 4. Clean the lens - this usually needs to be done after 20 hours of playback.
2	No sound	1. Set to current connecting channel. 2. Replace audio connection or connect correctly. 3. Ensure connected unit works properly or turn volume up.

USB COPY

1. The USB storage capacity range must not exceed 16GB.
2. Only insert a USB where there is no disc in the tray.



3. Press **"MODE"** button on the unit or **"SOURCE"** on the remote control:
DVD and USB will appear on the TV screen. Please use "↑" and "↓" buttons to select USB. Then press "ENTER" for the USB to be read.

Please note: If a disc needs to be read after a USB has been read, please press "MODE" on the unit or "SOURCE" on the control and use "↑" and "↓" buttons to select DVD.

To Copy an MP3 File:

When playing an MP3 disc, press the "COPY" button on the remote to enter the copy selection interface. The content that can be copied are the tracks of the current disc being played.

Selecting a Program to Copy:

Move the Direction cursor over the program to be copied. If only part of the program is to be copied, move the cursor over the upper program selection, then press Confirm to cancel the selection. Use the Direction buttons on the remote control to select the program to be copied, then press the Confirm button.

Copy: Move the highlight bar to the "START" option. At this time, the information about this copy will be shown on the right-hand side (TOTAL TRACKS, TOTAL TIME, and TOTAL SIZE). Press the "ENTER" key to start copying, and the system will write the CD in MP3 format onto the designated USB. When copying at normal speed, you can listen to the content being copied at the same time; when selecting 4 times speed, it will be mute.

Note: When you press the "ENTER" key to switch speeds, there will be a slight sound which continues for a few seconds.

Cancel Copy: During copying, you can move the highlight bar to the "CANCEL" option and press the "ENTER" key to confirm.

Return from Copying Screen: Move the highlight bar to the "RETURN" option and press the "ENTER" key to confirm return.

Note: Before copying, ensure that the available space on the USB is enough for the size of the file(s) to be copied.

COMMON OPERATION

Wireless Bluetooth Connectivity:

- Hassle-Free Pairing, Simple Music Streaming
- Compatible with All of Today's Latest Bluetooth Devices (Smartphones, Tablets, Laptops, Computers, etc.)
- Bluetooth Version: 5.0V
- Bluetooth Network Name: 'PyleUSA'
- Wireless Bluetooth Range: Up to 30.0' ft.

To connect an external device to this unit via BT:

1. Press "MODE" on the remote control or on the panel to select the BT function. The corresponding screen will then display "BT," indicating that the BT function is on.
2. Ensure the BT function is on on the external device and search for Pyle USA. Once found, click on it and pair. Some devices may need a pin code to connect; try 0000 or 1234. Once connected, you will hear a signal indicating that the connection is successful.

Aux In Function Operation:

Switch on the unit. Press the MODE button to switch to AUX IN mode.

Connect the external music player using the cable. The unit will start playing the selected music on the external player. Using the remote control, play, pause, or stop the music being played. Please note that in Line Input mode, some functions may not be available.

FM Radio Function Operation:

Switch on the unit. Press the MODE key to switch to FM mode, then press the SCAN key to automatically search and store radio channels.

When the search is complete, the unit will play the first stored channel.

Press the NEXT or PREV button to select the next or previous radio station.

If the signal is not good, you can adjust the signal by pressing the REV or FWD button.

Register Product

Thank you for choosing PyleUSA. By registering your product, you ensure that you receive the full benefits of our exclusive warranty and personalized customer support.

Complete the form to access expert support and to keep your PyleUSA purchase in perfect condition.



PyleUSA.com/register

PYLE

PyleUSA.com



Questions or Comments?

We are here to help!

Phone: 1.718.535.1800

PyleUSA.com/ContactUs