
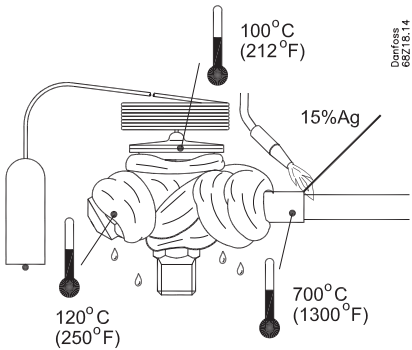
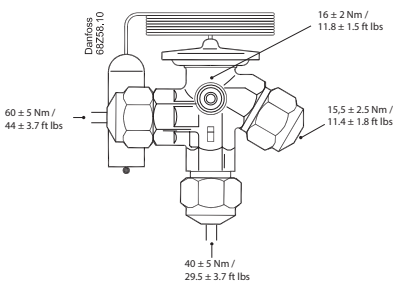
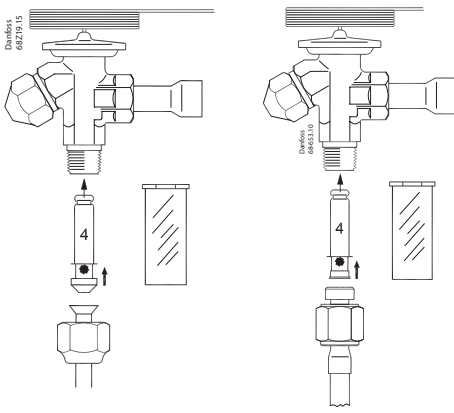
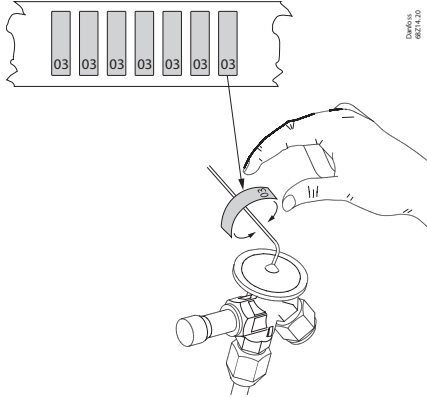
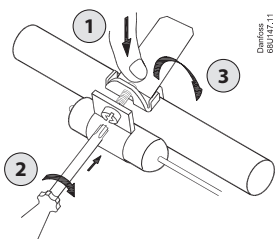
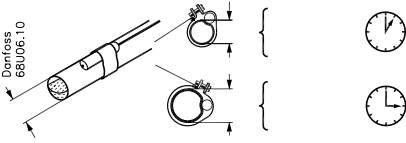
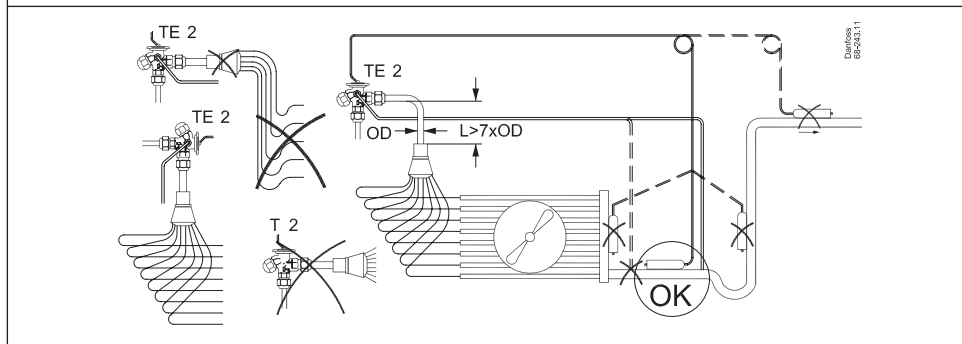


Installation guide

Thermostatic expansion valve

Type T 2 / TE 2

Refrigerant: See product label	Max. working pressure: PS / MWP: 34 bar / 500 psig	Max. test pressure P _{test} = 37.5 bar / 544 psig
 Danfoss 68Z16.14	 Danfoss 68Z58.10	
 Danfoss 68Z13.10	 Danfoss 68T14.20	
 Danfoss 68U147.11	 Danfoss 68U06.10	

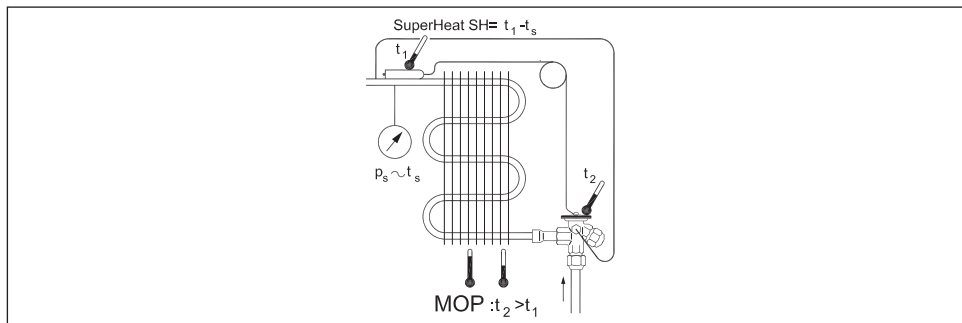

SH= SuperHeat

N,B	N_{MOP}, B_{MOP} NM,NL
4°C (7°F)	4°C (7°F)

Danfoss 68215,14

SH= SuperHeat

1

Stop

2

N,B	N_{MOP}, B_{MOP} NM,NL
~ 2-3 x 360°	~ 1,5 - 2 x 360°

SuperHeat SH= $t_1 - t_s$

t_1

$P_s \sim t_s$

$\Delta SH / 360^\circ$

N, N_{MOP} NM, NL	~ 4°C (7°F)
B, B_{MOP}	~ 8°C (14°F)

Danfoss 68220,14

Temperature ranges:

N = -40 - 10 °C / -40 - 60 °F

NM = -40 - -5 °C / -40 - 25 °F

NL = -40 - -15 °C / -40 - 5 °F

B = -60 - -25 °C / -75 - -15 °F

Any information, including, but not limited to information on selection of product, its application or use, product design, weight, dimensions, capacity or any other technical data in product manuals, catalogues descriptions, advertisements, etc. and whether made available in writing, orally, electronically, online or via download, shall be considered informative, and is only binding if and to the extent, explicit reference is made in a quotation or order confirmation. Danfoss cannot accept any responsibility for possible errors in catalogues, brochures, videos and other material. Danfoss reserves the right to alter its products without notice. This also applies to products ordered but not delivered provided that such alterations can be made without changes to form, fit or function of the product.

All trademarks in this material are property of Danfoss A/S or Danfoss group companies. Danfoss and the Danfoss logo are trademarks of Danfoss A/S. All rights reserved.