



REACT SOUND BAR

Owner's Manual

What you can do with this unit	4
Accessories	6
Inserting the batteries	7
Operating range of the remote control unit	7
Part names and functions	8
Sound bar	8
Remote control unit	12
Connections	14
Positioning	14
Positioning the sound bar	14
Connecting a TV	17
Connection 1: TV equipped with an HDMI connector and compatible with the ARC (Audio Return Channel)	18
Connection 2: TV equipped with an optical digital connector	19
Connecting the power cords	20
Getting the Alexa App	21

Playback	22
Enjoying TV, movies and music	22
Listening to music on a Bluetooth device	23
Pairing a Bluetooth device for the first time	23
Pairing with other Bluetooth devices	24
Listening to music with a paired Bluetooth device ...	24
Spotify Connect function	25
Settings	26
Settings	26
Adjusting the volume	26
Adjusting the subwoofer volume	26
Adjusting the dialogue sound	26
Selecting a listening mode	27
Turning off the sound temporarily	27
Operating this unit using the remote control of a TV	28

Tips	30
Troubleshooting	30
Power does not turn on / Power is turned off	31
Operations cannot be performed through the remote control unit	31
No sound comes out	32
Bluetooth playback does not work	33
The HDMI Control function does not work	34
Alexa does not respond even if called	34
LED is dark	34
Resetting factory settings	35
Appendix	36
About HDMI	36
Power management	37
Power modes	37
Trademark information	39
Specifications	40
Sound bar	40

Thank you for purchasing this Polk product.


To ensure proper operation, please read this owner's manual carefully before using the product.

After reading this manual, be sure to keep it for future reference.

What you can do with this unit

This sound bar enables you to connect this unit to your TV to enjoy high-quality sound.


■ Playing TV audio

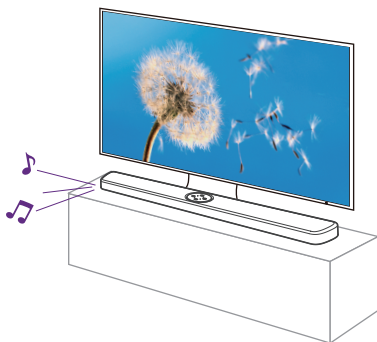

[Related information]

- "Enjoying TV, movies and music" (👉 p. 22)


■ Using the app for smartphones/tablets (Alexa App) for easy operation

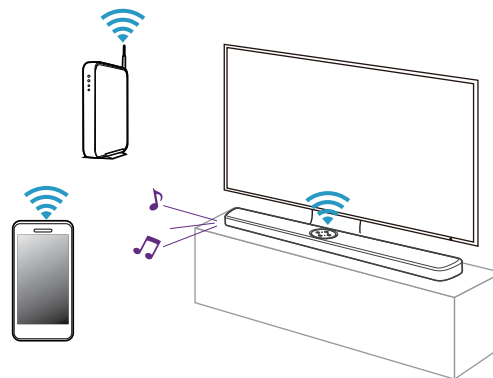

[Related information]

- "Getting the Alexa App" (👉 p. 21)

■ Operating by talking to Alexa

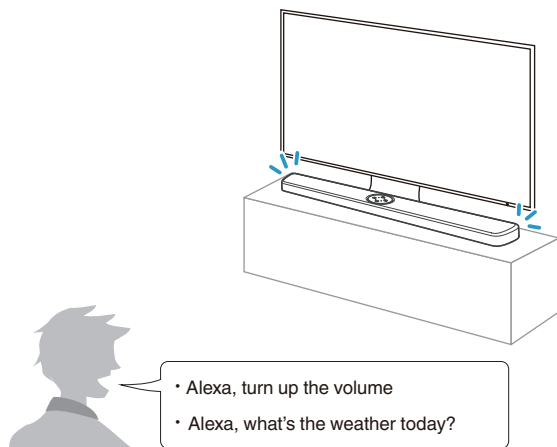


- Alexa isn't available in certain languages and countries.

[Related information]

- "Getting the Alexa App" (👉 p. 21)

■ Playing a Bluetooth device



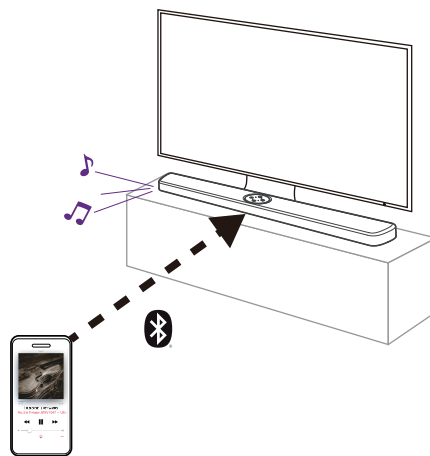


[Related information]

- "Listening to music on a Bluetooth device" (👉 p. 23)


Accessories

   Check that the following parts are supplied with the product.


 Quick Start Guide	 Safety Instructions	 Wall mount template	 Power cord	 HDMI cable
 Optical digital cable	 Wall mount spacers	 Remote control unit	 R03/AAA batteries	

Inserting the batteries

- 1 Slide the rear cover off the remote control unit in the arrow direction.

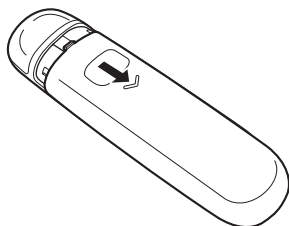

- 2 Insert two batteries correctly into the battery compartment as indicated.

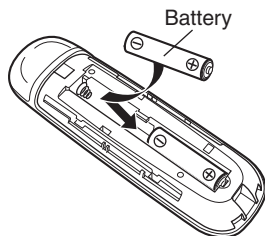


- 3 Put the rear cover back on.

NOTE

- Remove the batteries from the remote control unit if it will not be in use for long periods.
- If the battery fluid should leak, carefully wipe the fluid off the inside of the battery compartment and insert new batteries.

Operating range of the remote control unit


Point the remote control unit at the remote sensor when operating it.

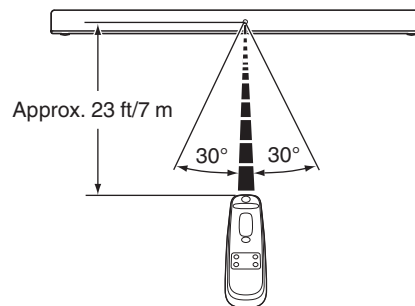


Part names and functions

Sound bar

■ Top panel

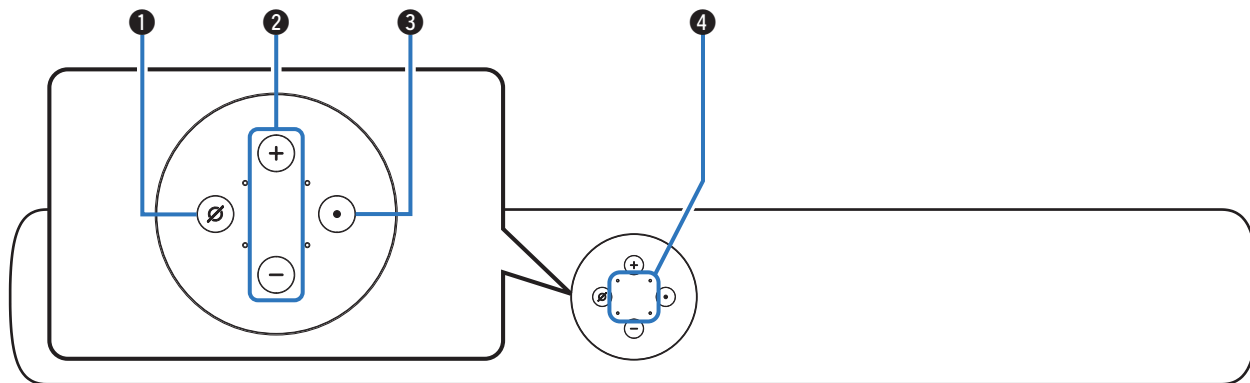

For details, see the next page.

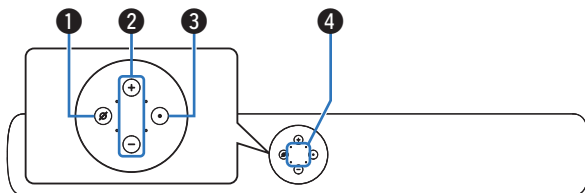

1 Microphone mute button (Ø)

This disables the microphone. While the microphone is disabled, the button lights up in red. Pressing the button again enables the microphone.

2 Volume buttons (+, -)

These adjust the volume level. (👉 p. 26)

3 Action button (●)

This invokes Alexa.

You cannot operate the button while the microphone is muted.

Ambient light sensor

This detects the ambient brightness and automatically adjusts the brightness of the status LED, the light bar, and the microphone mute button to correspond with the ambient brightness.


4 Microphone

This is the microphone to talk to Alexa.



- Do not put anything on top of the sound bar. Doing so may lead to accidental operations.
- This microphone cannot be used for calls.

■ Front panel

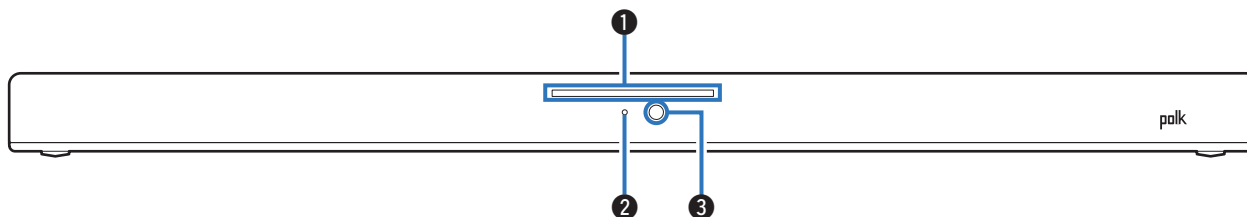

① Light bar

While Alexa responds, the LED lights up.

When the volume button is pressed, the LED displays the volume level.

② Status LED


Displays the status of input source / audio decoding / sound mode, etc.

③ Remote control sensor

This receives signals from the remote control unit. (p. 7)

Input source	TV(HDMI ARC)	(White)
	TV(Optical)	(White)
	Bluetooth	(Blue)
Audio decoding	(PCM)	(Orange)
	(DTS)	(Yellow)
	(Dolby)	(Green)
Sound mode	Night mode	(Purple)

■ Rear panel

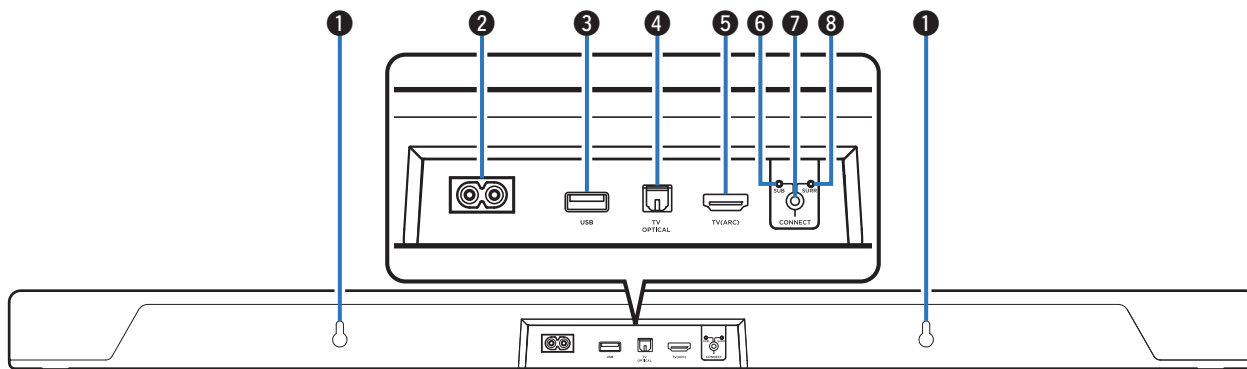

❶ Wall hook hole

Used to mount the sound bar on a wall. (👉 p. 15)

❷ AC inlet

Used to connect the power cord. (👉 p. 20)

❸ USB port

USB playback is available.

❹ Optical digital input connector (TV OPTICAL)

Use the included optical digital cable to connect a TV with an optical digital terminal. (👉 p. 19)

❺ HDMI connector (TV (ARC))

Use the included HDMI cable to connect an ARC function-compatible TV. (👉 p. 18)

❻ SUB LED

This LED lights up in green when the sound bar is paired with the optional subwoofer.

❼ CONNECT button


Used to pair the optional subwoofer and surround speakers with the sound bar.

❽ SURR LED

This LED lights up in green when the sound bar is paired with the optional surround speakers.

Remote control unit

This section mainly explains remote control operations.

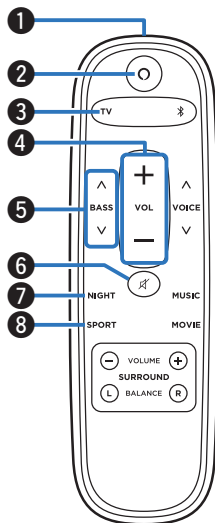

❶ Remote control signal transmitter

This transmits signals from the remote control unit. (👉 p. 7)

❷ Action button (○)

This invokes Alexa.

❸ Input source button (TV)

This switches the input source to TV. (👉 p. 22)

❹ Volume buttons (VOL +, -)

These adjust the volume level. (👉 p. 26)

❺ Bass volume control buttons (BASS +, -)

This setting adjusts the volume level for the bass. (👉 p. 26)

❻ Mute button (🔇)


This mutes the output audio. Press again to unmute. (👉 p. 27)

❼ Night mode button (NIGHT)

Compresses the dynamic range (difference between loud and soft sounds) to make audio easier to hear at low volumes. (👉 p. 27)

❽ Sport mode button (SPORT)

Enhances dialogue-rich content, like sporting events, news casts and talk shows. (👉 p. 27)

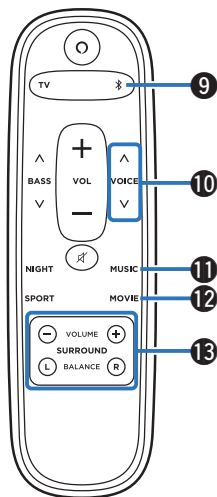**9 Input source button (★)**

This switches the input source to ★. (👉 p. 22)

10 Voice adjust buttons (VOICE +, -)

Adjust the volume of dialog in movies, vocals in music, etc. so these can be heard more easily. (👉 p. 26)

11 Music mode button (MUSIC)

Switches to the sound mode suitable for enjoying music. (👉 p. 27)

12 Movie mode button (MOVIE)

Enjoy movie theater-like surround sound. (👉 p. 27)


13 Surround buttons (SURROUND)

Used to adjust the surround sound channel volume and balance when optional surround speakers are connected.

Positioning

Positioning the sound bar

Position the sound bar in front of your TV, etc., on a flat surface.

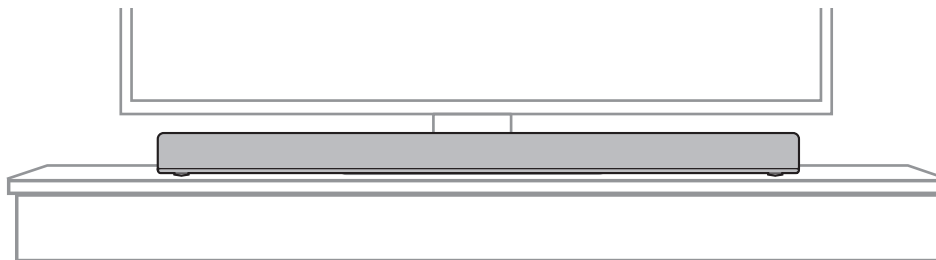

NOTE

- When positioning the sound bar in front of your TV, make sure the sound bar does not obstruct the TV's remote control light sensor, etc.


■ When hanging the sound bar on a wall

The sound bar has a wall hook hole to hang it on a wall. When hanging it on a wall, position it in a flat, vertical position.

To ensure safety, request a contractor perform the mounting work when mounting onto a wall.

NOTE

- In order to use the unit safely, do not place items on or hang items from the unit.
- Be sure to fix connection cables to the wall to ensure that cannot be pulled or tripped over causing this unit to fall. Check that the unit is mounted safely after the mounting work is complete.
- Also, periodically check the safety of this unit and whether there is a possibility that the unit may fall.
- When hanging it on a wall, position it so as to show the microphone hole on the top panel of the sound bar. If you position it so as not to show the microphone hole, the microphone may not pick up your voices talking to Alexa. Be careful of the positioning because the TV on the wall may hide the microphone hole.
- Polk cannot accept any responsibility for damage, injury or accidents caused by problems with the mounting location or mounting method.

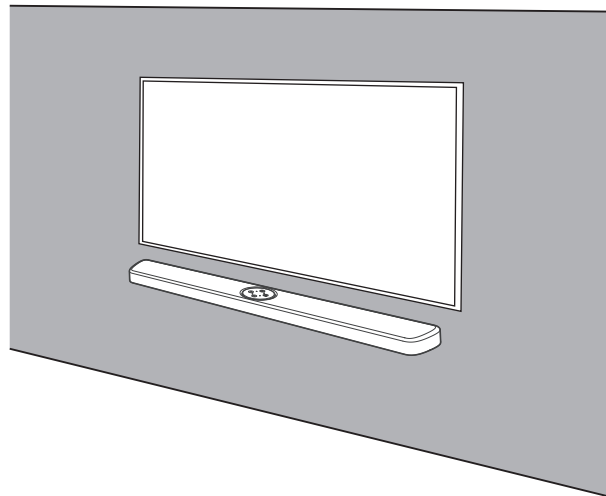



- When hanging it on a wall, use the included wall mount template.

[How to use the wall mount template]

- ① Affix the template to the location you would like to mount the sound bar.
- ② Screw in the wall mount screws by following the template.
Consult a construction professional about the proper wall mount screws for the material and strength of your wall.
- ③ Remove the template from the wall.
- ④ Mount the included wall mount spacer on the spine of the sound bar.
Mounting the wall mount spacer creates a space for cords to pass through between the sound bar and the wall.
- ⑤ Mount the sound bar on the wall.

Connecting a TV

How to connect a TV depends on the connectors and functions equipped on the TV.




- Enable the TV's HDMI control function when using an HDMI cable to connect this device to your TV. (See the TV owner's manual for details.)
- Turn off the TV's speaker or minimize the volume when using this device.
- HDMI cable connection is recommended, but connection can be performed without an HDMI cable.

NOTE

- Make sure all devices are off when connecting.
- Do not plug device power cords into an outlet until all devices have been connected.

Connection 1: TV equipped with an HDMI connector and compatible with the ARC (Audio Return Channel)


Use the included HDMI cable to connect this device to an ARC function-compatible TV.

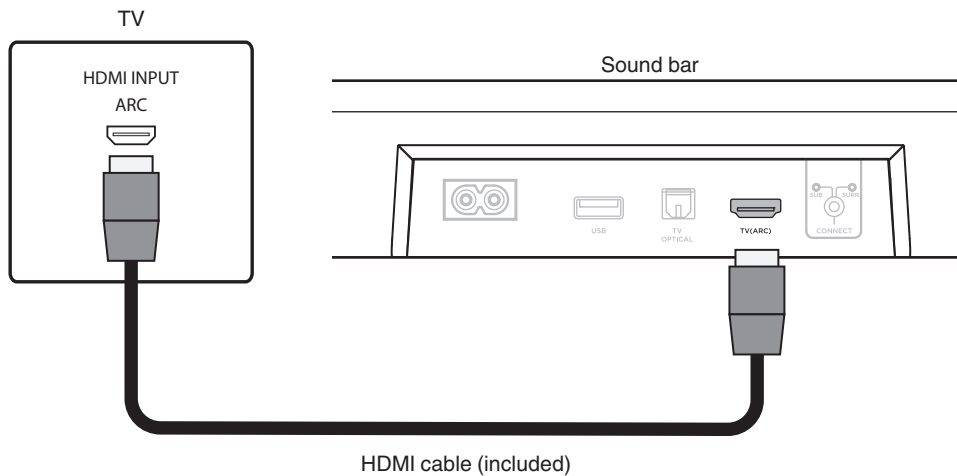

- The TV also needs to be compatible with the ARC function.

Connection 2: TV equipped with an optical digital connector


Use the included optical digital cables to connect this device to your TV.

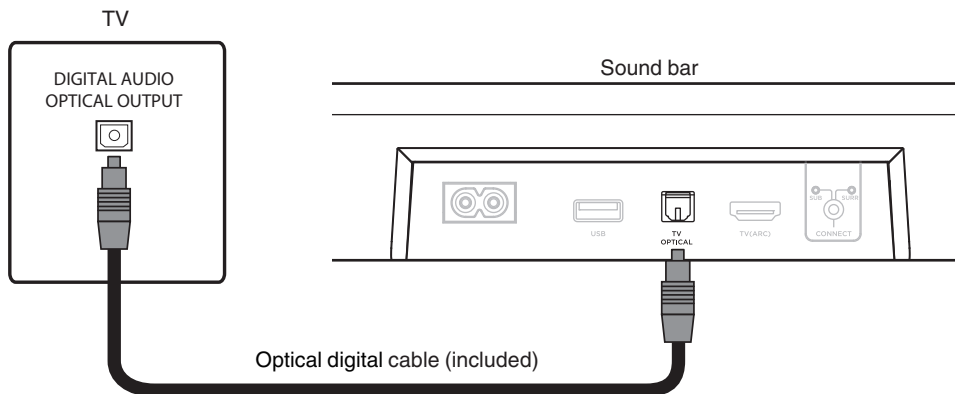

- Line up the optical digital cable with the shape of the terminal to insert.

Connecting the power cords

After completing all the connections, insert the power plug into the power outlet.

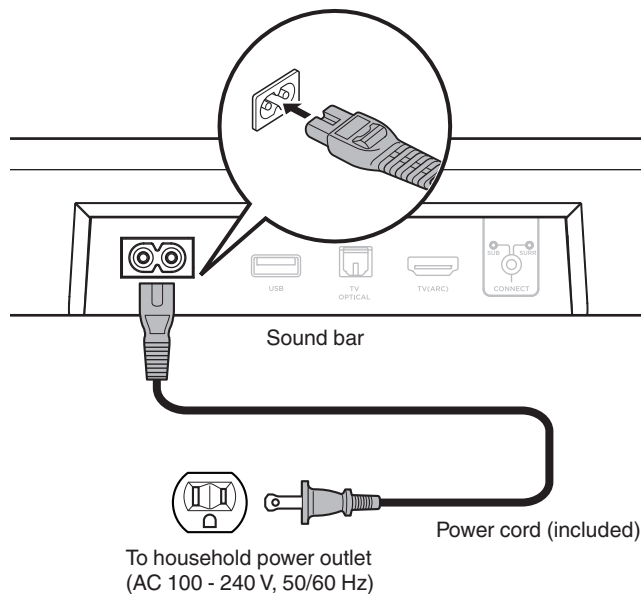

Getting the Alexa App

Install the Alexa App on your mobile device and connect this unit to the network.




- If you are already using a product with Alexa built-in, it is automatically connected to this unit.
- Check whether your mobile device is connected to your home router before you operate it.
- Enable Bluetooth on your mobile device.

1 Install the (free) Alexa App on your mobile device.

Download "Alexa App" from the App Store or the Google Play store.

2 Configure the settings according to the instructions on the App screen.

Enjoying TV, movies and music

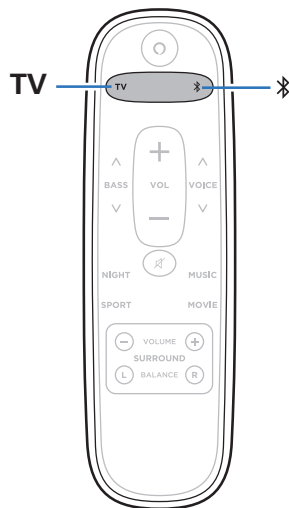

1 Press the input source button.

TV:	Device connected to the TV (HDMI ARC/ OPTICAL)
⌘:	Bluetooth device

2 Play the device connected to this unit.

For details, see the relevant device manual.



- Connect an HDMI control-compatible TV and this device via HDMI and enable the HDMI control to enable linked control from either device. (p. 36)

Listening to music on a Bluetooth device

Music files stored on Bluetooth devices such as smartphones, digital music players, etc. can be enjoyed on this unit by pairing and connecting this unit with the Bluetooth device.



Pairing a Bluetooth device for the first time

Pair a Bluetooth device with this unit.

Once the Bluetooth device has been paired, it does not need to be paired again.

- 1 Press  to switch the input source to "Bluetooth".**
Automatically switches to pairing mode the first time it is used.
The status display LED blinks in blue when this unit is in pairing mode.
- 2 Activate the Bluetooth settings on your Bluetooth device.**
- 3 Select "Polk React Sound Bar" (Default) from the list of devices displayed on the screen of the Bluetooth device.**
The status display LED lights up in blue and this device and the Bluetooth device are paired.

Pairing with other Bluetooth devices

- 1 Press  to switch the input source to "Bluetooth".**
- 2 Activate the Bluetooth settings on your Bluetooth device.**
- 3 Push  on this device until the status display LED blinks in blue.**
- 4 Select "Polk React Sound Bar" (Default) from the list of devices displayed on the screen of the Bluetooth device.**

The status display LED lights up in blue and this device and the Bluetooth device are paired.



- This unit can be paired with a maximum of 8 Bluetooth devices. When a 9th Bluetooth device is paired, it will be registered in place of the oldest registered device.

Listening to music with a paired Bluetooth device

- 1 Press  to switch the input source to "Bluetooth".**
- 2 Activate the Bluetooth settings on your Bluetooth device.**

The status display LED lights up in blue and connects to the last Bluetooth device connected. If the connection is cut, perform connection again.
- 3 Play music using any app on your Bluetooth device.**

Spotify Connect function


Spotify is all the music you'll ever need. Millions of songs available instantly. Just search for the music you love, or let Spotify play you something great. Spotify works on your phone, tablet, computer and home speakers. So you'll always have the perfect soundtrack for whatever you're doing. Now you can enjoy Spotify with your free account as well as Premium account. Use your phone, tablet or computer as a remote control for Spotify.

Go to **www.spotify.com/connect** to learn how.

The Spotify software is subject to third party licenses found here:
www.spotify.com/connect/third-party-licenses

Settings

Perform the below operations and settings as needed.

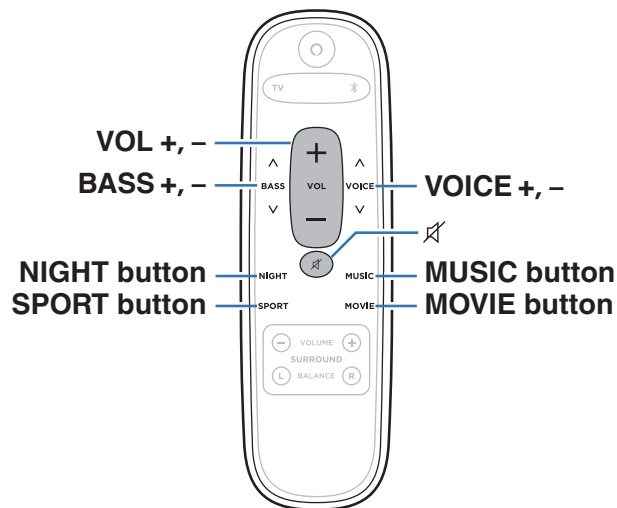

Adjusting the volume

1 Use VOL + or VOL – to adjust the volume.

The light bar changes to the volume display when these buttons are pressed.

Adjusting the subwoofer volume

1 Use BASS + or BASS – to adjust the bass volume.

The light bar changes to the volume display when these buttons are pressed.

Adjusting the dialogue sound

Adjust the volume of dialog in movies, vocals in music, etc. so these can be heard more easily.

1 Use VOICE + or VOICE – to adjust the voice volume.

The light bar changes to the volume display when these buttons are pressed.

Selecting a listening mode

1 Press the listening mode button to select a listening mode.

When the button is pressed, the rightmost status display LED flashes and the listening mode changes.

MOVIE:	Enjoy movie theater-like surround sound.
NIGHT:	Compresses the dynamic range (difference between loud and soft sounds) to make audio easier to hear at low volumes.
MUSIC:	Enjoy the full presence of a wide, encompassing acoustic field.
SPORT:	Enhances dialogue-rich content, like sporting events, news casts and talk shows.

Turning off the sound temporarily

1 Press .

The status LED blinks in white.



- To cancel, press  again.

Operating this unit using the remote control of a TV

There are three ways to operate this unit using the remote control of a TV.

- **HDMI control function**

Connect this unit to a TV that supports the HDMI control function with an HDMI cable and enable the HDMI control setting on the TV to perform basic operations on this unit (changing the input source, turning the power on and off, adjusting the volume) with the remote control of the TV. Refer to "HDMI control function" for more information about the HDMI control function. (📖 p. 36)

- **Remote control preset function**

If your TV is connected via optical, you may be able control the volume and mute functions on this unit from your TV without any further setup if your TV is one of supported brands.

- **Remote control learning function**


If your TV does not support the HDMI control function, use this unit's remote control learning function. This enables you to operate this unit with the remote control of a TV. ("Using the remote control learning function" (📖 p. 28))

■ Using the remote control learning function

1 Press and hold the $\emptyset$ for 3 seconds or more until the voice guidance responds.

2 Point the remote control of this unit at the remote sensor of this unit and press the remote control button to be learned (e.g. VOL +) once.

The voice guidance responds.

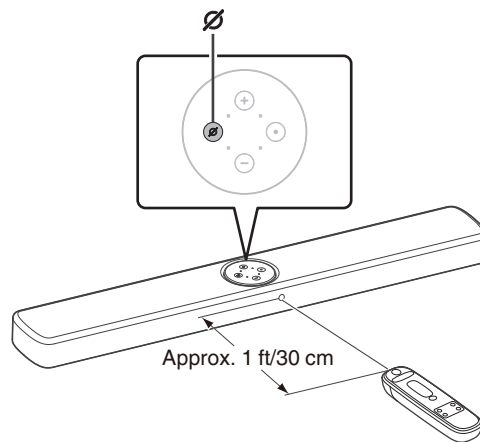

3 Point the remote control of the TV at the remote control sensor of this unit and press the remote control button to be learned (e.g. the button to increase the volume) 3 times.

If learning is successful, the status LED blinks in green once, and the voice guidance responds.

If learning is unsuccessful, the status LED blinks in red once. Repeat steps 2 and 3 if this happens.



- When the status LEDs blink in white again, press the TV remote control button (e.g. the button to increase the volume) once more.

4 To learn a new function, repeat steps 2 and 3 with the next function.

5 Press and hold the main unit's $\varnothing$ for 3 seconds.

The unit exits remote control learning mode.

6 Confirm that the operation (e.g. increasing the volume) can be performed on this unit with the TV remote control.



- To delete all learned data, press and hold $\varnothing$ on the sound bar for 10 seconds.
- Operations cannot be performed with the remote control learning function during the low energy mode.
- Other operations cannot be performed when in remote control learning mode.
- Remote control learning may not be possible depending on the type of TV remote control.

Troubleshooting

If a problem should arise, first check the following:

1. **Are the connections correct?**
2. **Is the set being operated as described in the owner's manual?**
3. **Are the other devices operating properly?**

If this unit does not operate properly, check the corresponding symptoms in this section.

If the symptoms do not match any of those described here, consult your dealer as it could be due to a fault in this unit. In this case, disconnect the power immediately and contact the store where you purchased this unit.

Power does not turn on / Power is turned off

Power does not turn on.

- Check whether the power plug is correctly inserted into the power outlet. (🔍 p. 20)

Power automatically turns off.

- If no operations have been performed for 20 minutes or more and audio is not being input, this device automatically switches to voice initiated mode.
Turn this device's power on again. (🔍 p. 37)

Operations cannot be performed through the remote control unit

Operations cannot be performed through the remote control unit.

- Battery is worn out. Replace with new battery. (🔍 p. 7)
- Operate the remote control unit within a distance of about 23 ft/7 m from this unit and at an angle of within 30°. (🔍 p. 7)
- Remove any obstacle between this unit and the remote control unit.
- Insert the battery in the proper direction, checking the $\oplus$ and $\ominus$ marks. (🔍 p. 7)
- The set's remote control sensor is exposed to strong light (direct sunlight, inverter type fluorescent bulb light, etc.). Move the set to a place in which the remote control sensor will not be exposed to strong light.

No sound comes out

No sound comes out.

- Check the connections for all devices. (👉 p. 14)
- Insert connection cables all the way in.
- Check that input connectors and output connectors are not reversely connected.
- Check cables for damage.
- Check that a proper input source is selected. (👉 p. 22)
- Adjust the volume. (👉 p. 26)
- Make sure volume is not muted. (👉 p. 27)

Bluetooth playback does not work

Cannot pair with a Bluetooth device.

- It may be that Bluetooth is not enabled on the Bluetooth device. See the owner's manual of the Bluetooth device to enable the Bluetooth function.
- This device may be paired with another Bluetooth device. Select this unit from the list of devices displayed on the screen of the Bluetooth device.
- Bring the Bluetooth device near to this unit.
- Turn the power of the Bluetooth device off and on again, and then try again.
- Only 1 Bluetooth device can be connected at a time.

The sound is cut off.

- Bring the Bluetooth device near to this unit.
- Remove obstructions between the Bluetooth device and this unit.
- To prevent electromagnetic interference, locate this unit away from microwave ovens, wireless LAN devices and other Bluetooth devices.
- Pair with the Bluetooth device again. (👉 p. 23)

The HDMI Control function does not work

The HDMI Control function does not work.

- You cannot operate devices that are not compatible with the HDMI Control function. In addition, depending on the connected device or the settings, the HDMI Control function may not work. In this case, operate the external device directly.
- Check that the HDMI Control function setting is enabled on all devices connected to this unit.

Alexa does not respond even if called

The microphone is disabled.

- Press the  button to enable the microphone.

LED is dark

LED is dark.

- This unit has a built-in illuminance sensor in one of the buttons on the top panel. Make sure the button is not in shadow and is clean.
( p. 9)

Resetting factory settings

Perform this procedure if the display is abnormal or if operations cannot be performed.

Various settings are reset to the factory default values. Make settings again.

1 Press and hold the Action button until the light bar turns orange (about 25 seconds).

- The light bar turns blue indicating the reset sequence has started.
- This unit automatically restarts in a factory default values.

About HDMI

This unit supports the following HDMI functions.

- **ARC (Audio Return Channel) function**

Enjoy movies, music, etc., on your TV simply by connecting an ARC function-compatible TV to this device via HDMI.

- **HDMI control function**

Connect an HDMI control-compatible TV and this device via HDMI and enable the HDMI control to enable linked control from either device.

- Input source switching

If the TV is turned on, this device automatically powers on and switches the input source.

- Power off link

The TV power off operation is linked so this device also turns off.

- Volume adjustment

The volume of this unit can be adjusted using the TV remote control.

- Audio output destination switching

If this unit is turned on, TV audio is output from this unit. If this device is turned off, TV audio is output from the speakers of the TV.

NOTE

- Some functions may not operate depending on the connected TV.

Power management

Power modes

■ Voice initiated mode

This unit has prepared a voice initiated mode in active mode. It is a voice initiated mode that reduces the power consumption as low as possible by reducing the operation of other peripheral circuits including the digital signal processor while operating the main feature voice control.

□ Wi-Fi

After around 20 minutes of no operation and no network access after playing music via Wi-Fi. This unit enters the voice initiated mode.

□ Bluetooth

After the Bluetooth connection is disconnected and there is around 20 minutes of no operation and no network access after playing music via Bluetooth. This unit enters the voice initiated mode.

□ Optical input

After around 20 minutes of no operation after optical device is put into voice initiated mode.

□ HDMI output (ARC)

Connect this unit and the ARC compatible TV with HDMI cable and play TV. Around 20 minutes after TV is put into voice initiated mode.

■ Standby mode

This unit can be placed into standby mode, in which its standby power consumption is lower than in voice initiated mode.

- Press the mic mute button twice while holding down the action button.

The voice guidance responds, and light on the light bar spins.



- You also press the action button, the device enters the voice initiated mode.

■ Off

To completely turn off the power to the device you must remove the mains plug from the power outlet.

Trademark information



The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Polk Audio is under license. Other trademarks and trade names are those of their respective owners.



Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, Pro Logic, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.



For DTS patents, see <http://patents.dts.com>. Manufactured under license from DTS, Inc. DTS, Digital Surround, and the DTS logo are registered trademarks or trademarks of DTS, Inc. in the United States and other countries. © 2020 DTS, Inc. ALL RIGHTS RESERVED.



The terms HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

Specifications

Sound bar

■ General

Operating temperature:	5 °C - 35 °C
Power supply:	AC 100 - 240 V, 50/60 Hz
Power consumption:	30 W
Power consumption in voice initiated mode:	3.9 W (Wi-Fi) 3.8 W (Bluetooth) 3.8 W (HDMI,ARC) 3.9 W (Optical)
Power consumption in standby mode:	0.4 W
Sampling frequency:	32 kHz, 44.1 kHz, 48 kHz
Supported audio formats:	Linear PCM, Dolby Digital, DTS Digital Surround

■ Wireless LAN section

Network type (wireless LAN standard):

Conforming to IEEE 802.11a/b/g/n/ac

Used frequency range:

2.4 GHz, 5 GHz

■ Bluetooth section

Communications system:

Bluetooth Version 4.2

Transmission power:

Power Class 2

Maximum communication range:

Approx. 32.8 ft/10 m in line of sight*

Used frequency range:

2.4 GHz band

Modulation scheme:

FHSS (Frequency-Hopping Spread Spectrum)

Supported profiles:

A2DP (Advanced Audio Distribution Profile) 1.3

AVRCP (Audio Video Remote Control Profile) 1.6

Corresponding codec:


SBC, AAC

Transmission range (A2DP):

20 Hz – 20,000 Hz

*The actual communication range varies depending on the influence of such factors as obstructions between devices, electromagnetic waves from microwave ovens, static electricity, cordless phones, reception sensitivity, antenna performance, operating system, application software etc.

■ Dimensions (Unit : in. (mm))

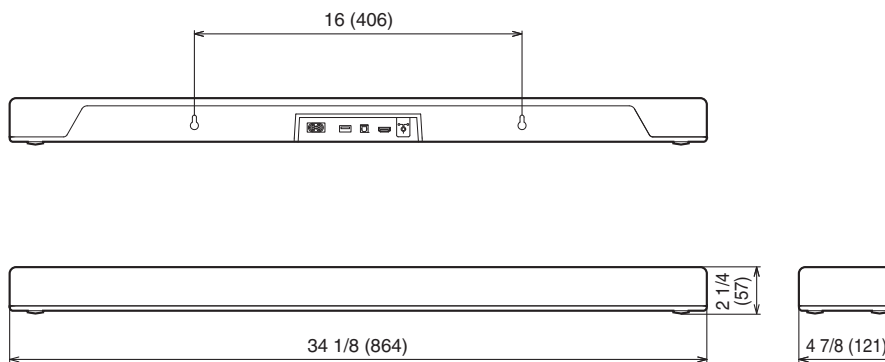

■ Weight : 6 lbs 6 oz (2.9 kg)



3520 10804 00AK
©2020 Sound United. All Rights Reserved.



REACT

SOUND BAR



Quick Start Guide

THANK YOU FOR YOUR POLK PURCHASE

If you have a question or comment, please feel free to contact us.

TECHNICAL ASSISTANCE


North America:	800-377-POLK(7655)
United Kingdom and Ireland:	+44 202890279830
Netherlands customers:	+31 402507800
Other countries:	+1-410-358-3600

Email: polkcs@polkaudio.com


Polk FAQs: polk.custhelp.com

In all other countries, refer to **polk-eu@mailmw.custhelp.com** for support contact details.
The complete owner's manual can be found online at
<http://manuals.polkaudio.com/REACT/NA/EN/index.php>.

 
WHAT'S IN THE BOX



Polk React sound bar

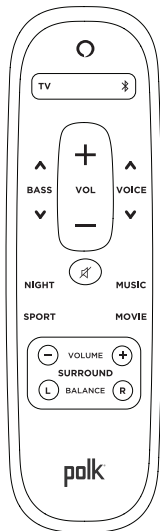

Remote control

 


HDMI cable



Power cable



 
Optical cable



Wall-mount spacers



 AAA batteries (2)



Documentation



Wall-mount template


POSITION YOUR SOUND BAR

ON A CABINET


- A. For the best listening experience, position the sound bar centered under your TV and flush with the front edge of your cabinet.

WALL MOUNTED

- B. Refer to the included wall mount template if you wish to wall mount your sound bar under your TV.

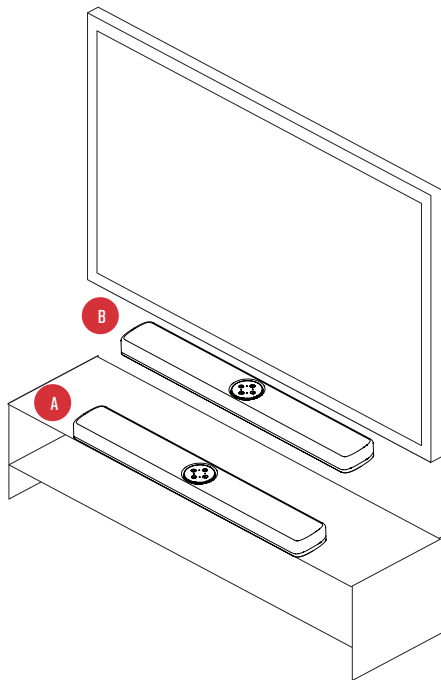


CONNECT THE TV

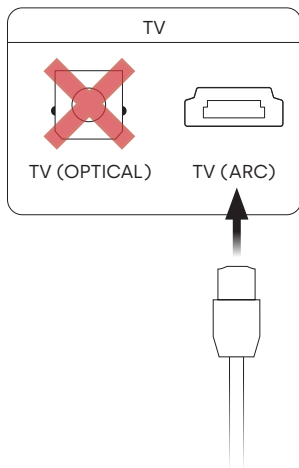

HDMI ARC (RECOMMENDED)

1. Insert one end of the HDMI cable into the TV (ARC) port on the sound bar.
2. Insert the other end of the HDMI cable into the HDMI port labeled TV (ARC) on the TV.

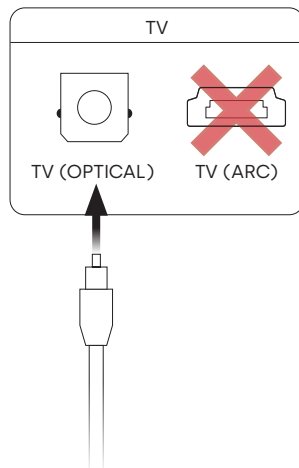


OPTICAL

1. Insert one end of the optical cable into the TV (OPTICAL) port on the sound bar.
2. Insert the other end of the cable into the optical port on the TV.

CONNECT THE POWER

1. Connect the power cable to the power port on the back of the sound bar.
2. Connect the other end of the power cable into an AC power outlet.

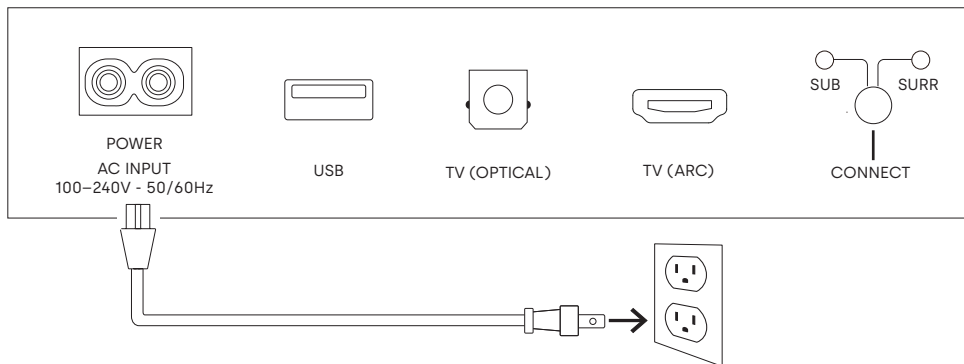


CONNECT TO THE INTERNET

1. Download the Alexa app on your phone and sign in.
2. Make sure Bluetooth permissions on your phone are turned on.
3. In the Alexa app, you should see a pop-up indicating that the device was discovered and ready for setup. Continue to finish setup.
4. If you don't see the popup, go to the Devices page in the Alexa app, click the '+' sign on the top right, and choose Add Device.
5. Choose the Speaker category and the Polk brand on the following screen.
6. Follow the instructions to connect the sound bar to the Internet.


For troubleshooting and more information, visit polkaudio.com/support.

SET UP THE REMOTE

1. Turn the remote to view the back.
2. Open the back cover of the remote by sliding the bottom portion downward.
3. Insert the two AAA batteries into the remote, and replace the cover.

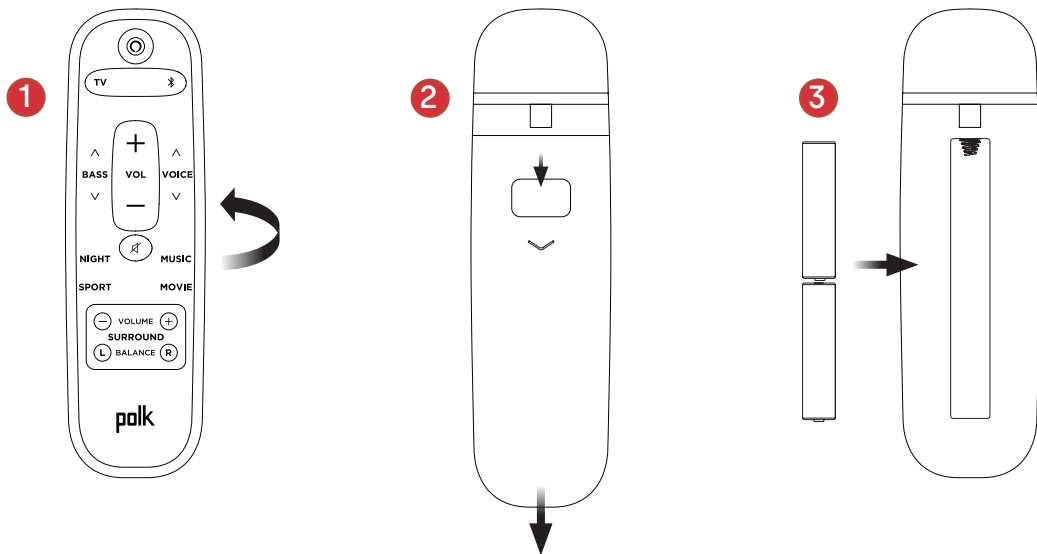

GET TO KNOW POLK REACT CONTROLS

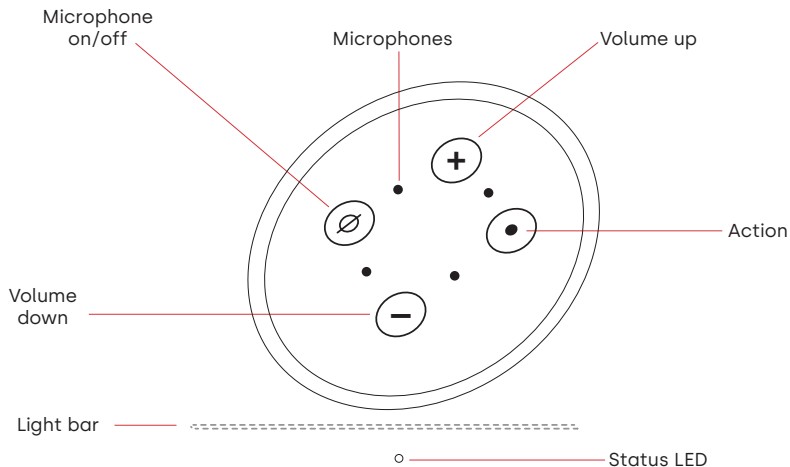

Light bar: The color indicates what Alexa is doing.


Volume buttons: Control the volume of the sound bar.

Action button: Multi-function button used to wake up Alexa.

Microphone on/off: When red, the microphones are disconnected and Alexa is not listening.

Status LED: White—TV input. Purple—Night mode. Orange—PCM audio. Green—Dolby audio. Yellow—DTS audio. Blue—Bluetooth.

GET TO KNOW POLK REACT PORTS

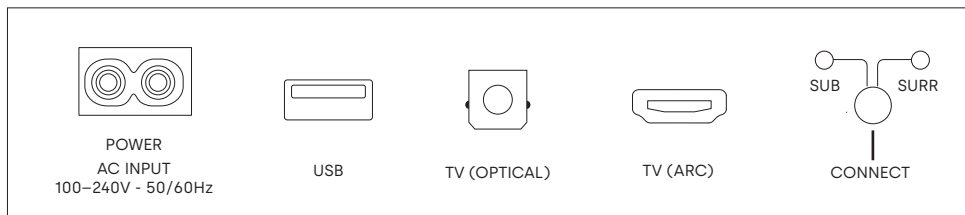

Power: Connect to AC power source


USB: Service use only.

TV (optical): Connect to your TV's optical input.

TV (ARC): Connect to your TV's HDMI ARC input.

Connect: Used to pair the optional subwoofer and surround speakers with the sound bar.

REMOTE CONTROL

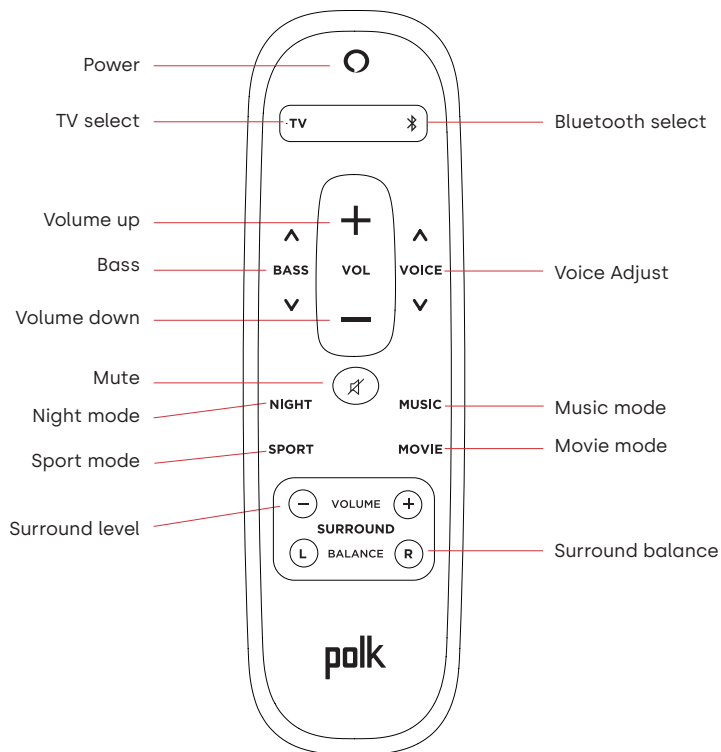

GET THE MOST OUT OF YOUR POLK REACT

Download the Amazon Alexa app

Download the Alexa app from the app store to manage your lists, news, skills, and more.

Talk to Alexa

To learn what phrases you can use with Polk React, say “*Alexa, what can I say*” or go to Things to Try in the Alexa app.

News, weather, and more

Customize these feature in the Alexa app.

Alexa, what's my Flash Briefing?

Alexa, what's the weather?

LISTEN OUT LOUD WITH SPOTIFY® CONNECT



Spotify is all the music you'll ever need. Millions of songs are available instantly. Just search for the music you love, or let Spotify play you something great. Spotify works on your phone, tablet, computer and home speakers, so you'll always have the perfect soundtrack for whatever you're doing. Now you can enjoy Spotify with your free account as well as Premium account. Use your phone, tablet or computer as a remote control for Spotify. Go to [spotify.com/connect](https://www.spotify.com/connect) to learn how.

The Spotify software is subject to third party licenses found here: www.spotify.com/connect/third-party-licenses

TIPS AND TROUBLESHOOTING

I DON'T HAVE AN HDMI PORT LABELED "ARC" ON MY TV.

1. Connect an optical audio cable between the TV and sound bar.
2. Refer to your TV's manual for instructions on how to turn off the TV's internal speakers.

HOW DO I PERFORM A FACTORY RESET?

Press and hold the Action button until the light bar turns orange (for about 25 seconds). The light bar will turn blue indicating the boot sequence has started.

UPDATE THE WI-FI SETTINGS.

1. Press and hold the Action button on the top of the sound bar (for about 10 seconds) until Alexa announces "Now in setup mode".
2. Follow the instructions in the Alexa app.

For best performance, use the 5GHz band on your wireless router if available. Do not place your router in a cabinet, as it may impact wi-fi signal strength.

For more troubleshooting and information, go to www.polkaudio.com/support.

POLK. EXPECT GREAT SOUND.®

5541 Fermi Court
Carlsbad, CA 92008
U.S.A.

800-377-7655(POLK)
www.polkaudio.com


EU Importer: D&M Europe B.V.
Beemdstraat 11, 5653 MA
Eindhoven, The Netherlands

Part No. 54111190000AK
HBP3915A

polk | **REACT SOUND BAR**



Wall Mounting Template

- 1 Make sure you have enough room below your TV to mount the sound bar.

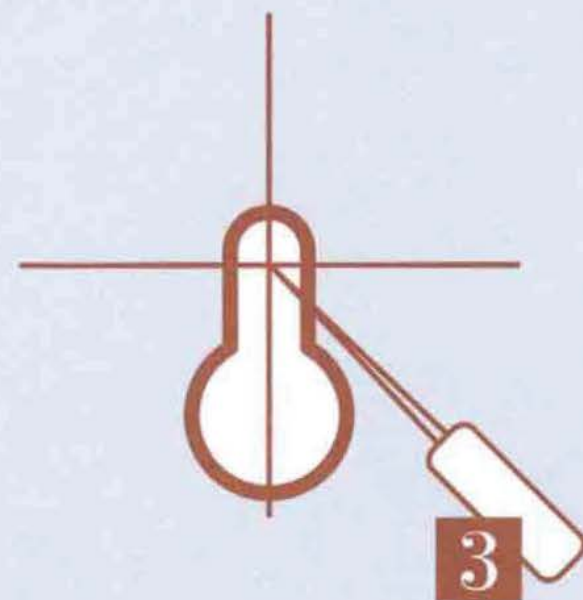



2

Using a level, align and tape this template on the wall at the desired location for your sound bar.

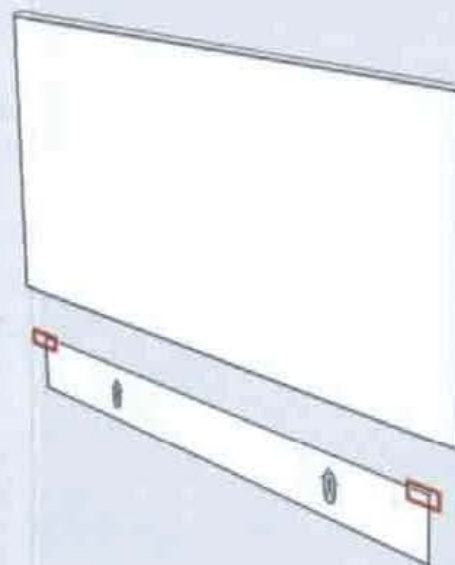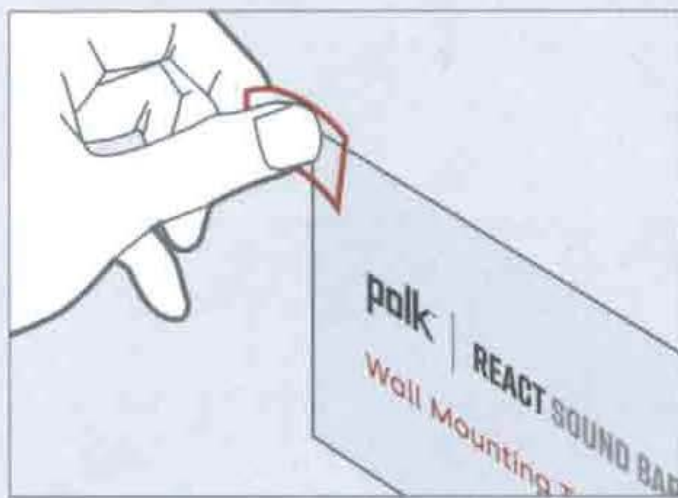


3


Mark the location of the mounting holes with a sharp tool.

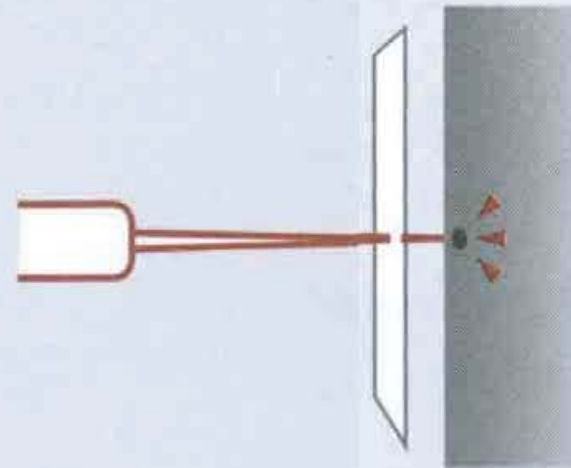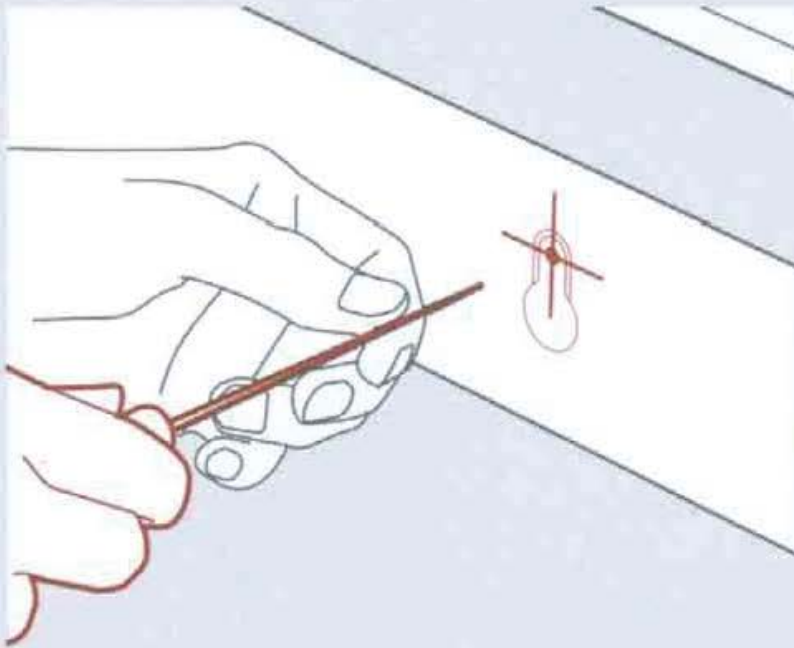

4


Install the proper mounting hardware (not included) for your particular wall surface at the marked locations.

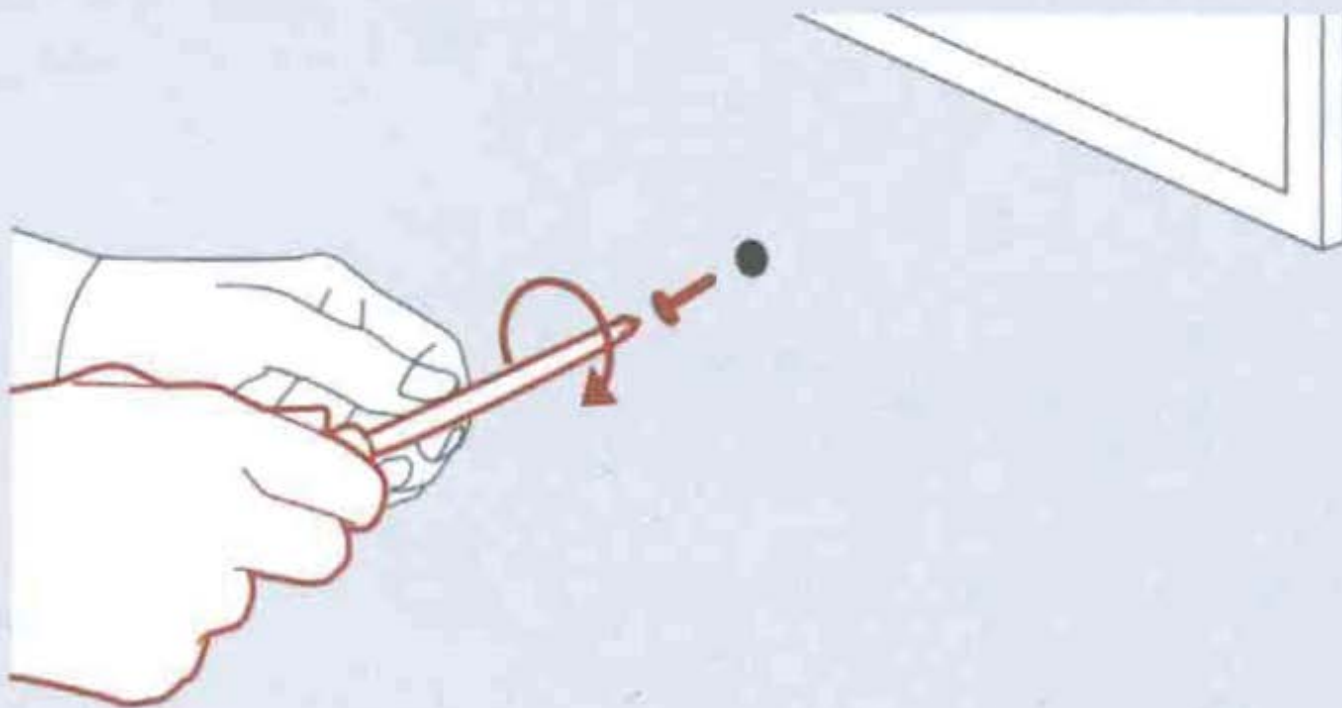

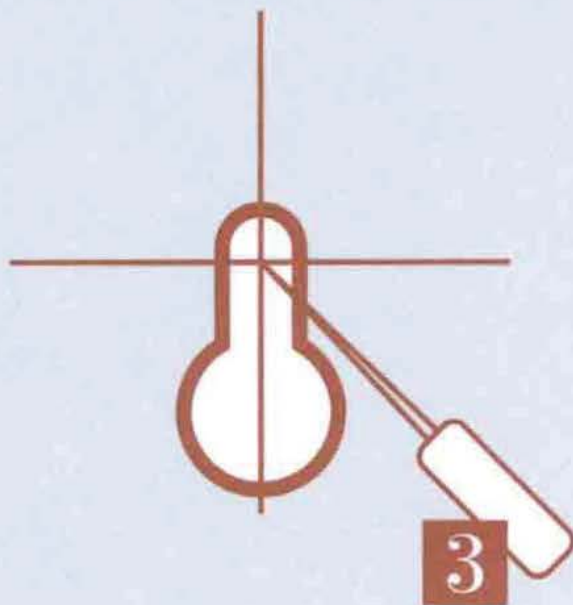


5

Attach the supplied wall mount spacers to the sound bar.

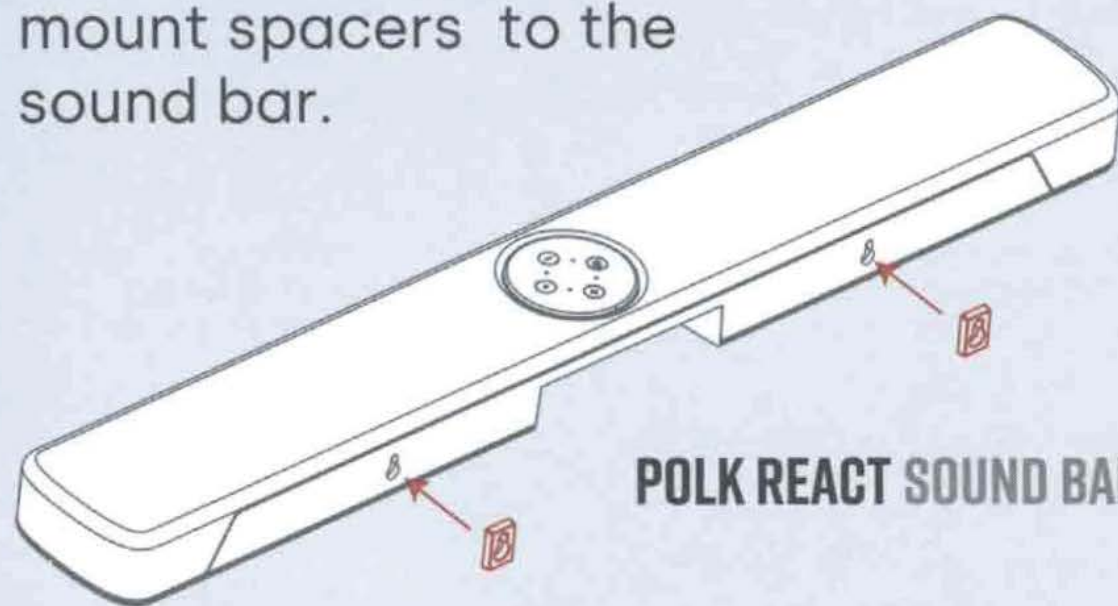

6

Install the sound bar onto the mounting hardware and make sure it is secure.

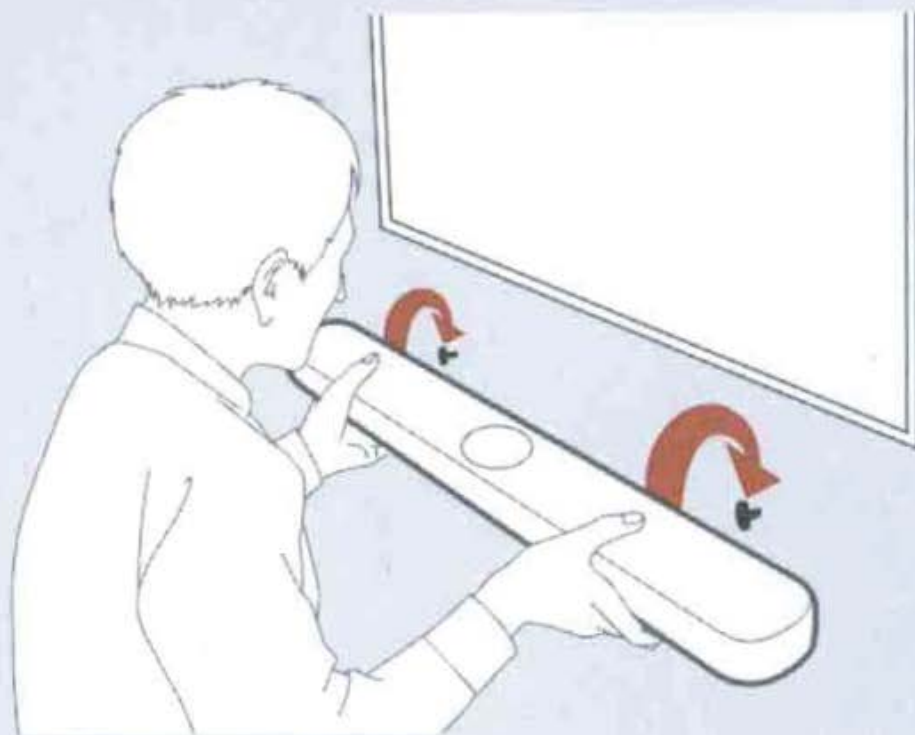

70-P0LKC2-WALB2
919542100130K

polk[®]

REACT

The Home Theater Sound Bar with Alexa Built-in



POLK. EXPECT GREAT SOUND.[®]

www.polkaudio.com



The Home Theater Sound Bar with Alexa Built-in

Big, detailed, virtual surround sound with Alexa built-in. Control the volume, set levels, and adjust sound modes with just your voice while the sound bar makes sure your TV always sounds incredible. Developed by Polk's legendary speaker designers to work with virtually any television and remote control.

SPECIFICATIONS

Inputs	(1) HDMI (ARC) output, optical input for TV audio, Bluetooth, (1) USB-A (for firmware updates), Bluetooth
Drivers	(2) 96mm x 69mm mid-range drivers, (2) 25mm tweeters, (2) 110mm x 100mm passive radiators
Dimensions	Sound Bar: 2.20" H (56mm) x 34.02" W (1066.8mm) x 4.76" D (121mm)
What's in the Box:	• Polk React sound bar • Remote Control • (2) AAA batteries • Sound bar power supply and power cord • 6.5' (2m) high-speed HDMI cable (4k compatible) • 6' (1.8m) Optical cable • Wall-mount template • Quick Start Guide

Build a True 5.1 System



Consumer Benefits

Great Sound for Virtually Any TV

Big, detailed home theater audio and virtual surround sound developed by Polk's legendary speaker designers.

Alexa Built-in

Built-in Alexa acts at your command. Control the volume, set levels, and adjust sound modes with your voice.

Hear Every Word

Adjust the vocal levels from the sound bar with Polk Voice Adjust technology for clear, easy-to-understand dialogue.

Simple Setup

Simple setup through the Alexa app makes it easy to get great quality sound in minutes. HDMI cable included.

Optional Rear Surrounds & Subwoofer

 
 
Unleash true surround sound by adding Polk SR2 wireless rear speakers (sold separately). Push your bass over the top by attaching the wireless Polk React Sub (sold separately).

Amazon Multiroom Music

Group multiple Alexa devices together for a whole home music experience. Play the same music on all devices or play different songs on each device. Control it all with your voice.

Features

- Alexa Built-in for volume control and more
- Works with virtually any TV and remote
- Big virtual 3D surround sound
- Hear every word with Polk Voice Adjust technology
- Night, movie, and music mode pre-sets
- Optional wireless surround speakers and subwoofer
- Low-profile, wall-mountable design
- Required cables included



Polk Audio is a DEI Holdings, Inc. Company. Polk Audio, Polk, are registered trademarks of Polk Audio, LLC.

The terms HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.

For DTS patents, see <http://patents.dts.com>. Manufactured under license from DTS, Inc. DTS, Digital Surround, and the DTS logo are registered trademarks or trademarks of DTS, Inc. in the United States and other countries. © 2020 DTS, Inc. ALL RIGHTS RESERVED.

Amazon, Alexa and all related logos are trademarks of Amazon.com, Inc. or its affiliates.

 
The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Polk Audio is under license. Other trademarks and trade names are those of their respective owners.

Safety Instructions (Read these safety instructions before operating the unit.)


SAFETY PRECAUTIONS



CAUTION:
TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



 The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING:
TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

IMPORTANT SAFETY INSTRUCTIONS

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not block any ventilation openings.
- Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized plug. A polarized plug has two blades with one wider than the other. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.



WARNINGS

NOTES ON USE

- Avoid high temperatures. Allow for sufficient heat dispersion when installed in a rack.
- Handle the power cord carefully. Hold the plug when unplugging the cord.
- Keep the unit free from moisture, water, and dust.
- Unplug the power cord when not using the unit for long periods of time.
- Do not obstruct the ventilation holes.
- Do not let foreign objects into the unit.
- Do not let insecticides, benzene, and thinner come in contact with the unit.
- Never disassemble or modify the unit in any way.
- Ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, tablecloths or curtains.
- Naked flame sources such as lighted candles should not be placed on the unit.
- Observe and follow local regulations regarding battery disposal.
- Do not expose the unit to dripping or splashing fluids.
- Do not place objects filled with liquids, such as vases, on the unit.
- Do not handle the mains cord with wet hands.
- When the switch is in the OFF (STANDBY) position, the equipment is not completely switched off from MAINS.
- The equipment shall be installed near the power supply so that the power supply is easily accessible.
- Do not keep the battery in a place exposed to direct sunlight or in places with extremely high temperatures, such as near a heater.
- Do not bend forcedly the plug on the equipment or the connection between the connector and micro USB/USB cable.

(Only amplifier)



Hot surface mark

CAUTION: HOT SURFACE. DO NOT TOUCH.

The top surface over the internal heat sink may become hot when operating this product continuously. Do not touch hot areas, especially around the "Hot surface mark" and the top panel.

CAUTION:

To completely disconnect this product from the mains, disconnect the plug from the wall socket outlet. The mains plug is used to completely interrupt the power supply to the unit and must be within easy access by the user.

CAUTION:

To prevent electric shock hazard, do not connect to mains power supply while grille is removed.



DECLARATION OF CONFORMITY

Hereby, [Sound United, LLC] declares that our product is in compliance with following EU/CE Directives. The full text of the EU declaration of conformity is available at the following internet address:

ErP: EC regulation 1275/2008 and its frame work directive 2009/125/EC including amendment 801/2013
RoHS: 2011/65/EU, and amendment directive (EU) 2015/863
RE: 2014/53/EU

A NOTE ABOUT RECYCLING:

This product's packaging materials are recyclable and can be reused. Please dispose of any materials in accordance with the local recycling regulations. When discarding the unit, comply with local rules or regulations.

Batteries should never be thrown away or incinerated but disposed of in accordance with the local regulations concerning battery disposal.

This product and the supplied accessories, excluding the batteries, constitute the applicable product according to the WEEE directive.

<EU declaration of conformity URL:
<https://www.polkaudio.com/declarations-of-conformity>>

Sound United, LLC
1 Viper Way Vista, CA 92081 USA
EU contact: Sound United Europe, A division of D&M Europe B.V.
Beemdstraat 11, 5653 MA Eindhoven, The Netherlands

WARNHINWEISE

HINWEISE ZUM GEBRAUCH

- Vermeiden Sie hohe Temperaturen. Erlauben Sie eine ausreichende Belüftung gewährleistet wird, wenn das Gerät auf ein Regal gestellt wird.
- Gehen Sie vorsichtig mit dem Netzkabel um. Halten Sie das Kabel am Stecker, wenn Sie den Stecker herausziehen.
- Halten Sie das Gerät von Feuchtigkeit, Wasser und Staub fern.
- Wenn das Gerät längere Zeit nicht verwendet werden soll, trennen Sie das Netzkabel vom Netzstecker.
- Decken Sie den Lüftungsbereich nicht ab.
- Lassen Sie keine fremden Gegenstände in das Gerät kommen.
- Lassen Sie das Gerät nicht mit Insektiziden, Benzin oder Verdünnungsmitteln in Berührung kommen.
- Versuchen Sie niemals das Gerät auseinander zu nehmen oder zu verändern.
- Die Belüftung sollte auf keinen Fall durch das Abdecken der Belüftungsöffnungen durch Gegenstände wie beispielsweise Zeitungen, Tischtücher, Vorhänge o.Ä. behindert werden.
- Auf dem Gerät sollten keinerlei direkte Feuerquellen wie beispielsweise angezündete Kerzen aufgestellt werden.
- Bitte beachten Sie bei der Entsorgung der Batterien die örtlich geltenden Umweltbestimmungen.
- Das Gerät sollte keiner tropfenden oder spritzenden Flüssigkeit ausgesetzt werden.
- Auf dem Gerät sollten keine mit Flüssigkeit gefüllten Behälter wie beispielsweise Vasen aufgestellt werden.
- Das Netzkabel nicht mit feuchten oder nassen Händen anfassen.
- Wenn der Schalter ausgeschaltet ist (OFF (STANDBY)-Position), ist das Gerät nicht vollständig vom Stromnetz (MAINS) abgetrennt.
- Das Gerät sollte in der Nähe einer Netzsteckdose aufgestellt werden, damit es leicht an das Stromnetz angeschlossen werden kann.
- Lagern Sie die Batterie nicht an einem Ort, an dem sie direktem Sonnenlicht oder extrem hohen Temperaturen ausgesetzt ist, wie z. B. in der Nähe eines Heizgeräts.
- Der Stecker am Gerät darf beim Anschließen des Anschlusses und Micro-USB/USB-Kabels nicht mit Gewalt gebogen werden.

VORSICHT:

HEISSE OBERFLÄCHE. NICHT ANFASSEN.

Die Oberseite über dem inneren Kühlkörper könnte heiß werden, wenn dieses Produkt dauerhaft betrieben wird. Berühren Sie keine heißen Bereiche, hier besonders um die Kennzeichnung "Hot surface mark" und die Oberseite.

VORSICHT:

Um dieses Gerät vollständig von der Stromversorgung abzutrennen, ziehen Sie bitte den Stecker aus der Wandsteckdose. Der Netzstecker wird verwendet, um die Stromversorgung zum Gerät völlig zu unterbrechen; er muss für den Benutzer gut und einfach zu erreichen sein.

VORSICHT:

Stromschlaggefahr: Schließen Sie das Gerät nicht an die Hauptstromversorgung an, wenn das Gitter entfernt ist.

ÜBEREINSTIMMUNGSKLÄRUNG

Hiermit erklärt [Sound United, LLC], dass unser Produkt dar, dass die folgenden EU/CE-Richtlinien entspricht. Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar:

ErP: EG-Vorschrift 1275/2008 und deren Rahmenrichtlinie 2009/125/EC einschließlich Änderung 801/2013
RoHS: 2011/65/EU, und Änderungsrichtlinie (EU) 2015/863
RE: 2014/53/EU

HINWEIS ZUM RECYCLING:

Das Verpackungsmaterial dieses Produktes ist zum Recyceln geeignet und kann wieder verwendet werden. Bitte entsorgen Sie alle Materialien entsprechend der örtlichen Recycling-Vorschriften.

Beachten Sie bei der Entsorgung des Gerätes die örtlichen Vorschriften und Bestimmungen. Die Batterien dürfen nicht in den Hausmüll geworfen oder verbrannt werden; bitte entsorgen Sie die Batterien gemäß der örtlichen Vorschriften. Dieses Produkt und das im Lieferumfang enthaltene Zubehör (mit Ausnahme der Batterien) entsprechen der WEEE-Direktive.

Die Batterien dürfen nicht in den Hausmüll geworfen oder verbrannt werden; bitte entsorgen Sie die Batterien gemäß der örtlichen Vorschriften. Dieses Produkt und das im Lieferumfang enthaltene Zubehör (mit Ausnahme der Batterien) entsprechen der WEEE-Direktive.



Pb

Cautions on installation

- For proper heat dispersal, do not install this unit in a confined space, such as a bookcase or similar enclosure.
 - Amplifier: 0.3 m or more
 - Other units: 0.1 m or more

Vorsichtshinweise zur aufstellung

- Stellen Sie das Gerät nicht an einem geschlossenen Ort, wie in einem Bücherregal oder einer ähnlichen Einrichtung auf, da dies eine ausreichende Belüftung des Geräts behindern könnte.
 - Verstärker: mindestens 0.3 m
 - Andere Geräte: mindestens 0.1 m

AVERTISSEMENTS

OBSERVATIONS RELATIVES A L'UTILISATION

- Eviter des températures élevées. Tenir compte d'une dispersion de chaleur suffisante lors de l'installation sur une étagère.
- Manipuler le cordon d'alimentation avec précaution. Tenir la prise lors du débranchement du cordon.
- Protéger l'appareil contre l'humidité, l'eau et la poussière.
- Débrancher le cordon d'alimentation lorsque l'appareil n'est pas utilisé pendant de longues périodes.
- Ne pas obstruer les trous d'aération.
- Ne pas laisser des objets étrangers dans l'appareil.
- Ne pas mettre en contact des insecticides, du benzène et un diluant avec l'appareil.
- Ne jamais démonter ou modifier l'appareil d'une manière ou d'une autre.
- Ne pas recouvrir les orifices de ventilation avec des objets tels que des journaux, nappes ou rideaux. Cela entraverait la ventilation.
- Ne jamais placer de flamme nue sur l'appareil, notamment des bougies allumées.
- Veillez à respecter les lois en vigueur lorsque vous jetez les piles usagées.
- L'appareil ne doit pas être exposé à l'eau ou à l'humidité.
- Ne pas poser d'objet contenant du liquide, par exemple un vase, sur l'appareil.
- Ne pas manipuler le cordon d'alimentation avec les mains mouillées.
- Lorsque l'interrupteur est sur la position OFF (STANDBY), l'appareil n'est pas complètement déconnecté du SECTEUR (MAINS).
- L'appareil sera installé près de la source d'alimentation, de sorte que cette dernière soit facilement accessible.
- Ne placez pas la pile dans un endroit exposé à la lumière directe du soleil ou dans des endroits présentant des températures extrêmement élevées, par exemple près d'un radiateur.
- Ne pliez pas la fiche sur l'appareil en forçant pour connecter la borne au câble micro USB/USB.

PRECAUTION: SURFACE CHAUDE. NE PAS TOUCHER.

La surface supérieure du dissipateur de chaleur peut devenir chaude si vous utilisez ce produit en continu. Ne touchez pas les zones chaudes, tout particulièrement vers l'inscription "Hot surface mark" et le panneau supérieur.

PRECAUTION:

Pour déconnecter complètement ce produit du courant secteur, débranchez la prise de la prise murale. La prise secteur est utilisée pour couper complètement l'alimentation de l'appareil et l'utilisateur doit pouvoir y accéder facilement.

PRECAUTION:

Pour éviter les dangers d'électrocution, ne connectez pas à une alimentation électrique principale lorsque la grille est retirée.

DECLARATION DE CONFORMITE

Le soussigné, [Sound United, LLC], déclare que notre produit est conforme à la directive UE/CE. Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante:
ErP: Réglementation CE 1275/2008 et sa directive cadre 2009/125/CE comprenant des modifications le règlement 801/2013
RoHS: 2011/65/UE et directive d'amendement (UE) 2015/863
RE: 2014/53/UE

UNE REMARQUE CONCERNANT LE RECYCLAGE:

Les matériaux d'emballage de ce produit sont recyclables et peuvent être réutilisés. Veuillez disposer des matériaux conformément aux lois sur le recyclage en vigueur.

Lorsque vous mettez cet appareil au rebut, respectez les lois ou réglementations en vigueur. Les piles ne doivent jamais être jetées ou incinérées, mais mises au rebut conformément aux lois en vigueur sur la mise au rebut des piles.

Ce produit et les accessoires inclus, à l'exception des piles, sont des produits conformes à la directive DEEE.

AVVERTENZE

NOTE SULL'USO

- Evitare di esporre l'unità a temperature elevate. Assicuratevi che ci sia un'adeguata dispersione del calore quando installate l'unità in un mobile per componenti audio.
- Maneggiate il cavo di alimentazione con attenzione. Tenete ferma la spina quando scollegate il cavo dalla presa.
- Tenete l'unità lontana dall'umidità, dall'acqua e dalla polvere.
- Scollegate il cavo di alimentazione quando prevedete di non utilizzare l'unità per un lungo periodo di tempo.
- Non coprite i fori di ventilazione.
- Non inserite corpi estranei all'interno dell'unità.
- Assicuratevi che l'unità non entri in contatto con insetticidi, benzolo o solventi.
- Non smontate né modificate l'unità in alcun modo.
- Le aperture di ventilazione non devono essere ostruite coprendole con oggetti, quali giornali, tovaglie, tende e così via.
- Non posizionare sull'unità fiamme libere, come ad esempio candele accese.
- Prestate attenzione agli aspetti legati alla tutela dell'ambiente nello smaltimento delle batterie.
- L'apparecchiatura non deve essere esposta a goccioli o spruzzi.
- Non posizionare sull'unità alcun oggetto contenente liquidi, come ad esempio i vasi.
- Non toccare il cavo di alimentazione con le mani bagnate.
- Quando l'interruttore è nella posizione OFF (STANDBY), l'apparecchiatura non è completamente scollegata da MAINS.
- L'apparecchio va installato in prossimità della fonte di alimentazione, in modo che quest'ultima sia facilmente accessibile.
- Non tenere la batteria in luoghi esposti alla luce solare diretta o con temperature estremamente elevate, ad esempio in prossimità di dispositivi di riscaldamento.
- Non piegare con forza lo spinotto sull'apparecchio per effettuare il collegamento tra il connettore e il cavo micro USB/USB.

ATTENZIONE: SUPERFICIE CALDA. NON TOCCARE.

La superficie superiore al di sopra del dissipatore interno può riscaldarsi quando si adopera questo prodotto in maniera continuativa. Non toccare parti calde, in particolare quelle intorno alla dicitura "Hot surface mark" e al pannello superiore.

ATTENZIONE:

Per scollegare completamente questo prodotto dalla rete di alimentazione elettrica, scollegate la spina dalla relativa presa a muro. La spina di rete viene utilizzata per interrompere completamente l'alimentazione all'utente e deve essere facilmente accessibile all'utente.

ATTENZIONE:

Per evitare il rischio di scosse elettriche, non collegare all'alimentazione elettrica mentre la griglia è rimossa.

DICHIARAZIONE DI CONFORMITÀ


Il fabbricante, [Sound United, LLC], dichiara che il nostro prodotto è conforme alla direttiva UE/CE. Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet:
ErP: Norma CE 1275/2008 e relativa legge quadro 2009/125/CE compresi i recante modifica del regolamento 801/2013
RoHS: 2011/65/UE e direttiva delegata (UE) 2015/863
RE: 2014/53/UE

NOTA RELATIVA AL RICICLAGGIO:

I materiali di imballaggio di questo prodotto sono riutilizzabili e riciclabili. Smaltite i materiali conformemente alle normative locali sul riciclaggio. Per lo smaltimento dell'unità, osservare le normative o le leggi locali in vigore.


Non gettare le batterie, né incenerirle, ma smaltirle conformemente alla normativa locale sui rifiuti chimici.

Questo prodotto e gli accessori inclusi nell'imballaggio sono applicabili alla direttiva RAEE, ad eccezione delle batterie.

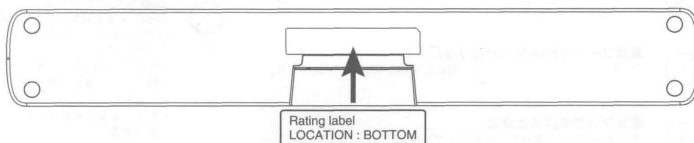


Cautions on Installation

When mounting the speakers on a wall

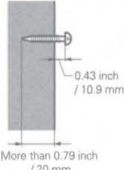- The speakers can be mounted on a wall using the keyhole hook on its rear panel.
 - When you mount the speakers, be sure to install them properly and securely.
1. Screw in one self-tapping screw (commercially available, 0.20 inch / 5 mm to 0.24 inch / 6 mm diameter) into a wall that has sufficient strength to support the weight of the speaker, or into reinforcing material on the wall.
 2. Hook the keyhole hook on the back of the speaker onto the head of the self-tapping screw.
- 
- Check that the head of the self-tapping screw hooks securely into the keyhole hook hole.
 - Do not attempt to install this product onto a wall made of material that may crumble easily, such as mortar or decorative plywood. Doing so may result in the screw pulling out and speaker falling, causing damage to the speaker or injury.
 - Do not install the speaker using other methods such as nails or double-sided tape. The nails may become loose due to vibration or the double-sided tape may peel off due to prolonged use, causing the speaker to fall.
 - Be sure to fix the cables in place so that they cannot be pulled or tripped over by accident.
 - Be sure to check that the product is safe after installation. Please note that we cannot accept any liability for accidents, etc. that occur as a result of where or how this product is installed. If you are unsure of how to install this product safely, request a professional contractor do the installation work.

 Wandmontage der Lautsprecher

- Mit Hilfe der Schlüsseloch-Aufhängung auf der Rückseite können die Lautsprecher an einer Wand montiert werden.
 - Achten Sie bei der Montage der Lautsprecher auf die ordnungsgemäße und sichere Installation.
1. Drehen Sie eine selbstschneidende Schraube (im Handel mit einem Durchmesser von 5 bis 6 mm erhältlich) in eine Wand, deren Stärke für das Gewicht des Lautsprechers ausreicht, oder in ein Verstärkungsmaterial an der Wand.
 2. Führen Sie die Schlüsseloch-Aufhängung an der Rückseite des Lautsprechers über den Kopf der selbstschneidenden Schraube.
- 
- Überprüfen Sie, ob der Kopf der selbstschneidenden Schraube sicher in der Schlüsseloch-Aufhängung sitzt.
 - Versuchen Sie nicht, dieses Produkt an einer Wand aus leicht bröselndem Material zu installieren, z.B. Mörtel oder Sperrholz. Andernfalls kann sich die Schraube lösen und der Lautsprecher herabfallen, wobei es zu Schäden am Lautsprecher oder Verletzungen kommen kann.
 - Verwenden Sie für den Lautsprecher keine andere Installationsmethode, wie Nägel oder doppelseitiges Klebeband. Die Nägel können sich durch Vibrationen lösen und das doppelseitige Klebeband kann nach längerer Verwendung abblättern, so dass der Lautsprecher herabfällt.
 - Bitte fixieren Sie die Kabel so, dass sie nicht unabsichtlich gezogen werden können und dass niemand darüber stolpern kann.
 - Vergewissern Sie sich nach der Installation, dass das Produkt sicher ist. Bitte beachten Sie, dass wir für Unfälle, usw. aufgrund des Installationsortes oder der Installationsmethode keine Haftung übernehmen können. Wenn Sie sich nicht sicher sind, wie Sie dieses Gerät sicher installieren, beauftragen Sie einen Fachmann mit der Installation.

Cautions on Using Batteries

CAUTIONS ON USING BATTERIES

- There is a possibility of smoke, fire, explosion from the battery. Please note as following.
- Insert the specified batteries in the remote control unit.
 - Replace the batteries with new ones if the set does not operate even when the remote control unit is operated close to the unit. (The supplied batteries are only for verifying operation. Replace them with new batteries at an early date.)
 - When inserting the batteries, be sure to do so in the proper direction, following the ⊕ and ⊖ marks in the battery compartment.
 - To prevent damage or leakage of battery fluid:
 - Do not use a new battery together with an old one.
 - Do not use two different types of batteries.
 - Do not attempt to charge dry batteries.
 - Do not short-circuit, disassemble, heat or dispose of batteries in flames.
 - Do not keep the battery in a place exposed to direct sunlight or in places with extremely high temperatures, such as near a heater.
 - If the battery fluid should leak, carefully wipe the fluid off the inside of the battery compartment and insert new batteries.
 - Remove the batteries from the remote control unit if it will not be in use for long periods.
 - Used batteries should be disposed of in accordance with the local regulations regarding battery disposal.
 - The remote control unit may function improperly if rechargeable batteries are used.

WARNHINWEISE BEZÜGLICH BATTERIEN

- Es kann bei der Batterie zur Rauchentwicklung, einem Brand oder einer Explosion kommen. Bitte beachten Sie Folgendes.
- Legen Sie die vorgeschriebenen Batterien in die Fernbedienung ein.
 - Tauschen Sie die Batterien aus, wenn das Gerät nicht bedient werden kann, obwohl die Fernbedienung direkt vor dem Gerät betätigt wird. (Die im Lieferumfang enthaltenen Batterien dienen nur der Überprüfung der Funktionstüchtigkeit. Ersetzen Sie sie rechtzeitig durch neue Batterien.)
 - Beachten Sie beim Einsetzen der Batterien die richtige Polung, die mit den Symbolen ⊕ und ⊖ im Batteriefach angegeben ist.
 - Beachten Sie folgende Hinweise, um Schäden oder ein Auslaufen der Batterien zu vermeiden:
 - Verwenden Sie neue und alte Batterien nicht zusammen.
 - Verwenden Sie nicht zwei unterschiedliche Batteriearten.
 - Versuchen Sie nicht, Trockenbatterien aufzuladen.
 - Batterien dürfen nicht kurzgeschlossen, zerlegt, aufgeheizt oder ins Feuer geworfen werden.
 - Lagern Sie die Batterie nicht an einem Ort, an dem sie direktem Sonnenlicht oder extrem hohen Temperaturen ausgesetzt ist, wie z. B. in der Nähe eines Heizgeräts.
 - Wenn eine Batterie ausläuft, wischen Sie die Flüssigkeit im Batteriefach sorgfältig auf, und legen Sie neue Batterien ein.
 - Nehmen Sie die Batterien aus der Fernbedienung, wenn diese längere Zeit nicht benutzt wird.
 - Verbrauchte Batterien müssen entsprechend der örtlichen Bestimmungen bezüglich Batterie-Abfallbeseitigung entsorgt werden.
 - Die Funktion der Fernbedienung kann bei Verwendung von Akkus beeinträchtigt sein.



Notes on Radio

USA CANADA

☐ FCC Information (For US customers)

1. COMPLIANCE INFORMATION

- **Product Name:**
Sound Bar
- **Model Number:**
POLK REACT
- **THIS PRODUCT'S FCC ID:**
WLQREACT

This product complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this product may not cause harmful interference, and (2) this product must accept any interference received, including interference that may cause undesired operation.

Sound United, LLC
1 Viper Way Vista, CA 92081
Tel. (800) 377-7655

2. IMPORTANT NOTICE: DO NOT MODIFY THIS PRODUCT

This product, when installed as indicated in the instructions contained in this manual, meets FCC requirements. Modification not expressly approved by Polk may void your authority, granted by the FCC, to use the product.

3. IMPORTANT (For Network)

When connecting this product to network hub or router, use only a shielded STP or ScTP LAN cable which is available at retailer. Follow all installation instructions. Failure to follow instructions could void your authority, granted by the FCC, to use the product.

4. CAUTION (For Bluetooth/Wi-Fi)

- To comply with FCC RF exposure compliance requirement, separation distance of at least 20 cm must be maintained between this product and all persons.
- This product and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter.
- 5.15-5.25 GHz band is restricted to indoor operations only.

5. NOTE

This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception, which can be determined by turning the product OFF and ON, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the local retailer authorized to distribute this type of product or an experienced radio/TV technician for help.

☐ INFORMATION FCC (Pour la clientèle étasunienne)

1. INFORMATIONS DE CONFORMITE

- **Nom du produit :**
Barre de Son
- **Numéro de modèle :**
POLK REACT
- **FCC ID DE CE PRODUIT :**
WLQREACT

Ce produit est conforme à la section 15 du règlement FCC. L'utilisation est soumise aux deux conditions suivantes : (1) ce produit ne provoque pas d'interférences nocives et (2) ce produit doit accepter toute interférence, y compris les interférences pouvant entraîner un fonctionnement non souhaitable.

Sound United, LLC
1 Viper Way Vista, CA 92081
Tel. (800) 377-7655

2. REMARQUE IMPORTANTE : NE PAS MODIFIER CE PRODUIT

Ce produit, lorsqu'il est installé comme indiqué dans les instructions de ce manuel, est conforme aux normes FCC. Les modifications qui ne sont pas expressément approuvées par Polk peuvent annuler l'autorisation FCC à utiliser le produit.

3. IMPORTANT (Pour réseau)

Lors du branchement de ce produit à un routeur ou à un concentrateur réseau, n'utilisez qu'un câble STP ou ScTP LAN blindé (disponible chez un détaillant). Suivre toutes instructions d'installation. Dans le cas contraire, cela pourrait annuler l'autorisation FCC à utiliser cet appareil.

4. PRECAUTION (Pour Bluetooth/Wi-Fi)

- Afin de répondre aux exigences de conformité FCC sur l'exposition aux RF, une distance d'au moins 20 cm doit être maintenue entre cet appareil et toutes les personnes.
- Cet appareil ainsi que son antenne ne doivent pas se trouver à proximité immédiate, ni être utilisés en association avec une autre antenne ou un autre émetteur.
- La bande 5,15-5,25 GHz est limitée uniquement à une utilisation en intérieur.

5. NOTE

Ce produit a été testé et il est conforme aux limitations des dispositifs numériques de Class B, en vertu de la section 15 du règlement FCC. Ces limitations sont conçues pour fournir une protection raisonnable contre les interférences nocives sur une installation résidentielle.

Ce produit génère, utilise et émet de l'énergie de radiofréquence et s'il n'est pas installé et utilisé conformément aux instructions, il peut entraîner des interférences néfastes avec les communications radio. Toutefois, nous ne pouvons pas garantir l'absence d'interférence avec certaines installations. En cas d'interférences néfastes sur la réception de la radio ou de la télévision provoquées par cet appareil, survenant au moment de l'activation ON ou de la désactivation OFF, nous conseillons à l'utilisateur d'essayer de corriger l'interférence comme suit :

- Réorienter ou déplacer l'antenne.
- Augmenter la distance entre l'équipement et le récepteur.
- Connecter l'appareil à la prise murale d'un circuit différent de celui du récepteur.
- Consulter un revendeur local agréé pour la distribution de ce type de produit ou un technicien radio/TV expérimenté.

☐ IC Information (For Canadian customers)

1. PRODUCT

- **Product Name:** Sound Bar
- **Model Number:**
POLK REACT
- **THIS PRODUCT'S IC:**
7956A-REACT

This product complies with RSS rule of Industry Canada. Operation is subject to the following two conditions: (1) this product may not cause harmful interference, and (2) this product must accept any interference received, including interference that may cause undesired operation. This Class B digital apparatus complies with Canadian ICES-003.

2. CAUTION

To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that permitted for successful communication.

- (i) the device for operation in the band 5,150 – 5,250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems.
- (ii) high-power radars are allocated as primary users (i.e. priority users) of the bands 5,250 – 5,350 MHz and 5,650 – 5,850 MHz and that these radars could cause interference and/or damage to LE-LAN devices.

☐ Informations sur IC (pour les clients canadiens)

1. APPAREIL

- **Nom du produit:**
Barre de Son
- **Numéro de modèle:**
POLK REACT
- **IC DE CE PRODUIT:**
7956A-REACT

Cet appareil est conforme à la norme CNR règle du Canada. L'utilisation de ce dispositif est autorisée seulement aux deux conditions suivantes : (1) il ne doit pas produire de brouillage, et (2) l'utilisateur du dispositif doit être prêt à accepter tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre le fonctionnement du dispositif. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

2. ATTENTION

Afin de réduire le risque d'interférence aux autres utilisateurs, il faut choisir le type d'antenne et son gain de façon à ce que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne soit pas supérieure au niveau requis pour l'obtention d'une communication satisfaisante.

- (i) les dispositifs fonctionnant dans la bande 5 150 – 5 250 MHz sont réservés uniquement pour une utilisation à l'intérieur afin de réduire les risques de brouillage préjudiciable aux systèmes de satellites mobiles utilisant les mêmes canaux.
- (ii) De plus, les utilisateurs devraient aussi être avisés que les utilisateurs de radars de haute puissance sont désignés utilisateurs principaux (c.-à-d., qu'ils ont la priorité) pour les bandes 5 250 – 5 350 MHz et 5 650 – 5 850 MHz et que ces radars pourraient causer du brouillage et/ou des dommages aux dispositifs LAN-EL.

**For Canadian customers/Pour les clients canadiens :
CAN ICES-3(B)/NMB-3(B)**

☐ RF Exposure Information

This equipment complies with FCC/IC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines in Supplement C to OET65 and RSS-102 of the IC radio frequency (RF) Exposure rules. This equipment has very low levels of RF energy that are deemed to comply without testing of specific absorption ratio (SAR).

This equipment should be installed and operated with minimum distance 20 cm between the radiator and your body.

Cet équipement est conforme aux normes d'exposition aux radiations FCC/IC définies pour un environnement non contrôlé et satisfait les directives d'exposition à la radiofréquence (RF) dans le supplément C des OET65 et RSS-102 des règles d'exposition à la fréquence radio (RF) IC. Cet équipement a de très faibles niveaux d'énergie RF qui sont jugés conformes sans test de taux d'absorption spécifique (SAR). Cet équipement doit être installé et utilisé avec une distance minimale de 20 cm entre le radiateur et votre corps.

[ENGLISH]

1. DECLARATION OF CONFORMITY

Hereby, [Sound United, LLC] declares that our product [Product Name: Sound Bar, Model Number: POLK REACT] is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: <https://www.polkaudio.com/declarations-of-conformity>

2. IMPORTANT NOTICE: DO NOT MODIFY THIS PRODUCT

This product, when installed as indicated in the instructions contained in this manual, meets RE directive requirements. Modification of the product could result in hazardous Radio and EMC radiation.

3. CAUTION

Separation distance of at least 20 cm must be maintained between this product and all persons. This product and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter.

[DEUTSCH]

1. ÜBEREINSTIMMUNGSERKLÄRUNG

Hiermit erklärt [Sound United, LLC], dass unser Produkt [Produktname: Soundbar, Modellnummer: POLK REACT] der Richtlinie 2014/53/EU entspricht. Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar: <https://www.polkaudio.com/declarations-of-conformity>

2. WICHTIGER HINWEIS: NEHMEN SIE KEINE VERÄNDERUNGEN AN DIESEM PRODUKT VOR

Wenn dieses Produkt entsprechend dieser Bedienungsanleitung aufgebaut wird, entspricht es den Anforderungen der RE-Richtlinie. Veränderungen am Produkt können zu gefährlicher Funk- und EMV-Strahlung führen.

3. VORSICHT

Zwischen dieses Produkts und Personen muss ein Schutzabstand von 20 cm eingehalten werden. Dieses Produkt und seine Antenne dürfen nicht neben anderen Antennen oder Sendern aufgestellt oder zusammen mit ihnen verwendet werden.

[FRANÇAIS]

1. DECLARATION DE CONFORMITE

Le soussigné, [Sound United, LLC], déclare que notre produit [Nom du produit: Barre de Son, Numéro de modèle: POLK REACT] est conforme à la directive 2014/53/UE. Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante : <https://www.polkaudio.com/declarations-of-conformity>

2. MISE EN GARDE IMPORTANTE : NE JAMAIS MODIFIER CE PRODUIT

Si toutes les consignes indiquées dans ce mode ont été respectées pendant son installation, ce produit est conforme aux directives RE. Toute modification du produit risquerait alors de générer des radiations radio et EMC dangereuses.

3. ATTENTION

L'appareil devra être située à une distance de 20 cm au moins des personnes. Ce produit ainsi que son antenne ne devront en aucun cas être utilisés à proximité d'une autre antenne ou transmetteur.

[ITALIANO]

1. DICHIARAZIONE DI CONFORMITÀ

Il fabbricante, [Sound United, LLC], dichiara che il nostro prodotto [Nome del prodotto: Sound Bar, Numero di modello: POLK REACT] è conforme alla direttiva 2014/53/UE. Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet: <https://www.polkaudio.com/declarations-of-conformity>

2. AVVERTENZA IMPORTANTE: NON MODIFICARE QUESTO PRODOTTO

Se installato come indicato nelle istruzioni del presente manuale, questo prodotto soddisfa i requisiti della direttiva RE. Eventuali modifiche apportate al prodotto potrebbero causare pericolose radiazioni radio ed EMC.

3. ATTENZIONE

È necessario mantenere una distanza minima di 20 cm tra questo prodotto e le persone. Questo prodotto e la relativa antenna non devono essere posizionati in prossimità di altre antenne o trasmettitori e non devono essere utilizzati congiuntamente a questi ultimi.

[ESPAÑOL]

1. DECLARACIÓN DE CONFORMIDAD

Por la presente, [Sound United, LLC], declara que nuestro producto [Nombre del producto: Barras de sonido, Número de modelo: POLK REACT] es conforme con la Directiva 2014/53/UE. El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente: <https://www.polkaudio.com/declarations-of-conformity>

2. NOTA IMPORTANTE: NO MODIFIQUE ESTE PRODUCTO

Este producto, si es instalado de acuerdo con las instrucciones contenidas en este manual, cumple los requisitos de la directiva RE. La modificación del producto puede producir radiación de Radio y EMC peligrosa.

3. PRECAUCIÓN

Se debe mantener una separación de al menos 20 cm del producto y las personas. Este producto y su antena no debe instalarse ni utilizarse conjuntamente con otra antena o transmisor.

[NEDERLANDS]

1. EENVORMIGHEIDSVERKLARING

Hierbij verklaar ik, [Sound United, LLC], dat ons product [Productnaam: Soundbar, Modelnummer: POLK REACT] conform is met Richtlijn 2014/53/EU. De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres: <https://www.polkaudio.com/declarations-of-conformity>

2. BELANGRIJKE MEDEDELING: BRENG AAN DIT PRODUCT GEEN AANPASSINGEN AAN

Dit product, indien geïnstalleerd volgens de aanwijzingen in deze gebruiksaanwijzing, voldoet aan de vereisten van de RE-richtlijn. Aanpassing van dit product kan gevaarlijke radio- en EMC-straling tot gevolg hebben.

3. LET OP

Houd tussen en personen altijd een afstand van tenminste 20 cm aan. Dit product en zijn antenne mogen niet in de buurt van een andere antenne of zender worden geplaatst of in combinatie daarmee worden gebruikt.

[SVENSKA]

1. ÖVERENSSTÄMMELSEINTYG

Härmed försäkrar [Sound United, LLC], att vår produkt [Produktnamn: Soundbar, Modellnummer: POLK REACT] överensstämmer med direktiv 2014/53/EU. Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress: <https://www.polkaudio.com/declarations-of-conformity>

2. VIKTIGT: APPARATEN FÅR INTE MODIFIERAS

Under förutsättning att apparaten installeras enligt anvisningarna i denna bruksanvisning, uppfyller denna kraven i RE-direktivet. Ev. modifiering av apparaten kan resultera i farlig radio- och elektromagnetisk strålning.

3. FÖRSIKTIGT

Se till att det finns ett avstånd på minst 20 cm mellan apparatens och personer i omgivningen. Apparaten och dess antenn får inte placeras eller användas i närheten av andra antenner eller sändare.

[РУССКИЙ]

1. СЕРТИФИКАТ СООТВЕТСТВИЯ

Настоящим, [Sound United, LLC], заявляет, что наш продукт [Наименование товара: Саундбар, Номер модели: POLK REACT] соответствует Директиве 2014/53/ЕU. Полный текст декларации соответствия ЕС можно получить по следующему интернет-адресу: <https://www.polkaudio.com/declarations-of-conformity>

2. ВАЖНО! НЕ ИЗМЕНЯЙТЕ ДАННЫЙ ПРОДУКТ

Продукт, установленный согласно инструкциям в настоящем руководстве, отвечает требованиям директивы RE. Изменение продукта может привести к появлению опасного электромагнитного излучения.

3. ПРЕДУПРЕЖДЕНИЕ

Не приближайтесь к данному изделия ближе, чем на 20 см. Запрещается использовать данный продукт и антенну с другой антенной или передатчиком.

[POLSKI]

1. DEKLARACJA ZGODNOŚCI

[Sound United, LLC], niniejszym oświadczam, że nasz produkt [Nazwa produktu: Soundbar, Numer modelu: POLK REACT] jest zgodny z dyrektywą 2014/53/UE. Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym: <https://www.polkaudio.com/declarations-of-conformity>

2. UWAGA: MODYFIKACJA TEGO URZĄDZENIA JEST ZABRONIONA

Po zainstalowaniu zgodnie z instrukcjami zawartymi w niniejszej instrukcji obsługi urządzenie to będzie spełniać wymogi dyrektywy RE. Wprowadzenie modyfikacji do tego urządzenia może skutkować powstaniem niebezpiecznego promieniowania elektromagnetycznego oraz radiowego.

3. OSTRZEŻENIE

Miedzy tego produktu i wszelkimi osobami musi być zachowana odległość przynajmniej 20 cm. Urządzenia wraz z anteną nie można instalować w połączeniu z inną anteną lub nadajnikiem.

<EU declaration of conformity URL:

<https://www.polkaudio.com/declarations-of-conformity>

Sound United, LLC

1 Viper Way Vista, CA 92081 USA

EU contact: Sound United Europe, A division of D&M Europe B.V.
Beemdstraat 11, 5653 MA Eindhoven, The Netherlands

Radio Specification (for Europe model)

Type	Frequency Range	Max. RF Power
Bluetooth	2,402 - 2,480 MHz	20 dBm
WLAN (2.4GHz)	2,400 - 2,483.5 MHz	20 dBm
WLAN (5GHz/W52)	5,150 - 5,250 MHz	23 dBm
WLAN (5GHz/W53)	5,250 - 5,350 MHz	23 dBm
WLAN (5GHz/W56)	5,470 - 5,725 MHz	30 dBm
Wireless Module (BAR/SUB/SURROUNDS)	2,400 - 2,483.5 MHz	20 dBm

Note: The above specification is based on the RE Directive.
There is a possibility to varies by countries.

[ENGLISH]

5,150 – 5,350 MHz is restricted to indoor use only

[DEUTSCH]

5,150 – 5,350 MHz darf nur in geschlossenen Räumen verwendet werden

[FRANÇAIS]

5,150 - 5,350 MHz est limité à une utilisation en intérieur uniquement

[ITALIANO]

La frequenza 5,150 – 5,350 MHz è limitata al solo uso interno

[ESPAÑOL]

5,150 – 5,350 MHz está restringido al uso en interiores solamente

[NEDERLANDS]

5,150 – 5,350 MHz is beperkt tot alleen binnenshuis gebruik

[SVENSKA]

5,150 – 5,350 MHz är begränsat till inomhusbruk

[РУССКИЙ]

5150 – 5350 МГц ограничивается использованием только в помещении

[POLSKI]

5,150 – 5,350 MHz to częstotliwość ograniczona do użytkowania jedynie w pomieszczeniach



UK	DE	FR	IT
ES	NL	SE	PL



MODEL POLK REACT
SERIAL PBDB012101354

Register your new Polk product online:
www.polkaudio.com/registration/

Registering your product creates a permanent record of your purchase and ensures you are notified of important product information and updates.

We take privacy seriously and do not share or sell registration information (see privacy policy for more details):
www.polkaudio.com/privacy-policy

No Internet? Need help registering your product or just have questions?
Contact Polk Customer Service.

For US and Canada call:

+1 800-377-POLK (7655) or +1 410-358-3600

Email: polkcs@polkaudio.com

Outside of the US:

UK +44 2890279830

NL +31 402507800

DE +49 215712080

Email: polk-eu@mailmw.custhelp.com



Enregistrez en ligne votre nouveau produit Polk :
www.polkaudio.com/registration/

L'enregistrement de votre produit crée un enregistrement permanent de votre achat et garantit que vous êtes informé des informations importantes et des mises à jour du produit.

Nous prenons très au sérieux la confidentialité et nous ne partageons pas les données d'enregistrement (voir la politique de confidentialité pour plus de détails) :
www.polkaudio.com/privacy-policy

Vous n'avez pas Internet? Vous avez besoin d'aide pour enregistrer votre produit?
Ou, vous avez des questions?

Pour les appels aux É.-U. et au Canada :

+1 800-377-POLK (7655) or +1 410-358-3600

Envoyez un courriel à : polkcs@polkaudio.com

À l'extérieur des É.-U. :

UK +44 2890279830

NL +31 402507800

DE +49 215712080

Envoyez un courriel à : polk-eu@mailmw.custhelp.com



72-PKC2US-REGB2

SU105036



REACT SUB

WIRELESS SUBWOOFER

Quick Start Guide

THANK YOU FOR YOUR POLK® PURCHASE!

If you have a question or comment, please feel free to contact us.

TECHNICAL ASSISTANCE


North America:	800-377-POLK (7655)
United Kingdom and Ireland:	+44 2890279830
Netherlands:	+31 402507800
Other countries:	+1-410-358-3600

Email: polkcs@polkaudio.com
Polk FAQs: polk.custhelp.com

In all other countries, refer to **polk-eu@mailmw.custhelp.com** for support contact details.

Polk Audio is a DEI Holdings, Inc. company. Polk Audio and Polk are registered trademarks of Polk Audio, LLC. All other trademarks, product names, logos, and brands referenced herein are the property of their respective owners.

WHAT'S IN THE BOX

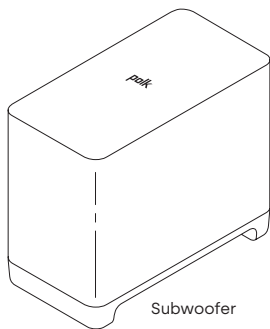


Power cable




Product literature

POSITION YOUR SUBWOOFER

1. Unpack the subwoofer and power cable.

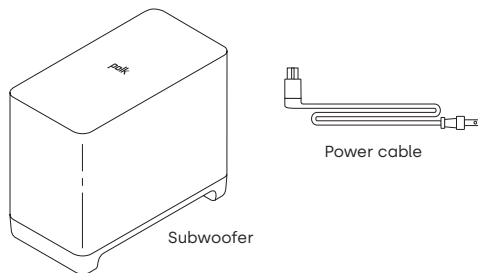


2. Place the subwoofer along the same wall as the TV, no more than 30 ft (10m) from the sound bar.
3. Connect the power cord to the back of the subwoofer.
4. Connect the other end of the power cord into an AC power outlet.

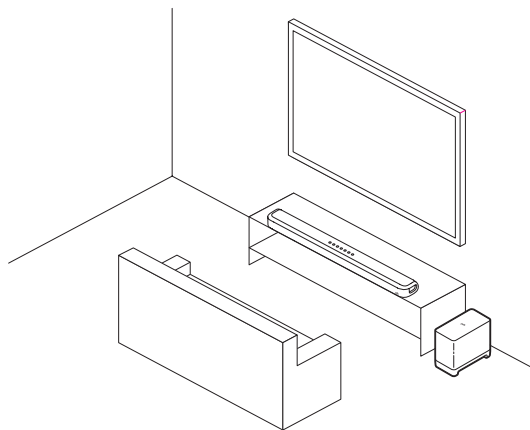

CONNECT YOUR SUBWOOFER


Enter pairing mode on the sound bar

1. Press and hold the CONNECT button on the back of the sound bar for about four seconds.

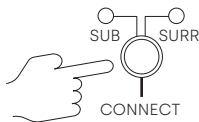

Connect the subwoofer

2. Press and hold the CONNECT button on the back of the subwoofer for about four seconds.
3. Release the button when the light on the back of the subwoofer is solid green.

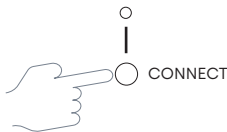

4. Press and release the CONNECT button on the back of the sound bar to complete pairing.

I DO NOT HEAR SOUND FROM MY SUBWOOFER

- Check that the sound bar is powered on and playing audio.
- Turn up the bass using the provided Polk remote.
- Check that the power cable is secure in the back of the subwoofer and wall outlet.
- Check that a solid green light is visible on the back of the subwoofer.
- Unplug power from the subwoofer for 30 seconds and then plug back in.
- If the light on the back of the subwoofer is flashing green, you will need to reconnect the subwoofer to the sound bar using the instructions in "Connect Your Subwoofer".

UPDATING YOUR SUBWOOFER

The subwoofer is automatically updated whenever your sound bar is connected to the Internet and receives an update. Refer to your sound bar's Quick Start Guide and make sure your sound bar is properly connected to your home network.

For more troubleshooting and information, please visit polkaudio.com/support.

POLK. EXPECT GREAT SOUND.®

5541 Fermi Court
Carlsbad, CA 92008
U.S.A.

www.polkaudio.com
800-377-7655 (POLK)

HBP4564

polk®

REACT SUB

Deep, impactful bass for Polk React series sound bars.



POLK. EXPECT GREAT SOUND.®

www.polkaudio.com



REACT SUB



Polk React Sub for React Series Sound Bars

Deep, impactful bass for your Polk React series sound bar. This seven-inch, long-throw, wireless subwoofer disappears in your room. Perfectly tuned to extend the bass of your React sound bar for virtually any movie, TV show, or song.

SPECIFICATIONS

Dimensions (L)419mm x (W)218mm x (H)348mm
(L)16.5" x (W)8.6" x (H)13.7"
7.5kg / 16.5lbs

Drivers (1) 7" Woofer

What's in the Box

- Polk React Sub
- Power Cord
- Quick Start Guide
- Warranty Registration Card

Consumer Benefits

More Bass for Your React Sound Bar

Your Polk React sound bar makes your TV sound fantastic. Add a React Sub for even deeper, more impactful bass.

Engineered for Long Bass Reach

The React Sub's long-throw, high-excursion woofer moves more air than a traditional sub for a farther reach and deeper bass.

Constructed for Tight Bass Impact

The React Sub's unique low-turbulence, flared port tube keeps bass performance tight for precise impact.

Self-regulating Bass eq

Polk Bass Adjust™ EQ automatically adjusts a React series sound bar's settings to accommodate the React Sub's additional bass.

Fits Just About Anywhere

With an unassuming design and wireless connectivity, the React Sub easily hides in your room without losing a watt of performance.

Control with Your Voice

React series sound bars are controllable by Amazon Alexa. Turn up or down the React Sub's bass with your voice.

Simple Wireless Setup

Plug it into a power outlet. Push two buttons. Done.

Features

- **Flared Port Tube:** Low-turbulence performance for precise bass impact.
- **Long-throw Woofer:** Moves more air than a traditional sub for extended reach.
- **Polk Bass Adjust™:** Automatically balances your bar's bass EQ when a React Sub is added.
- **Seven-inch Driver:** Powerful enough to drive performance but compact enough for any room.
- **Wireless Setup:** Two-button setup process has you ready to go in seconds.
- **Voice Control:** Adjust bass levels with Amazon Alexa.

7"
DRIVER



polk

REACT SUB

WIRELESS SUBWOOFER



Important Product Information

Safety Precautions

FCC Statement

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
 - a. This device may not cause harmful interference, and
 - b. This device must accept any interference received, including interference that may cause undesired operation.
2. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different than that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC RF Radiation Exposure Statement

1. This transmitter must not be collocated or operating in conjunction with any other antenna or transmitter.
2. This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 cm between the radiator and your body.

3. FCC RF Warning. This equipment must be installed and operated in accordance with provided instructions, and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter. End-users and installers must be provided with antenna installation instructions and transmitter operating conditions for satisfying RF exposure compliance.

IC RF Radiation Exposure Statement

This device complies with the Canada portable RF exposure limit set forth for an uncontrolled environment and is safe for intended operation as described in this manual. The further RF exposure reduction can be achieved if the product can be kept as far as possible from the user's body, or set the device to lower output power if such function is available.

Canada, Industry Canada (IC) Notices

This Class B digital apparatus complies with Canadian ICES-003. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that permitted for successful communication.

This device complies with Industry Canada license-exempt RSS standard(s).

1. This device may not cause interference, and
2. This device must accept any interference, including interference that may cause undesired operation of the device.

Radio Frequency (RF) Exposure Information

The radiated output power of the Wireless Device is below the Industry Canada (IC) radio frequency exposure limits. The Wireless Device should be used in such a manner such that the potential for human contact during normal operation is minimized.

This device has also been evaluated and shown compliant with the IC RF exposure limits under mobile exposure conditions (antennas are greater than 20cm from a person's body).

5160-5240 MHz Band

Operations in the 5160-5240 MHz band are restricted to indoor use only.

Slave Equipment

This device is slave equipment, the device is not radar detection and not ad-hoc operation in the DFS band.



Sound United Europe,
a division of D&M Europe
B.V. : Beemdstraat 11, 5653
MA Eindhoven

Important Safety Instructions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have



fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

15. The equipment could be used at maximum 45 degree C ambient temperature.
16. Do not open the equipment to reduce the risk of electrical shock. For safety reasons it is only allowed to be opened by qualified service personnel.
17. WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. And the apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
18. The AC plug is used as the disconnect device and shall remain readily operable.
19. The product shall be used on an open bench.
20. No naked flame sources, such as lighted candles, should be placed on the apparatus.
21. CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
22. The battery (battery or batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.
23. WARNING: If battery compartment does not close securely, stop using the product and keep it away from children and pets.
24. WARNING: Do not recharge non-rechargeable batteries.
25. WARNING: Avoid exposure to extreme heat or cold.

WARNING: Please refer to the information on the exterior bottom enclosure for electrical and Safety information before installing or operating the apparatus.

	CAUTION RISK OF ELECTRIC SHOCK! DO NOT OPEN!	
	The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.	
	The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.	

EU Compliance Information

Eligible to bear the CE mark; Conforms to European Union Low Voltage Directive 2014/35/EU; European Union EMC Directive 2014/30/EU; European Union Restriction of Hazardous Substances Recast (RoHS) Directive 2011/65/EU; European Union.

WEEE Directive 2012/19/EU; European Union Eco-Design Directive 2009/125/EC; European Union Registration, Evaluation, Authorization and Restriction of Chemicals (REACH) Directive 2006/121/EC; European Union Radio Equipment Directive 2014/53/EU.



Declaration of Conformity (DoC)

Hereby, Polk Audio LLC, declares that this equipment is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.

Customers can download a copy of the original DoC for our radio equipment from our website below:

<http://www.polkaudio.com>

Electromagnetic compatibility and Radio spectrum Matters (ERM); Wideband transmission systems; Harmonized EN covering the essential requirements of article 3.2 of the RED Directive.

EN 300440

Short Range Devices (SRD); Radio equipment to be used in the 1 GHz to 40 GHz frequency range; Harmonised Standard covering the essential requirements of article 3.2 of Directive 2014/53/EU.

EN 301489-1

Electromagnetic compatibility and Radio Spectrum Matters (ERM) Electro-Magnetic Compatibility (EMC) standard for radio equipment and services; Part 1: Common technical requirements.

EN 301489-3

Electromagnetic compatibility and Radio spectrum Matters (ERM); Electro-Magnetic Compatibility (EMC) standard for radio equipment and services; Part 3: Specific conditions for Short-Range Devices (SRD) operating on frequencies between 9 kHz and 246 GHz.

EN 55032

Electromagnetic compatibility of multimedia equipment—Emission Requirements

EN 55035

Electromagnetic compatibility of multimedia equipment—Immunity Requirements

IEC 62368-1

Audio/video, information and communication technology equipment
Part 1: Safety requirements

EN 62479

Assessment of the compliance of low power electronic and electrical equipment with the basic restrictions related to human exposure to electromagnetic fields (10 MHz to 300 GHz).

Type of Wireless	Operating Frequency	Maximum RF Power
Wireless Subwoofer	5735-5840 MHz	<13 dBm

5.15-5.35 GHz band is restricted to indoor operations only in the following countries:

UK	DE	FR	IT
ES	NL	SE	PL

1-Year Limited Warranty

Polk Audio, LLC ("Polk") warrants to the original retail purchaser that Polk Audio branded wireless speakers, will be free from defects in materials and workmanship for a period of (1) one year, under normal use and conditions. Should this product prove to be defective in material or workmanship, Polk will, at its option, (a) repair the product, or (b) replace the product. If the product model is no longer available and cannot be repaired effectively, or replaced with an identical model, Polk may, at its sole and absolute option, replace the unit with a current model of equal or greater value.

To obtain warranty service, please visit the Polk Audio website at www.polkaudio.com. You may also contact Polk Audio Customer Service at 1-800-377-7655 for instructions on where to send the product. You will be required to provide an original receipt or bill of sale, identifying you as the original purchaser and identifying the purchase made through an authorized Polk retailer. You will need to ship the product, prepaid and insured, together with proof of purchase, as specified by Polk Audio Customer Service. Risk of loss or damage in transit shall be borne by the purchaser. Freight collect shipments will be refused.

This warranty is non-transferable and does not apply to any product that has been modified or used in a manner contrary to its intended purpose. This limited warranty is void if the product has an altered or missing serial number, or if the product was purchased from someone other than an authorized dealer. This limited warranty is void if the product has been damaged by accident or unreasonable use, neglect, improper service or other causes not arising out of defects in material or construction. Product(s) which are found to be damaged by abuse resulting in thermally damaged voice coils are not covered by this warranty but may be replaced at the sole and absolute discretion of Polk. This warranty terminates if you sell or otherwise transfer the product to another party. This limited warranty does not cover cosmetic damage, paint damage, damage to other components, parts or premises, or any consequential damages which may result for any reason.

Polk does not warrant that the product will operate without interruption or that the product will operate error-free. Certain external conditions which are out of Polk's control may affect the overall performance of the product, including, but not limited to, wireless network configuration, performance of the wireless network, distances between product and the wireless network connection and/or content sources, third-party devices, radio and/or environmental interference with the product.

Polk may offer access to third-party content or third-party content providers via the Product. Polk reserves the right to alter, change, discontinue or modify access to any third-party content or any third-party content provider at any time, for any reason. Polk disclaims all warranties and representations offered by any third-party content or third-party content provider.

Polk shall have no obligation to provide any updates or upgrades to the product, but in the event that it does, such updates and upgrades shall be deemed the "product", and shall be subject to the terms and conditions stated herein.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS AND YOU MAY HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE. ALL WARRANTIES, INCLUDING BUT NOT LIMITED TO EXPRESS WARRANTY, IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, NON-INFRINGEMENT AND THE IMPLIED CONDITION OF SATISFACTORY QUALITY ARE EXPRESSLY EXCLUDED AND DISCLAIMED TO THE MAXIMUM EXTENT ALLOWED BY LAW, AND POLK NEITHER ASSUMES NOR AUTHORIZES ANY PERSON TO ASSUME FOR IT ANY LIABILITY IN CONNECTION WITH THE SALE OF THE PRODUCT. POLK HAS ABSOLUTELY NO LIABILITY FOR ANY ACTS OF THIRD PARTIES. SOME STATES DO NOT ALLOW THE EXCLUSION OF CERTAIN IMPLIED WARRANTIES, OR CONDITIONS ON AN IMPLIED WARRANTY, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. POLK DOES NOT ACCEPT LIABILITY FOR SPECIAL, INDIRECT, INCIDENTAL, PUNITIVE OR CONSEQUENTIAL DAMAGES, LOST PROFITS, LOST SAVINGS OR DAMAGES RESULTING FROM IMPROPER USE, OR THE INABILITY TO USE THE PRODUCT. THE MAXIMUM LIABILITY FOR WHICH POLK MAY BE RESPONSIBLE SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSIONS MAY NOT APPLY TO YOU.

POLK. EXPECT GREAT SOUND.®

5541 Fermi Court
Carlsbad, CA 92008
U.S.A.

www.polkaudio.com
800-377-7655 (POLK)

Sound United Europe
a division of D&M Europe B.V.
Beemdstraat 11
5653 MA Eindhoven
The Netherlands



72-POKSUB-SAFB2
HBP4565



S/N: PBFX122000682

Register your new Polk product online:
www.polkaudio.com/registration/

Registering your product creates a permanent record of your purchase and ensures you are notified of important product information and updates.

We take privacy seriously and do not share or sell registration information (see privacy policy for more details):
www.polkaudio.com/privacy-policy

No Internet? Need help registering your product or just have questions?
Contact Polk Customer Service.

For US and Canada call:

+1 800-377-POLK (7655) or +1 410-358-3600

Email: polkcs@polkaudio.com

Outside of the US:

UK +44 2890279830

NL +31 402507800

DE +49 215712080

Email: polk-eu@mailmw.custhelp.com



Enregistrez en ligne votre nouveau produit Polk :
www.polkaudio.com/registration/

L'enregistrement de votre produit crée un enregistrement permanent de votre achat et garantit que vous êtes informé des informations importantes et des mises à jour du produit.

Nous prenons très au sérieux la confidentialité et nous ne partageons pas les données d'enregistrement (voir la politique de confidentialité pour plus de détails) :
www.polkaudio.com/privacy-policy

Vous n'avez pas Internet? Vous avez besoin d'aide pour enregistrer votre produit?
Ou, vous avez des questions?

Pour les appels aux É.-U. et au Canada :

+1 800-377-POLK (7655) or +1 410-358-3600

Envoyez un courriel à : polkcs@polkaudio.com

À l'extérieur des É.-U. :

UK +44 2890279830

NL +31 402507800

DE +49 215712080

Envoyez un courriel à : polk-eu@mailmw.custhelp.com





SR2

WIRELESS SURROUNDS



Quick Start Guide

THANK YOU FOR YOUR POLK PURCHASE

If you have a question or comment, please feel free to contact us.

TECHNICAL ASSISTANCE


North America:	800-377-POLK(7655)
United Kingdom and Ireland:	+44 2890279830
Netherlands:	+31 402507800
Other countries:	+1-410-358-3600

Email: polkcs@polkaudio.com


Polk FAQs: polk.custhelp.com

In all other countries, refer to **polk-eu@mailmw.custhelp.com** for support contact details.


WHAT'S IN THE BOX

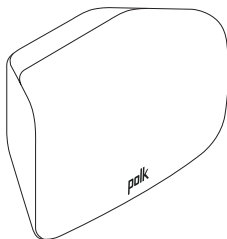

Left Surround Speaker

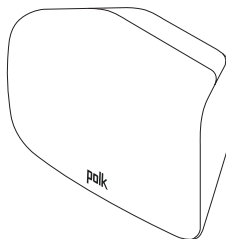

Right Surround Speaker

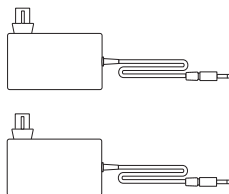

Power Supplies (2)*




Product Literature

* EU/UK adaptors are included with some models.

POSITION YOUR SURROUND SPEAKERS


1. Place the surround speakers on the left and right sides, equidistant and slightly behind the main listening position.
2. Make sure you place the speaker marked "LEFT" on the left and the speaker marked "RIGHT" on the right.
3. Aim the surround speakers toward the main listening position.
4. Plug a power supply into each speaker and then into a power outlet.

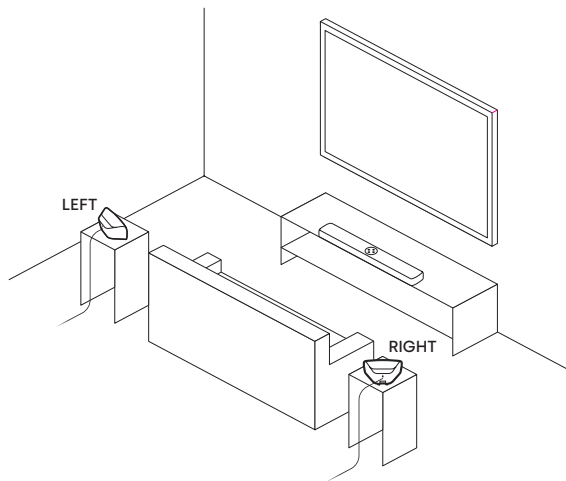

CONNECT YOUR SURROUND SPEAKERS


ENTER PAIRING MODE ON THE SOUND BAR.

1. Press and hold the CONNECT button on the back of the sound bar for about 4 seconds.

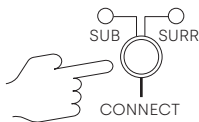

CONNECT THE SURROUND SPEAKERS

2. Press and hold the CONNECT button on the back of the surround speaker for about 4 seconds.
3. Release the button when the light on the back of the surround speaker is solid green.

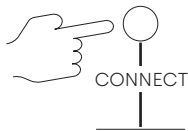

4. Repeat steps 2 and 3 for the other surround speaker.
5. Press and release the CONNECT button on the back of the sound bar to complete pairing.

TROUBLESHOOTING

I DON'T HEAR SOUND FROM MY SURROUND SPEAKERS.

If the light on the bottom of the surround speaker is:

- **Off**, verify that the power supply is connected to the speaker and to a working power outlet.
- **Amber**, make sure your sound bar is turned on, and connect the speaker to the sound bar using the instructions on the previous page.
- **Green**, turn up the surround volume using the remote control.

UPDATING YOUR SURROUND SPEAKERS

The SR2 surround speakers are automatically updated whenever your sound bar is connected to the Internet and receives an update. Refer to your sound bar's Quick Start Guide and make sure your sound bar is properly connected to your home network.

For more troubleshooting and information, please visit polkaudio.com/support.

POLK. EXPECT GREAT SOUND.®

5541 Fermi Court
Carlsbad, CA 92008
U.S.A.

800-377-7655 (POLK)
www.polkaudio.com

EU Importer:
D&M Europe B.V.
Beemdstraat 11, 5653 MA
Eindhoven, The Netherlands

HBP4476



SR2 WIRELESS SURROUNDS

Polk SR2 Wireless Surround Speakers for
Select Polk Magnifi and React Series Sound Bars



POLK. EXPECT GREAT SOUND.®

www.polkaudio.com



SR2 WIRELESS SURROUNDS



Polk SR2 Wireless Surround Speakers for Select Polk Magnifi and React Series Sound Bars

Add true wireless surround sound to select Polk sound bars with a super-simple setup. Wall mountable or simply place them on a shelf.

SPECIFICATIONS

Dimensions (L)198.9mm x (W)102.9mm x (H)113.5mm
(L)7.83" x (W)4.05" x (H)4.47"
0.83kg / 1.83lbs

What's in the Box

- 2 SR2 Speakers
- Power supply x2
- Quick Start Guide
- Registration Card

Customer Downloads Available

- Quick Start Guide
- Product Info Sheet

Consumer Benefits

Full surround, no receiver required

You don't need an audio video receiver to get full home theater surround sound with Polk.

Wireless connectivity

These speakers connect wirelessly to your sound bar. No need to run speaker wires across your room.

Surprising power

Each speaker's amplifier powers a custom-tuned driver to deliver big surround sound for the movie moments you love.

Simple install and setup

Mount them on the wall or put them on a shelf. Either way, you'll be ready in minutes.

For select Polk React and Magnifi sound bars

Compatible with Polk React, Magnifi 2, and future Magnifi and React series sound bars.

Built-in amplifiers

More than enough power for you to notice a huge difference in your room.

Dedicated L and R speakers

Each speaker is clearly labeled as left or right, ensuring your surround sound sounds right the first time.

Features

- **Wireless Performance:** Turn your sound bar into a surround sound system
- **Custom-tuned Drivers:** Powered by individual amps for impactful power
- **Simple Setup:** Wireless connectivity sets up in minutes
- **Left & Right Labeled:** Prominently labeled so you place them properly the first time

Compatible With

Polk React
(sold separately)



Polk Magnifi 2
(sold separately)



3"
DRIVER

BUILT-IN
AMPLIFIERS