

BRISTAN

Installation Instructions & User Guide

Please leave these instructions
with the end user

DU SNK SS (D4)

Specifications


Dynamic Water Pressure

Min: 0.2 bar Max: 5.0 bar




Maximum Static Pressure: 10.0 bar

Inlet Water Temperature

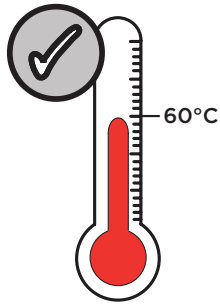


Maximum Hot 60°C

Inlet Connections

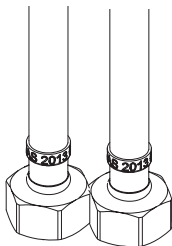


1/2" BSP
Flexible Tails

Outlet

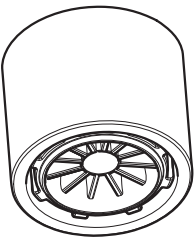


M24 Flow Straightener

Pack Contents

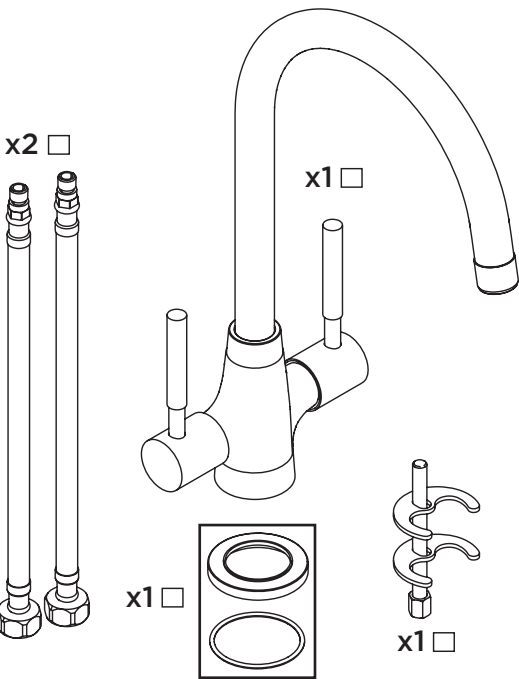

Operation

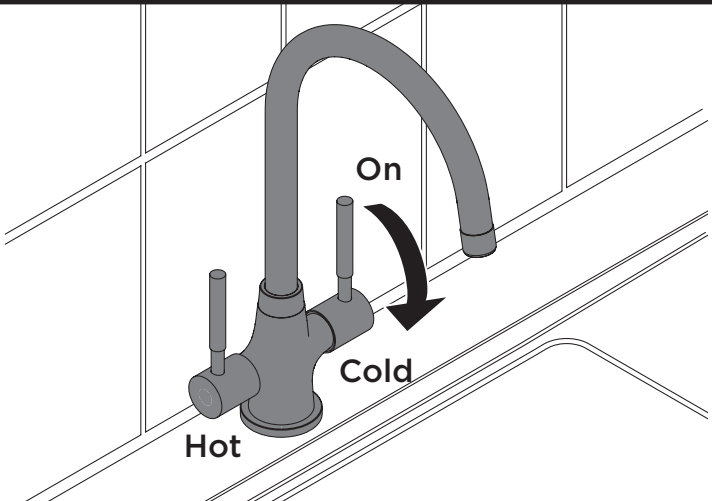

Tools Required for Installation/ Maintenance



Adjustable Spanner



Hexagonal Keys
(Handle)



Box Spanner
(Valves)



Box Spanner
(Fixing Kit)



Cross Head
Screwdriver

Prior to Installation

All products manufactured and supplied by Bristan are safe to use provided that they are installed, operated and receive regular maintenance in accordance with these instructions.

This product needs to be installed in accordance with, and meet the requirements of The Water Supply (Water Fittings) Regulations (Northern Ireland) 2009 and The Water Supply (Water Fittings) (Scotland) Byelaws 2014. For full Installation Requirements & Notes (IRN) please visit www.wrasapprovals.co.uk/approvals-directory

Isolation valves must be fitted to the inlet water supplies to ensure ease of future maintenance.

Before installing this product the water supply must be thoroughly flushed in order to remove any swarf, solder etc. Full access must be made available for future maintenance/servicing purposes.

This product must not be modified in any way as this will invalidate the guarantee.


Spare Parts



To replace any spare parts
for your tap, why not
scan the QR Code or
visit www.bristan.com
and search for your
product.


Installation

1

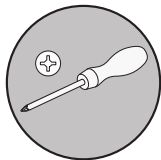

Screw the
fixing kit rod to
the tap base.
**DO NOT
OVERTIGHTEN.**

2


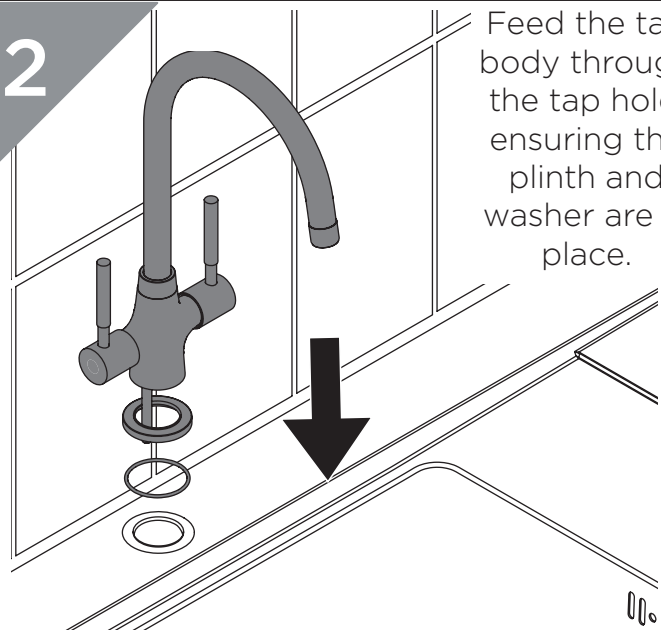


Feed the tap
body through
the tap hole,
ensuring the
plinth and
washer are
in place.

3



Secure the tap body
using the fixing kit.

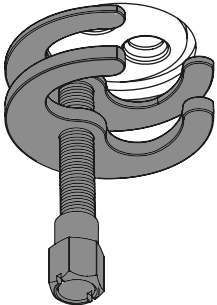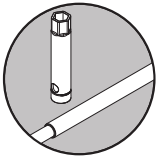


4



REMEMBER
Hot on the
left, cold on
the right!

Screw the
flexible tails to
the tap base by
hand only.
**DO NOT
OVERTIGHTEN.**

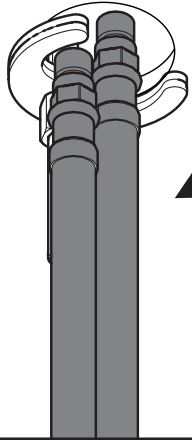




5




REMEMBER
Hot on the
left, cold on
the right!

Connect the flexible tails
to the hot and cold
water supplies.

We would recommend
that you install flat-faced
isolation valves to the
water supplies for safety
and maintenance
purposes

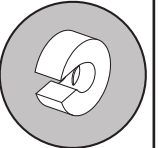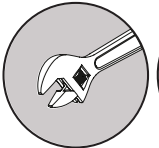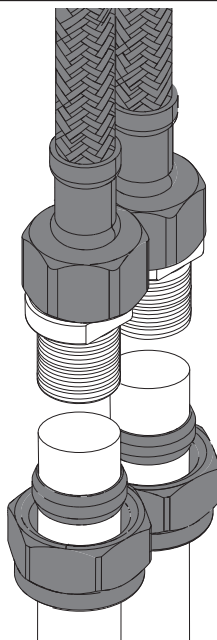

6

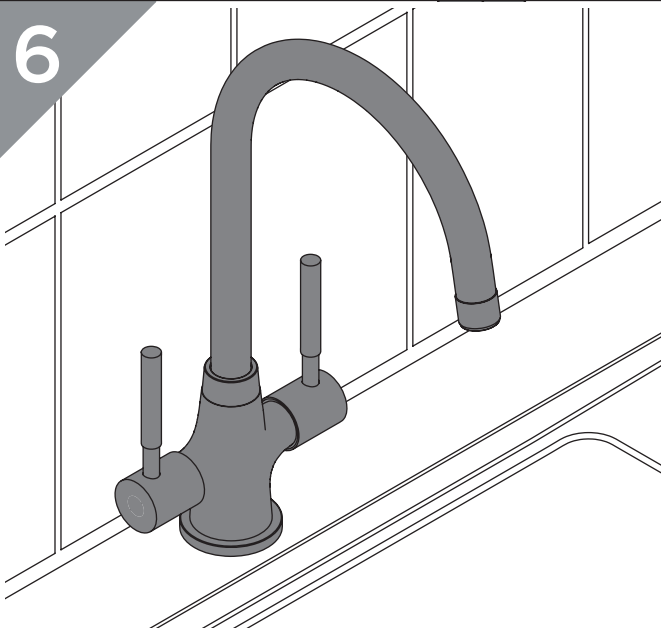

Turn on the water supply. Check all joints
and connections for any leaks.

Your tap is now ready for use

General Cleaning

Bristan products are made from premium materials, with hand polished, PVD, EPD or electroplated finishes.


Your tap should be regularly cleaned with warm water, a mild pH-neutral liquid soap, and polished with a soft cloth. Any residues from soap, toothpaste, shampoos and shower gels can cause blemishes if not rinsed off straight after use.

Household bleaches and cleaners contain harsh chemicals and may damage the surface finish. Avoid using abrasive cloths, scouring pads, scrub sponges, steel wool or anything similar.

Some surfaces such as nickel and pewter may be affected by the dye found in some cloths, so it is also important to avoid hanging cloths on spouts.


Maintenance - Replacing Valves

1

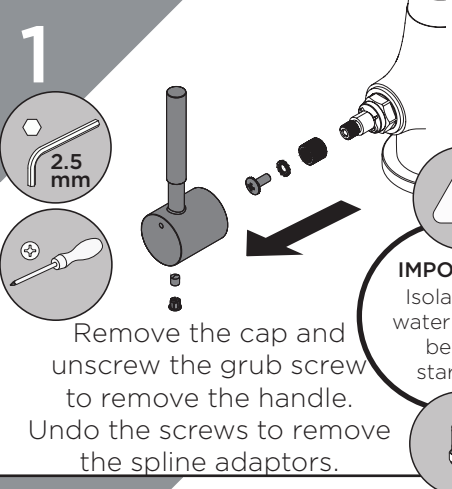

Remove the cap and unscrew the grub screw to remove the handle. Undo the screws to remove the spline adaptors.

2

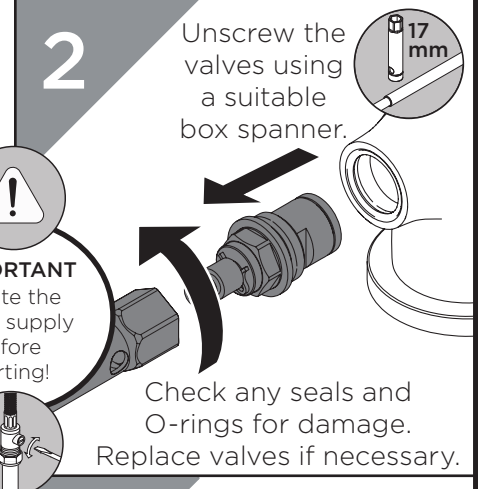


Unscrew the valves using a suitable box spanner. Check any seals and O-rings for damage. Replace valves if necessary.

3




Visit www.bristan.com or scan the QR Code and search for your product code to replace the valves/cartridge for your tap.

4

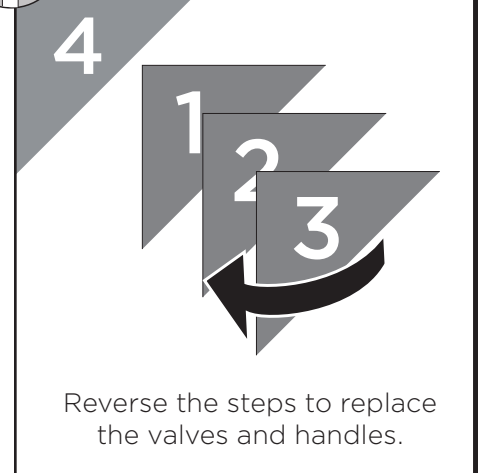

Reverse the steps to replace the valves and handles.


IMPORTANT

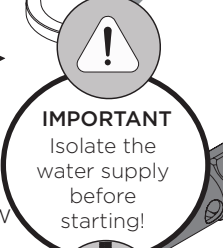

Isolate the water supply before starting!


Maintenance - Clean/Replace Outlet

1

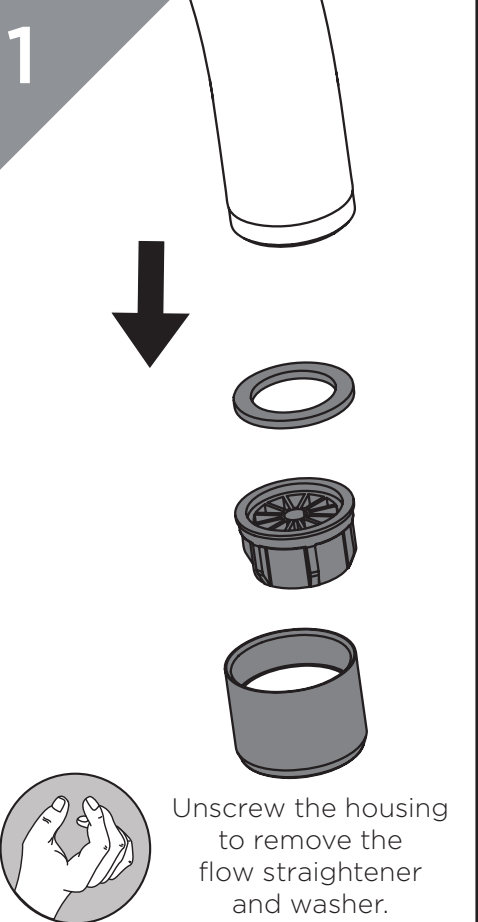

Unscrew the housing to remove the flow straightener and washer.

2

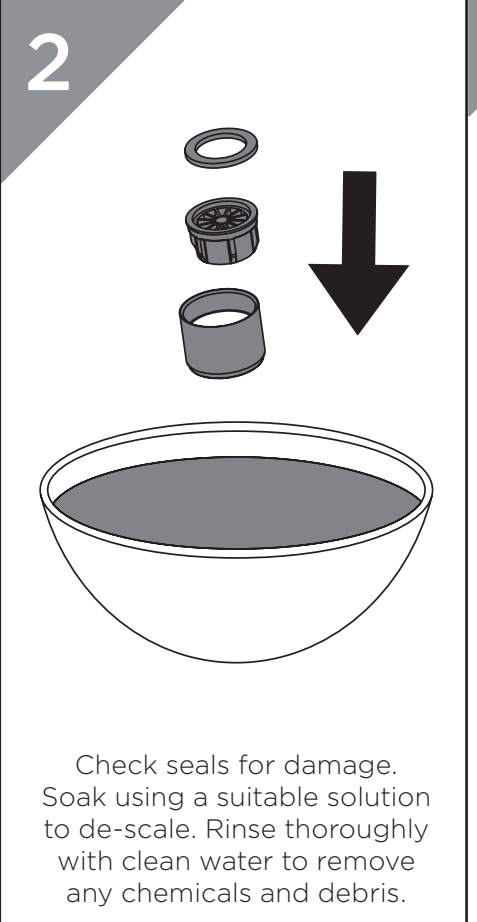

Check seals for damage. Soak using a suitable solution to de-scale. Rinse thoroughly with clean water to remove any chemicals and debris.

3



Reverse the steps to replace the outlet.

Troubleshooting

Symptom	Cause(s)	Remedy
No flow or low flow rate	Partially closed isolation valve.	Open isolation valve.
	Head of water is below the minimum distance required.	Refer to your the Specification for the minimum working pressure/distance required.
	Hot or cold water being drawn off elsewhere causing pressure changes or instantaneous boiler temperature changes.	Do not use other water outlets when using the taps.
	Airlock or partial blockage in the supply pipework or hoses.	Flush through pipework to ensure removal of debris and any airlocks.
	Water supply failure	Investigate water supply. Check your plumbing and heating systems for any faults.
Water dripping from taps	This is normal for a short time after using the taps.	This is caused by residual water tension, the build up of water in the tap body.
	If water continues to drip, possibly due to the ceramic disc valves/cartridge	Refer to the Maintenance section to replace the valves/cartridge.
Taps do not turn on	Closed isolation valve.	Open isolation valve.
	Mains water supply turned off.	Turn on mains water supply.

Notes

Please use this space for any notes you or your installer may have regarding the installation/plumbing of this product.

Contact Us



Part of **BRISTAN GROUP**

Bristan Group Ltd.
A Masco Company

UK:

Bristan Group,
Pooley Hall Drive,
Birch Coppice Business Park,
Dordon, Tamworth
B78 1SG.

EU:

Masco Europe S.à.r.l.
14 Rue Strachen
6933 Mensdorf
Luxembourg

Email Us:

enquire@bristan.com

Website:

www.bristan.com

Call Us:

+44330 026 6273

Our Guarantee

At Bristan, we want to make things as easy as possible for our customers. That's why we offer solid guarantees on all our products, effective from the date of purchase, to give you peace of mind.

To start your free guarantee simply scan the QR code and register your product. Alternatively visit www.bristan.com/register.

For any other queries, please call our Customer Service on 0330 026 6273 where our expert team of advisors will be able to offer you any help and advice.

For full guarantee terms and conditions visit www.bristan.com/service-centre/guarantees.

