 


Item # 1008 380 583
Model # HDP06533BL

HAMPTON BAY®

USE AND CARE GUIDE

ELLENA OUTDOOR FLOOR LAMP

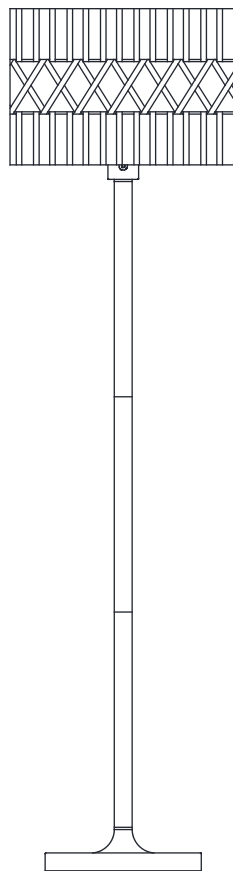

Questions, problems, missing parts? Before returning to the store,
call Hampton Bay Customer Service
8 a.m. – 7 p.m., EST, Monday – Friday, 9 a.m. – 6 p.m., EST, Saturday

1-855-HD-HAMPTON

HAMPTONBAY.COM

THANK YOU

We appreciate the trust and confidence you have placed in Hampton Bay through the purchase of this floor lamp. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Hampton Bay!

Table of Contents

Table of Contents.....	2	Planning Assembly.....	3
Safety Information.....	2	Package Contents.....	3
Warranty.....	2	Assembly.....	4,5
Three (3) Year Warranty.....	2	Care and Cleaning.....	6
What is Covered.....	2	Troubleshooting.....	6
What is Not Covered.....	2	Service Parts.....	7
Pre-Assembly.....	3		

Safety Information

READ AND SAVE THESE INSTRUCTIONS.

- This product has been manufactured with the highest standards of safety and quality.
- Before assembling your portable luminaire, spread all parts out on a clean surface. Inspect each part for defects that may have occurred during shipping.
- Use only three-wire outdoor extension cords that have three-prong grounding plugs and grounding receptacles that accept the appliance's plug.
- Ground fault circuit interrupter (GFCI) protection is to be provided on the circuit(s) outlet(s) to be used for the wet location portable luminaire. Receptacles are available having built-in GFCI protection and are able to be used for this measure of safety.
- Use only with an extension cord for outdoor use, such as an extension cord of cord type SEW, SEOW, SE00W, SOW, SO0W, STW, STOW, STO0W, SJEW, SJEOW, SJE00W, SJW, SJOW, SJ00W, SJTW, SJTOW, or SJTO0W.



IMPORTANT: Inspect the wire insulation for any cuts, abrasions, or exposed copper that may have occurred during shipping. If there is a defect in the wire, do not continue the assembly process.



CAUTION: CONSULT A QUALIFIED ELECTRICIAN IF YOU HAVE ANY ELECTRICAL QUESTIONS. If you have any non-electrical questions about this lamp, please call our Customer Service Team at 1-855-HD-HAMPTON or visit WWW.HAMPTONBAY.COM. Please reference your SKU (1008 380 583) or UPC (053392065331).



WARNING: When using outdoor-use portable luminaires, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and personal injury.

Warranty

THREE (3) YEAR WARRANTY

WHAT IS COVERED

The manufacturer warrants this fixture to be free from defects in materials and workmanship for a period of three (3) years from date of purchase. This warranty applies only to the original consumer purchaser and only to products used in normal use and service. If this product is found to be defective, the manufacturer's only obligation, and your exclusive remedy, is the repair or replacement of the product at the manufacturer's discretion, provided that the product has not been damaged through misuse, abuse, accident, modifications, alteration, neglect, or mishandling. This warranty shall not apply to any product that is found to have been improperly installed, set up, or used in any way not in accordance with the instructions supplied with the product. This warranty shall not apply to a failure of the product as a result of an accident, misuse, abuse, negligence, alteration, faulty installation, or any other failure not relating to faulty material or workmanship. This warranty shall not apply to the finish on any portion of the product, such as surface and/or weathering, as this is considered normal wear and tear.

WHAT IS NOT COVERED

The manufacturer does not warrant and specifically disclaims any warranty, whether expressed or implied, of fitness for a particular purpose, other than the warranty contained herein. The manufacturer specifically disclaims any liability and shall not be liable for any consequential or incidental loss or damage, including but not limited to any labor/expense costs involved in the replacement or repair of said product.

Contact the Customer Service Team at 1-855-HD-HAMPTON or visit WWW.HAMPTONBAY.COM.

Pre-Assembly

PLANNING ASSEMBLY

Read all instructions before assembly.

To avoid damaging this product, place it on a soft, non-abrasive surface, such as carpet or cardboard.




IMPORTANT: Inspect the wire insulation for any cuts, abrasions, or exposed copper that may have occurred during shipping. If there is a defect in the wire, do not attempt assembling. Please call the Customer Service Team at 1-855-HD-HAMPTON.



NOTE: You can use one 120V, 60Hz, 60-Watt Max. medium base (E26) type "A" bulb (sold separately). Do not exceed the recommended wattage.

PACKAGE CONTENTS


Part	Description	Quantity
A	Inner shade	1
B	Outer shade	1
C	Harp (Pre-assembled on the outer shade (B))	1
D	Glass dome	1
E	Socket (Pre-assembled on the socket assembly (G))	1
F	Switch	1
G	Socket assembly	1
H	Upper pole	1
I	Middle pole	1
J	Lower pole	1
K	Base	1
L	Power cord	1

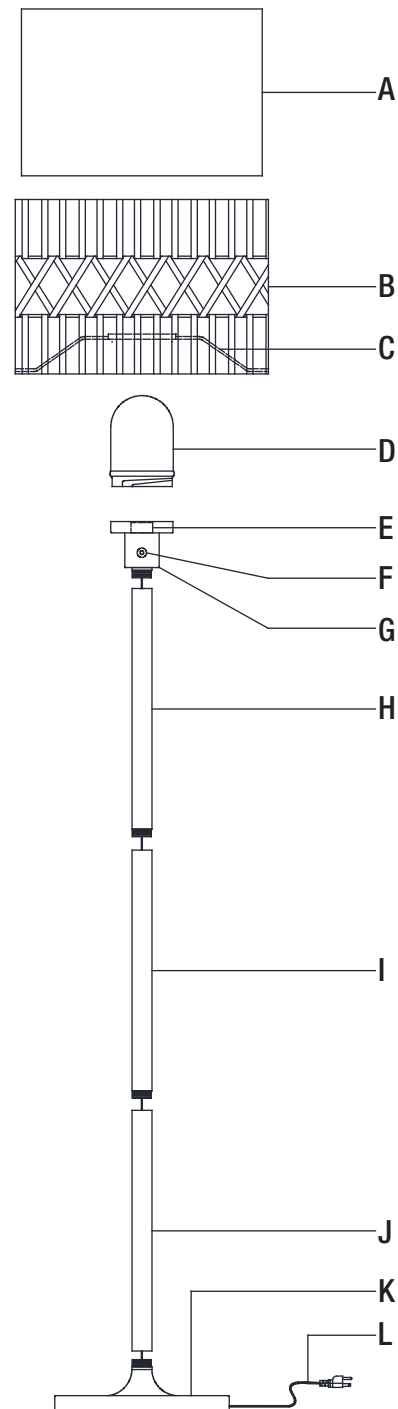 

Assembly


1 Assembling the poles and base

 - Screw the upper pole (H) to bottom of the socket assembly (G).
- Screw the lower pole (J) to top of the base (K).
- Screw the middle pole (I) to top of the lower pole (J).
- Pull the excess power cord (L) through the base (K).
- Screw the upper pole (H) to top of the middle pole (I).

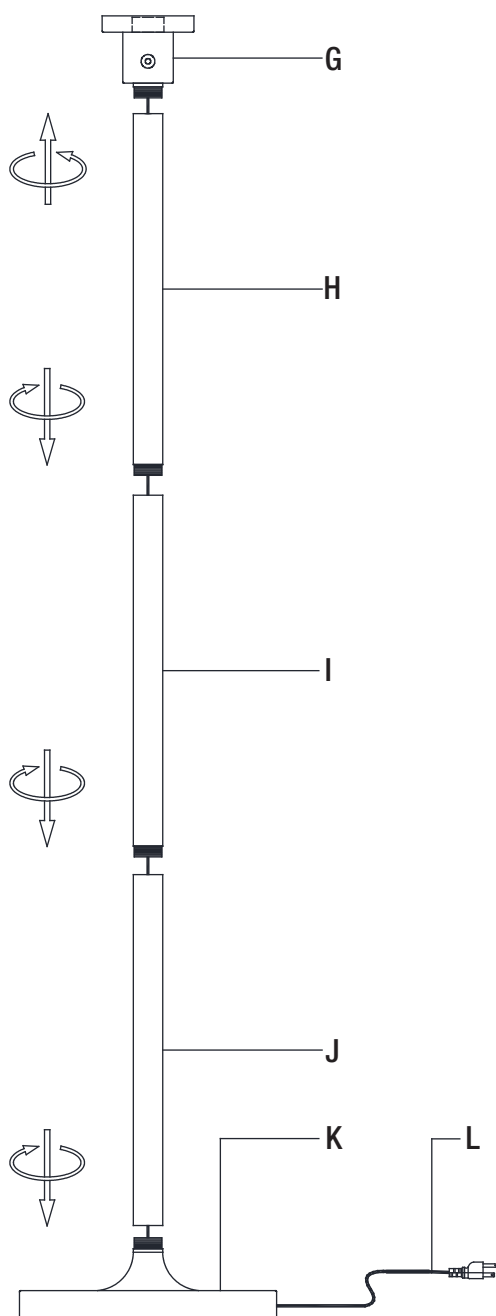

2 Installing the bulb and glass dome

 - Screw one 120V 60Hz 60-Watt Max. medium base (E26) type A bulb (sold separately) into the socket (E).
- Screw the glass dome (D) into top of the socket assembly (G).

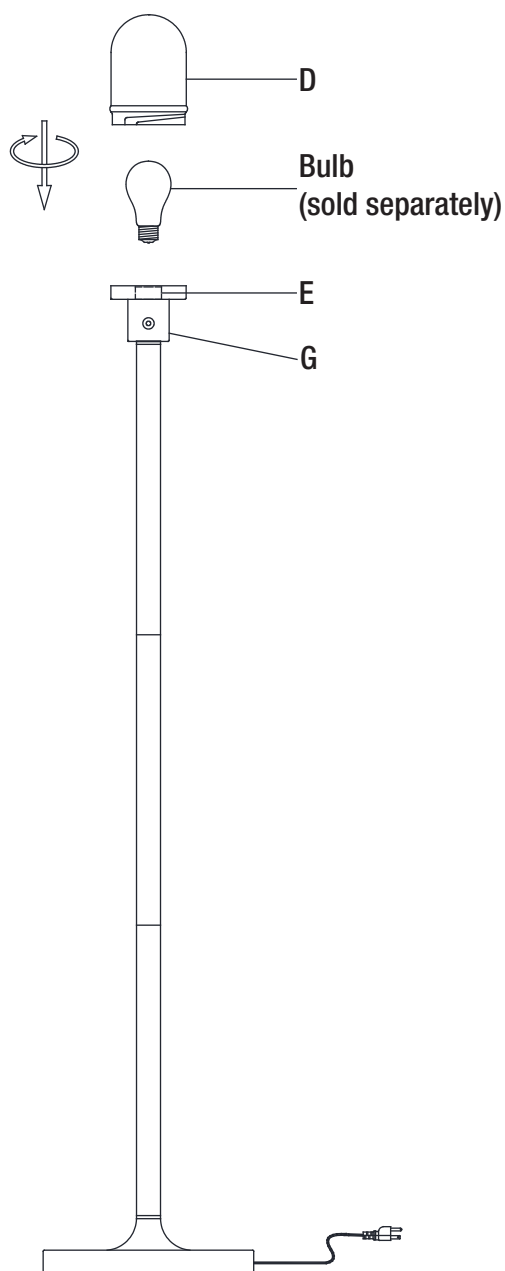


Assembly (continued)

3 Assembling the shades

- Place the harp (C) over the glass dome (D).
- Slide the inner shade (A) into the outer shade (B).




 NOTE: Remove the plastic cover before using these shades (A and B).

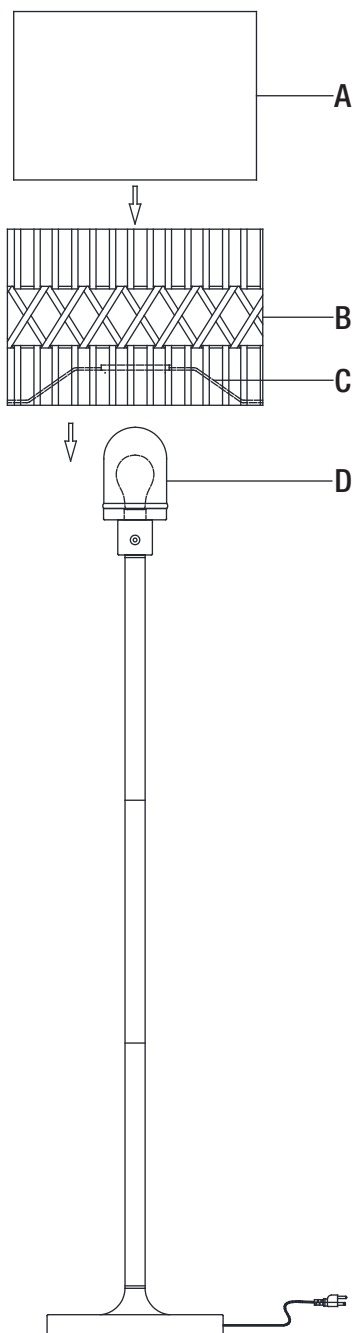

4 Lighting the lamp

 - Plug the power cord (L) into the outlet and push the switch (F) to turn on the lamp.

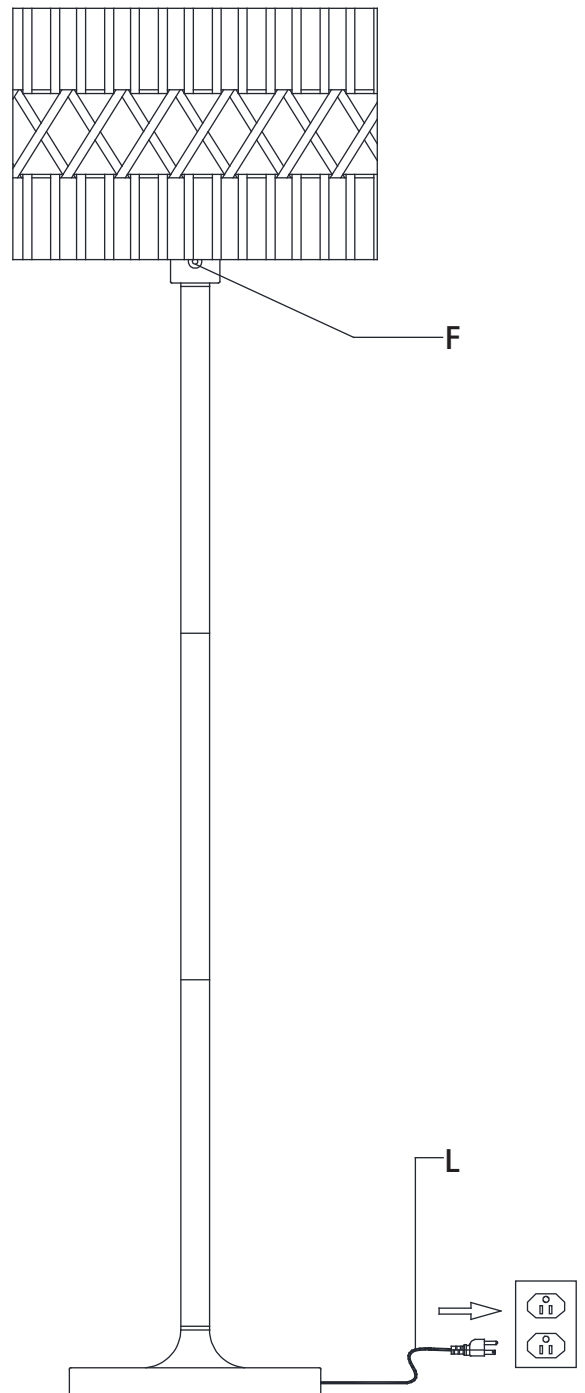

Care and Cleaning


- ☐ Use a dry, soft cloth to dust or wipe carefully.
- ☐ Do not clean with abrasive materials, bleach, or solvents.

Troubleshooting

Problem	Possible Cause	Solution
The light will not light.	<input type="checkbox"/> The bulb is burned out.	<input type="checkbox"/> Replace the light bulb.
	<input type="checkbox"/> The power is off.	<input type="checkbox"/> Ensure that the power supply is turned on.
	<input type="checkbox"/> The cord is not plugged in.	<input type="checkbox"/> Ensure the cord is plugged into an outlet.
	<input type="checkbox"/> The circuit breaker is off.	<input type="checkbox"/> Ensure that the circuit breaker is set in the "ON" position.
The fuse blows or a circuit breaker trips when the light is turned on.	<input type="checkbox"/> There is an exposed wire.	<input type="checkbox"/> Discontinue use of the lamp. <input type="checkbox"/> Unplug the unit from the wall. <input type="checkbox"/> Contact a qualified electrician or call the Customer Service Team at 1-855-HD-HAMPTON.

Service Parts

 MODEL: HDP06533BL

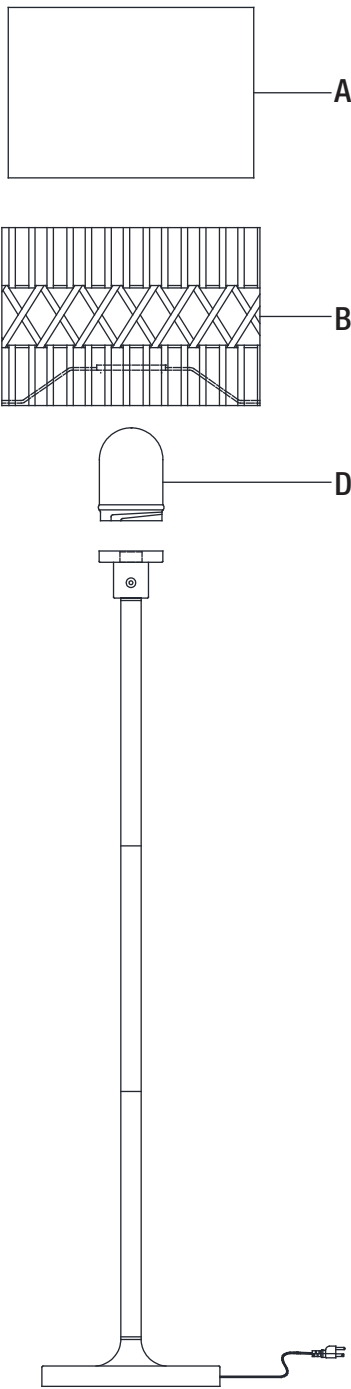

Part	Description	Quantity
A	Inner shade	1
B	Outer shade	1
D	Glass dome	1

HAMPTON BAY®

Questions, problems, missing parts? Before returning to the store,
call Hampton Bay Customer Service
8 a.m. – 7 p.m., EST, Monday – Friday, 9 a.m. – 6 p.m., EST, Saturday

1-855-HD-HAMPTON

HAMPTONBAY.COM