# **JVC**

**INNER EAR HEADPHONES** 

## **HA-FW1800**



Specifications	
System	Dynamic
Sensitivity	103 dB∕1mW
Frequency response	6Hz ∼ 52,000Hz
Nominal impedance	16 Ω
Max. Input Capability	200mW (IEC)
Cord Length	1.2m
Plug	Gold Plated
Weight (without cord)	15.0g
Accessory	S/MS/M/ML/L silicone earpieces
	Carrying case

#### **INSTRUCTIONS**



© 2019 JVCKENWOOD Corporation



The product with this logo is conformed to Hi-Res Audio standard defined by Japan Audio Society. This logo is used under license from Japan Audio Society.


## Changing ear pieces

To ensure proper fit and good sound, select size of the ear piece.

## A good fitting provides good bass


## Detach the ear piece

Twist and pull a ear piece.

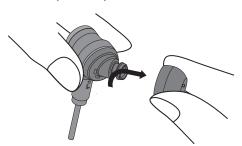

## Attach the ear piece

Slide on a ear piece so that it completely covers the nozzle.

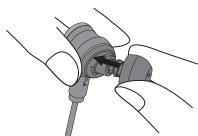





## How to use

Install the headphone cable to the headphones by aliging the "L (Left)" and "R(Right)"markings on the cable with those on the headphones.




## **Detachable Cable**

## Warranty is not applicable if use third party's cable.

## **Detach the Cable**


Pull the plug straight.

- To prevent accidental separation, the connector has a snug fit.
- Do not pull the cable.

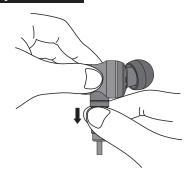

#### **Attach the Cable**


1. When attaching the cable, identify the color and the marking on the headphones and the cable.

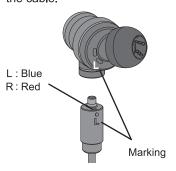

#### Caution

The detachable function is provided for maintenance. Do detach the cable only for replacing. Do not use any tools.

2. Insert the plug straight to headphone. Listen for a click when connecting.

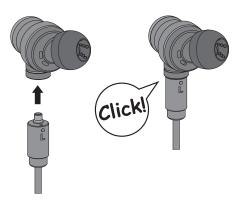

JD3835-F00A