

# fingers<sup>®</sup>



## Quick Start Guide



## I. Important - Warnings and Safety

1. Do not place the speaker near heat sources such as fire, radiators, stoves and other apparatus that produce heat.
2. Use only accessories supplied by FINGERS.
3. Unplug the speaker/Mic once it is fully charged, when unused for long periods of time or during lightning/thunderstorms.
4. It is recommended to refer all servicing to qualified personnel. Servicing is required when the speaker has been damaged in any way. Any evidence of any attempt to open and/or alter the device, including any scratch, peeling, puncturing, or removal of any of the labels, will void the Limited Warranty.

## II. In the box

1 x FINGERS 2Mic-GrooveBox	3 x USB-C Charging Cable
2 x Wireless Mics with built-in Battery	1 x Quick Start Guide
1 x Remote control	1 x Brand Note

 
## III. Screen Display



1. ►|| : In case of USB and MicroSD Card mode, it implies pause state.
2. U/TF: This symbol appears on the screen signifying that the playlists are playing from either of USB mode or Micro SD mode.
3. REC: Appears when in recording mode
4. 88:88:
  - Shows "AUX" when in AUX mode
  - Shows "FM Frequency" when in FM mode
  - Shows "Playing time" of the track when in USB and Micro SD mode
  - Shows "BLUE" when in BT mode
5. MIC: Appears when Mic is in use
6. : Power indication when battery becomes low.

## IV. On-board Controls


### A. Speaker



Function	What to do
<b>1. Mode/MIC-VIP/Vocal Cut</b>	
Mode	Short Press to switch modes from BT/FM/USB/MicroSD/AUX
MIC-VIP (Works only when Mic is on)	Long press to 3 secs to make the Mic voice primary till 'Mic' on the display screen blinks. To disable it, long press for 3 secs till 'Mic' on the display screen does not blink.
Vocal Cut	Long press to activate the Vocal Cut. Long press the same to disable it.
<b>2. Previous Track/ Previous FM Channel</b>	Short Press to navigate previous tracks
<b>3. Play/Pause</b>	
Play/Pause Music	Short Press
Search / Save FM channels	Long Press in FM mode
BT Disconnect	Long press in BT mode
<b>4. Next Track/Next FM Channel</b>	Short Press to navigate next tracks
<b>5. REC</b>	
To record voice from Mic, USB Pen Drive to be inserted to save the recorded voice	Long Press to record voice from Mic
<b>6. ECHO/TONE</b>	
Echo Control	Short Press to navigate across 4 modes of Echo Control - Echo00, Echo01, Echo02, Echo03
Voice Change	Long Press to change and navigate across different 5 Voice tones in the following sequence - Male to Female Voice Female to Male Voice Do Voice Magic Voice Standard Mic
<b>7. Volume Decrease</b>	Short Press to decrease volume
<b>8. Volume Increase</b>	Short Press to increase volume


## B. Mic

 Function	What to do
1. Play/Pause	Short Press
2. Volume Up	Short Press
3. Volume Down	Short Press
4. On/Off	Long Press

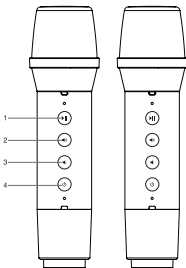

## V. Connections

 1. MicroSD Slot
2. USB Port
3. AUX Port
4. Type-C port for charging
5. LED Indicator
6. On-Off Switch



## VI. Charging

- Connect the Speaker to power using USB Charging Cable provided.
- The USB Power Input should be greater than 5V/1A. If less than 1A, it will cause a longer charging time.
- Below is status of the charging indicator:

Battery Charging	LED indicator
0 - 25%	RED light flashes
25 - 75%	RED light glows
75 - 98%	RED light glows; Green light flashes
100%	RED light glow disappear; Green light glows

- When it is low in power, it goes into self-protect mode and the volume will drop to 50%.

Please note: Kindly charge for around 5 hours when using it for the first time.

## VII. Modes

You can enjoy your music in the following ways

i.BT ii.FM Radio iii.MicroSD iv.AUX v.USB

### i. BT

- When the device is switched on, it automatically goes to BT mode.
- If any source is connected (USB, MicroSD or AUX), press "Mode" till BT Mode is heard.

Make sure that Bluetooth is enabled on your device.

Find the device list and select FINGERS 2Mic-GrooveBox.

A sound prompt of "Connected" is heard and it is ready to play.



### Connect 2 BT devices using Multi-Point Technology

- Turn off BT function of the first connected device, and search FINGERS 2Mic-GrooveBox on 2<sup>nd</sup> device.
- Turn on the BT function in 1st device and turn it off again. In the meanwhile, do switch on FINGERS 2Mic-GrooveBox.
- As the speaker remembers previously connected devices - When turned on, it attempts to reconnect both previously paired devices.
- Now the Speaker is ready to use, by both the paired devices.

Note: Even after it is connected to both devices, we can play music/manage calls using different mobile/devices at a time.

### ii. FM Radio

- Press on the "Mode" button till the voice prompt of the word "FM Mode" is heard.
- Long press "▶||" to scan the stations automatically. You can again press the same button to stop the scan.
- Once FM radio is tuned, you can short press "▶▶" and "◀◀" to select the desired FM channel.
- Short press "▶||" to mute the FM.

### iii. MicroSD

- Insert the MicroSD card in the provided Slot.
- You can then play your favourite tracks directly from the MicroSD Card.

 
### iv. AUX

- If you wish to listen to music from mobile devices, plug in the AUX cable in the Aux port.
- You can then stream music directly from your mobile devices

### v. USB

- Insert the USB device (Pen Drive) in the provided port.
- You can then play your favourite tracks directly from the USB.

## VIII. Remote

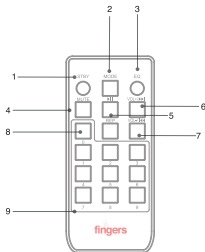

1. STBY (Standby Mode): Switch between operation mode and standby mode.
2. Mode: To navigate among different modes of BT, USB, MicroSD, AUX and FM Radio.  
Note: You can only enter into USB and MicroSD card mode when USB and MicroSD card is inserted.
3. Equaliser Control (EQ): To adjust various music modes such as Normal, Rock, Pop, Classic, Jazz and Country.
4. Mute: Short press to enable mute; press again to disable mute.
5. Play/Pause: Single press to Play/Pause in USB and Micro SD mode.  
Press and hold for automatic scanning of FM channels.
6. Vol + / Next Track: Press and hold for volume increase; Short press for next track.
7. Vol - / Previous Track: Press and hold for volume decrease; Short press for previous track.
8. Repeat: To repeat the tracks in various ways in USB/MicroSD card mode, in the order of ONE-FOLD-RAN-ALL  
ONE: Repeats the current track  
FOLD: Repeats all the tracks in the folder. You can choose Folder 1, Folder 2, Folder 3 & so on  
RAN: Plays the random song in a selected folder  
ALL: Plays all songs (across all folders) repeatedly
9. 0-9 Numeric Keys: To select desired track/saved FM Channel in USB, MicroSD and FM Modes
  - i. When in USB and MicroSD card mode, you can choose the song quickly.  
For example, you would like to listen 258th track, press '2' '5' '8' and wait for a second.  
It will turn to the 258<sup>th</sup> song and play automatically.
  - ii. When in FM mode, press 1 digit or double-digit to choose the stocked FM station, while press 3 or 4 digits for FM frequency as per frequency range.

## IX. Care and Maintenance

1. Switch off the speaker before cleaning it.
2. Use soft cloth to clean the surface.
3. Do not use any chemicals, solvents, or cleaning solutions containing alcohol, ammonia or abrasives.
4. Do not allow any liquid to enter into any of the openings.



## X. Product Specifications

Parameters	2Mic-GrooveBox
Wireless Protocol	Bluetooth v5.3
Peak Output Power	30 W
Power Rating	DC 5 V / 1 A max.
Power Source	DC 5 V / 1 A
Driver unit	5.25" 3Ω
Effective Range	Wireless range up to 10 m
Battery	3000 mAh / 3.7 V
Charging Time	Up to 3 hours
Playback Time	Up to 6.5 hours*
Playback Options	Bluetooth®   FM Radio   MicroSD   USB   AUX
Microphone	Mic Type: Wireless Mic (U-Band) Connector Diameter: 25 mm Moving Coil Polar Pattern: Cardioid Power Source: Rechargeable Battery 1200 mAh Battery Backup: Up to 5 hours Charging Time: Up to 3 hours Distance Support: 30 m (Line-of-sight)
Dimensions	Speaker: 176 (L) x 176 (W) x 200 (H) mm Microphone: 175 (L) mm x 36 (W) mm x 36 (H) mm
Weight	Speaker: 1.8 kg Microphone: 140 g
Colours	Rich Black
Supplementary Features	Twin Wireless Mic Bundled Type-C USB port Multi-point Technology - Connect 2 devices simultaneously Digital Display Record (up to 140 secs) and Play (auto repeat) Remote Bundled

\*Tested under ideal conditions and in BT playback mode. Playback time may vary depending on usage, playback mode and volume levels.

• Images shown may vary from actual product. • Specifications, features and appearance are subject to change without notice.  
• All logos, brands, trademarks and product names are properties of their respective owners. • Product warranty is governed by warranty terms mentioned on [www.fingers.co.in](http://www.fingers.co.in) • This product falls under e-waste (Management & Handling) Rules, 2011. For proper disposal method, visit our website [www.fingers.co.in](http://www.fingers.co.in)

