

(A) Display cable

Disconnect the cable during installation. Reconnect it when done.

(B) Voltage switch ▲

Set the switch to the correct line voltage.

(C) Incoming power

Connect the incoming power from the panel.

(D) Temperature probe (TEMP1 to TEMP4)

Connect the primary temperature probe to TEMP1. Connect any additional probes to the other terminals.

(E) Actuator feedback (ACT-1 and ACT-2)

Connect the feedback potentiometer from the actuator.

(F) Alarm relay

Connect an external alarm system or siren.

(G) General-purpose relays (STG-1 to STG-6)

Connect single-speed/stage heating/cooling equipment.

(H) Variable stages (VAR-1 and VAR-2)

Connect variable speed fans.

(I) Fuses (F1 and F2)

The fuses are for the variable stages. F1 is for VAR-1 F2 is for VAR-2.

(J) USB

Connect a USB drive when saving or loading settings, or updating firmware.

(K) OUTDOOR

Connect a Phason 3K Temperature Sensor for measuring outdoor temperature.

(L) +5V

Can provide +5 VDC

(M) DOL (M: AUX1 to AUX3)

Connect DOL119 Carbon Dioxide or DOL 53 Ammonia Sensors. Place the jumpers on the correct pins.

(N) DOL 114 (TEMP / HUM)

Connect a DOL 114 Temperature and Humidity Sensor. Place the jumpers on the correct pins.

O) Pulse counter (COUNT)

Not available, used for future development,

Electrical ratings

Input power

120/230 VAC, 50/60 Hz

Variable stages (2: VARI-1, VARI-2)

10 A at 120/230 VAC, general-purpose (resistive) 7 FLA at 120/230 VAC, PSC motor 1/2 HP at 120 VAC, 1 HP at 230 VAC, PSC motor

Fuses (2: F1and F2)

15 A, 250 VAC ABC-type ceramic

Relay stages (6: STG-1 to STG-6)


10 A at 120/230 VAC, general-purpose (resistive) 1/3 HP at 120 VAC, 1/2 HP at 230 VAC 360 W tungsten at 120 VAC

Alarm relay


0.4 A at 125 VAC; 2 A at 30 VDC, resistive load 0.2 A at 125 VAC; 1 A at 30 VDC, inductive load




Mounting holes and orientation

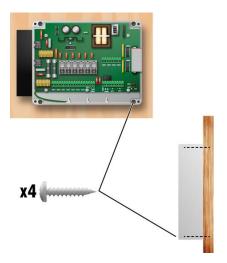


Incoming power

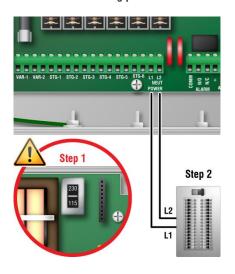


Single-speed fan or electric heater

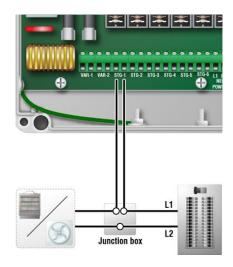


Gas-fired furnace

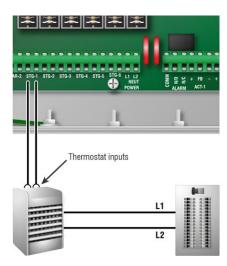


Variable speed fan

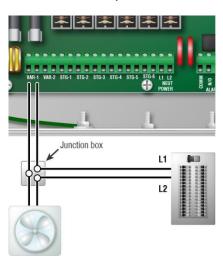


Correct three-phase wiring

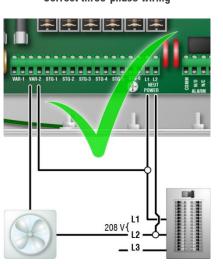

Incorrect three-phase wiring

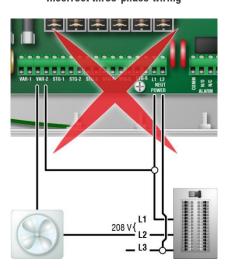

Curtain machine

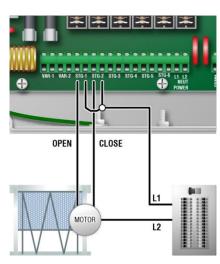



www.phason.ca


sales@phason.ca

International: 204-233-1400


Toll-free North America: 800-590-9338




DC-powered actuator

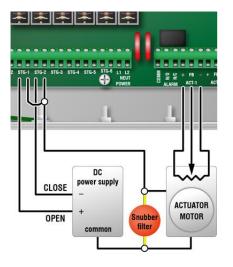


AC-powered actuator

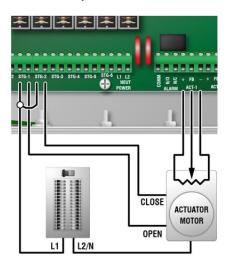


Temperature probe

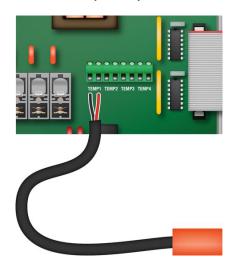


DOL 114 temperature and humidity

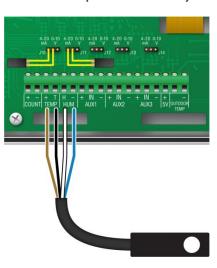


DOL 119 carbon dioxide

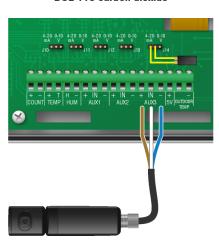


DOL 53 ammonia

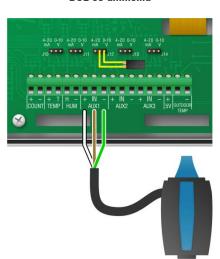

Normally open alarm system

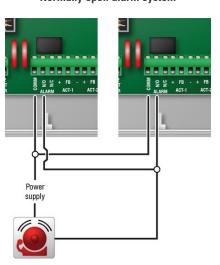

Normally closed alarm system

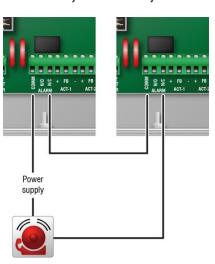

34340002-QS ©Phason