

Hidden Camera - User Manual



Content:

Chapter 1: Important Note	1
Chapter 2: Pinning Case	2-3
Chapter 3: How to set up the data	4-5
Chapter 4: Base APP interface for camera	7
Chapter 5: Camera setting instruction	8-11
Chapter 6: Chapter QA	2-14
Chapter 7: Light indicator	14

Due to the complexity of electronic device, some people may have some trouble during the use of the device isn't working properly it doesn't mean the broken, it's probably not operate properly. If you have any inquiries or questions, please feel free to reaching us, we will provide the service.

Important Note:

1. Please read the manual before set up the camera, it will help you a lot and saving your time.
2. Please fully charge your camera before first use.
3. The camera can only be set up with 2.4g Wi-Fi network. (But you can use access live stream with 4G/5G network once you set it up with 2.4g first)
4. Please format the Micro SD card to FAT32 format and recall that when powered off (Hard No. Included)
5. Please be plump, tender and nervous is also enough when you're ready to pair them. The Wi-Fi signal should be strong enough.
6. Reset can solve most of the problems well. Press and held the reset for about 10 seconds, and then see the lights through the hole flashing to indicate that hardware is successful.
7. It's normal for the camera to get hot, like some of the smartphones.

Product View:



1. SD Card and Slot-1 (Music Play) : Play music files
2. SD Card and Slot-2 (Video Record) : Save video files

3. **WiFi/Unlock Power:** The power of the clock and device Wi-Fi, clock on means Wi-Fi on. (On the power the clock wait about 20 seconds to show up)
4. **USB Port:** Charge the device
5. **Reset Button:** Long press to reset the device. (Press and hold for at least 10 seconds until the light flashes indicating a successful reset)
6. **Bluetooth ON/OFF&Pause:** Long press to turn on/off Bluetooth feature. (If you use card to play music, you also need to turn on the feature. If you want play via Bluetooth, do not insert a card to music card slot)
7. **Up/Vol:** Long press to turn down, short press to move previous
8. **Down/Vol:** Long press to turn up, short press to move next
9. **Charging Light/ Bluetooth Light:** Red light blinking while charging, keeps on while fully charged. Green light is blinking when turn on Bluetooth, light will staying on once connects successfully
10. **WiFi Indicator Light:** You can see a blue Wi-Fi indicator light via SD Card slot.

Set Up Camera to WiFi:

Please locate the "HemeEye" in your Google Play store/App Store or scan the QR code to download. (If working correctly, please allow a tip when you cancel the app for the first time.)



【WiFi Set Up Method-1】

1. Firstly, turn on the camera WiFi (wait about half minutes or longer then found the wifi signal in the phone setting, connect phone to camera WiFi name starting with "XYX-xxx" or "XYX-xxx").

(Note: If the camera wifi can't be found, 1. Make sure the device is fully charged or keep it connected the

power, low battery will cause camera Wi-Fi can't be detected. 2. (Reset the camera.)

2. When camera Wi-Fi is connected, then launch the App "HomeTye". You will see that the camera is now online; wait a seconds, app will show up on top of your "Whether the device added by the APP is equipped with a network (WIFI mode)". Click "OK" then going to the next step.
3. Wait a seconds, the app "WiFi Settings" will pops up then check the home network you want to connect. If the Wi-Fi list won't shown, click "refresh" button to refresh the Wi-Fi list.
4. A few seconds later, it will pop up successful and return back to the main page. Now you can start live streaming via app.
5. In Android system, it may claim that "Camera unavailable". In IOS system, it may claim that "Unsecured Network". Just ignore these message.
6. We also have video on product page to show you to set it up, very easy and intuitive tutorial :

【WiFi Set Up Method-2】

1. Launch your app, click "+" button on the top of right.
2. Choose "AP distribution network". Click "Go to WiFi configuration", then connect phone to the camera Wi-Fi name starting with "XYS-xxx" or "XYX-xxx", this is the camera's WiFi. When it done, then go back the app page, you will found out the camera is "Online".
3. Wait a seconds, the app "WiFi Setups" will pops up, then choose the network that you wanna connected. If the WiFi list won't shown, click "refresh" button to refresh the Wi-Fi list.
4. A few seconds later, it will set up successful and return back to the main page. Now you can remote living streaming via app.
5. In Android system, it may claim that "Internet unavailable". In IOS system, it may claim the "Unsecured Internet" please ignore these message.

Kind Remind:

1. The password of the camera is 6666.
2. At any time if there is a problem with the device

working, you can reset the device to make it work again. Then wait for 30 seconds, and all settings of the device are reset. In this case, you need to set up the remote view again. And meanwhile, you will find the camera will be placed in Web setting again. If you have a problem to set up

Basic APP interface

Introduction:

Modify access password

1. Tap your camera to enter Live View. Please tap "Sure button" to change access password. No one can access to your camera unless someone knows your password.

Set Camera settings menu

Detect: Motion detection snapshot

Replay: Playback videos from SD card

Delete: Delete "human" you don't want to recording

Freeze: Play back video and photo of selected live view window

This icon goes to App main page

Camera Setting Instructions:





- Click error camera settings:



WiFi Settings

- Select network - remember refresh this if you can't find the signal.



Time Settings

- You can choose the 24/8 hour format here



Alarm Settings

1. Motion detection switch.
2. You need to enable this function if you want to see alarm push or recording.
3. Motion detection sensitivity: High / normal / low.
4. Alarm push: The camera will send a push notification to your phone when a motion is detected.
5. Alarm video duration(s): The camera will record a 10-60 seconds short video to SD card when a motion is activated.
6. Alarm time delay (s): The camera will provide a delay period of a defined amount of time to disarm the system before setting off an alarm.

SDCard Settings

1. SD Total(M) and SD Remainder(M) You will know if your camera detects the SD card via the value. If not, please click "Format SD card" button. Then wait for a while, your camera will reset and you can check that again on this page. **NOTE** Please turn off the device to insert or unplug SD card.
2. Record time: 5-30 minutes/Files in Micro SD card
3. Video stream: 720P/1080P
4. Video mode: 1 Privacy mode: Don't record video to SD card.
5. Throughput the video: Record video to SD card all the time.
6. Alarm video: Only record video to SD card when alarm is activated.
7. Timing video: Only record video to SD card at a preset time.
8. Record out of Record video with audio to SD card when you enable the function.
9. Video coverage: The newest files will overwrite the oldest files when the capacity of SD card is full. **(NOTE)** If you reach the limit, you need to turn

- In the menu select on under About settings. Otherwise the number will remain closer to the 8700000.



Modify device name

- You can set a new device password.

Device information

- **Share Your Device:**
 1. Make sure you have installed the app
 2. You launch the app and go to your camera settings. You get will see the QR Code
 3. Launch the app on your friend's phone to Tap "1" to turn on the upright camera to Tap "Add new device" button to Tap "Scan QR code" button to add your camera.

Frequent QA

1. How to reset the camera ?

- Please press and hold the "Reset" button for 10s with provided reset needle. When your camera is reset successfully, the Blue WiFi indicator light through video card slot will blink slowly.

2. How to record video and to app without SD card?

- Enter the view interface. Click "Video" button to save the video file to app. Then find the "Files" button on the main page to preview. (NOTE: When you exit the view interface, will be app save to the app, but still save in the SD card.)

3. How to recording videos to the memory card and read it?

- When the memory card is inserted into the camera is powered on, the video is automatically recorded in the memory card. Just use the card with reader to access the video.

4. How to set up to motion detection record?

Enable 【Motion Detection】 feature, set the detected sensitivity you want (high/normal/low), set 【Alarm video duration】 and 【Alarm time delay】, then save the setting in 【SD Card Setting】, set 【Alarm video】 on Video mode, save the setting. (NOTE: If you enable motion detection, but you select "Throughout video" on "Timing video" under video mode, the device only sends a motion detection to your phone and take up 4GB storage.)

5. How to set it up remote viewing? (the camera is always offline)

- You need to connect the phone to the device with USB, then connect the device to the home wifi through your phone. (follow the guideline to set up the wifi, we have video in product page or you can reaching us directly.)
- After the device is successfully connected to the home wifi, make sure your phone can access the internet normally.

6. Why I can't get push notification even motion detection is on?

Ensure the "Alarm push" is enable.

- Ensure that your phone allows the app to access its phone notifications.

7. My phone can't play the recorded video or there is no sound when play the video?

- If that happened, please download "VLC Media Player" or "KM Player" to play this video.

8. The app shows that password is incorrect, the remote viewing is unavailable

- Delete the device on app and reset your camera, then re-add the camera again.

9. The camera is offline when I change new router?

- When your router changes new password or you change new router, you need to delete your camera on app, then reset your camera and add the camera on app again.

LED Light Indicator

[illegible]