
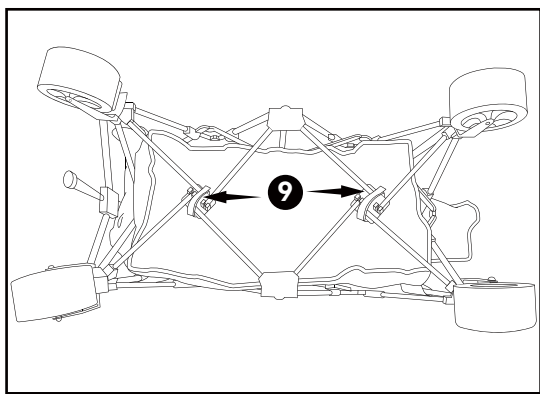
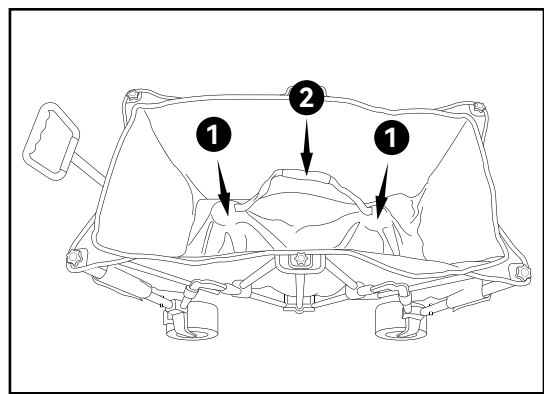


# Folding Wagon Assembly Instruction



RAY-1

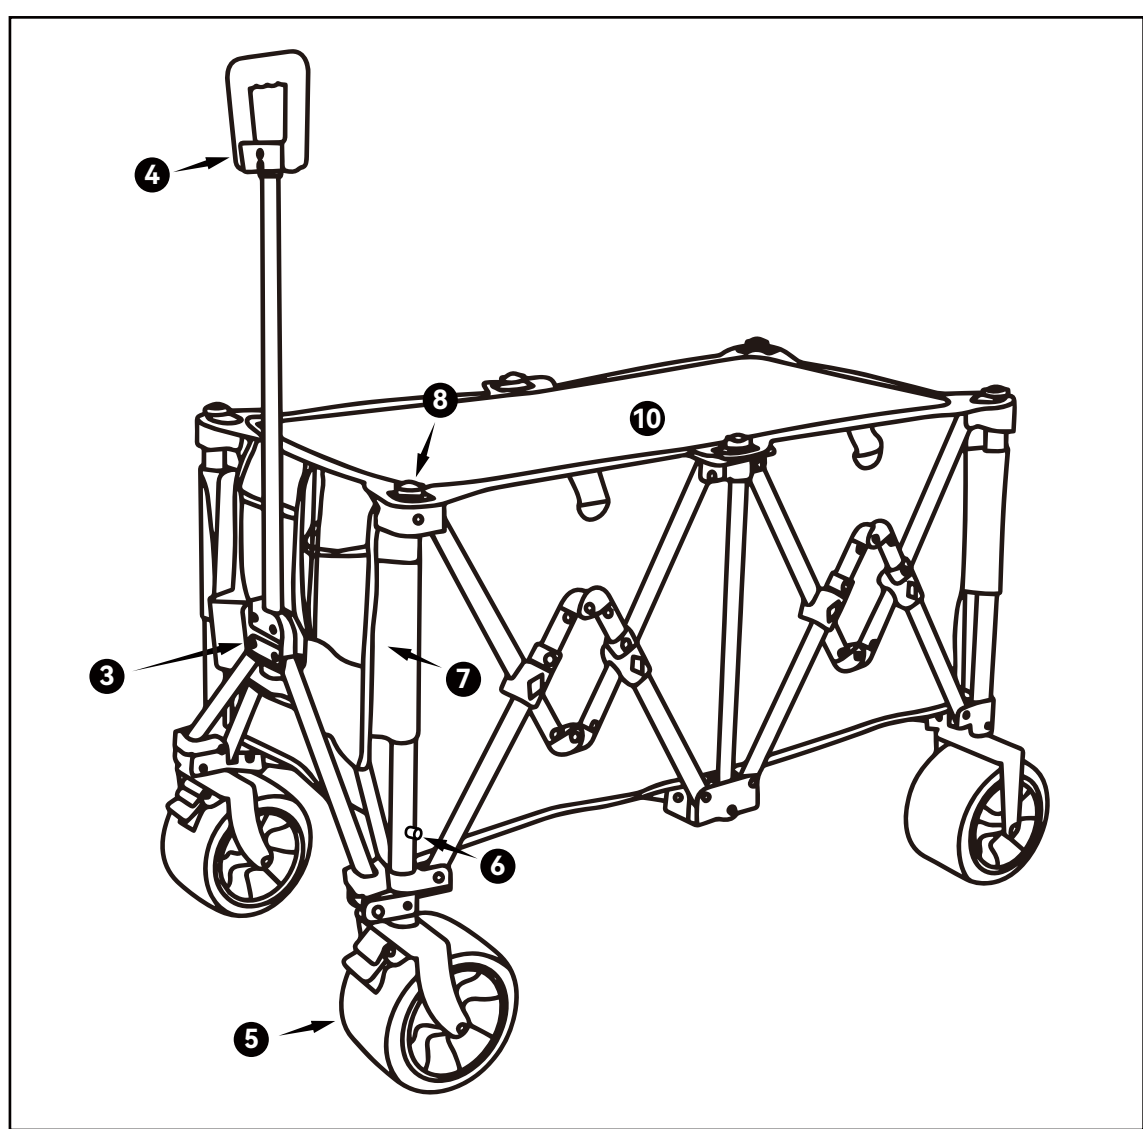

- |  |   |
|--|---|
| ① 2 x Pressing Frames for Unfolding        | ⑥ Wheels Removal Button                                 |
| ② Pulling Rope for Folding                 | ⑦ 4 x Cloth Bag Removal Points 2                        |
| ③ Draw-Bar Retracting Button (on the back) | ⑧ 6 x Cloth Bag Removal Points 1                        |
| ④ Handle                                   | ⑨ 2 x Cloth Bag Removal Points 3 (under the cart frame) |
| ⑤ Wheels                                   | ⑩ Cloth Bag   |



## 1. Unfolding / Storing Instructions

Press 2 frames (①) to unfold the wagon, pull the rope (②) to fold the wagon.

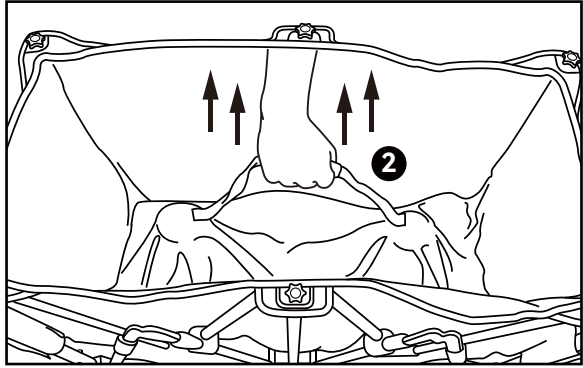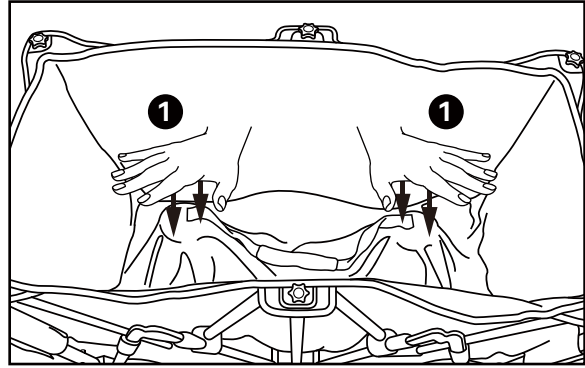



## 2. Cloth Bag Removal Instructions

Unfasten 4 magic tapes on 4 points (⑦), unscrew 6 fixing points (⑧), then unfasten 2 magic tapes (⑨) under the wagon to remove the cloth bag.

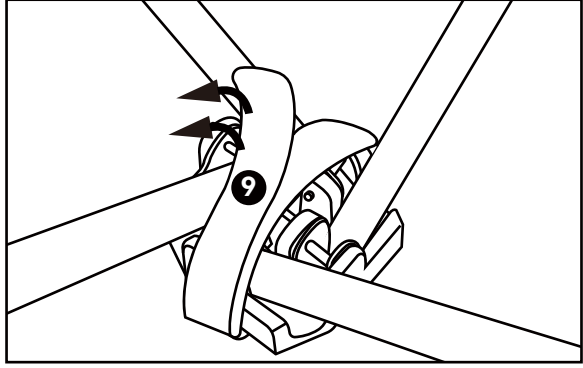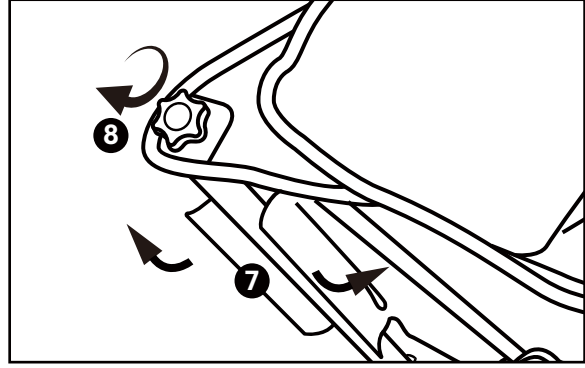



## 3. Wheels Removal Instructions

Press the red button (⑥) to remove the wheels and brackets. The wheels can be replaced as needed (front wheel bracket with brake button).

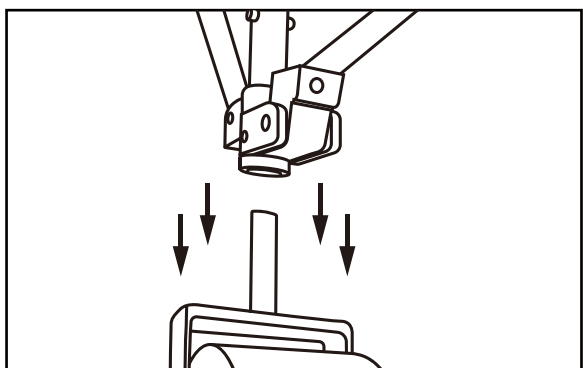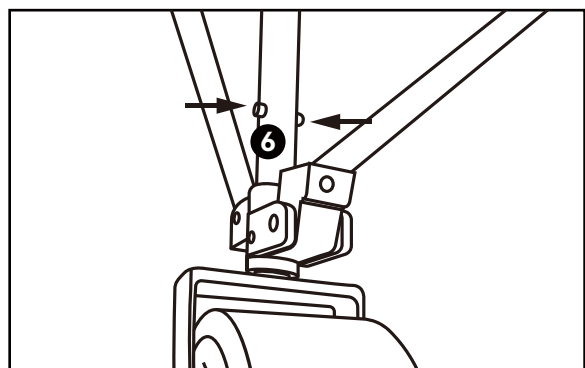

## 4. Moving Instruction After Folding

Pull it via the draw-bar or directly lift it by your hand. For the hand held mode, please pay attention to the wagon weight.

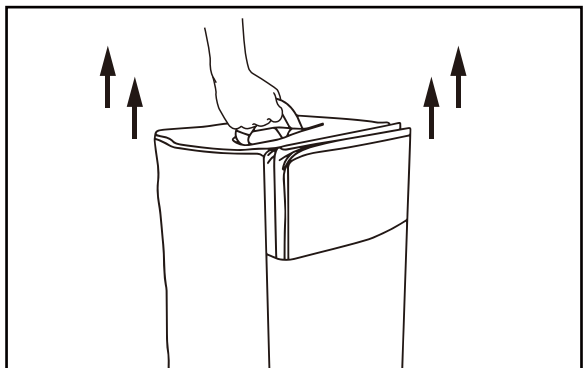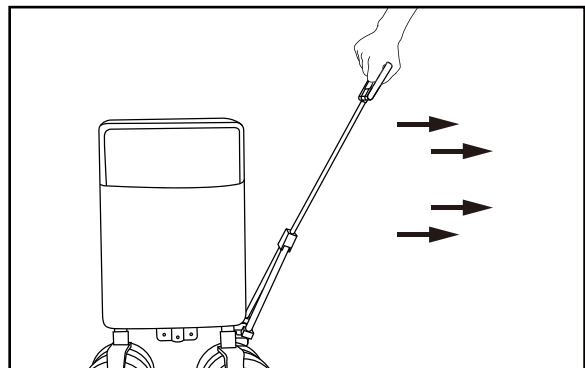

## 5. Product Parameters

Unfolding Size: 102 \* 51 \* 70 CM  
Volume: 7 CU FT / 200 L

Folding Size: 68 \* 36 \* 26 CM  
Product Weight: 30 LBS / 13.6 KG

Bearing Load: 440 LBS / 200 KG

## 6. Product Accessory

2 hook ropes can assist to fix the items in the wagon. They can be fixed on the wagon frame through 4 D-typed buckles on both sides and hooks.

### ! Warning

1. The wagon is NOT designed for transporting the children or adults.
2. The wagon is NOT RECOMMENDED to be used for downhill road condition. If necessary, please tilt the draw-bar to pull the wagon or push it back for stopping.

