

Device codes

TV codes

[illegible]

[illegible]

Toshiba	516	590	617	631	635	680	683	688	750	771	785	793	847	848	849
	850	851	852	853	854	855	856	865	866	909					
Totevision	526	658													
Toyomenko	627														
Universal	543	690													
Vector Research	506														
Victor	557														
Video Concepts	570														
Vidtech	505	573	627	652	653	654									
Viewsonic	760														
Vizio	766														
Wards	536	573	607	645	650	652	653	654	656	675	682	690	715	723	724
	729														
White Westinghouse	816														
Yamaha	505	506	573	652	653	654	656								
York	627														
Zenith	501	520	639	652	675	693	775	778	813	899					
Zonda	620														

TV-VCR combo codes

Brand	TV code	VCR code
Magnavox	887	797
	888	798
Philips	891	801
	892	802
	893	803
	894	804
Quasar	860	770
	861	771
	862	772
	895	805
	896	806
RCA	863	773
	864	774
Samsung	755	755
	897	807
Sylvania	756	756

TV-DVD combo codes

Brand	TV code	DVD code
Apex	757	757
Broksonic	752	752
Panasonic	734	734
	765	765
CYTRON	904	904
RCA	749	749
Sansui	754	754
Sylvania	764	764
Toshiba	865	814
	866	815

TV-DVD-VCR combo codes

Brand	TV code	DVD code	VCR code
Panasonic	900	882	810

TV-VCR-Tuner combo codes

Brand	TV code	VCR code	Tuner code
Panasonic	867	796	797
	868	799	798
	869	808	799
	870	780	839
	871	781	838
	872	782	837
	873	783	836
	874	784	833
	875	785	826
	876	786	825
	877	787	824
	878	788	822
	879	789	821
	880	790	820
	881	791	819
	882	792	818
	883	793	817
	884	794	816
	885	795	815
	889	809	808

DVD-VCR codes

Brand	DVD code	VCR code
Go Video	692	N/A
	693	N/A
	822	N/A
JVC	689	N/A
RCA	690	N/A
Samsung	667	N/A
	691	N/A
	820	N/A
	821	N/A
Sony	817	778
	818	N/A
	N/A	768
Toshiba	819	N/A
Zenith	N/A	779

[illegible]

