

## SDM630MCT 40mA

*DIN Rail Energy Meter for Single and Three Phase Electrical Systems*



- Measures kWh kVArh, kW, kVAr, kVA, P, F, PF, Hz, dmd, V, A, THD, etc.
- Bi-directional measurement IMP & EXP
- Two pulse outputs
- RS485 Modbus
- Din rail mounting 35mm
- 40mA CT connection
- Better than Class 1 / B accuracy

### **USER MANUAL V3.6**

### Introduction

The SDM630MCT 40mA measures and displays the characteristics of single phase two wire (1p2w), three phase three wire (3p3w) and three phase four wire (3p4w) supplies, including voltage, frequency, current, power, active and reactive energy, imported or exported. Energy is measured in terms of kWh, kVAh. Maximum demand current can be measured over preset periods of up to 60 minutes. In order to measure energy, the unit requires voltage and current inputs in addition to the supply required to power the product. The requisite current input are obtained current transformers(CT).

SDM630MCT 40mA can be configured to work with a wide range of CTs with 40mA output, giving the unit a wide range of operation. Built-in interfaces provides pulse and RS485 Modbus RTU outputs. Configuration is password protected.

This unit can be powered from a separate auxiliary (AC or DC) supply. Alternatively it can be powered from the monitored supply, where appropriate.

### Unit Characteristics

The Unit can measure and display:

- Line voltage and THD% (total harmonic distortion) of all phases
- Line Frequency
- Currents, Current demands and current THD% of all phases
- Power, maximum power demand and power factor
- Active energy imported and exported
- Reactive energy imported and exported

The unit has password-protected set-up screens for:

- Changing password
- Supply system selection 1p2w, 3p3w, 3p4w
- Demand Interval time
- Reset for demand measurements
- Pulse output duration

Two pulse output indicates real-time energy measurement. An RS485 output allows remote monitoring from another display or a computer.

### Current Transformer Primary Current

The secondary current of CT is fixed 40mA, and the primary current is optional.

### RS485 Serial – Modbus RTU




This uses an RS485 serial port with Modbus RTU protocol to provide a means of remotely monitoring and controlling the Unit

Set-up screens are provided for setting up the RS485 port.

Pulse output

This provides two pulse outputs that clock up measured active and reactive energy. The constant for active energy is 3200imp/kWh (Terminals 11&12). The pulse width for pulse 1 (Terminals 9&10) can be set from the set-up menu.





Start Up Screens

1		The first screen lights up all display segments and can be used as a display check.
2		The second screen indicates the firmware installed in the unit and its build number.
3		The interface performs a self-test and indicates the result if the test passes.

\*After a short delay, the screen will display active energy measurements.




## Measurements


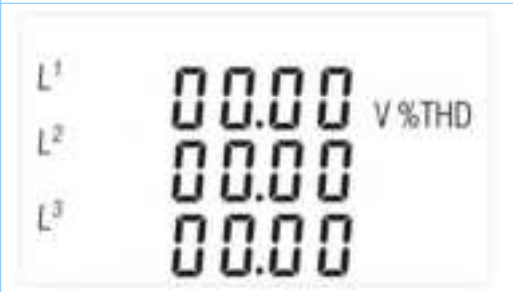
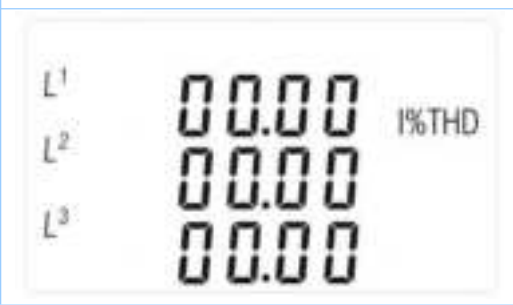
The buttons operate as follows:

1		Selects the Voltage and Current display screens In Set-up Mode, this is the “Left” or “Back” button.
2		Select the Frequency and Power factor display screens In Set-up Mode, this is the “Up” button
3		Select the Power display screens In Set-up Mode, this is the “Down” button
4		Select the Energy display screens In Set-up mode, this is the “Enter” or “Right” button

## Voltage and Current



Each successive pressing of the  button selects a new range:



1-1		Phase to neutral voltages (3p4w)
1-2		Phase to Phase voltages (3p3w)
2		Current on each phase

2-1		Neutral current
3		Phase to neutral voltage THD% (3p4w)
4		Current THD% for each phase

Frequency and Power factor and Demand

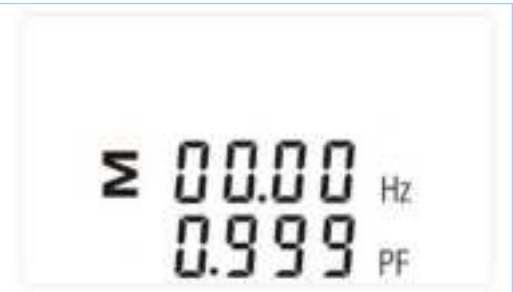Each successive pressing of the  button selects a new range:



1		Frequency and Power Factor (total)
2		Power Factor of each phase

3		Maximum Current Demand
4		Maximum Power Demand

Power



Each successive pressing of the button select a new range:





1		Instantaneous Active Power in kW
2		Instantaneous Reactive Power in kVAr
3		Instantaneous Volt-amps in kVA


4		Total W, VAR, VA
---	---	------------------

Energy Measurements




Each successive pressing of the  button selects a new range:

1		Total active energy in kWh
2		Total reactive energy in kVARh
3		Imported active energy in kWh
4		Exported active energy in kWh

5		Imported reactive energy in kVarh
6		Exported reactive energy in kVarh


Setting Up


To enter set-up mode, pressing the  button for 3 seconds, until the password screen appears.



Setting up is password-protected so you must enter the correct password (default '1000') before processing.

If an incorrect password is entered, the display will show: PASS Err

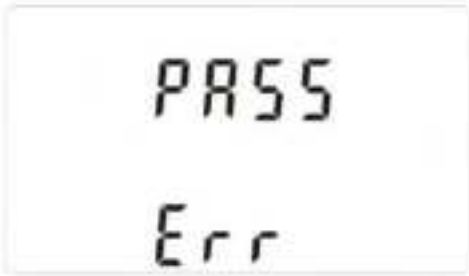











To exit setting-up mode, press  repeatedly until the measurement screen is restored.

Set-up Entry Methods

Some menu items, such as password and CT, require a four-digit number entry while others, such as supply system, require selection from a number of menu options.







## Menu Option Selection

- 1) Use the  and  buttons to select the required item from the menu. Selection does not roll over between bottom and top of list
- 2) Press  to confirm your selection
- 3) If an item flashes, then it can be adjusted by the  and  buttons. If not, there maybe a further layer.
- 4) Having selected an option from the current layer, press  to confirm your selection.
- 5) Having completed a parameter setting, press  to return to a higher menu level. You will be able to use the  and  buttons for further menu selection.
- 6) On completion of all setting-up, press  repeatedly until the measurement screen is restored.

## Number Entry Procedure

When setting up the unit, some screens require the entering of a number. In particular, on entry to the setting up section, a password must be entered. Digits are set individually, from left to right. The procedure is as follows:

- 1) The current digit to be set flashes and is set using the  and  buttons
- 2) Press  to confirm each digit setting.
- 3) After setting the last digit, press  to exit the number setting routine.











## Communication

There is a RS485 port can be used for communication using Modbus RTU protocol. For Modbus RTU, parameters are selected from Front panel.




## RS485 Address










(The range is from 001 to 247)






1		From the Set-up menu, use  and  buttons to select the Address ID
2-1		Press  button to enter the selection routine. The current setting will be flashing.
2-2		Use  and  buttons to choose Modbus Address (001 to 247)
On completion of the entry procedure, press  button to confirm the setting and press  button to return the main set-up menu.		


Baud Rate

1		From the Set-up menu, use  and  buttons to select the Baud Rate option.
---	---	---











2-1		Press  to enter the selection routine. The current setting will flash.
2-2		Use  and  buttons to choose Baud rate 2.4k, 4.8k, 9.6k, 19.2k, 38.4k Default is 9.6k
On completion of the entry procedure, press  to confirm the setting and press  to return to the main set up menu.		

Parity

1		From the Set-up menu, use  and  buttons to select the Parity option.
2-1		Press  to enter the selection routine. The current setting will flash.

2-2		Use  and  buttons to choose Parity (EVEN / ODD/ NONE) Default is NONE.
On completion of the entry procedure, press  to confirm the setting and press  to return to the main set up menu.		

### Stop bits

1		From the Set-up menu, use  and  buttons to select the Stop Bit option.
2-1		Press  to enter the selection routine. The current setting will flash.
2-2		Use  and  buttons to choose Stop Bit (2 or 1)
On completion of the entry procedure, press  to confirm the setting and press  to return to the main set up menu.		

Note: Default is 1, and only when the parity is NONE that the stop bit can be changed to 2.

## CT



The CT1 option sets the primary current of CT that wires to the meter. CT2 is fixed with 40mA

1		From the Set-up menu, use  and  buttons to select the CT primary (CT1). Its' default 300A, and ranged from 000 5 to 9999.
2		Secondary CT (CT2) It's fixed 40mA, and can not be set.

## PT

The PT option sets the secondary voltage (PT2 100 to 500V) of the Voltage transformer (PT) that wires to the meter.






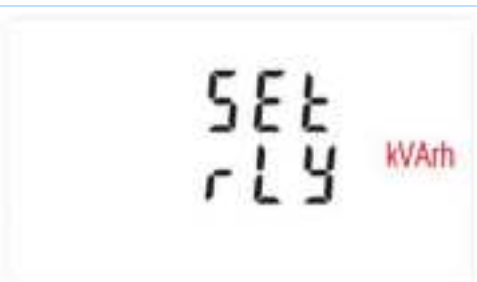




1		From the Set-up menu, use  and  buttons to select the PT option. The screen will show the voltage PT secondary voltage value. The default value is 400V
2		Secondary PT setting Press  to enter the PT secondary voltage selection routine. The range is from 100 to 500V.

3		<p>Set PT ratios value</p> <p>Press  to enter the PT ratio screen.</p> <p>The range is from 0001 to 2000.</p>
<p>For example, if set the ratio to be 100, it means the primary voltage equals secondary voltage x 100</p>		

### Pulse output

This option allows you to configure the pulse output. The output can be set to provide a pulse for a defined amount of energy active or reactive.

Use this section to set up the pulse output 1—Units: Total kWh (default), Total kVArh

1		<p>From the Set-up menu, use  and  buttons to select the Pulse output option.</p>
2		<p>Press  to enter the selection routine. The unit symbol will flash.</p>
3		<p>Use  and  buttons to choose kWh or kVArh.</p>
<p>On completion of the entry procedure, press  to confirm the setting and press  to return to the main set up menu.</p>		

### Pulse rate

Use this to set the energy represented by each pulse. Rate can be set to 1 pulse per 0.01kWh/0.1kWh/1kWh/10kWh/100kWh/1000kWh.



(It shows 1 impulse = 10kWh/kVAh)










1		From the Set-up menu, use  and  buttons to select the Pulse Rate option.
2		Press  to enter the selection routine. The current setting will flash. 0.01/0.1/1/10/100/1000kWh/kVAh per pulse
Use  and  buttons to choose pulse rate. On Completion of the entry procedure, press  to confirm the setting and press  to return to the main set up menu.		

### Pulse Duration

The energy monitored can be active or reactive and the pulse width can be 200, 100 or 60ms.











(It shows pulse width of 200ms)




1-1		From the Set-up menu, use  and  buttons to select the Pulse width option.
1-2		Press  to enter the selection routine. The current setting will flash. Use  and  buttons to choose pulse width.
On completion of the entry procedure, press  to confirm the setting and press  to return to the main set up menu.		

#### DIT Demand Integration Time

This sets the period in minutes over which the current and power readings are integrated for maximum demand measurement. The options are: off (0), 5, 8, 10, 15, 20, 30, 60 minutes







1		From the set-up menu, use  and  buttons to select the DIT option. The screen will show the currently selected integration time.
2-1		Press  to enter the selection routine. The current time interval will flash
2-2		Use  and  buttons to select the time required.



2-3		Press  to confirm the selection. SET indicator will appear.
Press  to exit the DIT selection routine and return to the menu.		




### Backlit set-up









The meter provides a function to set the blue backlit lasting time.

1		<p>The backlit lasting time is settable Default lasting time is 60 minutes For example, if it's set as 5, the backlit will be off in 5 minutes from the last time operation on the meter. Notes: If it's set as 0, the backlit will always be on.</p>
2		<p>Press  to enter the selection routine. The current time interval will flash The options can be: 0/5/10/30/60/120 minutes</p>
Use  and  buttons to select the time required. Then press  to confirm the set-up,		






### Supply System








Use this section to set the type of power supply being monitored.

1		<p>From the Set-up menu, use  and  buttons to select the System option. The screen will show the currently selected power supply.</p>
---	---	---

2		Press  to enter the selection routine. The current selection will flash
3-1		Use  and  buttons to select the required system option: 1P2(W),3P3(W) ,3P4(W)
3-2		Press  to confirm the selection. SET indicator will appear.
Press  to exit the system selection routine and return to the menu. SET will disappear and you will be returned to the main Set-up Menu		








Change password

1		Use the  and  to choose the change password option
2-1		Press the  to enter the change password routine. The new password screen will appear with the first digit flashing

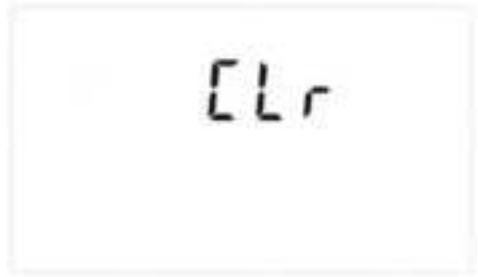







2-2		Use  and  to set the first digit and press  to confirm your selection. The next digit will flash.
2-3		Repeat the procedure for the remaining three digits
2-4		After setting the last digit, SET will show.
Press  to exit the number setting routine and return to the Set-up menu. SET will be removed		

**CLR**







The meter provides a function to reset the maximum demand value of current and power.

1		From the Set-up menu, use  and  buttons to select the reset option.
2		Press  to enter the selection routine. The MD will flash.
Press  to confirm the setting and press  to return to the main set up menu.		

## Reverse connected current inputs correction set-up

1		use  and  buttons to select page "SET sys cont"
2-1		Press to  enter Phase A , the default is Frd (forward)
2-2		use  and  buttons to Phase B or C setting pages

## How to operate if phase A is reversely connected

1		Go to phase A setting page
2		Press  to enter the selection routine. The Frd will flash. Use  button to change Frd to Rev.
Press  to confirm the setting and press  to return to the main set up menu.		

## Specifications

### Measured Parameters

The unit can monitor and display the following parameters of a single phase two wire (1p2w), three phase three wire (3p3w) or four phase four wire (3p4w) supply.

### Voltage and Current

Phase to neutral voltages  $230(\pm 20\%)V$  a.c. (Not suitable for 3P3W)

Voltages between phases  $400(\pm 20\%)V$  a.c. (Suitable for 3P3W)

Percentage total voltage harmonic distortion (THD%) for each phase to N ( not for 3p3w supplies)

Percentage voltage THD% between phases (three phase supplies only)

Current THD% for each phase

### Power factor and Frequency and Max. Demand

Frequency in Hz

Instantaneous power:

Power 0 to 3600 MW

Reactive Power 0 to 3600 MVA

Volt-amps 0 to 3600 MVA

Maximum demanded power since last Demand reset Power factor

Maximum neutral demand current, since the last Demand reset (Suitable for 3P3W)

### Energy Measurements

- Imported/Exported active energy 0 to 9999999.9 kWh
- Imported/Exported reactive energy 0 to 9999999.9 kVAh
- Total active energy 0 to 9999999.9 kWh
- Total reactive energy 0 to 9999999.9 kVAh

### Measured Inputs

Voltage inputs through 4-way fixed connector with  $2.5mm^2$  stranded wire capacity. single phase two wire (1p2w), three phase three wire(3p3w) or four phase four wire (3p4w) unbalanced. Line frequency measured from L1 voltage or L3 voltage.

Three current inputs (six physical terminals) with  $2.5mm^2$  stranded wire capacity for connection of external CTs. Nominal rated input current 333mA a.c. Rms.

Maximum torque is 0.4Nm.

### Accuracy

- Voltage 0.5% of range maximum
- Current 0.5% of nominal
- Frequency 0.2% of mid-frequency
- Power factor 1% of unity (0.01)
- Active power (W)  $\pm 1\%$  of range maximum

- Reactive power (VAr)  $\pm 1\%$  of range maximum
- Apparent power (VA)  $\pm 1\%$  of range maximum
- Active energy (Wh) Class 1 IEC 62053-21
- Reactive energy (VARh) Class 2 IEC62053-23
- Total harmonic distortion 1% up to 31st harmonic
- Response time to step input 1s, typical, to >99% of final reading, at 50/60Hz.

#### \*Auxiliary Supply

Two-way fixed connector with 2.5mm<sup>2</sup> stranded wire capacity.

100 to 277V a.c. , 50/60Hz  $\pm 10\%$  or 140 to 392V d.c.  $\pm 20\%$ . Consumption < 10W.

#### Interfaces for External Monitoring

Three interfaces are provided:

- an RS485 communication channel that can be programmed for Modbus RTU protocol
- an output indicating real-time measured energy.(configurable)
- an pulse output 3200imp/kWh (not configurable)

The Modbus configuration (Baud rate etc.) and the pulse output assignments (kWh/kVARh) are configured through the Set-up screens.

#### Pulse Output

The unit provides two pulse outputs. Both pulse outputs are passive type.

Pulse output 1 is configurable. The pulse output can be set to generate pulses to represent total kWh or kVARh.

The pulse constant can be set to generate 1 pulse per:

0.01 = 10 Wh/VARh

0.1 = 100 Wh/VARh

1 = 1 kWh/kVARh

10 = 10 kWh/kVARh

100 = 100 kWh/kVARh

1000=1000 kWh/kVARh

Pulse width: 200/100(default)/60ms

Pulse output 2 is non-configurable. It is fixed up with total kWh. The constant is 3200imp/kWh.

#### RS485 Output for Modbus RTU

For Modbus RTU, the following RS485 communication parameters can be configured from the Set-up menu:

**Baud rate** : 2400, 4800, 9600(default), 19200, 38400

**Parity** : none (default)/odd/even

**Stop bits** : 1 or 2

**RS485 network address** : *nnn* – 3-digit number, 001 to 247

**Modbus™ Word order** : Hi/Lo byte order is set automatically to normal or reverse.

It cannot be configured from the set-up menu.

#### Reference Conditions of Influence Quantities

Influence Quantities are variables that affect measurement errors to a minor degree. Accuracy is verified under nominal value (within the specified tolerance) of these conditions.


- Ambient temperature  $23^{\circ}\text{C} \pm 1^{\circ}\text{C}$
- Input frequency  $50 \text{ or } 60\text{Hz} \pm 2\%$
- Input waveform Sinusoidal (distortion factor  $< 0.005$ )
- Auxiliary supply voltage Nominal  $\pm 1\%$
- Auxiliary supply frequency Nominal  $\pm 1\%$
- Auxiliary supply waveform (if AC) Sinusoidal (distortion factor  $< 0.05$ )
- Magnetic field of external origin Terrestrial flux

#### Environment



- Operating temperature  $-40^{\circ}\text{C}$  to  $+70^{\circ}\text{C}$
- Storage temperature  $-40^{\circ}\text{C}$  to  $+70^{\circ}\text{C}$
- Relative humidity 0 to 95%, non-condensing
- Altitude Up to 2000m
- Warm up time 5s
- Vibration 10Hz to 50Hz, IEC 60068-2-6, 2g
- Shock 30g in 3 planes

#### Dimensions and Installation

Serial Number	Serial number of terminal block	Terminal Capacity	Recommended to Install Torque
1	RS485/Fuse Terminals: 9, 10, 11, 12, 13, 14	0.5-2.5mm <sup>2</sup>	0.2-0.4Nm
2	Sampling Terminals: 1, 2, 3, 4, 5, 6, 7, 8, 15, 16, 17, 18, 19, 20	1.5-2.5mm <sup>2</sup>	0.2-0.4Nm

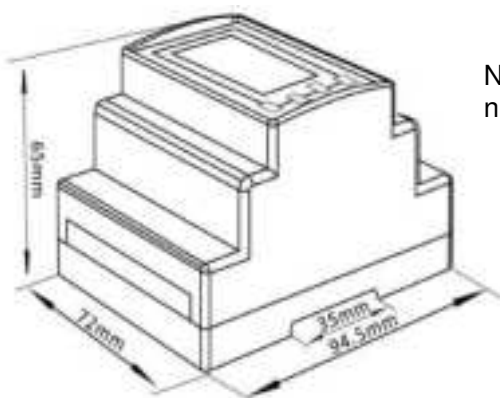


Note: See next page for diagrams of terminal serial numbers.

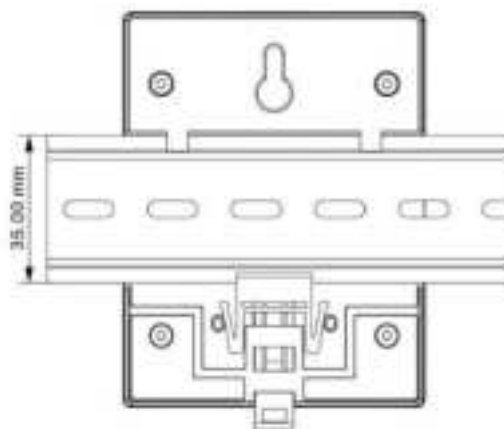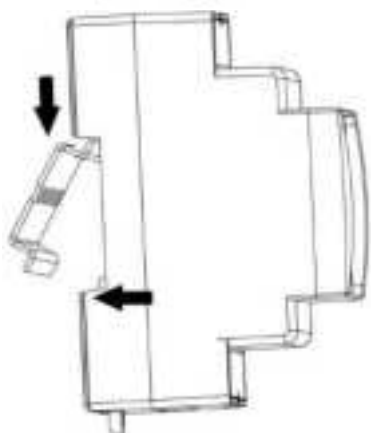


## Wiring diagram

## Three Phase Four Wire 3CT

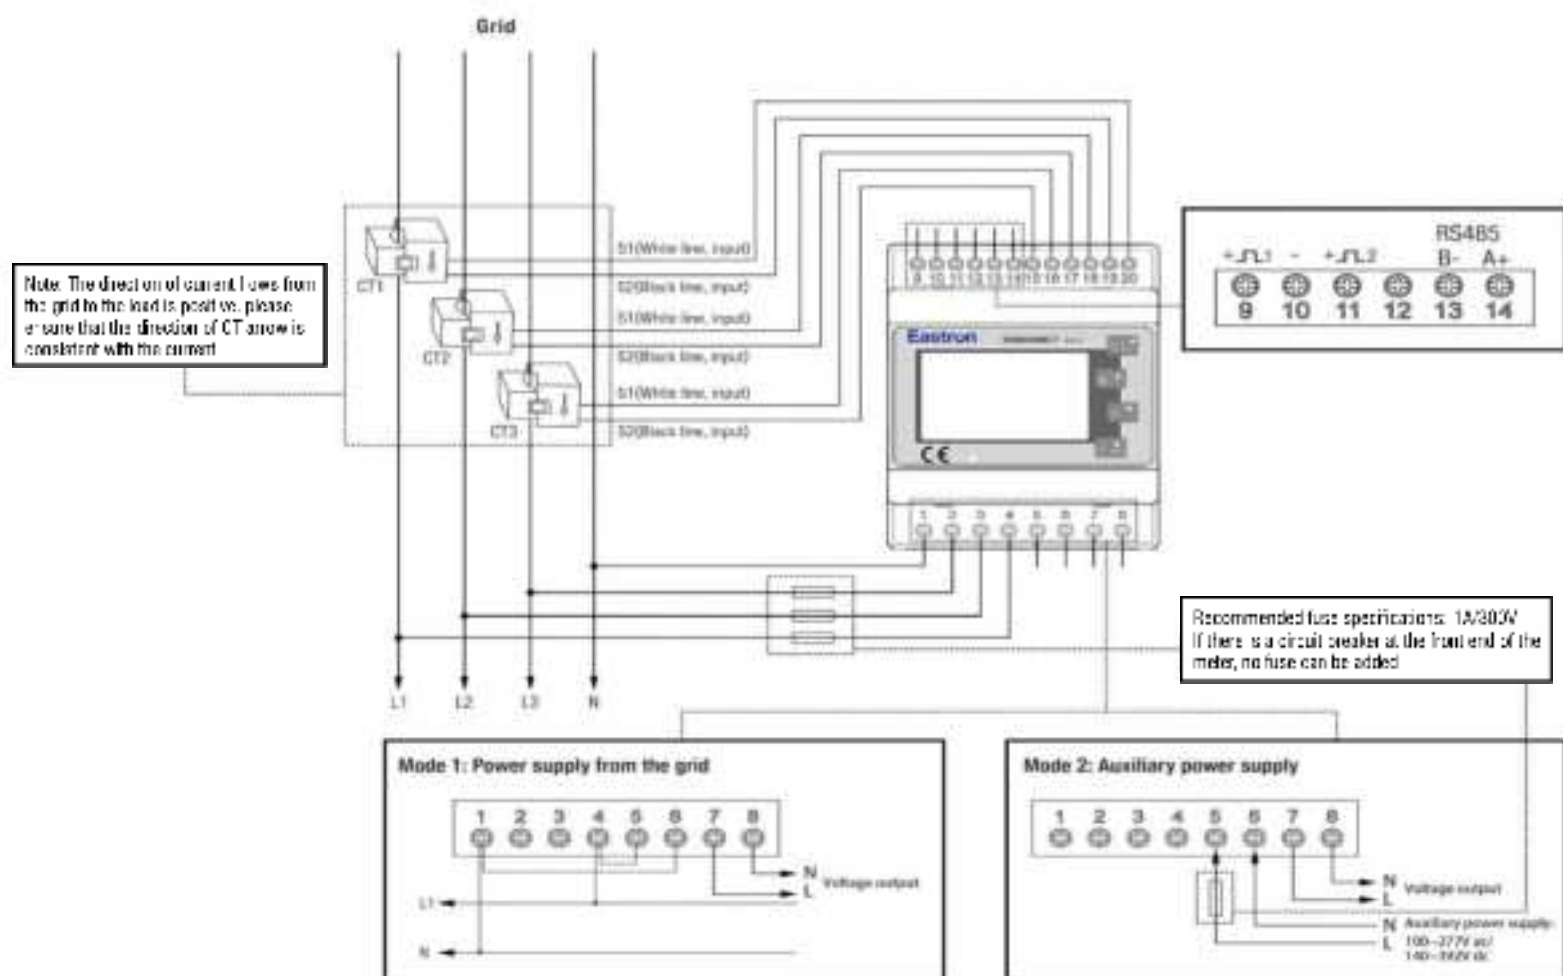




## Three Phase Three Wire 2CT

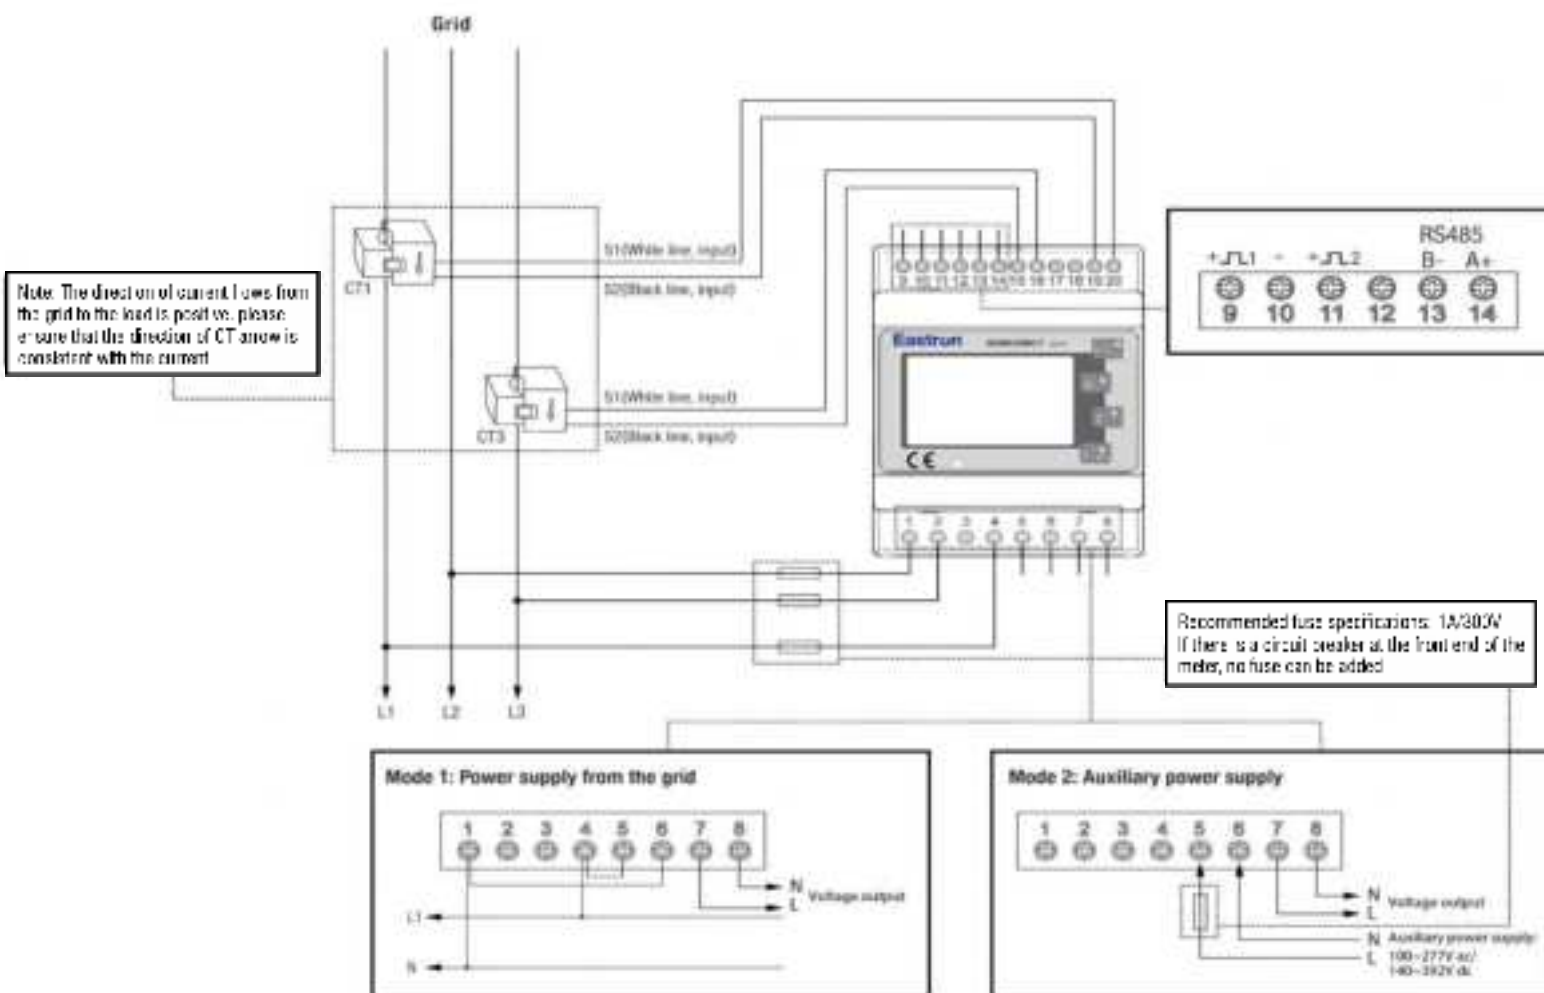

## Single Phase Two Wire 1CT

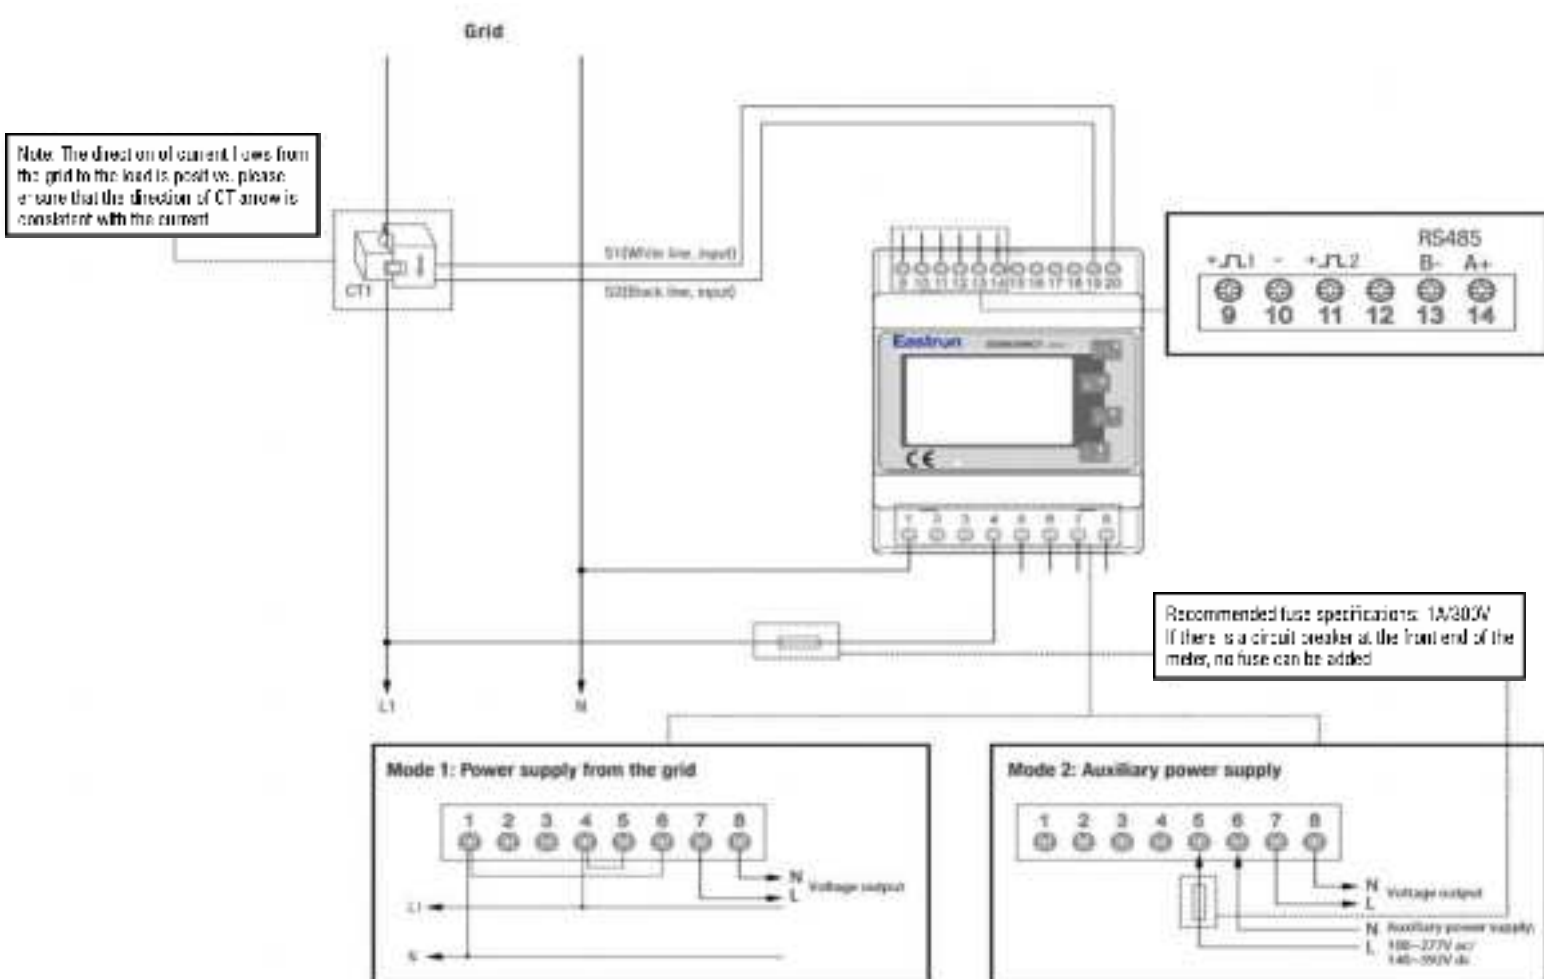

If you have any question, please feel free to contact our sales team.

#### Zhejiang Eastron Electronic Co., Ltd.

NNo.52, Dongjin Road, Nanhu, Jaxing, Zhejiang, 314001, China

Tel: +86-573-83698881 Fax: +86-573-83698883

Email: sales@eastrongroup.com

[www.eastrongroup.com](http://www.eastrongroup.com)

Add: No.52, Dongjin Road, Nanhu, Jaxing, Zhejiang, 314001, China.

[www.eastrongroup.com](http://www.eastrongroup.com)

**1. Product name: open and closing current transformer****2. Product specification: ESCT-TA16 120A/40mA****3. Main technical parameters:**


Project	Symbol	Technical Parameter	Project	Symbol	Technical Parameter
Service frequency	f	50/60Hz	Insulation strength	—	500M $\Omega$ /500V/min
Rated primary current	$I_n$	120A	Power frequency and pressure resistance	—	4KV / 1 mA / 1min (through the cable)
Rated secondary current	$I_o$	40mA	Working temperature	Ta	-25°C ~ +70°C
Accuracy class	—	0.5	Storage temperature	Ts	-40°C ~ +85°C
Number of core turns	I	1 turn	Degree of linearity	%	0.5
Reference standards	GB 20840.2-2014 / IEC61869-2				

**4. Primary, secondary and polar end definitions:**

4.1 Primary definition of transformer: primary penetration input of transformer and secondary lead output.

4.2 Definition of the same name of primary and secondary leads: P1 into P2 and out of P2 of the transformer.


4.3 The electrical schematic diagram of the transformer is as follows.

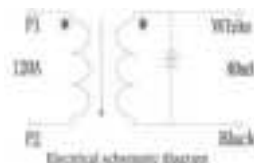**5. Main production technical requirements of the transformer:**

5.1 Shell color is black.

5.2 CT wire requirement: 2 \* 0.3 mm<sup>2</sup>, black and white (line arrangement), line length is 1.0m.

5.3 Please refer to the following figure for the overall dimensions

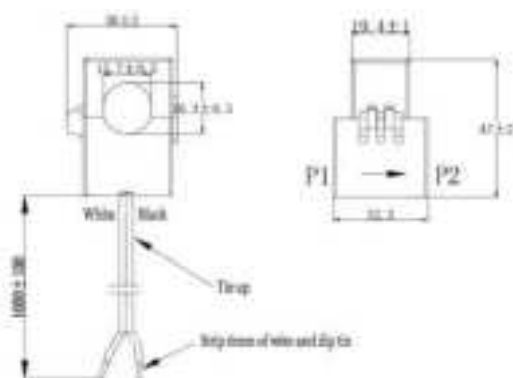**5.4 CT error requirements**

Accurate level	Current Error $\pm$ (%)					Phase Error $\pm$ ( ' )				
	At the following current					At the following current				
	0.01In	0.05In	0.2In	In	1.2In	0.01In	0.05In	0.2In	In	1.2In
0.5	0 $\pm$ 0.2	0 $\pm$ 0.2	0 $\pm$ 0.2	0 $\pm$ 0.2	0 $\pm$ 0.2	40 $\pm$ 15	37 $\pm$ 15	32 $\pm$ 15	30 $\pm$ 15	35 $\pm$ 15