 


HIGH POWER BASS BLUETOOTH BLASTER

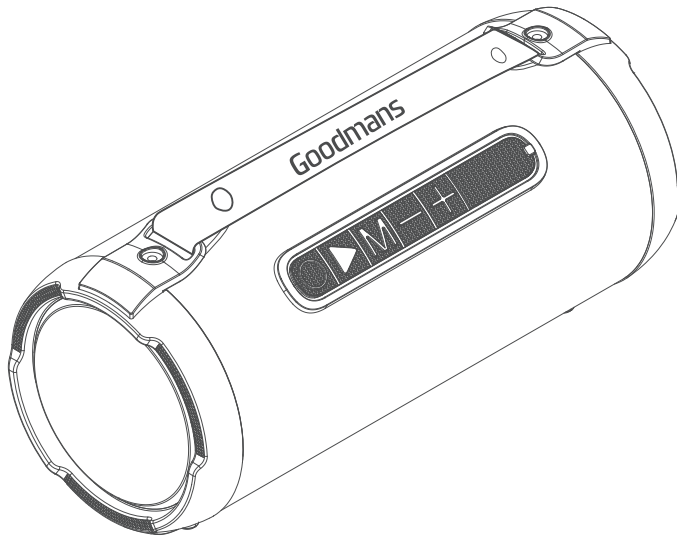

MODEL: 359780

USER MANUAL



Goodmans



1 Welcome

2 Your High Power Bass Bluetooth Blaster

2.1 In The Box

2.2 Top View

2.3 Side View

3 Quick Setup

3.1 Charging Your High Power Bass Bluetooth Blaster

3.2 Pairing with a Bluetooth Device

3.3 Playing Your Music

3.4 Using the AUX IN Connection

3.5 Using the USB / TF Card Function

4 Troubleshooting

5 Technical Specifications

6 EC Declaration



1 Welcome

Thank you for choosing this Goodmans product. We've been making electrical products for the British people for over 90 years. Each of our projects have been carefully designed to be great at what they do and this one is no exception. We hope you enjoy your new High Power Bass Bluetooth Blaster.

2 Your High Power Bass Bluetooth Blaster

 
2.1 In The Box

Carefully remove your High Power Bass Bluetooth Blaster from the packaging.

Inside the box you will find:

- 1 x High Power Bass Bluetooth Blaster
- 1 x Micro USB Charging Cable
- 1 x 3.5mm AUX IN Cable
- Quick Start Guide
- Instruction Manual
- Guarantee & Safety Manual

2.2 Top View

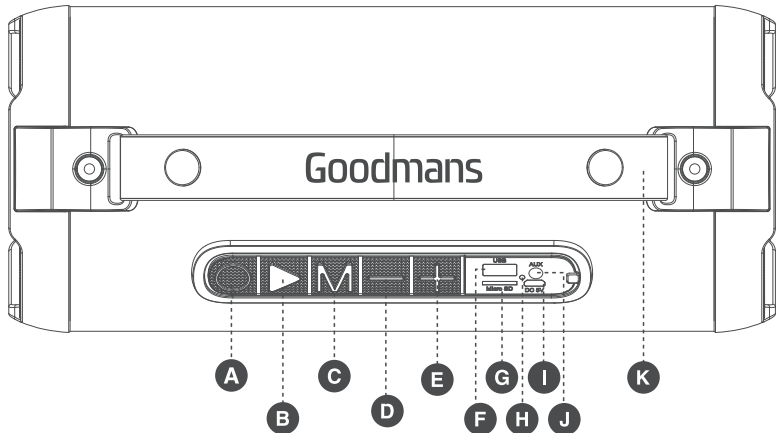

A Power ON / OFF Button

Hold the button to turn ON / OFF.

B Play / Pause

Press the button once to play or pause the music.

C Mode

Press the button to select Bluetooth, USB, TF card, AUX mode.

D Previous Track / Decrease Volume

Press the button once to go back to the previous track.

Hold the button to decrease the volume.

E Next Track / Increase Volume

Press the button once to the next track.

Hold the button to increase the volume.

F USB Port

G TF card slot



H LED Indicator Light

I USB Charging Socket

Used to charge the battery.

 
J AUX IN

K Handle

2.3 Side View

L Speaker

M LED Lights

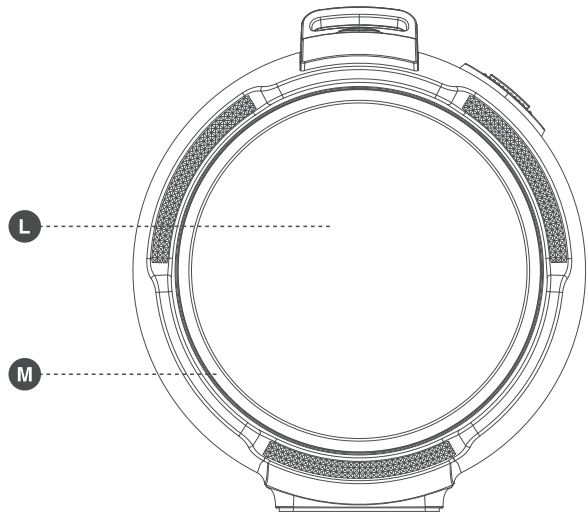


3 Quick Setup

3.1 Charging Your High Power Bass Bluetooth Blaster

1. Your High Power Bass Bluetooth Blaster has a built in rechargeable battery so it can be used anywhere. Before using it for the first time please fully charge the battery.
2. Connect the Micro USB charging cable supplied to the speaker.
3. Connect the other end of the Micro USB cable to a USB port on your computer, or a 5V 1A USB wall charger. A wall charger is not included.
4. When your High Power Bass Bluetooth Blaster is charging the indicator light will show. When the battery is fully charged the LED light will turn off.

 
Note: when the battery is getting low, the low battery warning alert will sound, when you hear this, please recharge the battery.

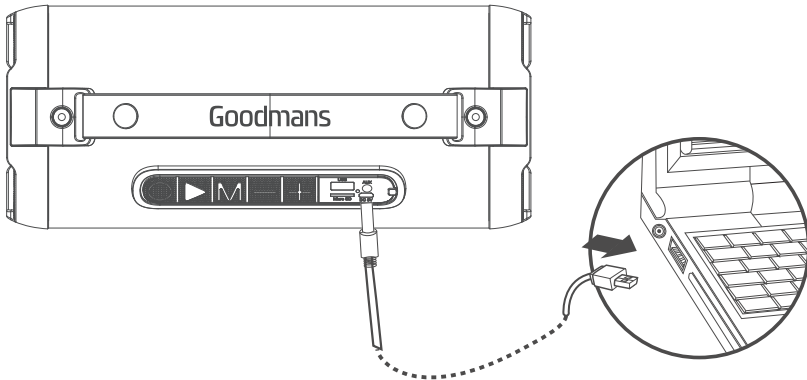

3.2 Pairing with a Bluetooth Device

1. Hold the Power ON/OFF button to turn on the Bluetooth Blaster and the LED lights will automatically turn on. The High Power Bass Bluetooth Blaster will automatically start in Bluetooth mode and you will hear "Bluetooth mode, pairing" and the indicator light will flash Blue.
2. Enable Bluetooth on your Smartphone and search for Bluetooth connections, select "GOODMANS TUBE SPKR" from the list of devices. You are asked for a pass code enter "0000".

3. When successfully paired, you will hear “connected”.
4. Once you have paired the High Power Bass Bluetooth Blaster with a smartphone or Bluetooth device, it will remember this device and will pair automatically when the device’s Bluetooth is activated and in range, you do not need to re-pair any previously connected devices.
5. The High Power Bass Bluetooth Blaster will attempt to automatically connect to the last device it was paired with if Bluetooth mode is turned on. If you want to pair it with a new device, please turn off your last Bluetooth device and then use your new device to search and select the pairing name.

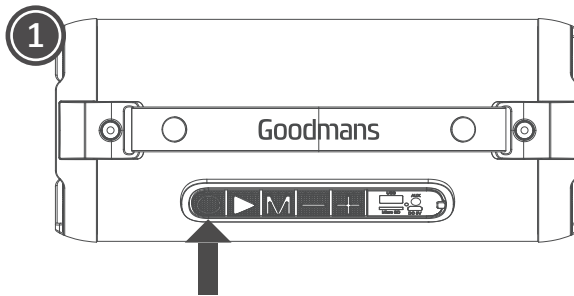

3.3 Playing Your Music

When your smartphone or Bluetooth device is paired to the High Power Bass Bluetooth Blaster, use your music App to playback your music.


3.4 Using the AUX IN Connection

1. If your device doesn't have Bluetooth, you can use the AUX in connection.
2. Connect the 3.5mm AUX in cable to the High Power Bass Bluetooth Blaster, you will hear voice prompt and then connect the other end to your device.



3. Select you music on your device and play.


Note: When an AUX in cable is connected, your High Power Bass Bluetooth Blaster will disconnect from your Bluetooth device.

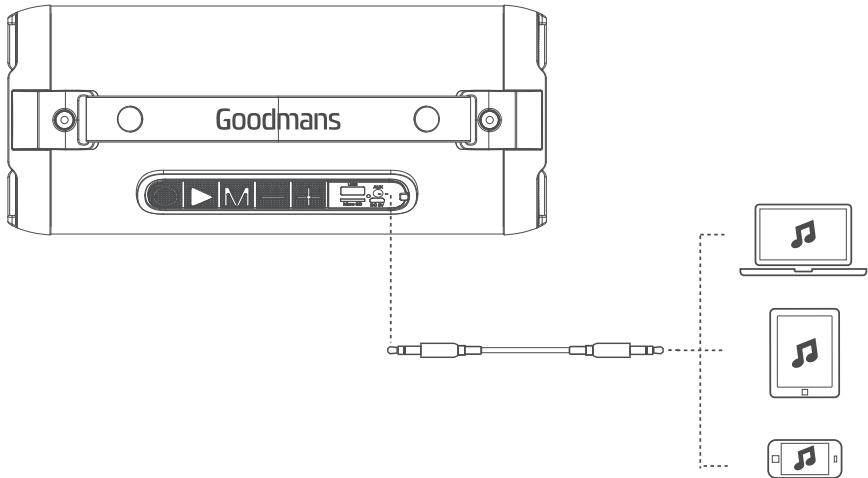

3.5 Using the USB / TF Card Function

1. Hold the Power ON/OFF button to turn on the Bluetooth Blaster and the LED lights will automatically turn on.
2. Insert a USB/TF card (not included) into the USB port or TF card slot on the unit. It will automatically play the music.


Note: When you insert a USB or TF card, your High Power Bass Bluetooth Blaster will automatically disconnect from your Bluetooth devices.

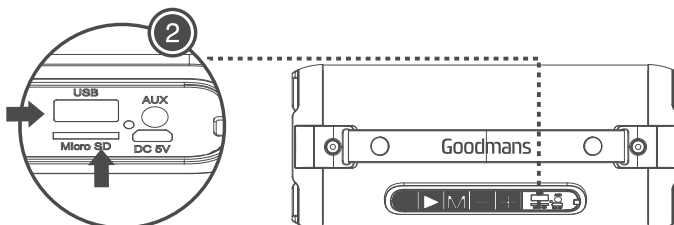

4 Troubleshooting

Problem	Possible Cause	Solution
Low sound level	The input volume of your device is too low.	Increase the volume on your Speaker and the input device.
Sound distorted	The volume is too high.	Decrease the volume on the speaker and your input device.
No sound	Your Speaker or input device is turned off.	Turn on the Speaker and the input device.
	The volume of Speaker or the input device is too low.	Increase the volume on the speaker and the input device.
	Audio playback is in pause mode.	Press the Play button to continue with playback.
	Battery power is low.	Recharge the battery.

5 Technical Specifications

Model Number	359780
Bluetooth Specification	Bluetooth V 5.0
Operating Distance	10 metres (max.)
Speaker Output	4Ω 12W
Built-in Battery	3.7V / 1500mAh
Power Supply	DC 5.0V  1000mA
Frequency Response	130Hz - 13KHz

6 EC Declaration

This product is intended for use within the UK.


This appliance complies with the below listed EU directives.

2014/53/EU RED Electromagnetic Compatibility Directive

2011/65/EU Restriction of Hazardous Substances

2013/56/EU Waste Batteries & Accumulators

The completed declaration of conformity is available upon request for relevant enquiries.

 **Bluetooth®** is a trademark on a registered trademark of Bluetooth SIG Inc.



Information on Waste Disposal for Consumers of Electrical & Electronic Equipment



This mark on a product and/or accompanying documents indicates that when it is to be disposed of, it must be treated as Waste Electrical & Electronic Equipment (WEEE).

Any WEEE marked waste products must not be mixed with general household waste, but kept separate for the treatment, recovery and recycling of the materials used.

For proper treatment, recovery and recycling; please take all WEEE marked waste to your Local Authority Civic waste site, where it will be accepted free of charge.

If all consumers dispose of Waste Electrical & Electronic Equipment correctly, they will be helping to save valuable resources and preventing any potential negative effects upon human health and the environment of any hazardous materials that the waste may contain.



Made in China

Imported by B&M Retail Ltd, Dakota Drive, Liverpool, L24 8RJ, UK

Goodmans