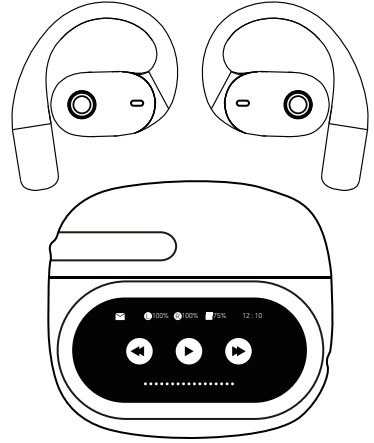 
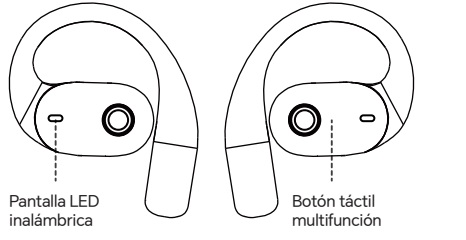 
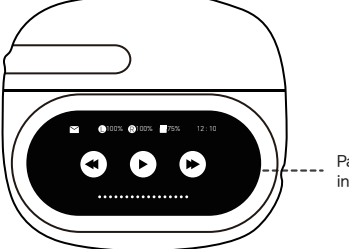 
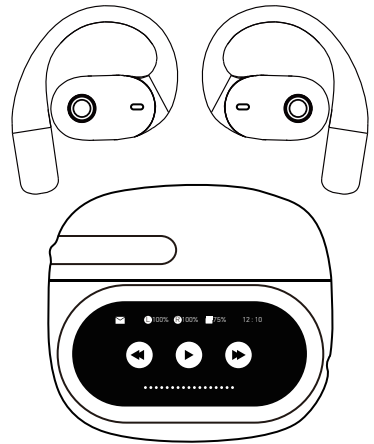 
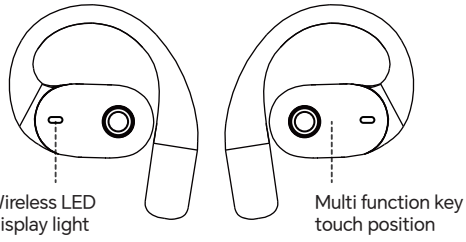 
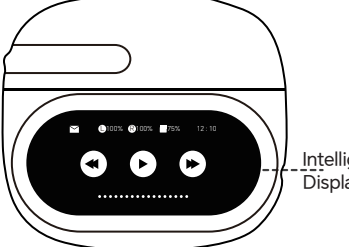 


OWS800 Pro中英文中性说明书 尺寸:83*86mm*7页 材质 :105g双铜单黑双面印刷

 Wireless Auriculares manual de usuario	 Pantalla LED inalámbrica Botón táctil multifunción  Pantalla inteligente [1]	Parámetros del producto ●Versión inalámbrica: V5.4 ●Alcance de trabajo: 10 metros sin obstáculos ●Frecuencia inalámbrica: 2.402-2.480GHz ●Capacidad del estuche de carga: 3.7V, 600mAh ●Entrada de carga: DC 5V-300mA ●Tiempo de carga: aproximadamente 2.5 horas ●Batería interna de los auriculares: 3.7V, 50mAh*2 ●Duración de reproducción: ~7.5 h (a volumen del 80%) ●Tiempo de llamada: aproximadamente 4.5 horas (volumen al 80%) ●Número de cargas del estuche a los auriculares: Aproximadamente 4.5 veces ●Ciclos de carga/descarga: ≥300 veces ●Puerto de carga: Type-C Nota: Las especificaciones son datos de laboratorio y pueden variar en distintos entornos. El producto se actualiza constantemente; funciones e imágenes pueden diferir ligeramente del producto físico. Consulte el producto real. [2]	Método de operación - Auriculares • Encender: Abra la tapa del estuche de carga, los auriculares se encenderán automáticamente y esperarán conexión inalámbrica. • Apagar: Coloque los auriculares en el estuche de carga y cierre la tapa. • Modo de emparejamiento: Los auriculares entran automáticamente en modo de emparejamiento al encenderse. • Pausar/Reproducir: Haga clic en el auricular izquierdo o derecho. • Contestar llamada: Haga clic en el auricular izquierdo o derecho. • Colgar llamada: Doble clic en el auricular izquierdo o derecho. • Rechazar llamada: Mantenga presionado el auricular izquierdo o derecho durante 2 segundos. • Siguiente canción: Triple clic en el auricular derecho. • Canción anterior: Triple clic en el auricular izquierdo. • Volumen-: Doble clic en el auricular izquierdo para disminuir el volumen. • Volumen+: Doble clic en el auricular derecho para aumentar el volumen. • Asistente de voz: Mantenga presionado el auricular izquierdo o derecho durante 2 segundos. • Modo música (predeterminado): En modo juego, cambie al modo música con 4 clics consecutivos en el auricular izquierdo/derecho. • Borrar lista de dispositivos emparejados: 6 clics simultáneos en ambos auriculares. [3]	Operación de la pantalla color del estuche • Encender estuche: Carguelo por primera vez o mantenga presionado el botón 6 segundos. • Apagar estuche: Doble clic en el botón trasero y seleccione "Apagar". • Reproducir/Pausar/Cambiar canción: Ícono central para Play/Pausa, izquierdo para anterior, derecho para siguiente. • Ajustar volumen: Ícono izquierdo (-), derecho (+). • Ecualizador: Toque íconos izquierdo/derecho para cambiar efectos. • Alarma: Configure 5, 10, 30 o 60 minutos. • Brillo de pantalla: Ícono izquierdo reduce brillo, derecho lo aumenta (mayor brillo consume más batería). • Cambiar idioma: Toque íconos izquierdo/derecho. • Buscar auriculares: Toque L/R, luego "Iniciar" para activar sonido en el auricular correspondiente. • Configurar hora: Ajuste manual o sincronización automática vía teléfono. • Función "Me gusta" en videos: Toque el corazón para like, íconos laterales para cambiar video. • Control de fotos: Active la cámara del teléfono y toque el ícono en la pantalla para tomar fotos. • Encendido/apagado de la iluminación: Haga clic para encender, la pantalla emite luz blanca, a continuación, haga clic en la pantalla para apagar la iluminación [4]	Carga • Alerta de batería baja en auriculares: Cuando el voltaje es inferior a 3.3V, alerta cada 1 minuto. • Carga de auriculares: Colóquelos en el estuche cerrado para carga automática. Tiempo de carga completa: ~1 hora. • Alerta de batería baja del estuche: Luz blanca parpadea cada 5 segundos si la carga es <10% (si el voltaje es <3.3V, el estuche se apaga y la pantalla no muestra contenido). • Carga del estuche: La pantalla muestra un ícono de carga que se apaga tras 30 segundos. Tiempo de carga completa: ~2.5 horas. Conexión inalámbrica general 1.Acerque los auriculares y el teléfono/dispositivo. 2.Asegúrese de que los auriculares estén cargados, abra la tapa del estuche de carga y los auriculares izquierdo y derecho estén conectados entre sí. Los auriculares pueden entrar en el modo de emparejamiento; 3.Active la función inalámbrica del teléfono móvil del usuario (u otro dispositivo inalámbrico) y busque o escanee. En ese momento, el teléfono móvil buscará todos los dispositivos inalámbricos cercanos. Haga clic en el nombre del modelo inalámbrico correspondiente para conectarse. Después de emparejar y conectar correctamente, puede realizar una llamada con auriculares, escuchar canciones, etc. [5]	Consideraciones de conexión 1. Mantenga la distancia entre auriculares y dispositivo ≤1 metro. 2.Abra el estuche para conectarse automáticamente. 3.Asegúrese de que los auriculares estén encendidos y emparejados. 4.Si los auriculares no se encienden, cárguelos en el estuche durante ≥1 hora. Precauciones 1.No use limpiadores corrosivos. 2.Evite fuentes de calor o fuego. 3.No exponga a luz solar directa prolongada. 4.No incinere el producto. 5.No desarme ni modifique el producto. 6.Evite su uso en ambientes húmedos o bajo lluvia. 7.Almacene en lugar seco y cárguelo mensualmente si no se usa. ※El primer uso requiere una carga o una pulsación larga del botón durante 6 segundos para activar el estuche de carga FCC ID:2BOZI-AETHER Este dispositivo cumple con la Parte 15 de las Normas FCC. Su funcionamiento está sujeto a las siguientes dos condiciones: (1) Este dispositivo no debe causar interferencias perjudiciales [6]	(2) Este dispositivo debe aceptar cualquier interferencia recibida, incluidas las que puedan provocar un funcionamiento no deseado. Este dispositivo debe instalarse y operarse manteniendo una distancia mínima de 20 cm entre la antena y todas las personas. Este dispositivo ha sido evaluado y cumple con los límites para dispositivos digitales de Clase B, conforme a la Parte 15 de las Normas FCC. Estos límites están diseñados para proporcionar protección razonable contra interferencias perjudiciales en instalaciones residenciales. El dispositivo genera, utiliza y puede irradiar energía de radiofrecuencia. Si no se instala y usa según las instrucciones, podría causar interferencias perjudiciales a las comunicaciones por radio. Sin embargo, no se garantiza que no ocurran interferencias en una instalación particular. Si este dispositivo afecta la recepción de radio/televisión (verificable al encender/apagar el equipo), corrija la interferencia con estas medidas: Reorientar o reubicar la antena receptora. Aumentar la distancia entre el dispositivo y el receptor. Conectar el dispositivo a un circuito eléctrico diferente al del receptor. Consultar al distribuidor o a un técnico especializado en radio/TV. Las modificaciones no aprobadas expresamente por el responsable del cumplimiento podrían anular la autorización de uso del equipo. [7]
---	---	---	---	---	--	--	---

 Wireless Earphones user manual	 Wireless LED Display light Multi function key touch position  Intelligent Display Screen [1]	Product parameters ●Wireless version: V5.4 ●Working range: barrier-free 10 meters ●Wireless frequency: 2.402-2.480GHz ●Charging box capacity: 3.7V, 600mAh ●Charging input: DC 5V-300mA ●Charging time: about 2.5 hours ●Earphone built-in battery: 3.7V, 50mAh*2 ●Play music: about 7.5 hours (80% volume) ●Talk time: about 4.5 hours (80% volume) ● Number of times the charging case charges the earphones:About 4.5 times ●Charge and discharge cycle: ≥300 times ● Charging port: Type-C Note: The specifications and parameters of this product are all laboratory test data, which will be different in different environments; the product is constantly being upgraded and improved, and the specific functions and product pictures may be slightly different from the actual product, please refer to the actual product. [2]	Operation Method - Earphones • Power on: Open the charging case cover, the headphones will automatically turn on, wait for Wireless connection • Power off: Put the earphones into the charging case, And close the charging case cover • Pairing mode: The earphones automatically enter pairing mode when turned on • Pause/Play: Click on the left or right earphones • Answer incoming calls: Click on the left or right earphones • Hang up the phone: Double click on the left or right earphones • Call rejection: Long press the left or right earphones for 2 seconds • Next song: Three clicks on the right earphone • Previous song: Three clicks on the left earphone • Volume -: Double click on the left earphones to decrease volume • Volume+: Double click on the right earphones to increase volume • Voice assistant: Long press the left or right earphones for 2 seconds • Music mode (default): In game mode, switch to music mode by 4 consecutive clicks on the left or right earphones • Clear paired device list: Simultaneously clicking on the left and right earphones 6 times in a row [3]	Operation method - charging case color screen • Charging case Power on: When using it for the first time, it needs to be charged to activate the power on, or long press the button for 6 seconds to turn it on • Charging case Power off: Double click the button on the back to select shutdown (interface display: shutdown/restart/restore factory settings) • Pause/Play/Up/Down Song: Center icon "Play" and "Pause", left icon for previous song, right icon for next song • Volume+/-: Left icon reduces volume, right icon increases volume • Equalizer interface: Click on the left or right icons to switch sound effects • Set alarm clock: can be set for 5 minutes, 10 minutes, 30 minutes, 60 minutes • Adjusting screen brightness: The left icon reduces brightness, while the right icon increases brightness (increasing brightness consumes more power) • Language switching: Click on the left/right icon to switch languages • Set lock screen wallpaper: Click on the left/right icon to replace the lock screen wallpaper • Find headphones: Click on L/R, the interface will appear, click on start, the corresponding L/R headphones will emit sound, click on stop to end • Time setting: You can manually change the time and save it (if the charging case is not used for a long time, the time will be automatically updated when the headphones are connected to the phone) • Video like function: Click on the heart-shaped icon in the middle to like the video, click on the left/right icon to switch to the previous or next video playback (iOS phones need to enable touch assist in the touch assist function) • Photo control function: First, turn on the camera on the phone, then click on the take photo icon on the color screen to control the phone to take photos [4]	• On/off lighting: Click to turn on, the screen emits white light, then click on the screen to turn off the lighting charging • Reminder of low headphone battery: When the battery voltage is below 3.3V, remind every 1 minute • Earphone charging: Put the earphones into the charging case, close the lid, and automatically charge them. It takes about 1 hours to fully charge them • Low battery reminder for charging case: When the battery level is below 10%, the white light flashes once every 5 seconds (When the voltage of the charging case is below 3.3V, the charging case will automatically shut down and the color screen will not display) • Charging case charging: The color screen displays the charging icon, which goes off after 30 seconds and takes about 2.5 hours to fully charge Universal wireless connection operation 1. Please put the wireless headset and mobile phone (or other connected devices) together; 2. Ensure that the earphones are charged, open the charging case cover, and the left and right earphones are connected to each other. The earphones can enter pairing mode; 3. Turn on the Wireless function of the user's mobile phone (or other Wireless device), and search or scan. At this time, the mobile phone will search for all nearby Wireless devices. Click the corresponding Wireless model name to connect. After successfully pairing and connecting, you can make a headset call , Listening to songs, etc. [5]	Considerations when connecting wirelessly 1. Please control the distance between the wireless headset and the mobile phone (or other connected equipment) within 1 meter, the closer the better; 2. Open the charging case cover to connect; 3. When connecting, make sure that the left and right earphones are interconnected and in the on state; 4. The charging box needs to have enough power. If the headphones cannot be turned on when the cover is opened, put the headphones in the charging box, close the cover of the charging box and plug in the charger to charge for at least one hour; Precautions 1. Never use corrosive cleaning agents to clean this product; 2. Do not allow this product to heat or come close to fire sources, such as cooking stoves; 3. Do not expose this product to direct sunlight for a long time to avoid high temperature; 4. Do not dispose of this product in fire to avoid explosion; 5. Do not try to disassemble this product to make any modifications, because it does not contain any maintenance components; 6. Do not use this product in the rain; 7. If you do not plan to use this product for a long period of time, please store it in a dry environment.And charge the headset at least once a month to extend the life and avoid extreme temperatures and dust. ※First use requires charging or long pressing the button for 6 seconds to activate the charging case FCC ID:2BOZI-AETHER This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and [6]	(2) this device must accept any interference received, including interference that may cause undesired operation This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures: --Reorient or relocate the receiving antenna. --Increase the separation between the device and receiver. --Connect the device into an outlet on a circuit different from that to which the receiver is connected. --Consult the dealer or an experienced radio/TV technician for help Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment [7]
--	--	---	---	---	---	--	--