
## **Smart Glasses**

#### operation instructions

## Product schematic diagram

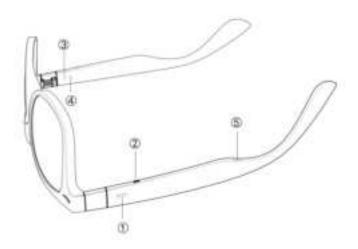

- ①Multi-function button ②Magnetic charging ③Indicator light
- 4)Microphone 5)Speaker

## **Operating instructions**

**Power on:** Press and hold the ① multi-function button with both left and right hands simultaneously for 3 seconds, and hear the "Power on" prompt sound

**Shutdown:** After confirming whether the music is paused or turned off, press and hold the ① multi-function button with both left and right hands for 3 seconds, and hear the "Power off" prompt sound

**pairing:** After the new device is turned on, it automatically enters Bluetooth pairing mode; The red and blue lights flash alternately. Open the device to connect to Bluetooth, search for and connect to "L3", and hear the "Connected" prompt sound to indicate successful pairing. **automatic connection:** If L3 has already connected to a device, turning on Bluetooth again will automatically connect to the device.

play/pause: Double click any of the ① multi-function keys.

**Next song:** Click on the multifunctional button ① on the right ear.

**Previous song:** Click the multifunctional button ① on the left ear.

**Volume Up:** Long press the multifunctional button ① on the left ear.

**Volume Down:** Long press the multifunctional button ① on the right ear.

**Answer/hang up the phone:** Double click any of the ① multi-function buttons while in the state of incoming/outgoing calls.

**Refuse to answer phone calls:** Press and hold any of the ① multi-function buttons for 2 seconds while in an incoming call state.

**Voice assistant:** Click any of the ① multi-function buttons three times in a row to activate Siri or Google Voice Assistant (applicable to iPhone and most Android phones)

charging: Please use the original charging cable for charging. The red light will remain on and



turn off when fully charged.

**Battery low voltage prompt:** When you hear the "Battery low" prompt sound, please charge as soon as possible.

## **Precautions**

- ▲ Please keep this product out of reach of children
- ▲ Please use this product in accordance with local laws and regulations, pay attention to safety, and wear this product correctly.
- ▲ Please control the volume and time of using this product reasonably to avoid fatigue or hearing damage.
- ▲ Please use and store this product and accessories within the temperature range of 5 to 35 degrees Celsius. Excessive or insufficient temperature may cause machine malfunction.
- ▲ Please do not disassemble, impact, squeeze or put the product into fire at will to avoid explosion.
- ▲ Do not use the equipment during thunderstorms to avoid any abnormalities and electric shock.
- ▲ If you do not use this product for a long time, please charge it at least once every 2 months to avoid battery damage caused by over discharge.

## **All Accessories**

product×1, manual × 1, Magnetic charging×1, cleaning cloth×1, Glasses Bag×1

# **FCC Warning**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -Reorient or relocate the receiving antenna.
- -Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - -Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.