

WICKEDAUDIO.COM

LIMITED ONE YEAR WARRANTY
Keep your receipt to obtain warranty service.
Go to WickedAudio.com for more details.

WICKED AUDIO, INC.
875 W 325 N
London, UT 84042

Developed in Utah, U.S.A. / Made in China

MAKE EVERY HEADPHONE WIRELESS

PRECAUTIONS

LISTENING TO AUDIO AT EXCESSIVE VOLUMES CAN CAUSE PERMANENT HEARING DAMAGE.
USE AS LOW A VOLUME AS POSSIBLE.
Over exposure to excessive sound levels can damage your ears resulting in permanent noise-induced hearing loss (NIHL). Please use the following guidelines established by the Occupational Safety Health Administration (OSHA) on maximum time exposure to sound pressure levels before hearing damage occurs.
SAFE USE & HAZARD WARNINGS
90 dB SPL at 8 hours, 95 dB SPL at 4 hours, 100 dB SPL at 2 hours, 105 dB SPL at 1 hours, 110 dB SPL at 30 min, 115 dB SPL at 15 min, 120 dB SPL: Avoid as damage may occur

ADVERTENCIA

ESCUCHA DEL AUDIO NIVELES EXCESIVOS DE VOLUMEN PUEDE CAUSAR DAÑOS PERMANENTES AUDIENCIA. SE USE COMO VOLUMEN MAS BAJO POSIBLE.
Durante la exposición a niveles excesivos de ruido puede dañar los oídos resultando en ruido permanente pérdida de audición inducida (PAIR). Por favor, use las siguientes pautas establecidas por la Administración de Seguridad de Salud Ocupacional (OSHA) de tiempo máximo que los niveles de presión de sonido antes de que se produce una lesión auditiva.
USO SEGURO DE PELIGROS Y ADVERTENCIAS
90 dB SPL a 8 horas, 95 dB SPL a 4 horas 100 dB SPL a 2 horas, 105 dB SPL a 1 horas, 110 dB SPL a 30 minuto, 115 dB SPL a 15 minuto, 120 dB SPL: Evite que se puede producir daños

FCC ID:2AFM7WI-BTR4X

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
— Reorient or relocate the receiving antenna.
— Increase the separation between the equipment and receiver.
— Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
— Consult the dealer or an experienced radio/TV technician for help
This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation
Limitation of Liability Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.
In no event, under any cause of action of theory of liability, shall Wicked Audio Inc., its distributors or suppliers be liable to you or any third party for indirect, incidental, consequential, special, exemplary or punitive damages, of any and all nature whatsoever, arising out of use of or inability to use a product. This includes without limitation, property damage, loss of value of the product or any third party products that are used in or with the Wicked Audio products, even if the Wicked Audio product has been advised of the possibility of such damages that one may encounter. Without limiting the foregoing, you understand and agree that Wicked Audio has no liability for any damages or destruction to the consumer electronics devices or other personal property that are contained in inside or outside the Wicked Audio products. This includes without limitation, laptops, cellular phones, or other hand-held devices, or any loss of data contained on the foreign device. Notwithstanding any damages that you might incur for general damages in contract, tort (including negligence) or otherwise, the entire aggregate liability of Wicked Audio and any of its distributors and/or suppliers shall be limited to the amount actually paid by you for the Wicked Audio product giving rise to liability. Some states and/or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. The limitations of liability set forth above shall apply to the maximum extent permitted under applicable law.

WICKED
AUDIO

Bluetooth®

AUDIO RECEIVER

THE
REACH

MAKE EVERY
HEADPHONE WIRELESS

KEEP YOUR FAVORITE HEADPHONES! WITH THE REACH BLUETOOTH AUDIO RECEIVER, THEY'RE ALL WIRELESS NOW. PLUG IN ANY HEADPHONE OR EARBUD AND THE REACH WILL TAKE CARE OF THE REST.

1

Make sure The Reach is charged.

2

Have your phone (or other Bluetooth device) on with the Bluetooth feature enabled.

3

Turn on The Reach. Hold down center button until the LED flashes red and blue.

4

Your phone (or other Bluetooth device) will detect "Wicked Reach."

5

Select "Wicked Reach" to pair. Once successfully paired, the LED will slowly flash blue.

3.5mm Jack

Volume Up

On/Off

Pause / Play

Answer / Hangup

Previous Track

Next Track

Volume Down

Charge Port

Hands Free

Phone Mic

Volume Control

Track Control

Clothing Clip

Rechargeable

HOW TO USE THE REACH

FUNCTION	DESCRIPTION	INDICATION
POWERING ON	Hold down center button until L.E.D. flashes blue.	Single beep Flashing blue
PAIRING MODE	The Reach automatically enters pairing mode when turned on.	Flashing red and blue
RECONNECTING	If you have previously connected to The Reach it will automatically search for and connect with the last known device.	Flashing red and blue
SUCCESSFULLY PAIRED	The Reach will indicate when successfully paired. The device is now ready to rock!	"Connected" Slow flashing blue
DISCONNECTED	If The Reach disconnects it will automatically revert into pairing mode and begin searching for a device to connect to.	"Disconnected" Flashing red and blue
ANSWER/HANGUP	Press the center button to answer an incoming call. Press the center button to end call.	Ringtone Solid blue
MAXIMUM VOLUME	Press + button to increase volume.	Single tone
MINIMUM VOLUME	Press - button to decrease volume.	
NEXT TRACK	Press ▶ button to skip to the next track	
BEGINNING OF TRACK	Press ◀ button to start current track at the beginning.	
PREVIOUS TRACK	Double click ◀ button to play previous track.	

...CONTINUED

FUNCTION	DESCRIPTION	INDICATION
PAUSE / PLAY	Press center button to pause track. Press again to resume play.	Playing: Solid blue Paused: Flashing blue
POWERING OFF	Hold down center button until L.E.D quickly flashes blue.	Single beep Flashing blue

CHARGING

Charge The Reach using included USB to Micro USB cord.

FUNCTION	DESCRIPTION	INDICATION
LOW BATTERY	The Reach will notify when the battery is at 20% charge or less. A reminder will sound every 5 minutes until the battery is dead or charging begins. <i>It is recommended to charge soon for uninterrupted play.</i>	"Low charge"
CHARGING While powered off		Solid red
CHARGING While powered on		Solid red with slow flashing blue or solid blue
FULLY CHARGED While powered off		Red L.E.D. turns off
FULLY CHARGED While powered on		Red L.E.D. turns off and product returns to slow flashing blue or solid blue

https://wicked-audio.com/